

CAR_PARKING / PLC_1 [CPU 1215C DC/DC/DC] / Program blocks

Main [OB1]

Main Properties

General

Name	Main	Number	1	Type	OB
Language	LAD	Numbering	Automatic		

Information

Title	"Main Program Sweep (Cycle)"	Author	SHREYASH_GHADGE	Comment	I-1 – Car wants to ENTER - Sensor I-2 – Car ENTRY OVER Sensor I-3 – Car wants to EXIT -Sensor I-4 – Car EXIT OVER Sensor I-5 - Parking Space for Car I-6 - Parking Space for Car I-9 - Parking Space for Car I-10- Parking Space for Car Q-1 – Parking FULL indication Q-2 – Parking SPACE available indication Q-3 – ENTRY GATE OPEN / CLOSE indication Q-4 – EXIT GATE OPEN / CLOSE indication When a car comes at the Entry Gate, ONLY IF there is SPACE available for Parking, the Entry Gate should open. ONLY when the Car passes from Entry Over Sensor I2, the Entry Gate should close. When a car wants to EXIT from the Parking area, it will come at the EXIT GATE. When Input I3 senses a Car, EXIT Gate will open. ONLY when the Car passes from I4 i.e. Exit Over Sensor, the EXIT Gate should close. When Space is available for parking the Car/s at either I5 / I6 / I9 / I10, SPACE indication Q2 should be ON and FULL indication Q1 should be OFF. When the Parking area is fully occupied FULL indication Q1 should be ON and SPACE indication should be OFF.
-------	------------------------------	--------	-----------------	---------	---

Totally Integrated Automation Portal

Family

Version0.1

User-defined ID

Main

Name	Data type	Default value	Comment
▼ Input			
Initial_Call	Bool		Initial call of this OB
Remanence	Bool		=True, if remanent data are available
Temp			
Constant			


Network 1: PROCESS_ON

Network 2: ENTERY_GATE

When a car comes at the Entry Gate, ONLY IF there is SPACE available for Parking, the Entry Gate should open. ONLY when the Car passes from Entry Over Sensor I2, the Entry Gate should close.

Network 3: EXIT_GATE

When a car wants to EXIT from the Parking area, it will come at the EXIT GATE. When Input I3 senses a Car, EXIT Gate will open. ONLY when the Car passes from I4 i.e. Exit Over Sensor, the EXIT Gate should close.

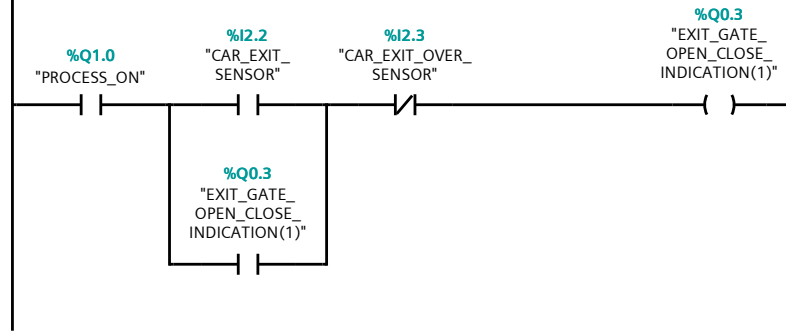

Network 4:

When Space is available for parking the Car/s at either I5 / I6 / I9 / I10, SPACE indication Q2 should be ON and FULL indication Q1 should be OFF.

When the Parking area is fully occupied FULL indication Q1 should be ON and SPACE indication should be OFF

