


WIRING DIAGRAM

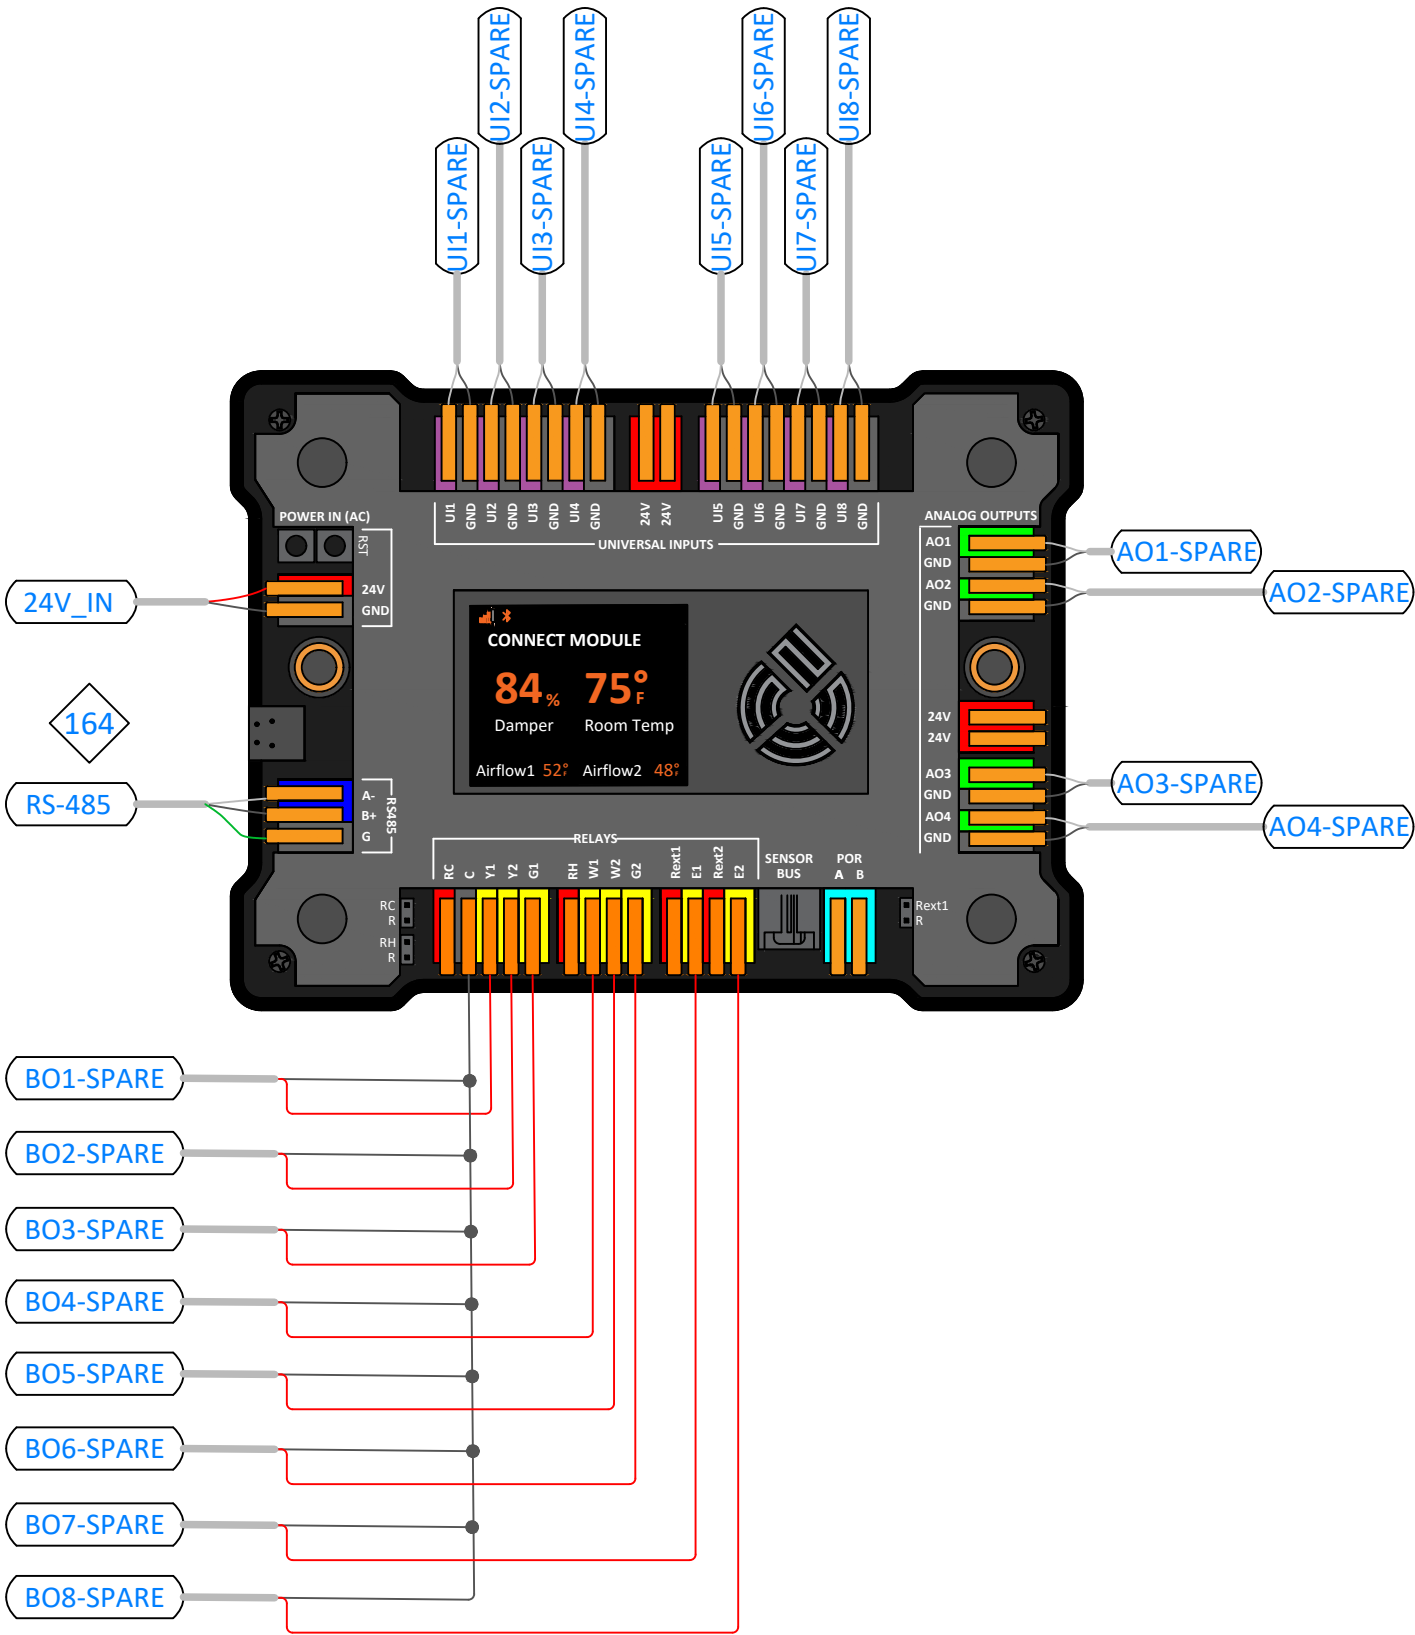

POINTS LIST AND COMMISSIONING NOTES

CONNECT MODULE					
DESCRIPTION	POINT	TAG	DEVICE RANGE	MFG	PART #
24 VAC R	24V	24V IN	24 VAC		
24 VAC COMMON	GND	24V IN	24 VAC		
SPARE	UI1	UI1-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI2	UI2-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI3	UI3-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI4	UI4-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
24VAC R (FOR UI)	24V	24V	24VAC		
24VAC R (FOR UI)	24V	24V	24VAC		
SPARE	UI5	UI5-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI6	UI6-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI7	UI7-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	UI8	UI8-SPARE	10K TYPE II / 0-10V / 4-20mA / DIGITAL INPUT		
SPARE	AO1	AO1-SPARE	0-10VDC / 4-20mA		
SPARE	AO2	AO2-SPARE	0-10VDC / 4-20mA		
24VAC R (FOR AO)	R	24V	24VAC	-	
24VAC R (FOR AO)	R	24V	24VAC	-	
SPARE	AO3	AO3-SPARE	0-10VDC / 4-20mA		
SPARE	AO4	AO4-SPARE	0-10VDC / 4-20mA		
24VAC R (FOR BO)	RC	24V R	REMOVE RC JUMPER FOR DRY CONTACT		
SPARE	BO1 (Y1)	BO1-SPARE	WET CONTACT		
SPARE	BO2 (Y2)	BO2-SPARE	WET CONTACT		
SPARE	BO3 (G1)	BO3-SPARE	WET CONTACT		
24VAC R (FOR BO)	RH		REMOVE RH JUMPER FOR DRY CONTACT		
SPARE	BO4 (W1)	BO4-SPARE	WET CONTACT		
SPARE	BO5 (W2)	BO5-SPARE	WET CONTACT		
SPARE	BO6 (G2)	BO6-SPARE	WET CONTACT		
24VAC R	Rext1		REMOVE REXT1 JUMPER FOR DRY CONTACT		
SPARE	BO7 (E1)	BO7-SPARE	AUXILIARY RELAY		
AUXILIARY RELAY 2	Rext2		DRY CONTACT		
SPARE	BO8 (E2)	BO8-SPARE	AUXILIARY RELAY		
SPARE	RTS		3-PIN CABLE (NO LOCAL INTERFACE)		
SPARE	OWI	OWI	ONE WIRE INTERFACE (OWI)		
75F RS-485	RS485	RS-485	3-WIRE 75F RS-485		

75F COMMISSIONING NOTES:

TO PAIR AND CONFIGURE THE ZONE:

- CONFIGURE THE CONNECT NODE BY NAVIGATING TO INSTALLER OPTIONS.
- UNDER INSTALLER OPTIONS, SELECT 'CONFIGURE MODE'.
- FOR MODE, SELECT 'ZONE'.
- ADD A ZONE TO THE CCU.
- PAIR EACH CIRCUITS AS 'CONNECT NODE'
- SELECT 'SAVE'

CONTACT 75F SUPPORT FOR INSTRUCTIONS ON PAIRING TO THE CENTRAL CONTROL UNIT.

Drawing Notes:

① RS-485 COMM - CONNECT A TO A, B TO B. DISREGARD POLARITY

②

③



Project Name:

REV.0

Project Address:

DB:

CB:

Page:

of

Drawing:

CONNECT MODULE GENERIC