


B2 - BACnet / Modbus (Advanced)

BACnet - Workshop I

Sensor


B2 - BACnet - Workshop I - Sensor

Team A
YABE

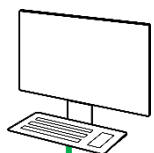

Addr = ____
InstNr = ____

Team B
YABE

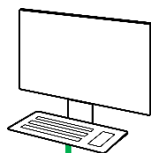

Addr = ____
InstNr = ____

First define the network addresses within your group

Group 1: BACnet Addresses 10..19, Instance IDs 110..119

Group 2: BACnet Addresses 20..29, Instance IDs 120..129

Group 3: BACnet Addresses 30..39, Instance IDs 130..139

Group 4: BACnet Addresses 40..49, Instance IDs 140..149

Baudrate 19'200
Max Master 127



BKN

Addr = ____
InstNr = ____



PRCA-BAC

Addr = ____
InstNr = ____



22DTH-16M

Addr = ____
InstNr = ____



EP015R6+BAC-HHM

Addr = ____
InstNr = ____



EP015R2+BAC

Addr = ____
InstNr = ____



P-22RTM-1U00D-2

Addr = ____
InstNr = ____

 **Serial network (RS485)**

B2 - BACnet - Workshop I – Sensor


1. Configure all the devices according the network overview.

💡 Find your appropriate configuration tool in the documents (LINK.10, Belimo Assistant 2, etc.)

2. Start YABE. Click on **Add device** and **Add yourself with BACnet/MSTP**.

💡 Check on which COM port your RS485-USB adapter is

💡 Pay attention to the BACnet settings on your actuator you just made

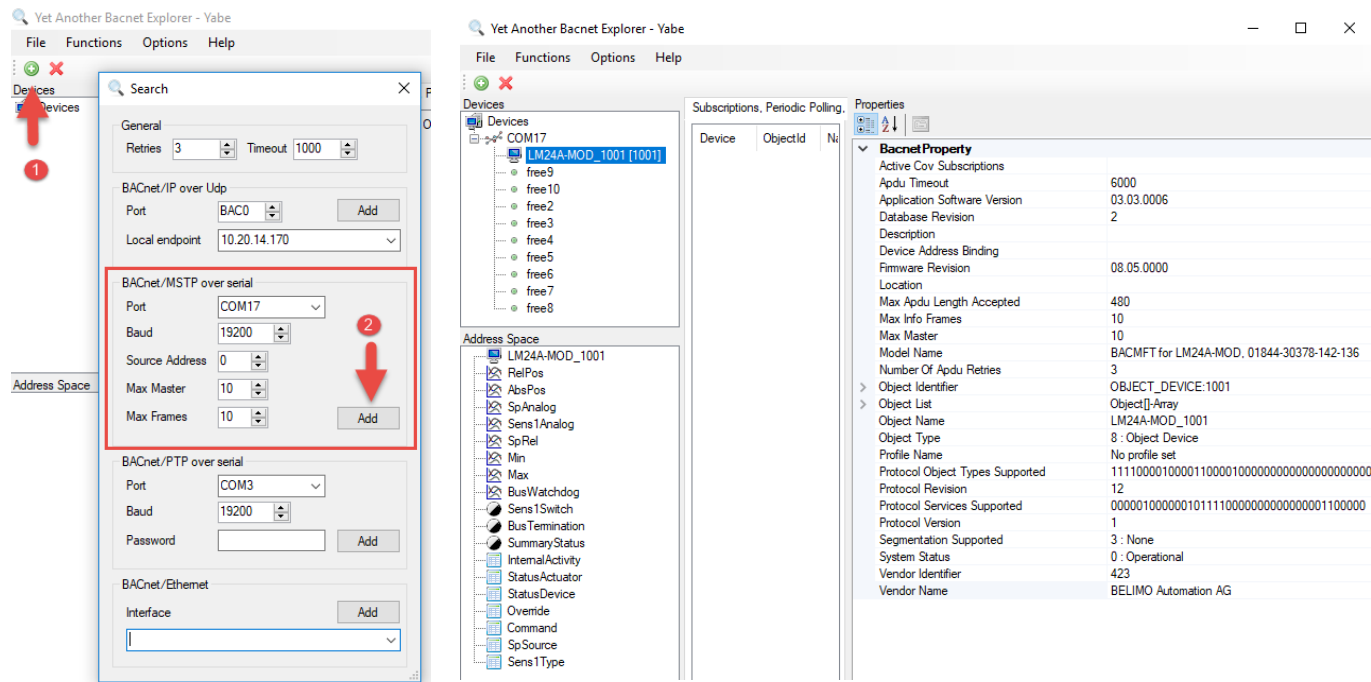

B2 - BACnet - Workshop I – Sensor

3. Select the sensor under *Devices*.
4. Read out all the BACnet objects of the device
5. Click on the BACnet object “Device”
 1. What is the *Application Software Version*?
 2. With which BACnet object can you read out the temperature?
 3. With which BACnet object can you read out the relative humidity?
 1. _____
 2. _____
 3. _____
6.
 1. Read out *Present Value* of “AI-0”
 2. Read out *Present Value* of “AI-1”
 1. _____
 2. _____

B2 - BACnet - Workshop I – Sensor



7. 1. Read out *Present Value* of “AI-5”.
2. Read out *Out of Service* of “AI-5”.

1.

2.

8. Interpret the *Present Value* of “AI-5”.

9. What do you configure with the *Present Value* of “AV-7”?

10. Set the *Present Value* of “AV-7” to 20.

11. Read out the *Present Value* of “AI-0”.

B2 - BACnet - Workshop I – Sensor



12. Set the temperature unit to Fahrenheit.

13. Read out the *Present Value* of “AI-0”.

14. Try to subscribe to as many BACnet objects as possible.
How many object can you subscribe to?

12. Change the COV Increment.