



# 1. TURN THE CAMERA ON



# 2. TURN THE LIGHT SOURCE ON AND CHOOSE THE TYPE OF FILM YOU WILL SCAN

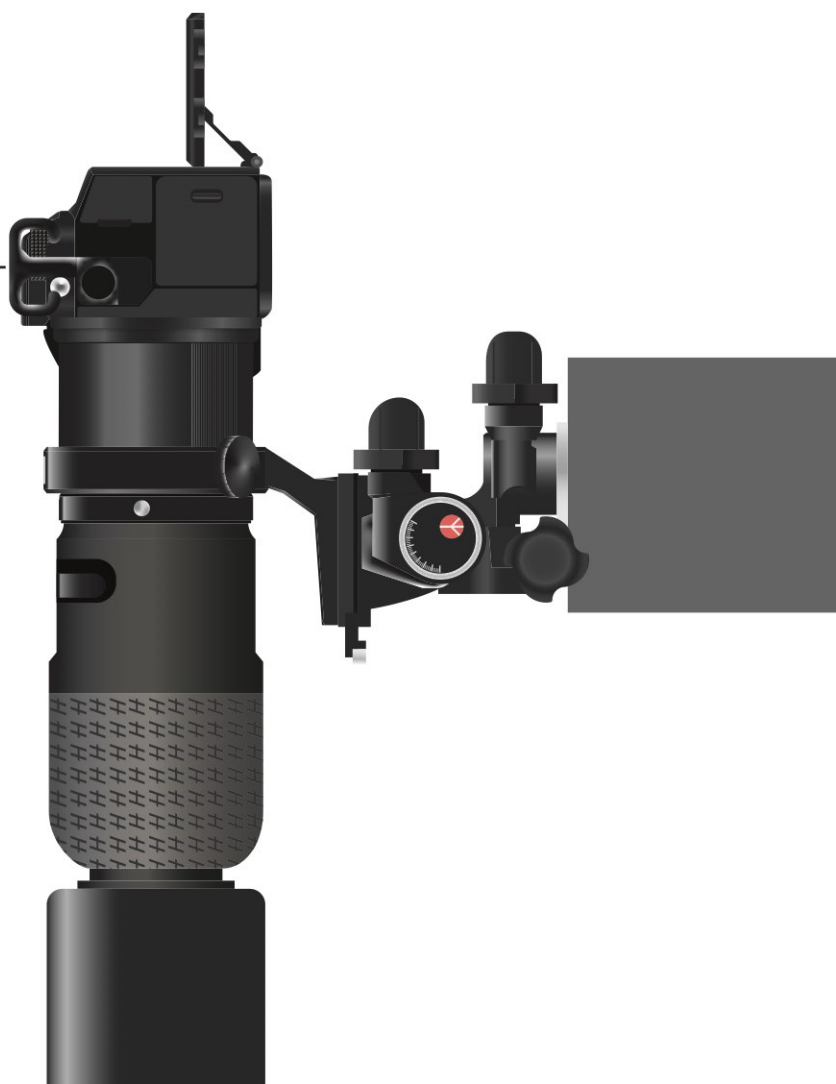

3.

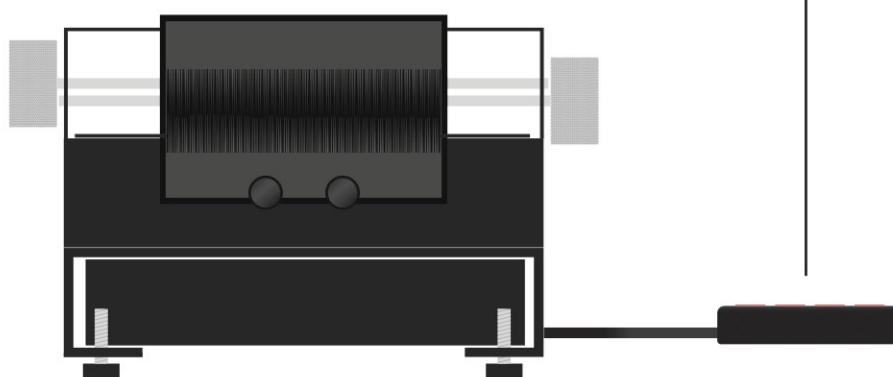

4.


JOÃO HENRIQUE  
VIEGAS

### 3. CHOOSE THE CORRECT FILM HOLDER


ADJUST THE RUBBER RINGS ACCORDINGLY

PLACE THE APPROPRIATE MASK FOR YOUR FILM (MEDIUM FORMAT)


120

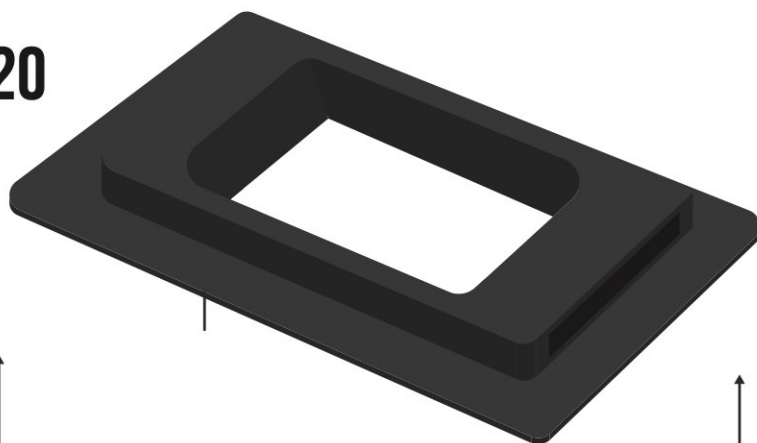



6X4.5

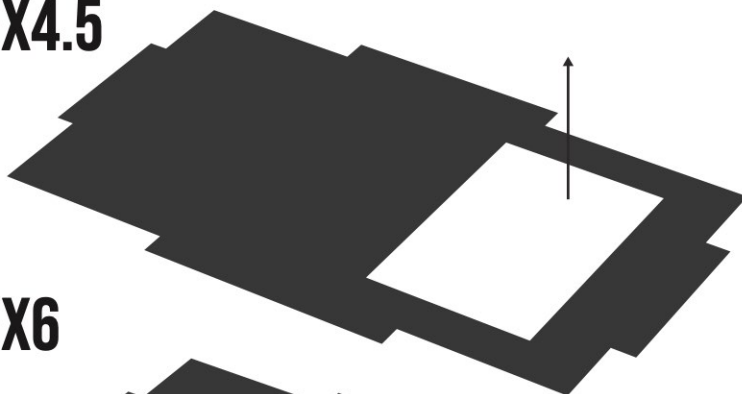

6X6

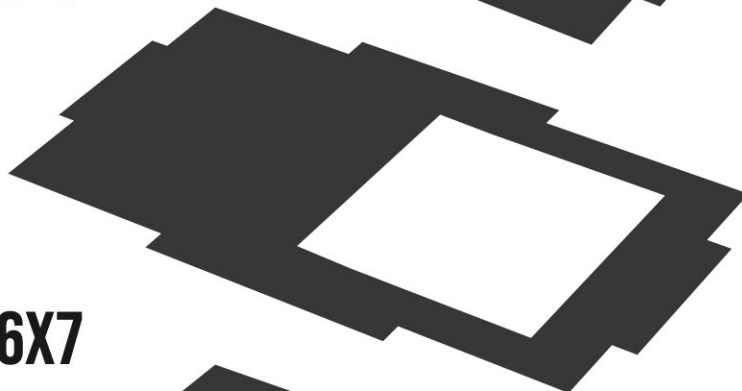

6X7

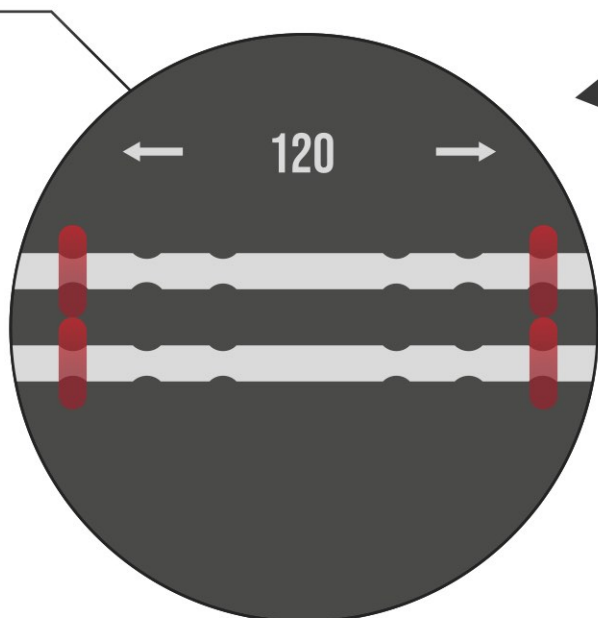
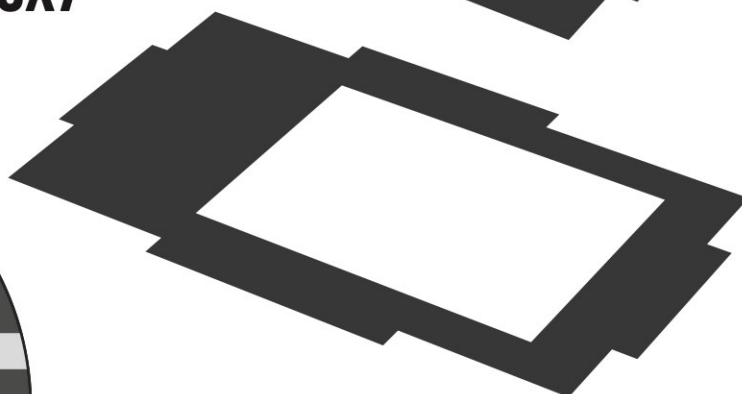


JOÃO HENRIQUE  
VIEGAS

## 4. INSERT THE FILM TO SCAN (SHINY SIDE UP)

RUN IT THROUGH THE ANTI-STATIC BRUSH

INSERT IT INTO THE FILM HOLDER

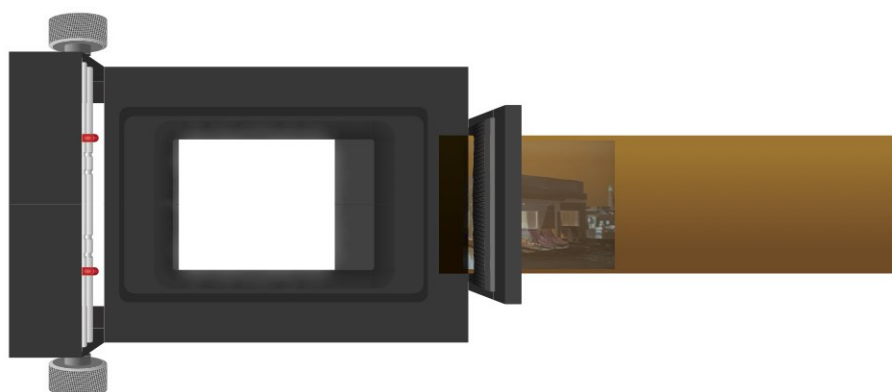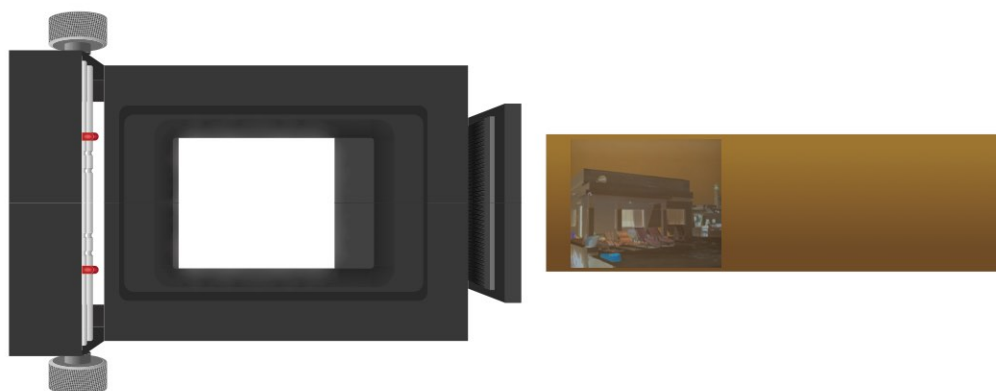




JOÃO HENRIQUE  
VIEGAS

## 5. CALIBRATE ALIGNEMENT

PLACE THE CIRCLE MIRROR ON TOP OF THE FILM HOLDER.

FOCUS THE CAMERA UNTIL YOU SEE THE LENS GLASS.

WHILE LOOKING AT THE SCREEN, TURN THE KNOBS TO  
PLACE THE IRIS OF THE LENS IN THE CENTRE OF THE MIRROR.

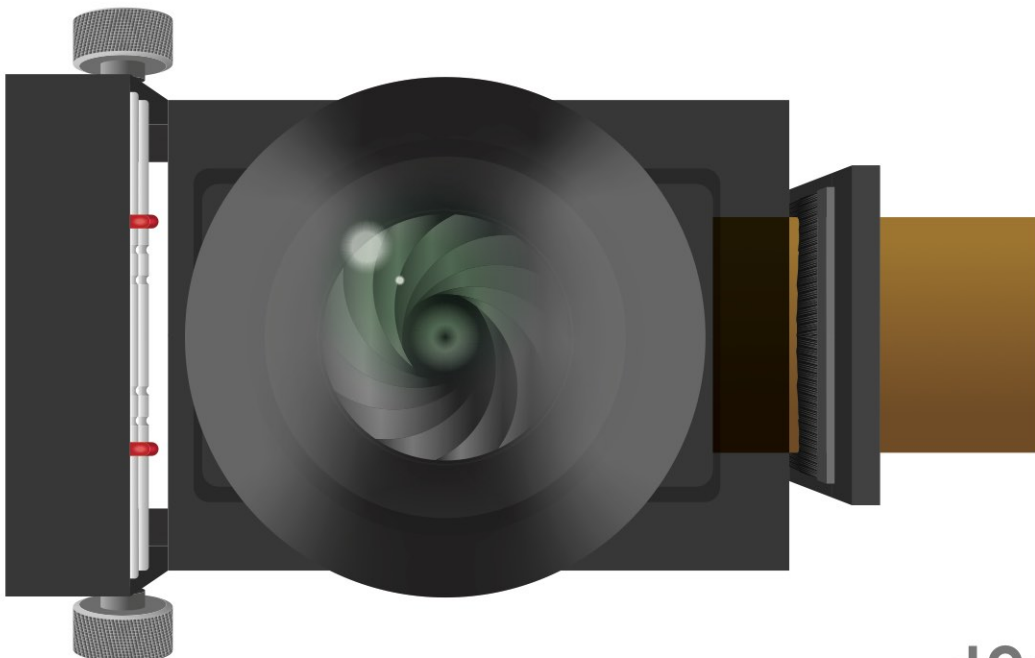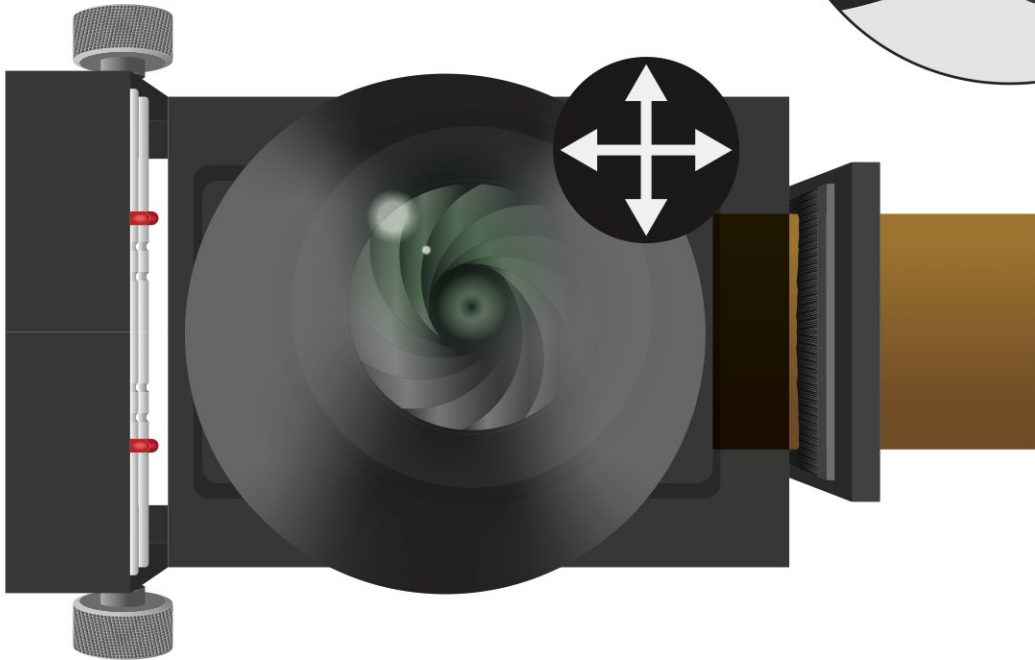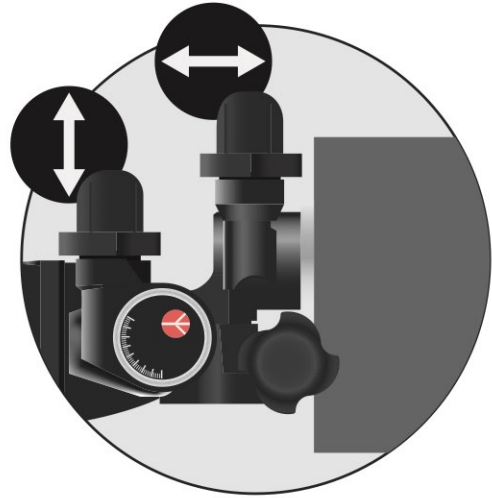


JOÃO HENRIQUE  
VIEGAS



## 7. ADJUST HEIGHT AND FOCUS

SET THE APERTURE TO **F/4**

WHILE LOOKING AT THE **SCREEN** FOR REFERENCE, MANIPULATE THE HEIGHT OF THE COPY STAND AND THE **FOCUS** ON THE LENS TOGETHER TO FILL THE CAMERA FRAME WITH THE IMAGE IN SHARP FOCUS.

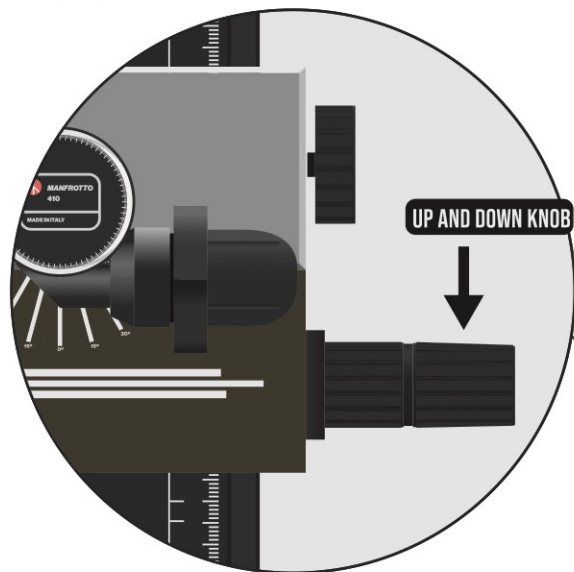

SET THE APERTURE TO **F/10**

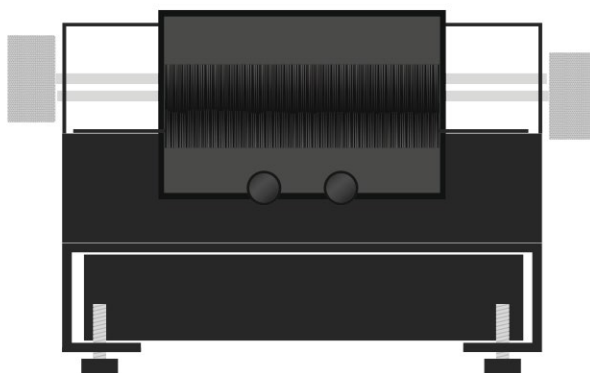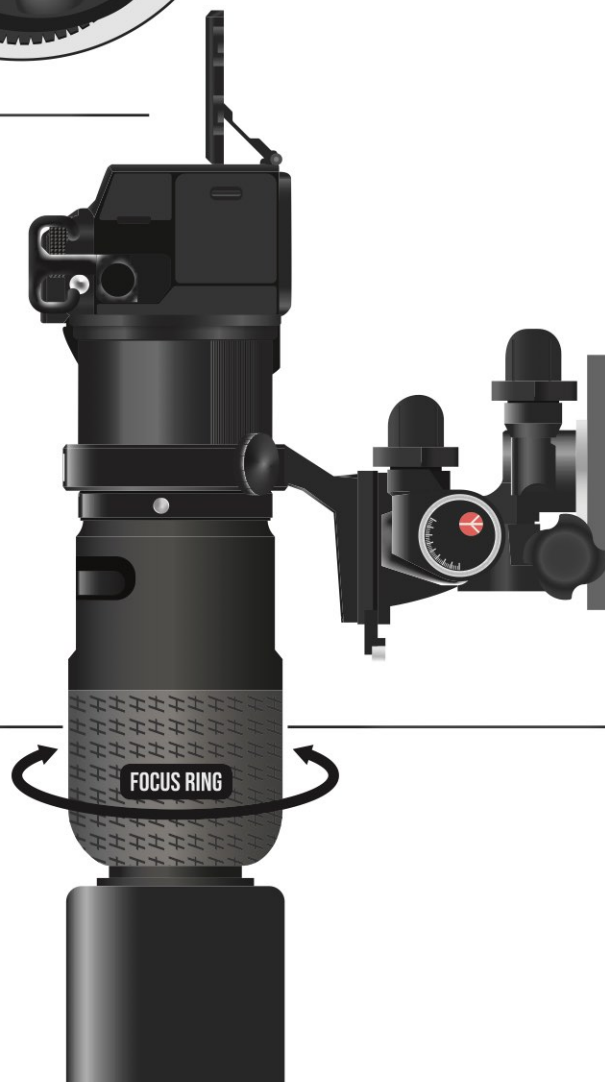

JOÃO HENRIQUE  
VIEGAS

## 8. TURN THE COMPUTER ON

LOG INTO THE DEAULT USER “SCANNER” BY SELECTING IT ON THE MENU.

IF NOT AVAILABLE, TYPE THE USER AND PASSWORD WRITTEN WITH TAGS ON THE SCREEN.

AFTER THE COMPUTER TURNS

## 9. OPEN LIGHTROOM AND LOG IN WITH YOUR CREDENTIALS.


## 10. START A TETHERED SESSION:

GIVE THE SESSION A NAME;


START THE SEQUENCE AT 1;

CREATE A FOLDER WITH YOUR NAME IN THE DESKTOP;

PRESS “OK”.

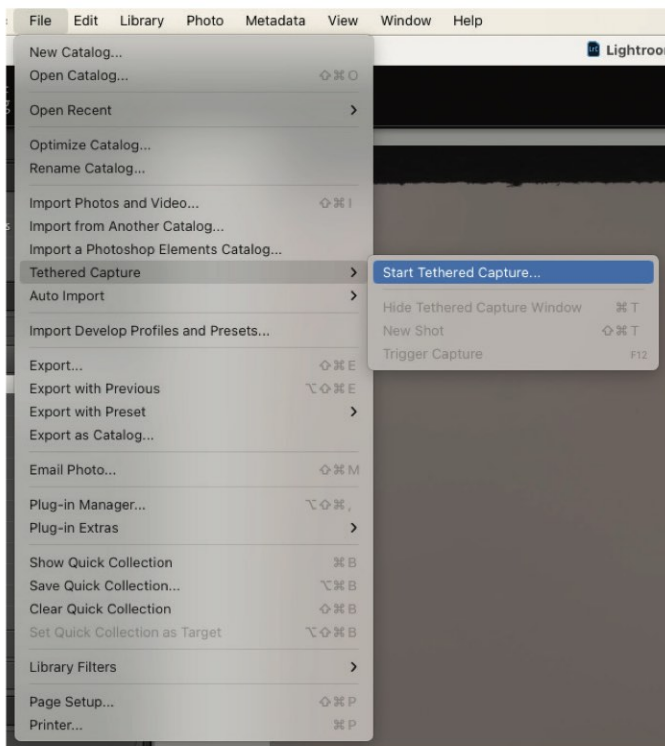


## 11. SCAN YOUR FIRST FRAME BY PRESSING THE FOOT PEDAL BELLOW OR “F12” ON YOUR KEYBOARD.

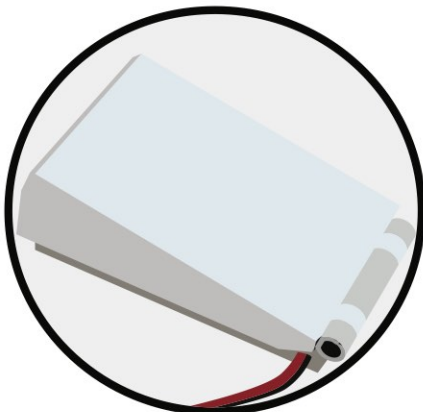


**JOÃO HENRIQUE  
VIEGAS**

## 12. PRESS “W” AND USE THE SAMPLE TOOL ON THE REBATE OF THE FILM.

(OUTSIDE THE IMAGE).

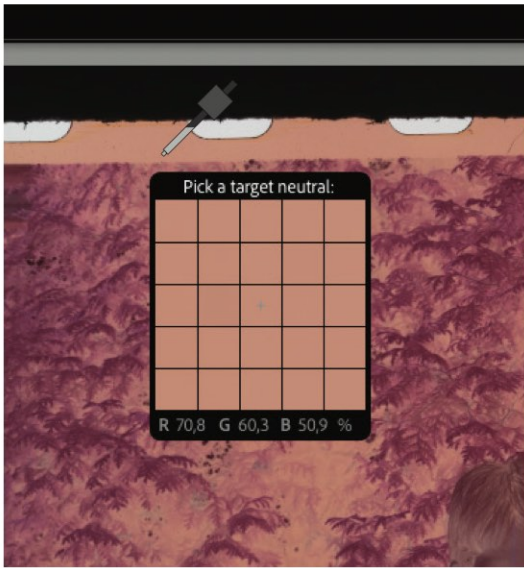

## 13. IN THE TETHERING MENU, SELECT “SAME AS PREVIOUS” UNDER “DEVELOP SETTINGS”. PRESS “W”

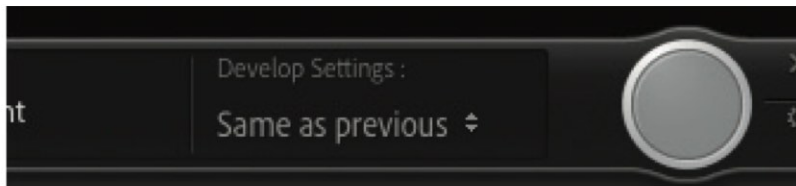

## 14. SCAN THE REST OF YOUR ROLL.


FOR EVERY NEW ROLL, TAKE A NEW SAMPLE FROM THE REBATE OF THE FILM BY PRESSING “W”.

## 15. WHEN YOU HAVE SCANNED ALL OF YOUR IMAGES, SELECT THEM BY PRESSING “CMD + A”, “THEN PRESS CTRL + N”

(IF YOU SCANNED DIFFERENT TYPES OF FILM, MAKE SEPARATE SELECTIONS FOR EACH TYPE OF FILM. I.E.: B&W & COLOR NEG.).



**16. IN THIS MENU, SELECT “BASIC” FOR COLOR NEGATIVE AND “B+W” FOR BLACK & WHITE FILM. PRESS CONVERT.**

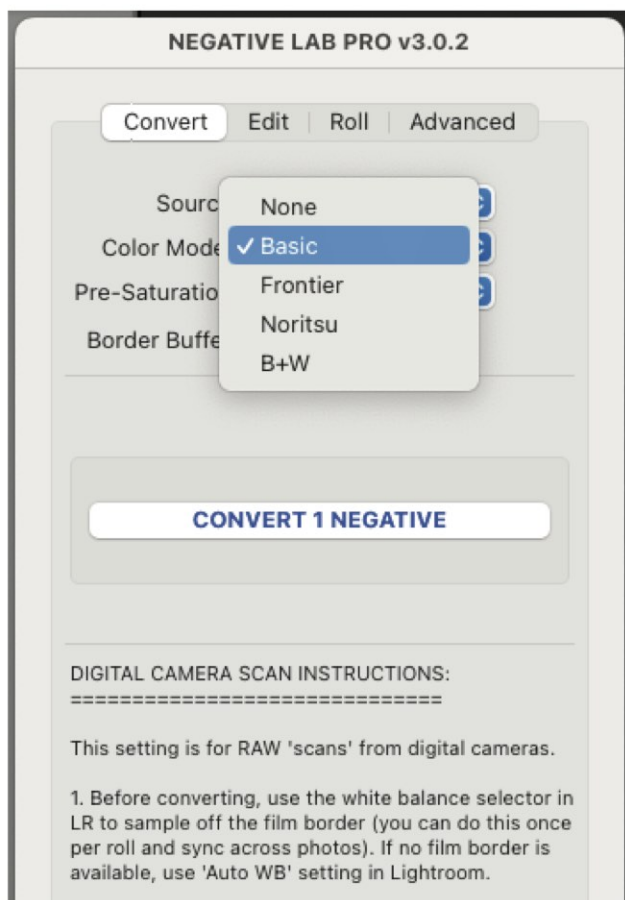

**17. EDIT YOUR IMAGES TO TASTE, CYCLING THROUGH THEM WITH “<” “>” KEYS ON THE BOTTOM LEFT CORNER OF THE MENU. WHEN READY, PRESS “APPLY”.**

**18. EXPORT YOUR IMAGES BY GOING TO “FILE” -> “EXPORT WITH PRESET” AND CHOOSE:**

“EDITING TIFF” FOR BIG EDITABLE FILES,

OR

“PREVIEW JPEGs” FOR SMALLER IMAGE FILES TO SHARE EASILY.

**19. SIGN OUT OF LIGHTROOM BY GOING “HELP” -> “SIGN OUT”.  
CLOSE LIGHTROOM. COLLECT YOUR IMAGES FROM YOUR FOLDER.**

**\*\*\*DELETE THEM FROM THE COMPUTER AND TURN EVERYTHING OFF.\*\*\***

**JOÃO HENRIQUE  
VIEGAS**