



India's latest SuperComp

C-DAC along with IIT, Gandhinagar unveils new supercomputer at National SuperComputing Mission. <https://digit.in/jun22-60>



No more passwords

SecureAuth announce Arculix, a security platform with passwordless authentication tech. <https://digit.in/jun22-61>

5. A size O paint brush with smooth hair.
6. Screw Driver.

I'VE BOUGHT THE PARTS, NOW WHAT?

Now, we assemble! Before we get into putting the keycaps onto the switches, however, there are a few more (slightly annoying) steps, before we get clicking.

Step 1. Take out your case, and disassemble it. Get the PCB and stabilisers out. In case you have bought third-party stabilisers, pull out the stock stabs, and after lubing your newly bought stabilisers with



the greasy lube in a gentle manner, attach them to the PCB.

Okay, before we move forward, here's something you need to keep in mind. In case you have chosen to go for clicky switches, you need not perform Steps 2-5. You can directly continue from Step 6. This is recommended because clicky switches, when lubed, get converted into a quieter tactile sound.

Step 2. Next, open up your switches. Open them using the switch opener that you bought, borrowed or stole from a store.


Step 3. Now, separate the various different parts of the switches that you pulled. Set aside the stems, the springs, and the upper and lower housings.

Pull out the spring and while gently holding them, apply a little amount of lube on them using your paint brush. Make sure you don't apply excess lube.

Step 4. Next, it's time to lube your stems and housings. Pick up the paintbrush and the greasy



Regions on the upper housing to apply lube to

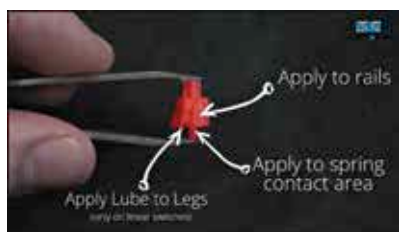

Regions to apply lube on the stem



Regions to apply lube to on the Lower Housing

lube and take small amounts, and I mean small amounts, so much so that no extra lube should be visible on the brush. And then apply the lube on each side of the stem and on the base.

Step 5. Start reassembling the switches one by one while making sure you're not twisting the springs the wrong way.



Keyswitch Placement

Step 6. Once all the switches are reassembled, detach the PCB from the case and place the key switch holding grate on it. Then start pushing the switches through the holes until they are firmly in place. Most of them would make a clicking noise when placed properly.

Step 7. Bring out your soldering tools and plug in the iron for a minute or two. While it heats, feel free to go click click on your switches and take a small feel of them. Be proud of the progress you've made up until now!



Step 8. Now, flip the board over where you'll be able to see the pins protruding from the PCB holes. Solder the pin to the board and repeat this for all the keys.

Step 9. Oh, you're so close you can practically hear the clacking! In this next step, we place the PCB back into the case and screw it in.



Step 10. Pull out an image of the keyboard layout you're going to be following. I.e. 100 per cent, 85 per cent, 75 per cent and so on. Start putting in the keycaps one by one. While you're placing the keycaps, make sure each one of them is stable in its place by tapping on it a couple times while also taking a feel of the key.

Step 11. DONE! You finally have your very own mechanical keyboard, that you have made yourself! Make sure you use it well and don't disappoint other mechheads.

Well, that's about it! That is how you can build a personalised, custom mechanical keyboard for yourself. Happy clicking! 🎉