

Freq14.15MHz

Ground


- Free space
- Perfect
- Real

Add height20.00m

MaterialCu wire

WAVE LENGTH = 21.187 (m)
TOTAL PULSE = 39
FILL MATRIX...
FACTOR MATRIX...
PULSE U (V) I (mA) Z (Ohm) SWR PWR(WT)
w2c 1.000+j0.000 0.000+j0.225 0.045-j4449 ---- 2.2957e-09
POWER = 2.3e-09 WT
CURRENT DATA...
FAR FIELD (Pin = 2.2957e-09 WT)
NO FATAL ERROR(S)
0.03 sec

No.	F (MHz)	R (Ohm)	jX (Ohm)	SWR 50	Gh dBd	Ga dBi	F/B dB	Elev.	Ground	Add H.	Polar.
2	14.15	0.0454	-4449	1999999	-1.31	0.84	0.0	---	Free	---	hori.
1	10.12	17.06	-778.7	714	-0.65	1.5	-600.11	90.0	Free	---	hori.



Geometry View Calculate Far field plots

Geometry View Calculate Far field plots

Freq 10.12 MHz

Ground

- Free space

☐ Perfect

- Real

Add height m

Material	Cu wire
	>

WAVE LENGTH = 29.624 (m)

TOTAL PULSE = 27

FILL MATRIX...

FACTOR MATRIX...

PULSE U (V)

 $10.00 + j0.000$

POWER = 0.00281 WT

CURRENT DATA...

FAR FIELD ($P_{in} = 0.0028115 \text{ W}$)

NO FATAL ERROR(S)

0.08 sec

$$I \text{ (mA)}$$

$$0.281 + j12.84$$


Z (Ohm)
17.06-j778.7

SWR
714.30

PWR(WT)
0.0028115

No.	F (MHz)	R (Ohm)	jX (Ohm)	SWR 50	Gh dBd	Ga dBi	F/B dB	Elev.	Ground	Add H.	Polar.
1	10.12	17.06	-778.7	714	-0.65	1.5	-600.11	90.0	Free	---	hor.

Source
Load

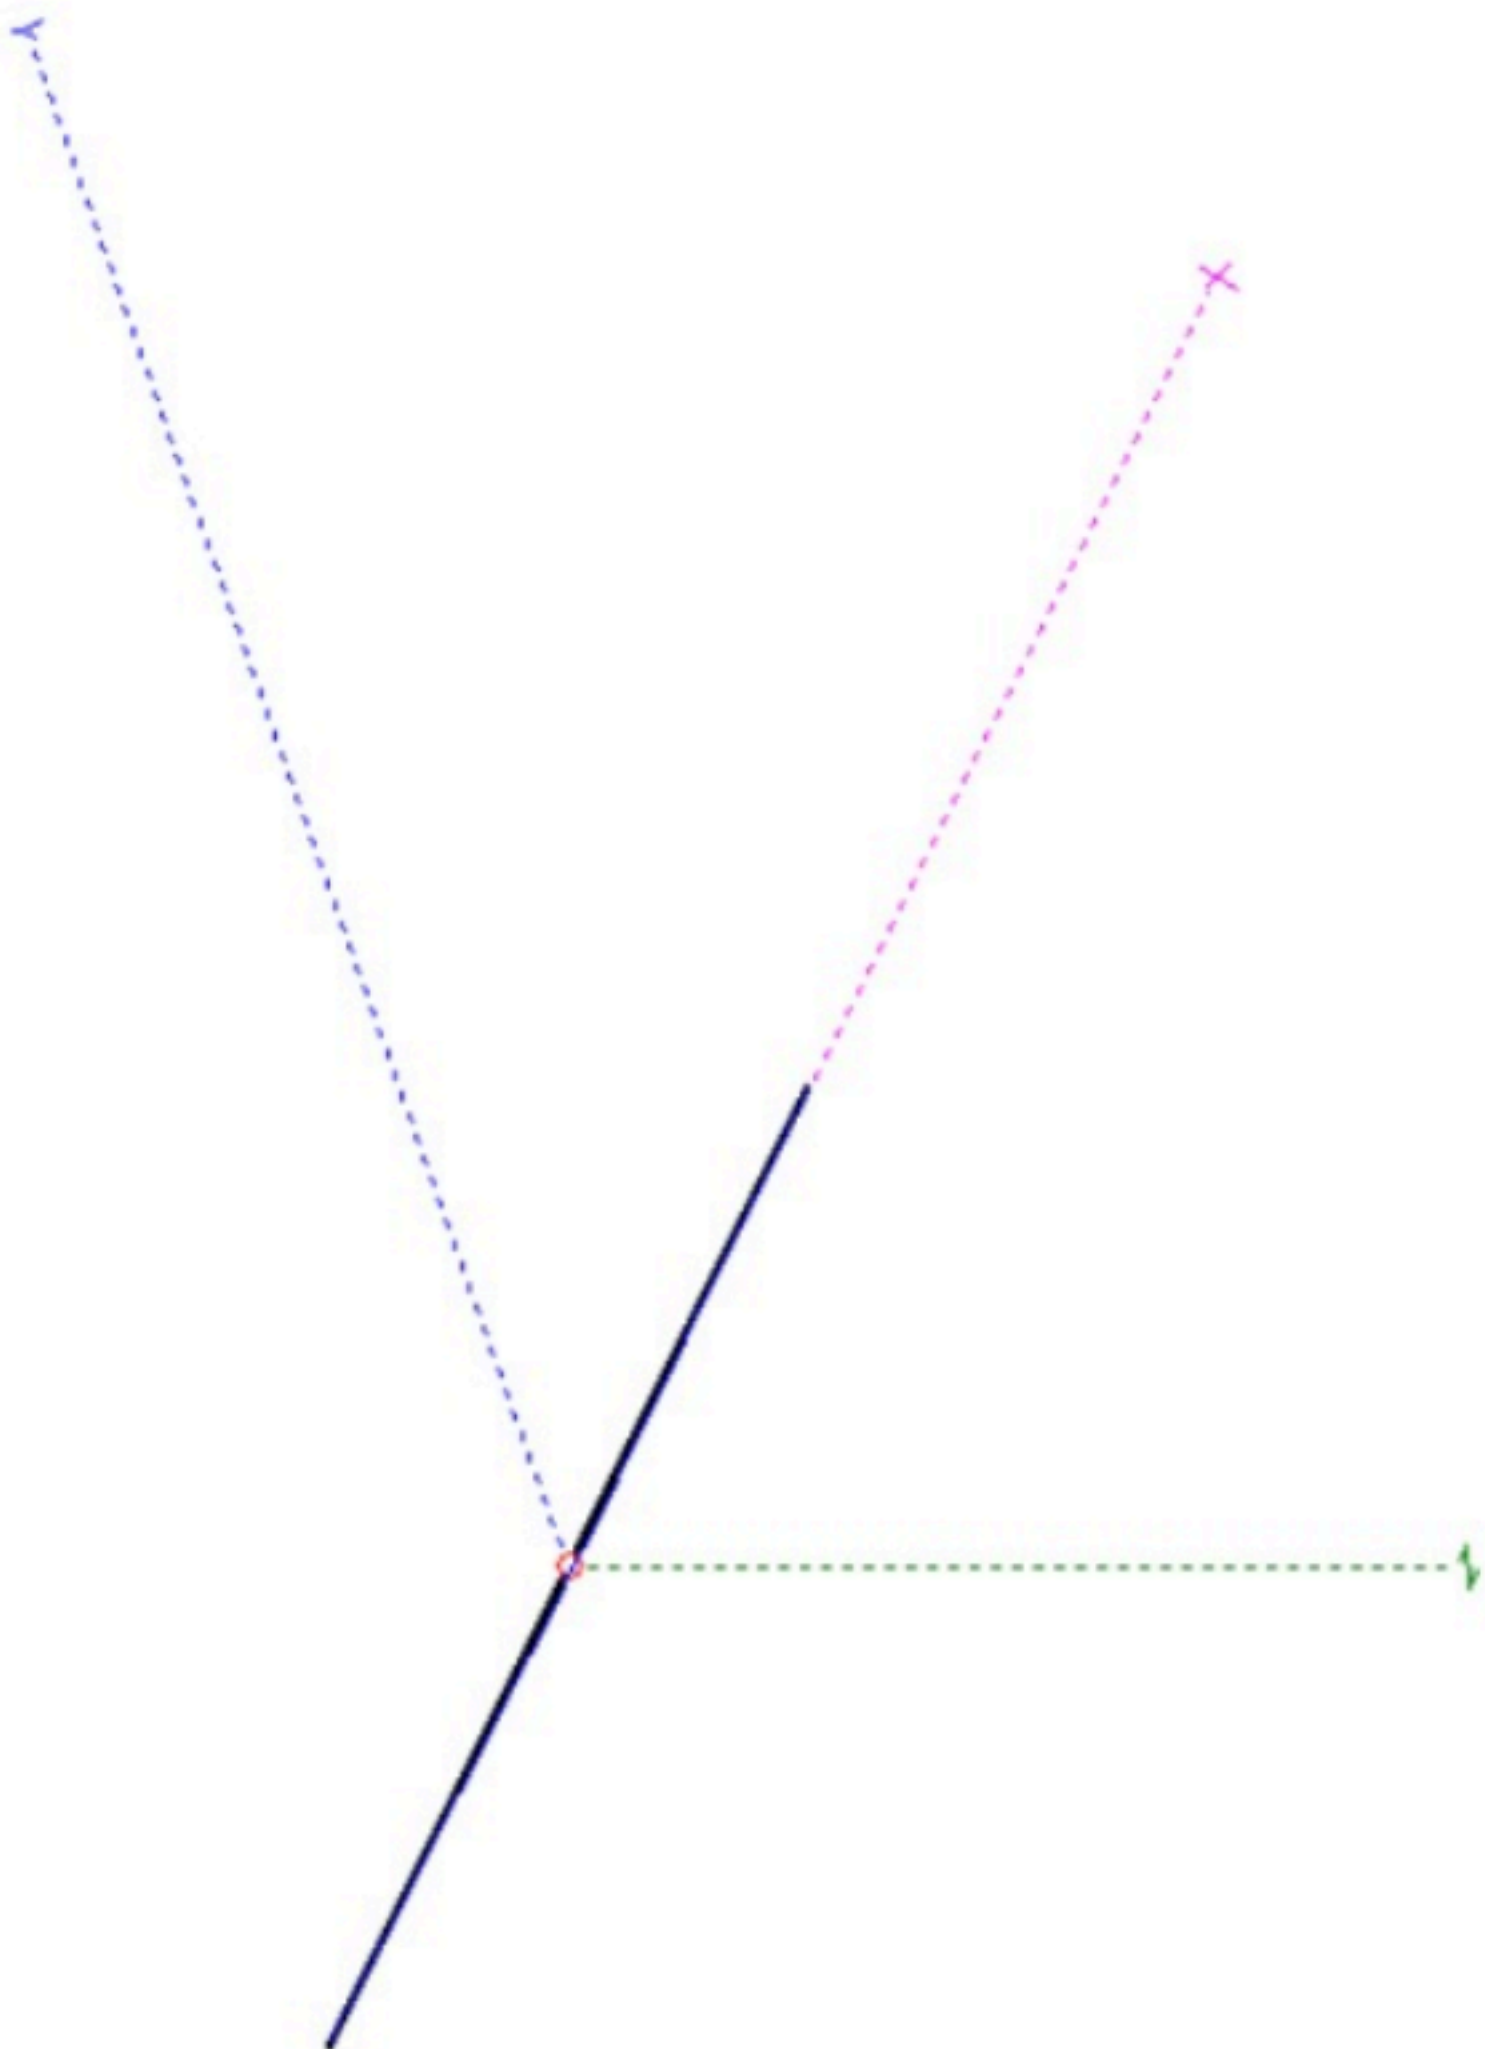


Wire No. 1
X1 : 4.0 m
Y1 : 0.0 m
Z1 : 0.0 m
X2 : -4.0 m
Y2 : 0.0 m
Z2 : 0.0 m
R : 0.8 mm
Length : 8.0 m
Azim. : 180.0 deg
Zenith : 0.0 deg

Rotate around : ☐ Selected wire

☒ Middle point of antenna

☐ X=0, Y=0, Z=H

Save image

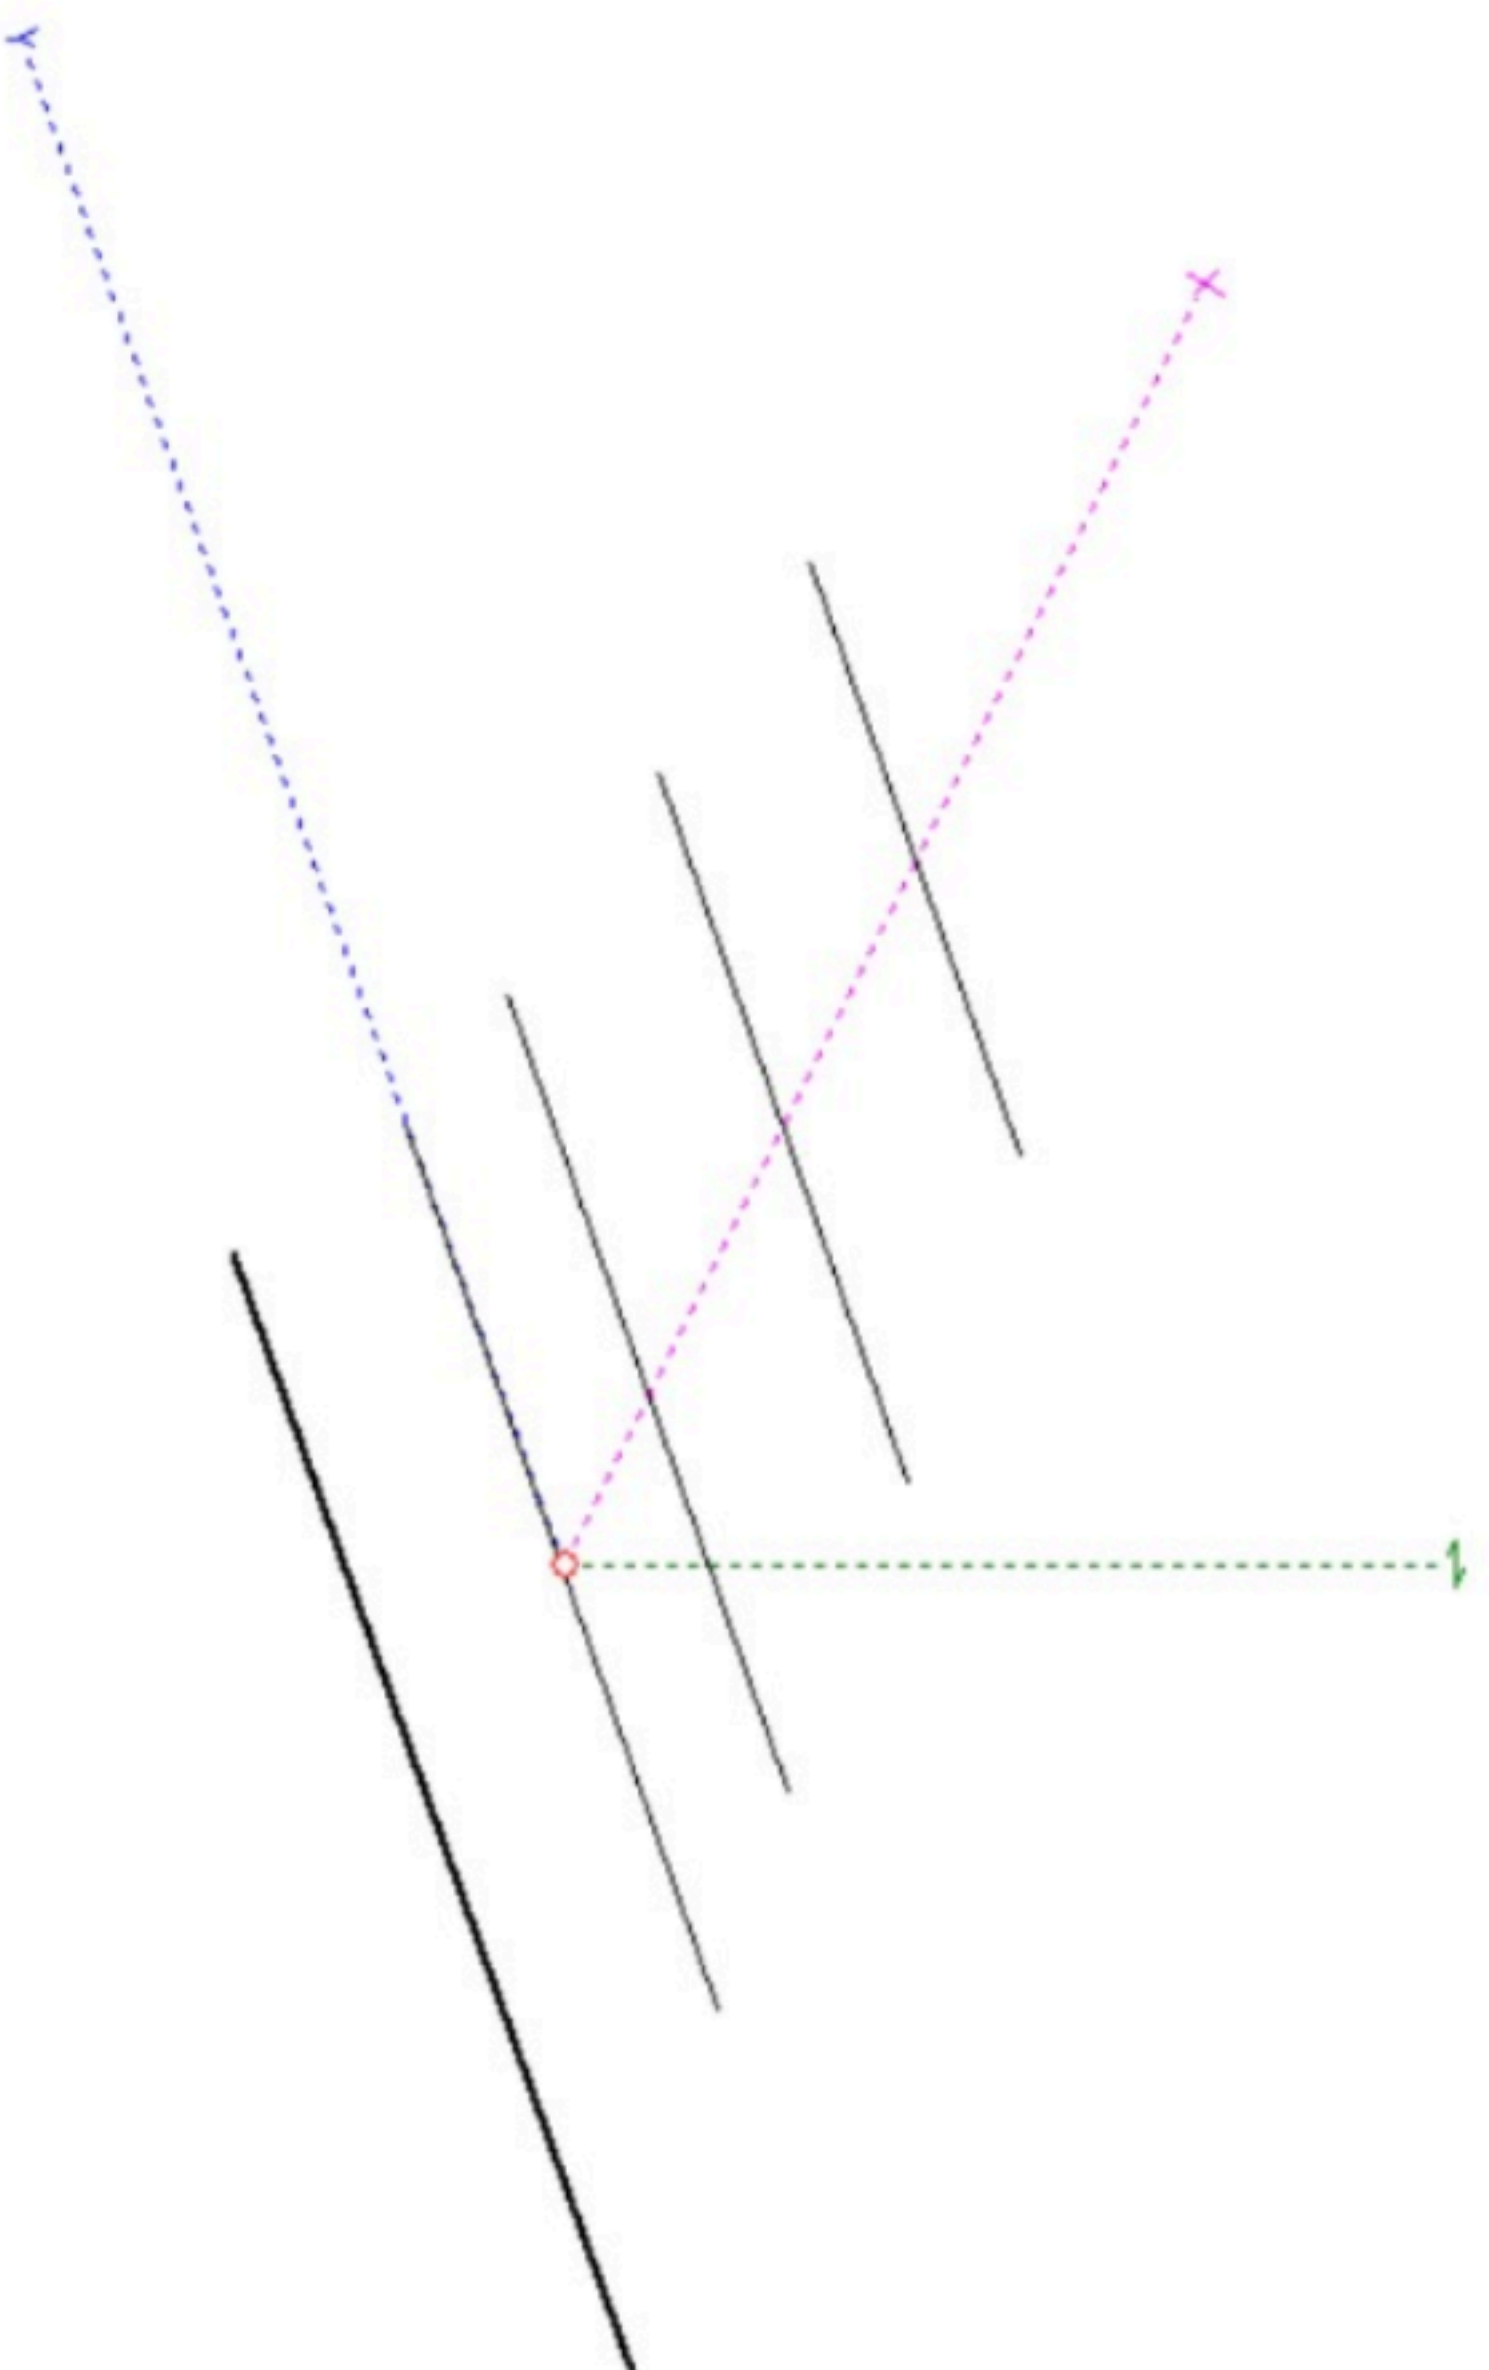

Wire No.1	
X1	: -0.143 m
Y1	: -0.27 m
Z1	: 0.0 m
X2	: -0.143 m
Y2	: 0.27 m
Z2	: 0.0 m
R	: 8.5 mm
Length	: 0.54 m
Azim.	: 90.0 deg
Zenith	: 0.0 deg