# **Smart Home**

# **Assignment-1**

By R.Bavani 952319104005

#### **Smart Home**

IOT or internet of things is an upcoming technology that allows us to control hardware devices through the internet. Here we propose to use IOT in order to control home appliances, thus automating modern homes through the internet. This system uses three loads to demonstrate as house lighting and a fan. Our user friendly interface allows a user to easily control these home appliances through the internet. For this system we use an AVR family microcontroller. This microcontroller is interfaced with a wifi modem to get user commands over the internet. Also we have an LCD display to display system status. Relays are used to switch loads. The entire system is powered by a 12 V transformer. After receiving user commands over the internet, microcontroller processes these instructions to

operate these loads accordingly and display the system status on an LCD display.

### **Hardware Specifications**

- Atmega Microcontroller
- . ESP8266 Wifi Module
- . LCD Display
- . DC Cooling Fan
- Relay
- Relay Driver IC
- · Vtg Regulator IC
- . Resistors
- Capacitors
- . Transistors
- . Cables and Connectors
- . Diodes
- PCB and Breadboards

- . LED
- . Transformer/Adapter
- . Push Buttons
- . Switch
- . IC
- . IC Sockets

## **Software Specifications**


- · Arduino Compiler
- . MC Programming Language: C
- . IOTGecko

#### IoT devices for securing your home

- Wall switches
- Voltage Sensors

- Air Conditioner
- Energy Motors
- Smart Door lock

# **Circuit Diagram For Smart Home**

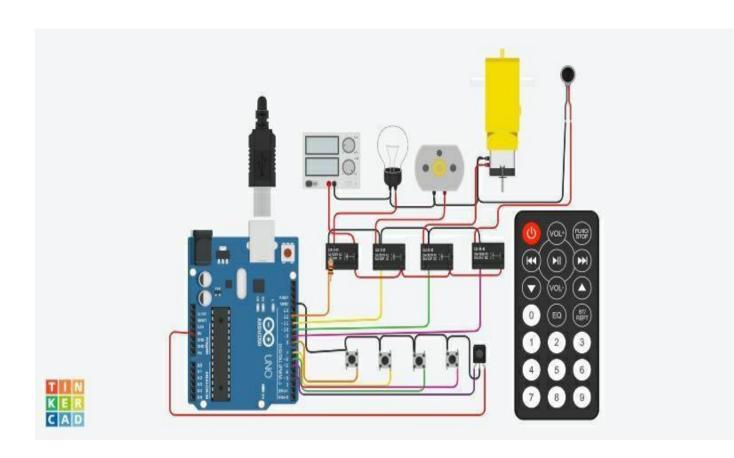

#### **Coding**

#include <SPI.h>
#include <Wire.h>

#include <IRremote.h>

const int relay\_1 = 12; const int relay\_2 = 11; const int relay\_3 = 10; const int relay\_4 = 9;

const int mswitch\_1 = 8; const int mswitch\_2 = 7; const int mswitch\_3 = 6; const int mswitch\_4 = 5; int RECV\_PIN = 3;

```
IRrecv irrecv(RECV_PIN); decode_results results;
```

```
int toggleState_1 = 0; int
toggleState_2 = 0; int toggleState_3
= 0; int toggleState_4 = 0;
void setup() {
 Serial.begin(9600); irrecv.enableIRIn();
                                   OUTPUT);
 pinMode(relay_1,
pinMode(relay_2, OUTPUT); pinMode(relay_3,
OUTPUT); pinMode(relay_4, OUTPUT);
pinMode(mswitch_1, INPUT_PULLUP);
```

pinMode(mswitch\_2, INPUT\_PULLUP);

```
pinMode(mswitch_3, INPUT_PULLUP);
pinMode(mswitch_4, INPUT_PULLUP);
}
void relayOnOff(int relay){
  switch(relay){     case
1:
       if(toggleState_1 == 0){
digitalWrite(relay_1, HIGH); // turn on relay
         toggleState_1 = 1;
1
        }
       else{
                  digitalWrite(relay_1,
LOW); // turn off relay 1 toggleState_1
= 0;
delay(100); break;
case 2:
```

```
if(toggleState_2 == 0){
digitalWrite(relay_2, HIGH); // turn on relay
          toggleState_2 = 1;
2
            else{
digitalWrite(relay_2, LOW); // turn off relay
          toggleState_2 = 0;
delay(100); break; case
3:
       if(toggleState_3 == 0){
digitalWrite(relay_3, HIGH); // turn on relay
          toggleState_3 = 1;
3
        }else{
digitalWrite(relay_3, LOW); // turn off relay
3
          toggleState_3 = 0;
delay(100); break;
case 4:
       if(toggleState_4 == 0){
digitalWrite(relay_4, HIGH); // turn on relay
```

```
4
         toggleState_4 = 1;
             else{
digitalWrite(relay_4, LOW); // turn off
relay 4
       toggleState_4 = 0;
delay(100); break;
   default: break;
   }
void loop() {
  if (digitalRead(mswitch_1) ==
LOW){ delay(200);
relayOnOff(1);
  }
```

```
else if (digitalRead(mswitch_2) == LOW){
delay(200); relayOnOff(2);
  else if (digitalRead(mswitch_3) == LOW){
delay(200); relayOnOff(3);
  else if (digitalRead(mswitch_4) == LOW){
delay(200); relayOnOff(4);
  }
   if (irrecv.decode(&results)) {
switch(results.value){
case 0xFD08F7:
relayOnOff(1);
                   break;
                               case
0xFD8877:
relayOnOff(2);
                   break;
                               case
0xFD48B7:
```

```
relayOnOff(3); break; case
0xFD28D7:
relayOnOff(4); break;
default:break;
}
irrecv.resume();
}
```