February 14, 2017			
Accumulator Simulated Load Experiment: EXP-01			
Lafayette College: Electrical and Computer Engineering			
Greg Flynn This document contains information about how to set up an experiment to simulate the operation of the accumulator. A simulated load is used for this acquisition. Both one pack and all four in series are documented here.			
Experiment: EXP-01			
Accumulator Simulated Load			
A a a company data a di la a a d			

Table of Contents

Desired objectives	3
Required Hardware	3
Required Software	3
Hardware Setup	4
Single pack	
Full accumulator setup	5
Software Setup	6
Data	6
Desired data	6
AIRs tests	6
Thévenin Voltage	6
Temperature	6
Appendix A: Wiring requirements	7

Desired objectives

This experiment should characterize how the packs perform safely. To achieve this the packs will discharge into a simulated load. This will be done in two steps. The first experiment will verify that an individual pack can deliver the expected current. The second experiment will ensure that all of the packs can work together to ensure that the correct current can be driven into the load at the right voltage.

The nominal voltage of 4 packs in series is 89.6VDC. For one pack it is 22.4V. The maximum current that the packs will be asked to draw is 200A. The maximum anticipated voltage is 106.4VDC. The experiments are designed to ensure that no more than 200 A will be drawn in any circumstance.

To run these test a safety plan must have already been agreed and accepted by the ECE Director of Laboratories.

Required Hardware

- 4 Packs in series
- Simulated load
- Basic GLV safety loop
- PPE per safety plan
- Danger zone per safety plan
- Cables as specified in Appendix A
- Temperature Probe
- Multimeter
- Current probe

Required Software

None

Hardware Setup

Single pack

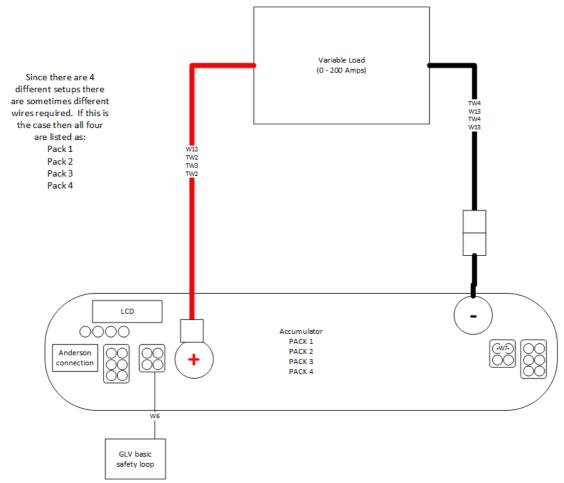


Figure 1 Single pack connections

Full accumulator setup

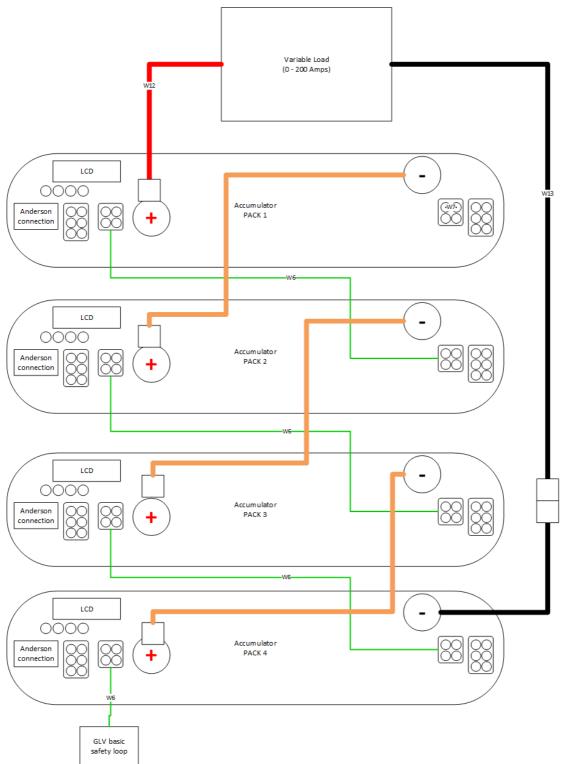


Figure 2 Full 4 cell test

Software Setup

N/A

Data

Perform full stress test and ramp the desired current up to 200 Amps.

Desired data

It is desired to get for both the single pack and the chain of packs:

- Thévenin voltage
- Temperature of cells
- AIRs test demonstration, both while drawing maximum current and not drawing maximum current

AIRs tests

Check that the AIRs can be opened and closed with individual packs. Check that the packs in series can be opened and closed.

Check that the AIRs can be opened and closed with 25A load.

Thévenin Voltage

Check all packs individually from 0 Amps to 200 Amps to be able to characterize the Thévenin equivalent. Add more rows as appropriate. Pay careful attention to measuring the voltage away from the cells, a correction factor may be needed to deal with voltage loss.

Pack	Current	Voltage at load		
Check shain of nacks from 0 Amns to 200 Amns				

Check chain of packs from 0 Amps to 200 Amps.

Current	Voltage at load		

Temperature

While testing ensure that no part of the pack gets $40\mathrm{C}$ above ambien
temperature.

Witness/examiner signature	Date	Pass/Fail
Accumulator Simula	EXP-01	

Appendix A: Wiring requirements

1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-	P1 W6 DT06-4S	Safety Loop 16/4 Cable	P2 DT06-4S	1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-
1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-	P1 W7 DT06-4S	Safety Loop Tern 16/1 Cable	<u>ni</u> nator	1 2 3 4	Jump 1 and Leave 3 and	2 pin
1	RED	TSV HV	P1 W12 NLDFT-E-GN-L-S120-M40	Pack 1 + DA 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW2 NLS-3-GY-S120-M40A	Pack 2/4 + 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW3 NLS-N-BL-S120-M40A	Pack 3 + 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW4 F	Pack 1 and 3 -	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 W13 F	Pack 2 and 4 - DA 2/0 Cable	Bare	1	RED	TSV HV

		_ ,			
Cable	What packs	Total count			
	use it	for full test			
W6	1,2,3,4	4			
W7	1,2,3,4	1			
W12	1	1			
TW2	2,4	1			
TW3	3	1			
TW4	1,3	1			
W13	2,4	1			

Accumulator Simulated Load Experiment: EXP-01