February 14, 2017	
Accumulator Simulated Load Experiment: EXP-01	
Lafayette College: Electrical and Computer Engineering	
Greg Flynn This document contains information about how to set up an experiment to simulate the operation of the accumulator. A simulated load is used for this acquisition. Both one pack and all four in series are documented here.	
Experiment: EXP-01	
Accumulator Simulated Load	
A a a company data a di la a a d	

Table of Contents

Desired objectives	3
Required Hardware	3
Required Software	3
Hardware Setup	4
Software Setup	6
Data	
Desired data	6
Thévenin Voltage	6
Temperature	6
Appendix A: Wiring requirements	7

Desired objectives

This experiment should characterize how the packs perform safely. To achieve this the packs will discharge into a simulated load. This will be done in two steps. The first experiment will verify that an individual pack can deliver the expected current. The second experiment will ensure that all of the packs can work together to ensure that the correct current can be driven into the load at the right voltage.

The nominal voltage of 4 packs in series is 89.6VDC. For one pack it is 22.4V. The maximum current that the packs will be asked to draw is 200A. The maximum anticipated voltage is 106.4VDC. The experiments are designed to ensure that no more than 200 A will be drawn in any circumstance.

To run these test a safety plan must have already been agreed and accepted by the ECE Director of Laboratories.

Required Hardware

- 4 Packs in series
- Simulated load
- Basic GLV safety loop
- PPE per safety plan
- Danger zone per safety plan
- Cables as specified in Appendix A
- Temperature Probe
- Multimeter

Required Software

None

Hardware Setup

Single pack

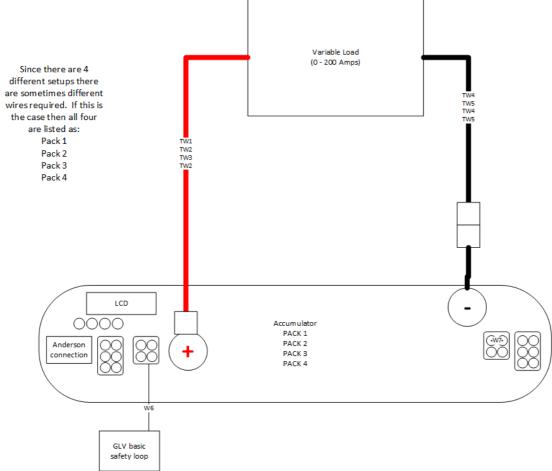


Figure 1 Single pack connections

Full accumulator setup

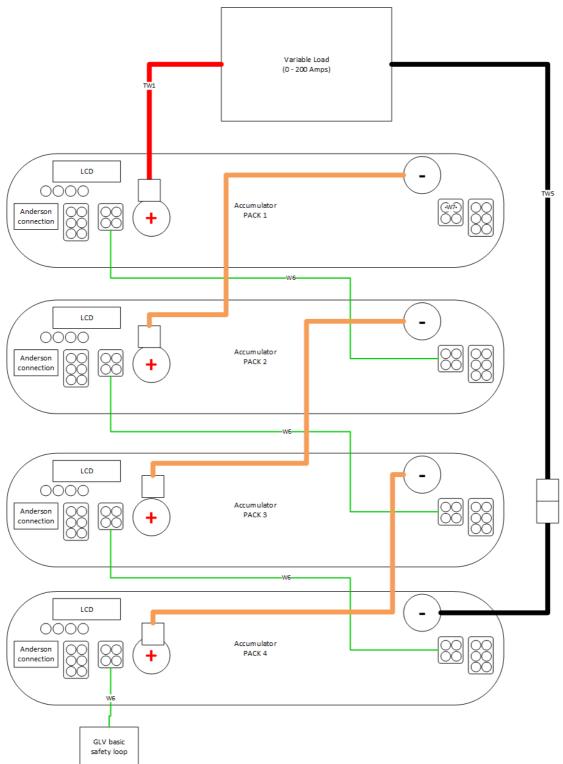


Figure 2 Full 4 cell test

Software Setup N/A					
Data	Data				
Perfor	Perform full stress test and ramp the desired current up to 200 Amps.				
It is de	Desired data It is desired to get for both the single pack and the chain of packs: • Thévenin voltage • Temperature of cells				
Thévenin Voltage Check all packs individually from 0 Amps to 200 Amps to be able to characterize the Thévenin equivalent. Add more rows as appropriate. Pay careful attention to measuring the voltage away from the cells, a correction factor may be needed to deal with voltage loss.					
Pack Current		Voltage at load			
Check chain of packs from 0 Amps to 200 Amps.					
Current		Voltage at load			
1					

Temperature

While testing ensure that no part of the pack gets 40C above ambient temperature.

Witness/examiner signature Date Pass/Fail

Accumulator Simulated Load Experiment: EXP-01

Appendix A: Wiring requirements

1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-	P1 W6 DT06-4S	Safety Loop 16/4 Cable	P2 DT06-4S	1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-
1 2 3 4	WHT BRN RED BLK	SL1 SL2 AIRs+ AIRs-		Safety Loop Tern 16/1 Cable	ninator	1 2 3 4	Jump 1 and Leave 3 and	2 pin
1	RED	TSV HV	P1 TW1 NLDFT-E-GN-L-S120-M40A	Pack 1 + 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW2 I	2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW3 NLS-N-BL-S120-M40A	Pack 3 + 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW4 Pa	ack 1 and 3 - 2/0 Cable	Bare	1	RED	TSV HV
1	RED	TSV HV	P1 TW5 Pa	ack 2 and 4 - 2/0 Cable	Bare	1	RED	TSV HV

Cable	What packs	Total count		
	use it	for full test		
W6	1,2,3,4	4		
W7	1,2,3,4	1		
TW1	1	1		
TW2	2,4	2		
TW3	3	1		
TW4	1,3	2		
TW5	2,4	2		

Accumulator Simulated Load Experiment: EXP-01