

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

RCC Mode and Configuration

Mode

High Speed Clock (HSE) Crystal/Ceramic Resonator

Low Speed Clock (LSE) Disable

☐ Master Clock Output

Configuration

Reset Configuration

☒ Parameter Settings ☒ User Constants ☒ NVIC Settings ☒ GPIO Settings

Configure the below parameters:

Search (Ctrl+F)

System Parameters


VDD voltage (V)	3.3 V
Prefetch Buffer	Enabled
Flash Latency (WS)	2 WS (3 CPU cycle)

RCC Parameters

HSI Calibration Value	16
HSE Startup Timeout Value (ms)	100
LSE Startup Timeout Value (ms)	5000


Pinout view

System view

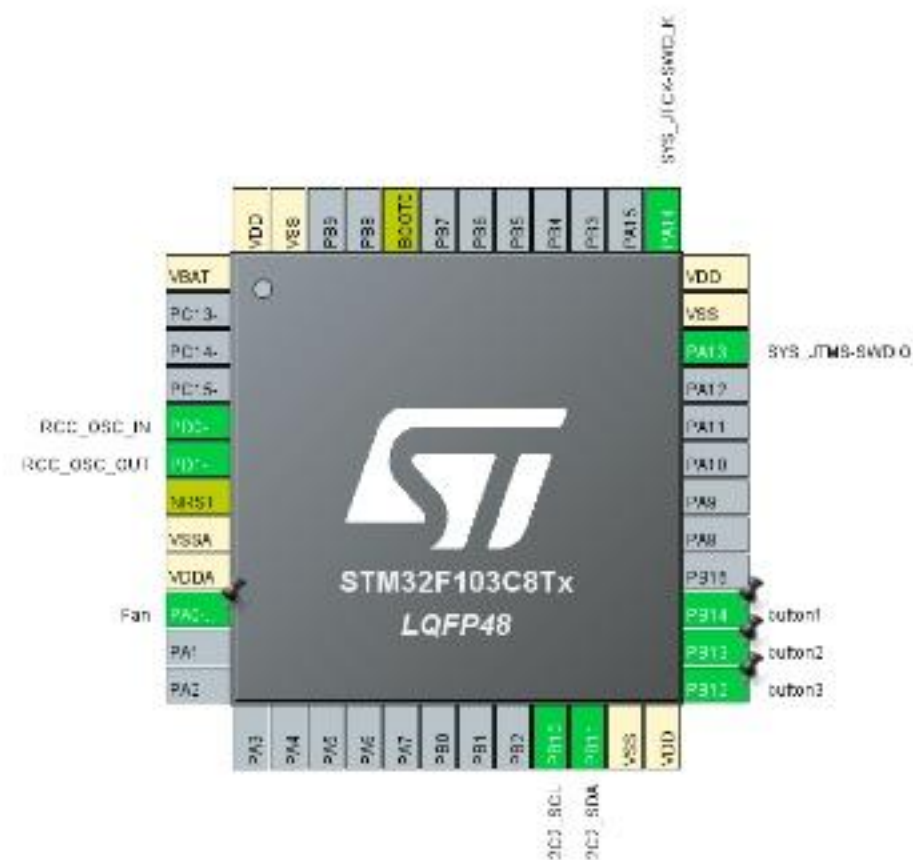



Resolve Clock Issues

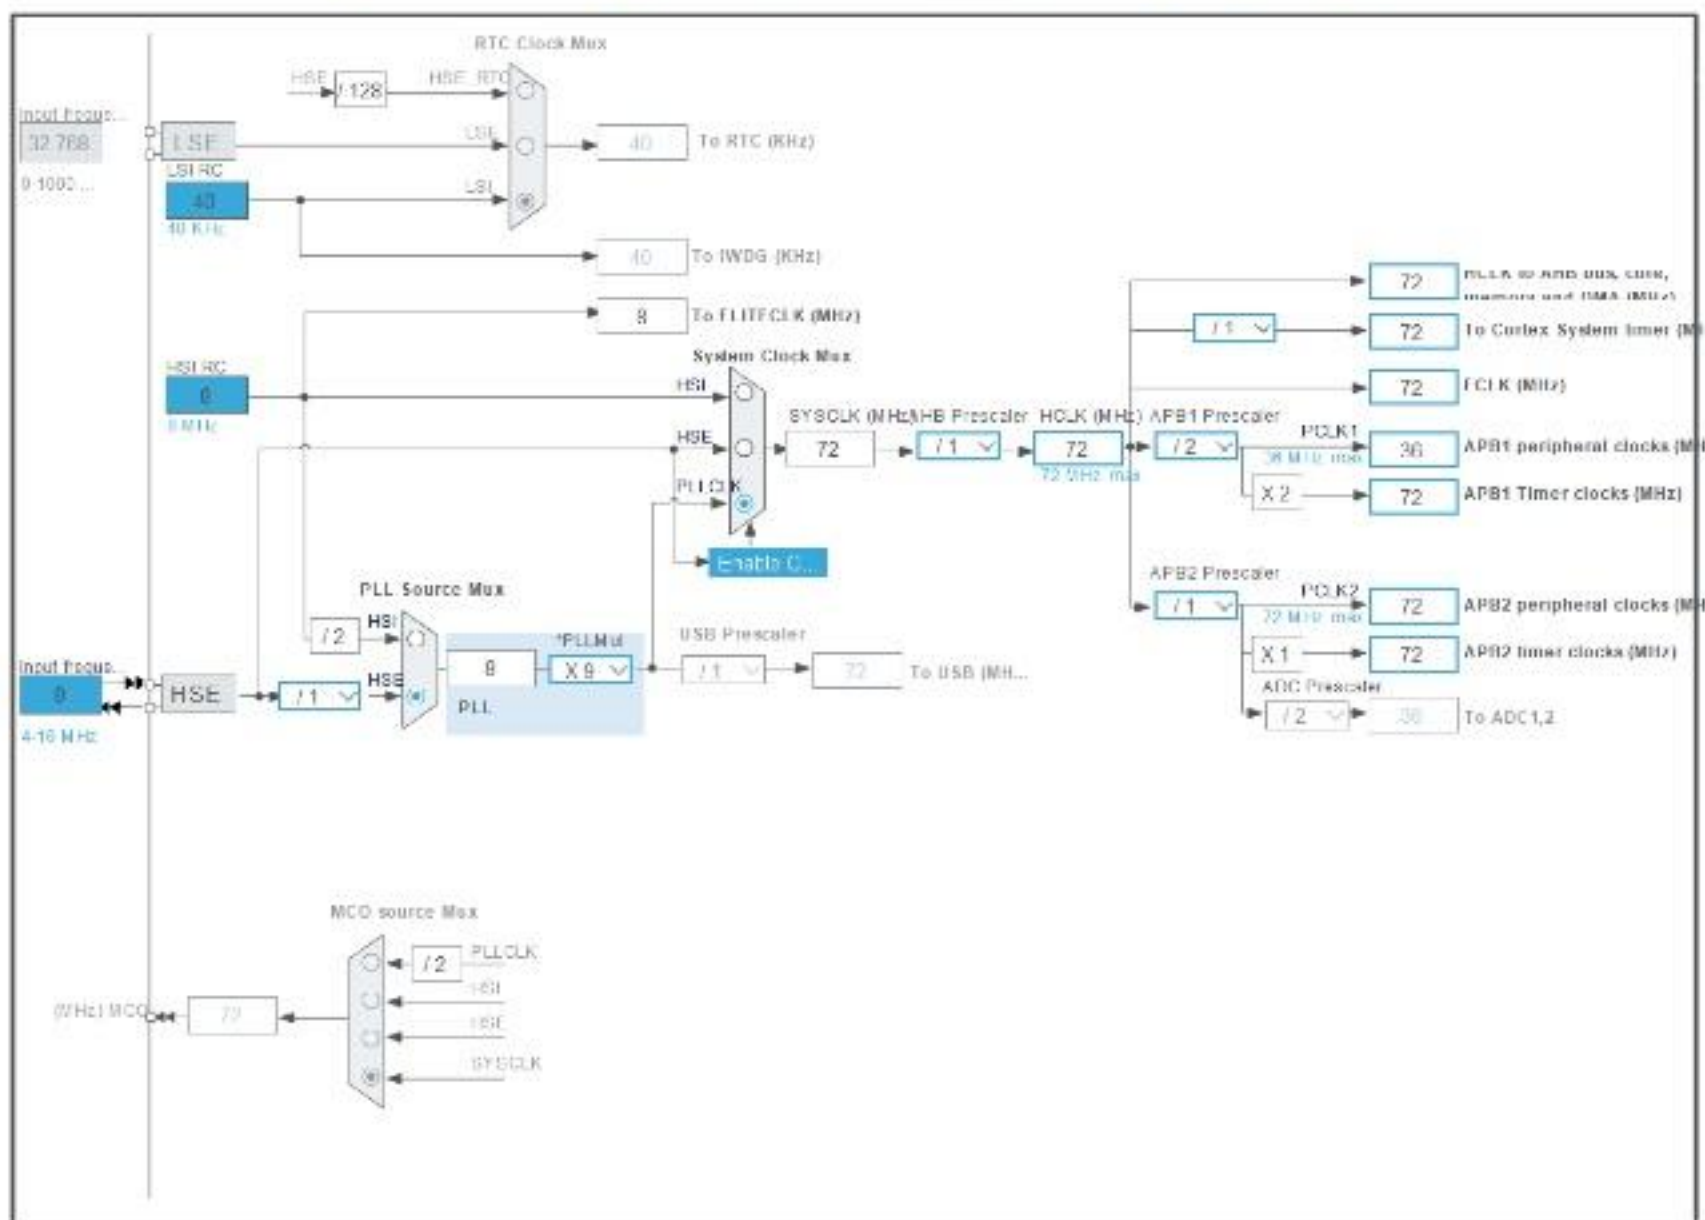

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

I2C2 Mode and Configuration

Mode

I2C

Configuration

Reset Configuration

NVIC Settings

DMA Settings

GPIO Settings

Parameter Settings

User Constants

Configure the below parameters:

Search (Ctrl+F)

Master Features

I2C Speed Mode

Standard Mode

I2C Clock Speed (Hz)

100000

Slave Features

Clock No Stretch Mode

Disabled

Primary Address Length selection

7-bit

Dual Address Acknowledged

Disabled

Primary slave address


0

General Call address detection

Disabled

Pinout view

System view

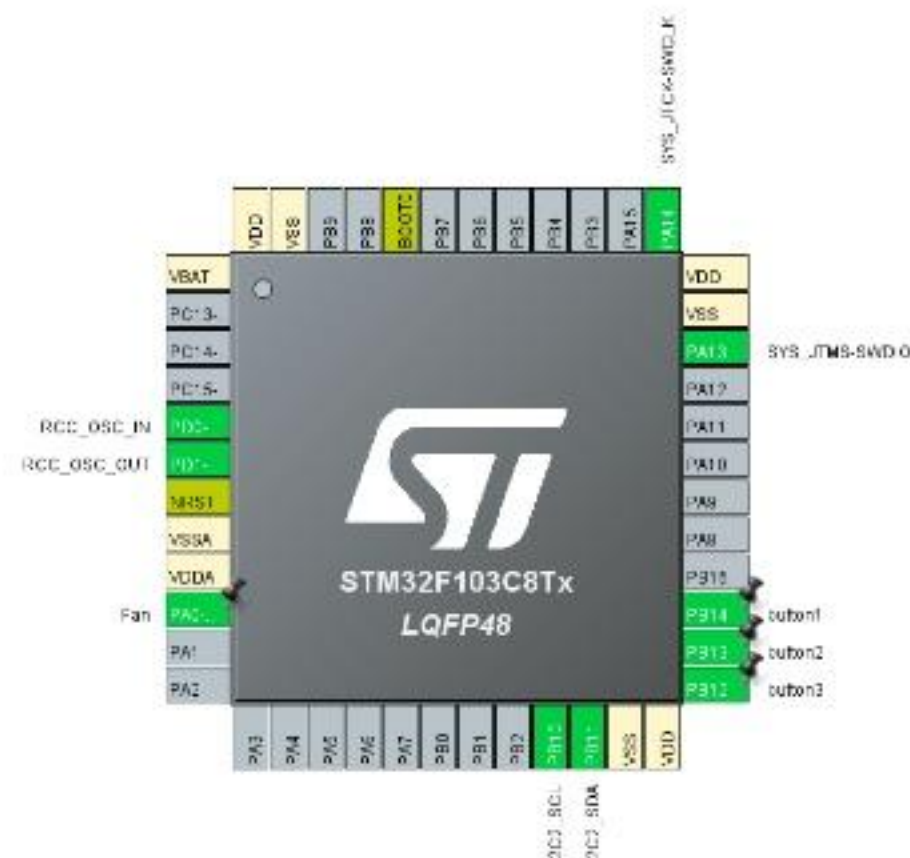

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

Q



Categories

A-Z

System Core >

Analog >

Timers >

RTC

TIM1

TIM2

TIM3

TIM4

Connectivity >

Computing >

Middleware and Software Packs >

TIM3 Mode and Configuration

Mode

- Slave Mode Disable
- Trigger Source Disable
- ☒ Internal Clock
- Channel1 Disable
- Channel2 Disable
- Channel3 Disable
- Channel4 Disable
- Combined Channels Disable
- ☐ XOR activation
- ☐ One Pulse Mode

XOR activation Disabled:

Requires Channel 1 and 2, 1 and 3 or 1 and 2 and 3 to be set either as a clock, a trigger source or in input capture mode.

Configuration

Reset Configuration

☒ Parameter Settings ☒ User Constants ☒ NVIC Settings ☒ DMA Settings

Configure the below parameters:

Q Search (Ctrl+F)



Counter Settings

Prescaler (PSC - 16 bits value) 7199

Counter Mode Up

Counter Period (AutoReload Register - 4099

Internal Clock Division (CKD) No Division

auto-reload preload Disable


Trigger Output (TRGO) Parameters

Master/Slave Mode (MSM bit) Disable (Trigger input effect not delayed)

Trigger Event Selection Reset (UG bit from TIMx_EGR)

Pinout view

System view

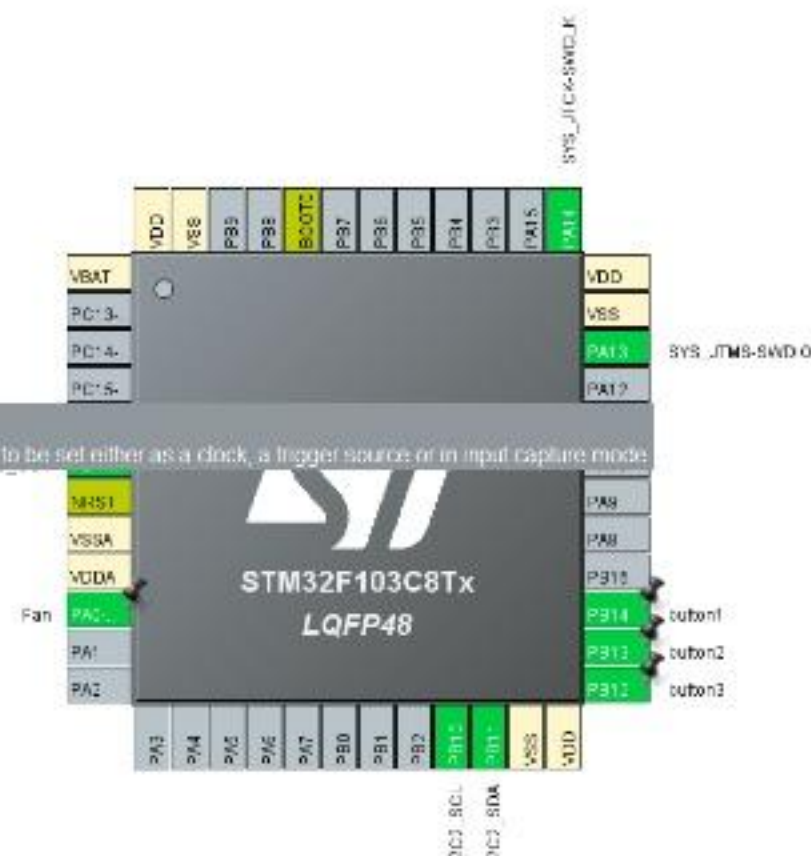

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

GPIO Mode and Configuration

Configuration

Group By Peripherals

GPIO I2C RCC SYS

Search Signals

Search [Ctrl+F]

☐ Show only Modified Pins

Pin No.	Signal on	GPIO outp.	GPIO mode	GPIO Pull	Maximum	User Label	Modified
PA0-WKUP	n/a	Low	Output Pu...	No pull-up ...	Low	Fan	☒
PB12	n/a	n/a	Input mode	Pull-up	n/a	button3	☒
PB13	n/a	n/a	Input mode	Pull-up	n/a	button2	☒
PB14	n/a	n/a	Input mode	Pull-up	n/a	button1	☒

Select Pins from table to configure them. Multiple selection is Allowed.

Pinout view

System view

