



PT SAPTAINDRA SEJATI

CONTROL VALVE 2

RECEIVING INSPECTION

CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

POWERTRAIN SECTION

✓ : GOOD CONDITION X : BAD CONDITION ⊗ : NONE

	Note :

APPROVED BY

PPC



PT SAPTAINDRA SEJATI

CONTROL VALVE 2

DISASSEMBLY &

MEASUREMENT

CHECKSHEET

MACHINE MODEL

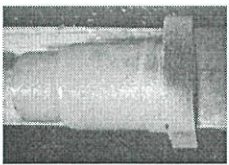
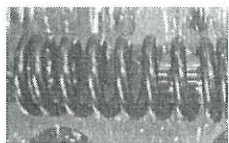
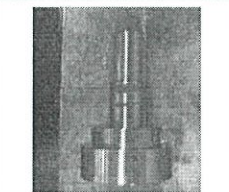
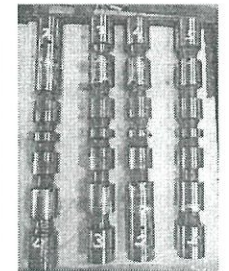
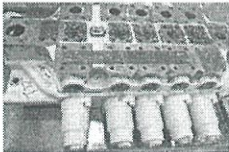
PC1250-8

RO NO :

POWERTRAIN SECTION

DISASSEMBLY AND MEASUREMENT CHECK SHEET CONTROL VALVE 2 4 SPOOL	UNIT MODEL		DELIVERY DATE		NUMBER.DOC	QR02 - PT - 119
	COMP.MODEL		WO.NO		PUB.DATE	26-Dec-2013
	COMP. S/N		SITE		REV.NO	00
	RECEIVING DATE		REVISION NO.		PAGE	1 of 1

PROCESS	START		DISASSEMBLY BY	
	FINISH			

No	PART NAME	METHODE	CHECK POINT	EVALUATION				FIGURE OF PARTS TO BE CHECKED																												
				ACTUAL			U/A		U/R	R/N																										
1	CASE	VISUAL CHECK	- Check surface area - Check Hole area mounting bolt - Check Groove oring	<table><tr><th>CONTENTS CHECK</th><th>Hole</th><th>Surface</th><th>Groove</th></tr><tr><td>Normal</td><td></td><td></td><td></td></tr><tr><td>Crack</td><td></td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td><td></td></tr><tr><td>Damage</td><td></td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td><td></td></tr></table>	CONTENTS CHECK	Hole	Surface	Groove	Normal				Crack				Scratch				Damage				Wear											
CONTENTS CHECK	Hole	Surface	Groove																																	
Normal																																				
Crack																																				
Scratch																																				
Damage																																				
Wear																																				
2	SPRING BIG 8pcs	VISUAL CHECK	- Check surface area - Check abnormal wear on spring - Check bending on spring	<table><tr><th>CONTENTS CHECK</th><th>Inside</th><th>Hole</th><th>Surface</th></tr><tr><td>Normal</td><td></td><td></td><td></td></tr><tr><td>Damage</td><td></td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td><td></td></tr><tr><td>Crack</td><td></td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td><td></td></tr></table>	CONTENTS CHECK	Inside	Hole	Surface	Normal				Damage				Scratch				Crack				Wear											
CONTENTS CHECK	Inside	Hole	Surface																																	
Normal																																				
Damage																																				
Scratch																																				
Crack																																				
Wear																																				
3	RETAINER	VISUAL CHECK	- Check surface area contact with of spring - Check surface area contact with of case	<table><tr><th>CONTENTS CHECK</th><th>Spline</th><th>Tooth</th><th>Surface</th></tr><tr><td>Normal</td><td></td><td></td><td></td></tr><tr><td>Pitting</td><td></td><td></td><td></td></tr><tr><td>Chipping</td><td></td><td></td><td></td></tr><tr><td>Crack</td><td></td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td><td></td></tr></table>	CONTENTS CHECK	Spline	Tooth	Surface	Normal				Pitting				Chipping				Crack				Wear				Scratch							
CONTENTS CHECK	Spline	Tooth	Surface																																	
Normal																																				
Pitting																																				
Chipping																																				
Crack																																				
Wear																																				
Scratch																																				
4	CHECK VALVE	VISUAL CHECK	- Check surface area - Check Hole area	<table><tr><th>CONTENTS CHECK</th><th>Hole</th><th>Surface</th></tr><tr><td>Normal</td><td></td><td></td></tr><tr><td>Crack</td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td></tr><tr><td>Damage</td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td></tr></table>	CONTENTS CHECK	Hole	Surface	Normal			Crack			Scratch			Damage			Wear																
CONTENTS CHECK	Hole	Surface																																		
Normal																																				
Crack																																				
Scratch																																				
Damage																																				
Wear																																				
5	SPOOL 1 s/d 4 BOOM BUCKET ARM TRAVEL RH	VISUAL CHECK	- Check surface area - Check Groove area - Check Hole area	<table><tr><th>CONTENTS CHECK</th><th>Hole</th><th>Surface</th></tr><tr><td>Normal</td><td></td><td></td></tr><tr><td>Pitting</td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td></tr><tr><td>Damage</td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td></tr></table>	CONTENTS CHECK	Hole	Surface	Normal			Pitting			Scratch			Damage			Wear																
CONTENTS CHECK	Hole	Surface																																		
Normal																																				
Pitting																																				
Scratch																																				
Damage																																				
Wear																																				
7	BODY	VISUAL CHECK	- Check surface area contact with of spool - Check surface area contact with of block	<table><tr><th>CONTENTS CHECK</th><th>Spline</th><th>Tooth</th><th>Surface</th></tr><tr><td>Normal</td><td></td><td></td><td></td></tr><tr><td>Pitting</td><td></td><td></td><td></td></tr><tr><td>Chipping</td><td></td><td></td><td></td></tr><tr><td>Crack</td><td></td><td></td><td></td></tr><tr><td>Wear</td><td></td><td></td><td></td></tr><tr><td>Scratch</td><td></td><td></td><td></td></tr></table>	CONTENTS CHECK	Spline	Tooth	Surface	Normal				Pitting				Chipping				Crack				Wear				Scratch							
CONTENTS CHECK	Spline	Tooth	Surface																																	
Normal																																				
Pitting																																				
Chipping																																				
Crack																																				
Wear																																				
Scratch																																				

REMARK :

DISASSEMBLY BY	CHECK BY	APPROVED BY
MECHANIC	QA.INSPECTOR	GL/SPV



PT SAPTAINDRA SEJATI

CONTROL VALVE 2

ASSEMBLY

CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

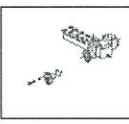
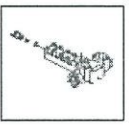
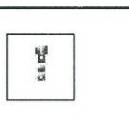
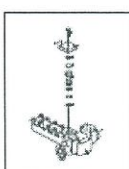
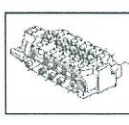
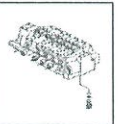
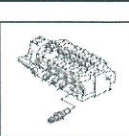
POWERTRAIN SECTION



PT SAPTAINDRA SEJATI
NAROGONG REBUILD CENTER

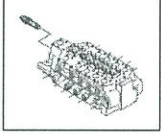


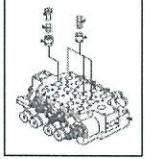
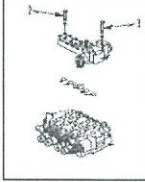
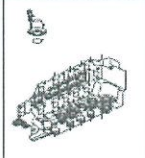
ASSEMBLY CHECK SHEET CONTROL VALVE 2 (4 SPOOL) PC1250-8	UNIT MODEL	PC1250-8	DOCUMENT NO.	
	COMP. MODEL	C/V 2 (4 SPOOL)	PUBLIC DATE	26/12/2013
	COMP. S/N		REVISION NO.	00
	WO.NO		PAGE	

PROCESS	START		ASSEMBLY BY	
	FINISH			

NO.	PARTS	CHECK POINT	SPECIFICATION	SIGN			REMARKS (SKETCH, PHOTOS, COMMENTS)
				MEC	SPV	QA	
1	ASSEMBLY	- Install Oring and plug to Spool - Install spring to spool Then install to valve body - Install Oring to flange and then torque mounting bolt Act. : kgm	Std torque 18 - 22 kgm Flange Liquid Gasket (LG)				 Spring Spool Tube Oring  Oring Flange
		- Install backup ring and Oring to Sleeve - Install sleeve assy to valve body and then torque mounting sleeve Act. : kgm - Install Nut to sleeve and then torque mounting Nut Act. : kgm	Sleeve thread tightener Liquid gasket (LG) Std torque 18 - 22 kgm Std torque 18 - 22 kgm				 Sleeve Oring Backup ring  Nut Sleeve
		- Install backup ring and oring to Plug - Install check valve and spring to sleeve - Install plug assy to sleeve and then torque mounting Plug Act. : kgm	Std torque 3 - 4 kgm				 Plug Backup ring Oring  check valve Sleeve
		- Install backup ring and Oring to Plug - Install Plug assy to valve body - Install Cover to valve body and then torque mounting bolt Act. : kgm	Liquid gasket (LG) Std torque 2.8 - 3.5 kgm				 Cover Oring Plug Backup ring
		- Install Oring to plug - Install Plug assy to valve body and then torque mounting plug Act. : kgm - Install backup ring and Oring to Plug - Install Plug assy to valve body and then torque mounting plug Act. : kgm	Std torque 6 - 8 kgm Std torque 12 - 16 kgm				 Plug Oring  Oring Backup ring Plug
		- Install Main relief valve to body and then torque Act. : kgm	Std torque 28 - 37 kgm				 Relief valve



ASSEMBLY CHECK SHEET CONTROL VALVE 2 (4 SPOOL) PC1250-8	UNIT MODEL	PC1250-8	DOCUMENT NO.	
	COMP. MODEL	C/V 2 (4 SPOOL)	PUBLIC DATE	26/12/2013
	COMP. S/N		REVISION NO.	00
	WO.NO		PAGE	4 of 6

NO.	PARTS	CHECK POINT	SPECIFICATION	SIGN			REMARKS (SKETCH, PHOTOS, COMMENTS)
				MEC	SPV	QA	
2	ASSEMBLY	- Install Jet sensor relief valve to valve body and then torque Act. : kgm	Std torque 18 - 20 kgm				 Jet sensor
		- Install Orifice to valve body and then torque Act. : kgm	Std torque 13 - 18 kgm				 Orifice
		- Install Suction-Safety valve to body and then torque Act. : kgm	Std torque 22 - 24 kgm				 Suction valve Safety valve
		- Install Suction-Safety valve to body and then torque Act. : kgm	Std torque 30 - 32 kgm				 Suction valve
		- Install Spool Boom Lo, Arm Hi, Bucket Lo and Travel RH to valve body	Be careful not to mistake the location of the spool. Coat the spool with engine oil				 Spool 1-4
		- Install check valve and spring to valve body - Install check valve, spring and seat to valve body	RANDOM ITEM CHECK Name : Name : QA INSPECTOR PROD. SUPERVISOR				 Check valve Spring seat valve
		- Install Oring to straight travel valve then install to valve body and then torque mounting bolt Act. : kgm Act. : kgm	Std torque 8 - 10 kgm (2) Std torque 16 - 18 kgm (3)				 Oring
		- Install Oring to case then install to valve body and then torque Act. : kgm	Std torque 6 - 7 kgm				 Case Oring

ASSEMBLY BY

INSPECTED BY

APPROVED BY

(MECHANIC)

QUALITY ASSURANCE

(GL / SPV)



PT SAPTAINDRA SEJATI

CONTROL VALVE 2

DELIVERY

CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

POWERTRAIN SECTION

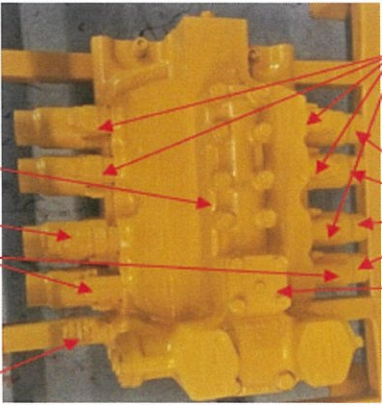
DELIVERY CHECK SHEET CONTROL VALVE 2 PC 1250 - 8R	WO. NO		DOCUMENT NO	
	COMP.S/N		PUBLIC DATE	
	INSPECTION DATE		REVISION NO	
	PART NO. COMPONENT	709 - 14 - 94001	PAGE	

BELOW ARE THE ITEMS RELATED TO DELIVERY INSPECTION AND WHILE YOU DOING THIS INSPECTION JOB, PLEASE REFERRING TO THE REMANUFACTURED COMPONENTS - STANDARD CONFIGURATION.

✓ : GOOD CONDITION

X : BAD CONDITION

⊗ : NONE

SKETCH DRAWING OR PHOTOES	NO	ITEM	CHECK	REMARK
Upper Side View 	1	Spool (4pcs)		
	2	Main Relief Valve		
	3	Suction Valve		
	4	2 Stage Suction Safety Valve		
	5	Suction Safety Valve (5pcs)		
	6	Cover		
	7	Straight Travel Valve		
	8	Name Plate		
	9	Plug		
	10	Jet Sensor Relief Valve		
		Painting condition		
		Packing / wrapping		
		Stand		
		Bolt stand		
		Delivery check sheet		
Rear Side View 		Quality passed (Sticker)		

NOTE : PLEASE MARK "✓" FOLLOWING TO THE ACTUAL CONDITION

OIL LEVEL	EMPTY OR DRAINED	
	PROPER LEVEL	

Note :

INSPECTION BY

APPROVED BY

QA/GL

QA COORDINATOR