

H10.15:Unit5 Input Sensor

* DL Register Area - 120Word

* DW00000 - DW00009 (Pis Use)

* DW00010 - DW00039 (Bit Use)

* DW00040 - DW00089 (Word Use)

* DW00090 - DW00400 (Timer)

#####

Program Name : Sensor In_Unit5

#

Function :

#

Call Program : H10

#

Sub Program :

#

Func Program :

#####

Sensor Input (CYL Forward)

0

0/0

EXPRESSION

'DB000160' =0
DB000160 =0 ; // Unit 5 CYL 01 Forward (MB061800) /
'DB000161' =0
DB000161 =0 ; // Unit 5 CYL 02 Forward (MB061801) /
'DB000162' =0
DB000162 =0 ; // Unit 5 CYL 03 Forward (MB061802) /
'DB000163' =0
DB000163 =0 ; // Unit 5 CYL 04 Forward (MB061803) /
'DB000164' =0
DB000164 =0 ; // Unit 5 CYL 05 Forward (MB061804) /
'DB000165' =0
DB000165 =0 ; // Unit 5 CYL 06 Forward (MB061805) /
'DB000166' =0
DB000166 =0 ; // Unit 5 CYL 07 Forward (MB061806) /
'DB000167' =0
DB000167 =0 ; // Unit 5 CYL 08 Forward (MB061807) /
'DB000168' =0
DB000168 =0 ; // Unit 5 CYL 09 Forward (MB061808) /
'DB000169' =0
DB000169 =0 ; // Unit 5 CYL 10 Forward (MB061809) /
'DB00016A' =0
DB00016A =0 ; // Unit 5 CYL 11 Forward (MB06180A) /
'DB00016B' =0
DB00016B =0 ; // Unit 5 CYL 12 Forward (MB06180B) /
'DB00016C' =0
DB00016C =0 ; // Unit 5 CYL 13 Forward (MB06180C) /
'DB00016D' =0
DB00016D =0 ; // Unit 5 CYL 14 Forward (MB06180D) /
'DB00016E' =0
DB00016E =0 ; // Unit 5 CYL 15 Forward (MB06180E) /
'DB00016F' =0
DB00016F =0 ; // Unit 5 CYL 16 Forward (MB06180F) /

1

1/43

EXPRESSION

'DB000170' = 0
DB000170 =0 ; // Unit 5 CYL 17 Forward (MB061810)
'DB000171' = 0
DB000171 =0 ; // Unit 5 CYL 18 Forward (MB061811)
'DB000172' = 0
DB000172 =0 ; // Unit 5 CYL 19 Forward (MB061812)
'DB000173' = 0
DB000173 =0 ; // Unit 5 CYL 20 Forward (MB061813)
'DB000174' = 0
DB000174 =0 ; // Unit 5 CYL 21 Forward (MB061814)
'DB000175' = 0
DB000175 =0 ; // Unit 5 CYL 22 Forward (MB061815)
'DB000176' = 0
DB000176 =0 ; // Unit 5 CYL 23 Forward (MB061816)
'DB000177' = 0
DB000177 =0 ; // Unit 5 CYL 24 Forward (MB061817)
'DB000178' = 0
DB000178 =0 ; // Unit 5 CYL 25 Forward (MB061818)
'DB000179' = 0
DB000179 =0 ; // Unit 5 CYL 26 Forward (MB061819)
'DB00017A' = 0
DB00017A =0 ; // Unit 5 CYL 27 Forward (MB06181A)
'DB00017B' = 0
DB00017B =0 ; // Unit 5 CYL 28 Forward (MB06181B)
'DB00017C' = 0
DB00017C =0 ; // Unit 5 CYL 29 Forward (MB06181C)
'DB00017D' = 0
DB00017D =0 ; // Unit 5 CYL 30 Forward (MB06181D)
'DB00017E' = 0
DB00017E =0 ; // Unit 5 CYL 31 Forward (MB06181E)
'DB00017F' = 0
DB00017F =0 ; // Unit 5 CYL 32 Forward (MB06181F)

2

2/36

FOR

[W]Var
DW00040

[W]Init
00000

[W]Max
00031

[W]Step
00001

3

3/100

NL

2

EXPRESSION

'I' = 'DW00040'
I = DW00040;

4

4/102

NL

2

DB000160i

TON[10ms]

[W]Set
C_Data_C
W00201

[W]Count
DW00186i

MB061800i

[MB061800]
H50.45/0042

5

5/106

END_FOR

L20.45/0000


L10.15 : Sensor In_Unit5 (SP)

P00001

Sensor Input (CYL Backward)					
6	8/107				EXPRESSION 'DB000180' = 0 DB000180 = 0; // Unit 5 CYL 01 Backward (MB061820) 'DB000181' = 0 DB000181 = 0; // Unit 5 CYL 02 Backward (MB061821) 'DB000182' = 0 DB000182 = 0; // Unit 5 CYL 03 Backward (MB061822) 'DB000183' = 0 DB000183 = 0; // Unit 5 CYL 04 Backward (MB061823) 'DB000184' = 0 DB000184 = 0; // Unit 5 CYL 05 Backward (MB061824) 'DB000185' = 0 DB000185 = 0; // Unit 5 CYL 06 Backward (MB061825) 'DB000186' = 0 DB000186 = 0; // Unit 5 CYL 07 Backward (MB061826) 'DB000187' = 0 DB000187 = 0; // Unit 5 CYL 08 Backward (MB061827) 'DB000188' = 0 DB000188 = 0; // Unit 5 CYL 09 Backward (MB061828) 'DB000189' = 0 DB000189 = 0; // Unit 5 CYL 10 Backward (MB061829) 'DB00018A' = 0 DB00018A = 0; // Unit 5 CYL 11 Backward (MB06182A) 'DB00018B' = 0 DB00018B = 0; // Unit 5 CYL 12 Backward (MB06182B) 'DB00018C' = 0 DB00018C = 0; // Unit 5 CYL 13 Backward (MB06182C) 'DB00018D' = 0 DB00018D = 0; // Unit 5 CYL 14 Backward (MB06182D) 'DB00018E' = 0 DB00018E = 0; // Unit 5 CYL 15 Backward (MB06182E) 'DB00018F' = 0 DB00018F = 0; // Unit 5 CYL 16 Backward (MB06182F)
7	9/133				EXPRESSION 'DB000190' = 0 DB000190 = 0; // Unit 5 CYL 17 Backward (MB061830) 'DB000191' = 0 DB000191 = 0; // Unit 5 CYL 18 Backward (MB061831) 'DB000192' = 0 DB000192 = 0; // Unit 5 CYL 19 Backward (MB061832) 'DB000193' = 0 DB000193 = 0; // Unit 5 CYL 20 Backward (MB061833) 'DB000194' = 0 DB000194 = 0; // Unit 5 CYL 21 Backward (MB061834) 'DB000195' = 0 DB000195 = 0; // Unit 5 CYL 22 Backward (MB061835) 'DB000196' = 0 DB000196 = 0; // Unit 5 CYL 23 Backward (MB061836) 'DB000197' = 0 DB000197 = 0; // Unit 5 CYL 24 Backward (MB061837) 'DB000198' = 0 DB000198 = 0; // Unit 5 CYL 25 Backward (MB061838) 'DB000199' = 0 DB000199 = 0; // Unit 5 CYL 26 Backward (MB061839) 'DB00019A' = 0 DB00019A = 0; // Unit 5 CYL 27 Backward (MB06183A) 'DB00019B' = 0 DB00019B = 0; // Unit 5 CYL 28 Backward (MB06183B) 'DB00019C' = 0 DB00019C = 0; // Unit 5 CYL 29 Backward (MB06183C) 'DB00019D' = 0 DB00019D = 0; // Unit 5 CYL 30 Backward (MB06183D) 'DB00019E' = 0 DB00019E = 0; // Unit 5 CYL 31 Backward (MB06183E) 'DB00019F' = 0 DB00019F = 0; // Unit 5 CYL 32 Backward (MB06183F)
8	10/203	FOR	[W]Var DW00040 ---	[W]Init 00000	[W]Max 00031 [W]Step 00001
9	11/207	NL 2			EXPRESSION 'I' = 'DW00040' I = DW00040;
10	12/209	NL 2	DB000180i ---	TON[10ms] [W]Set C_Data_C W00201 ---	[W]Count DW00218i --- MB061820i ---
11	13/213	END_FOR			

[MB061820]
H50.45/0330

L20.45/0004

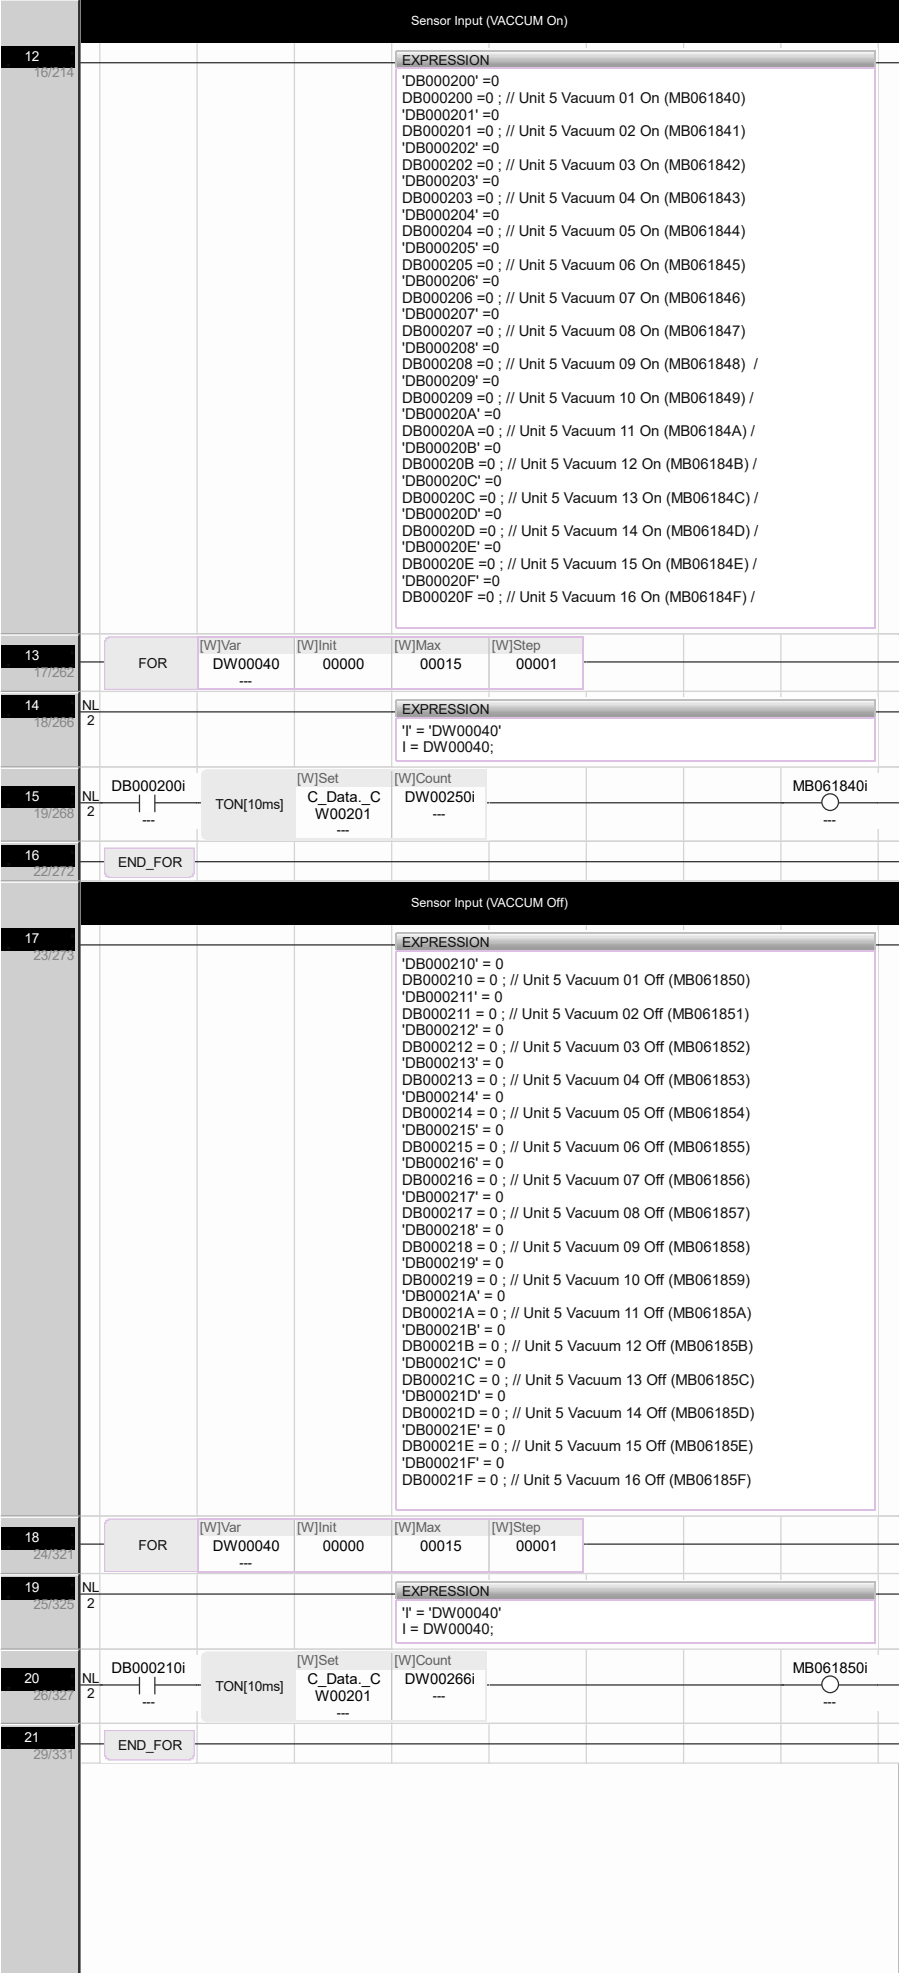


[MB061840]
H50.45/0618

L20.45/0256

[MB061850]
H50.45/0794

L20.45/0260

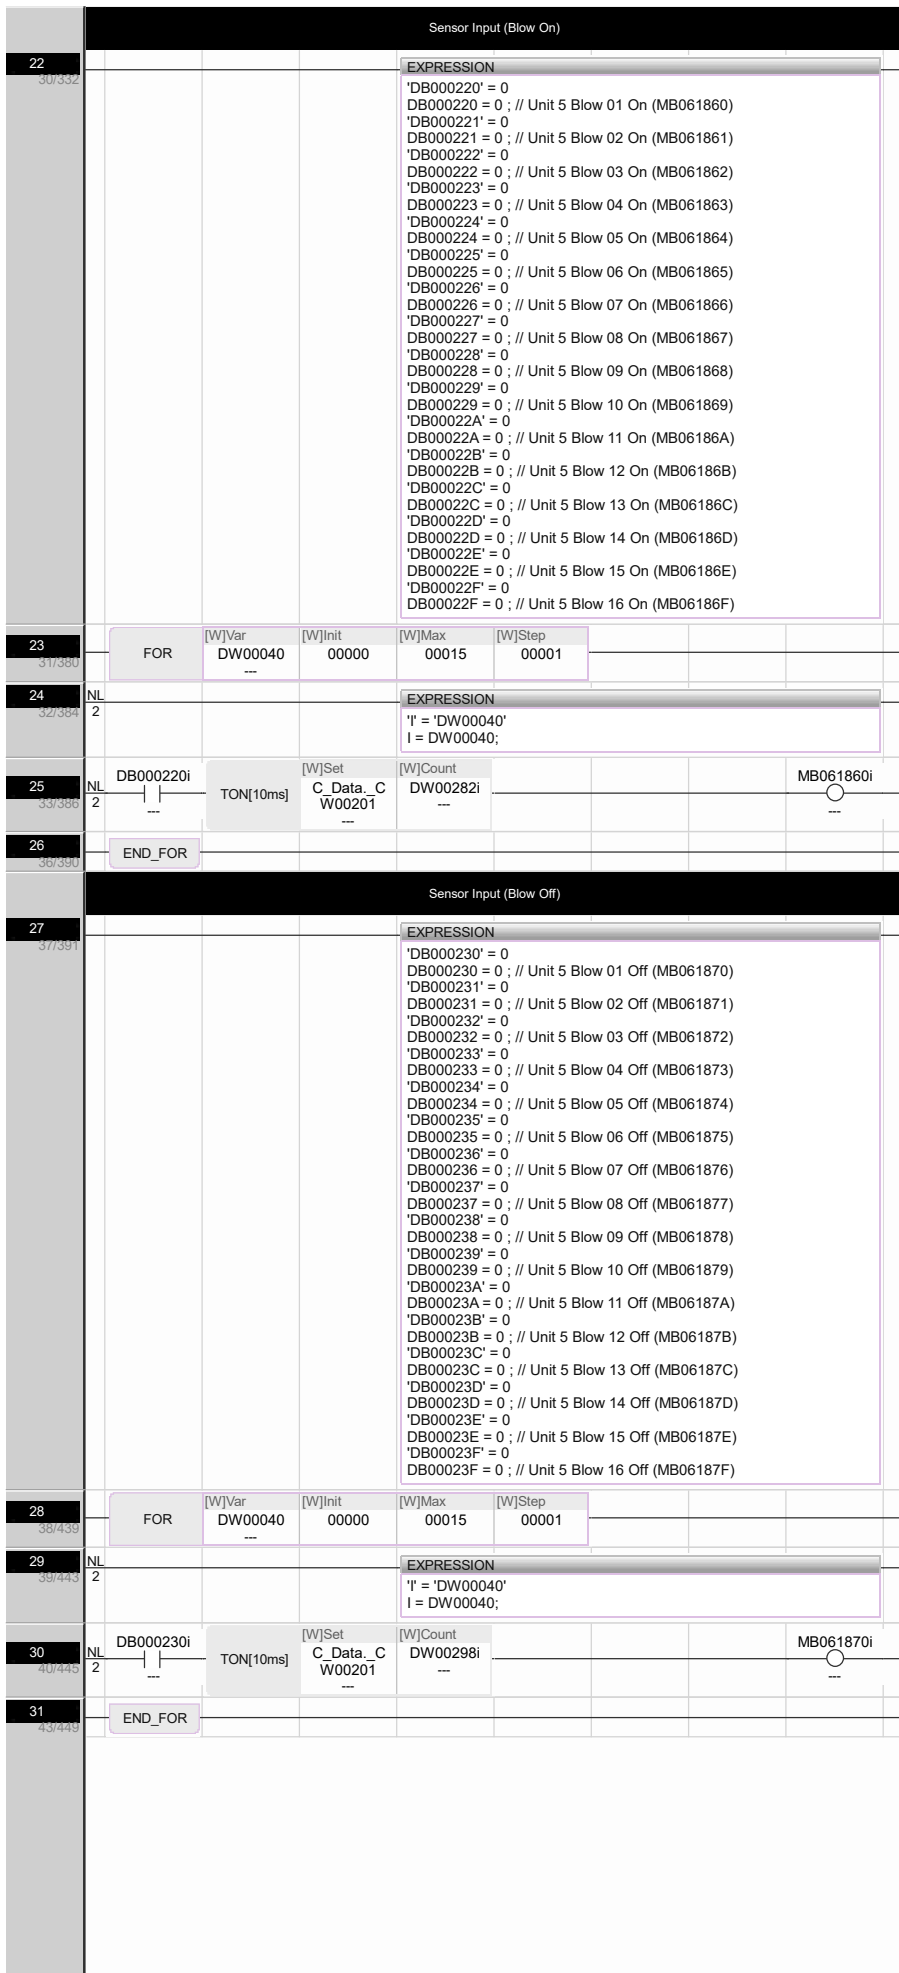[MB061860]
H50.45/0970

L20.45/0512

[MB061870]
H50.45/1130

L20.45/0516

