

LEFT CONSOLE

1. FAT: FREE AIR TEMPERATURE GAGE
2. EXTERIOR / INTERIOR LIGHTING PANEL (PRIMARY, ANTI-COL, SIGNAL LIGHTS TEST)
3. STORES JETTISON PANEL
4. ENGINE START MOMENTARY TOGGLE SWITCHES
5. APU START/STOP
6. POWER LEVERS
7. MSTR IGN SWITCH
8. RTR BRK SWITCH
9. EMERGENCY PANEL
10. NVS MODE SWITCH
11. TAIL WHEEL LOCK
12. KU: KEYBOARD UNIT

FRONT PANEL AND RIGHT CONSOLE

13. VIDEO PANEL (ACM)
14. ARMAMENT PANEL (A/S, GND ORIDE)
15. LEFT MPD (MULTI-PURPOSE DISPLAY)
16. FIRE DETECTION / EXTINGUISHING PANEL (FIRE TESTS)
17. STANDBY COMPASS
18. MASTER WARNING / MASTER CAUTION
19. BRU: BORESIGHT RETICLE UNIT
20. EUFD: ENHANCED UP-FRONT DISPLAY
21. CMWS: AN/AAR-57 COMMON MISSILE WARNING SYSTEM
22. RIGHT MPD
23. STANDBY ATTITUDE INDICATOR
24. STANDBY ALTIMETER
25. COMMUNICATIONS PANEL
26. SQL: SQUELCH MOMENTARY TOGGLE SWITCHES
27. DTU: DATA TRANSFER UNIT
28. STANDBY AIRSPEED INDICATOR
29. GEN RST SWITCH
30. PARK BRAKE HANDLE

QUICKSTART

- 30 SET (HANDLE OUT)
- 7 TO BATT
- 5 APU ON
- 20 WAIT 20 SEC FOR 'APU ON'
- CLOSE THE CANOPY (LCTRL + C)
- 25 RLWR TO MAX
- 26 FLIP FORWARD ALL SQL SWITCHES
- 21 PWR ON, ARM, CMWS
- 15 [M] > [B2 ENG] AND MONITOR NG

4 **NO.1 TO START** AND WAIT 3-5 SEC

6 **NO.1 TO IDLE** (RALT + HOME)

WAIT 60 SEC UNTIL NG1 IS AT 66-67%

4 **NO.2 TO START** AND WAIT 3-5 SEC

6 **NO.2 TO IDLE** (RSHIFT + HOME)

WAIT 50 SEC UNTIL NG2 IS AT 66-67%

6 **BOTH SMOOTHLY TO FLY** (NUMPAD +)

WAIT UNTIL NR AND NP ARE AT 101%

5 APU OFF

PERFORM IHADSS BORESIGHTING:


15 [WPN] > [L5 BORESIGHT] > [L4 IHADSS]

2 **PRIMARY KNOB TO BRT**


19 MOVE THE CAMERA TO ALIGN HMD RETICLE WITH BRU:



15 [L6 B/S NOW] TO CONFIRM

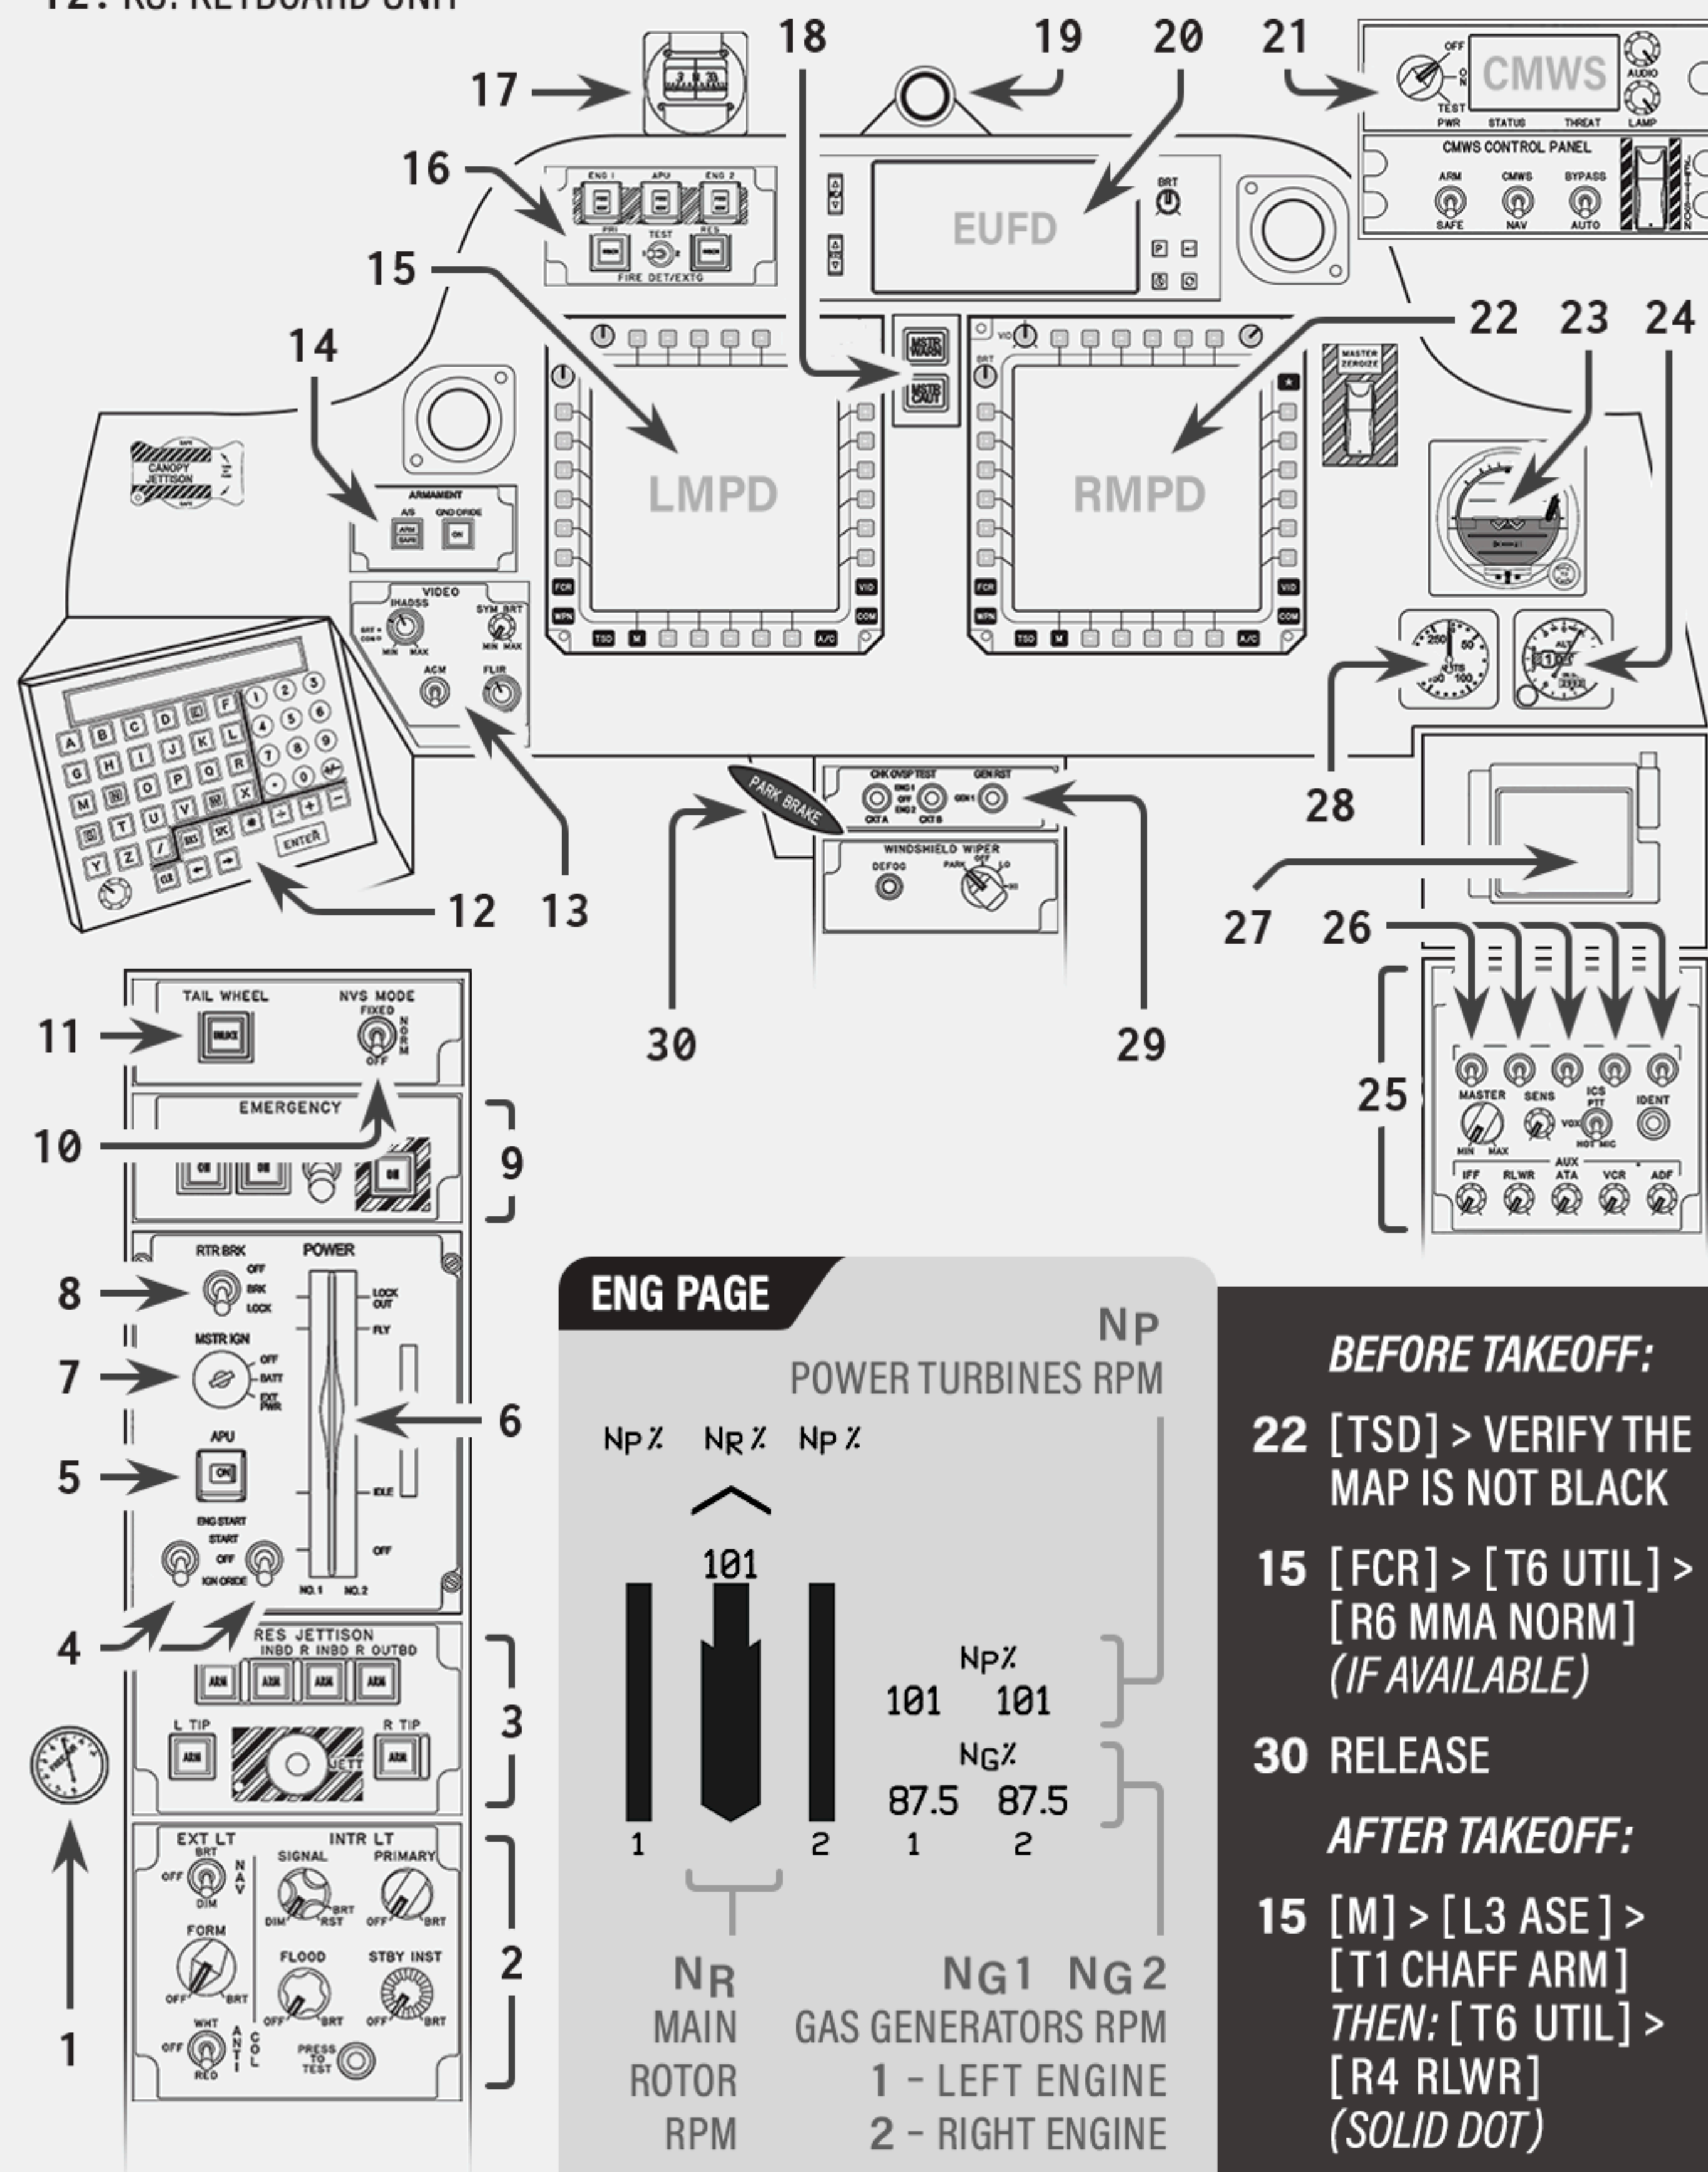

ENG PAGE

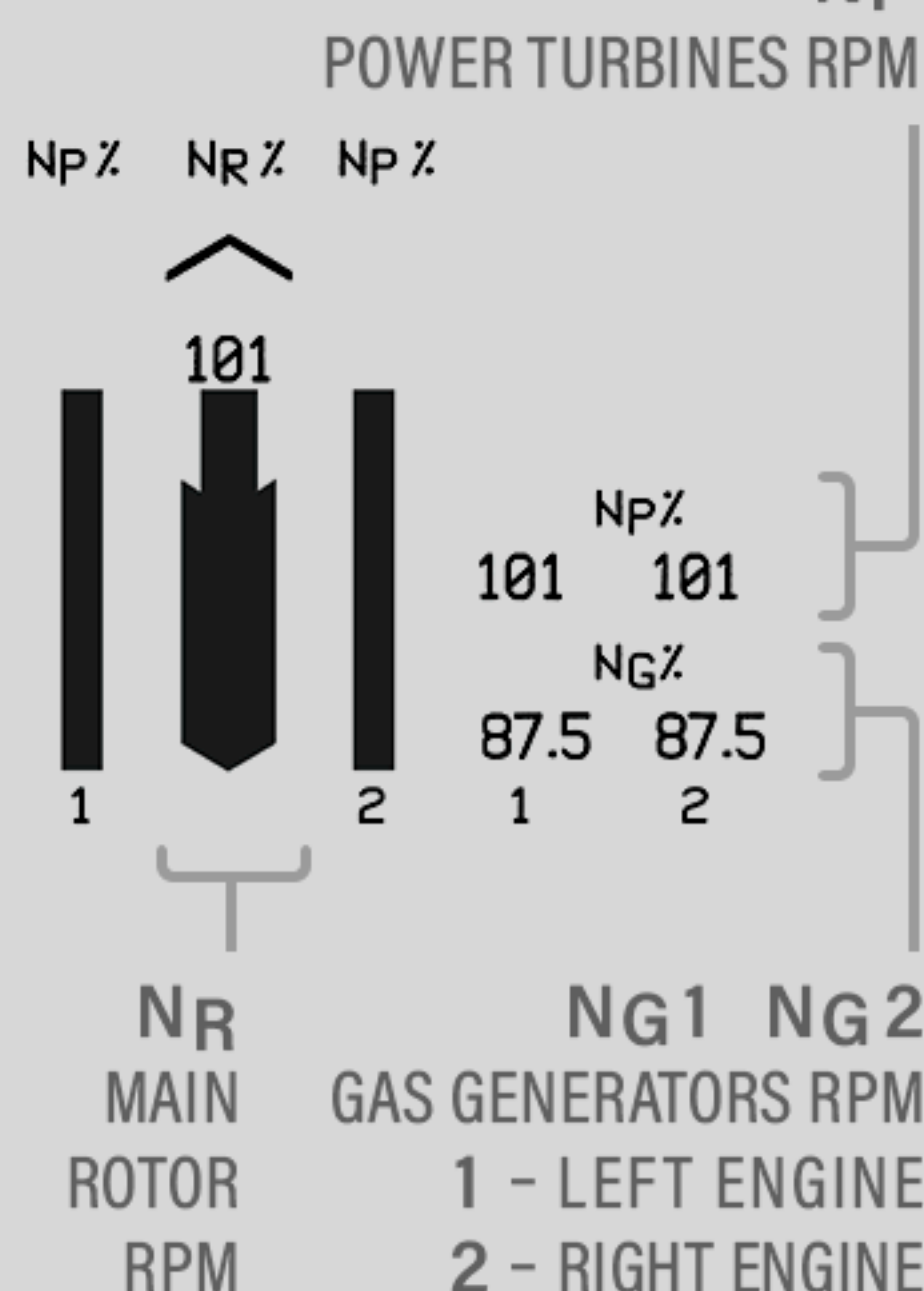

BEFORE TAKEOFF:

- 22 [TSD] > VERIFY THE MAP IS NOT BLACK
- 15 [FCR] > [T6 UTIL] > [R6 MMA NORM] (IF AVAILABLE)
- 30 RELEASE

AFTER TAKEOFF:

- 15 [M] > [L3 ASE] > [T1 CHAFF ARM] THEN: [T6 UTIL] > [R4 RLWR] (SOLID DOT)