
Assignment 1

Calculate the strain and stress components of the element shown with the thin-slab model in the xy-plane if the use of FEM gives the displacement components $u_{x1} = k_1 h$, $u_{x2} = -k_3 h$, $u_{x3} = 0$ and $u_{y1} = k_3 h$, $u_{y2} = k_2 h$, $u_{y3} = 0$ in which k_1 , k_2 , and k_3 are constants.

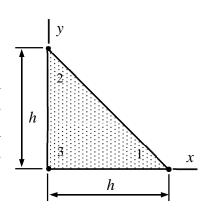

Solution template

The strain-displacement and strain-stress relationships of the thin-slab model are given by

$$\begin{cases}
\varepsilon_{xx} \\
\varepsilon_{yy} \\
\gamma_{xy}
\end{cases} = \begin{cases}
\frac{\partial u}{\partial x} \\
\frac{\partial v}{\partial y} \\
\frac{\partial u}{\partial y} + \frac{\partial v}{\partial x}
\end{cases} \text{ and } \begin{cases}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{xy}
\end{cases} = \frac{E}{1 - v^2} \begin{bmatrix}
1 & v & 0 \\
v & 1 & 0 \\
0 & 0 & (1 - v)/2
\end{bmatrix} \begin{cases}
\varepsilon_{xx} \\
\varepsilon_{yy} \\
\gamma_{xy}
\end{cases}.$$

Let us start with interpolation of the nodal values inside the element. Shape functions in terms of x, y and element size h (may be deduced using the definition: simplest possible polynomials taking the value one in one node and vanishing at all the other nodes)

$$N_1 = \frac{x}{h}$$
, $N_2 = \frac{y}{h}$, $N_3 = 1 - \frac{x}{h} - \frac{y}{h}$.

Displacement components u and v in the x and y directions in terms of the shape functions and the nodal values

$$u = \begin{cases} N_1 \\ N_2 \\ N_3 \end{cases}^{\mathrm{T}} \begin{cases} k_1 h \\ -k_3 h \\ 0 \end{cases} = \frac{1}{h} \begin{cases} x \\ y \\ N_3 \end{cases}^{\mathrm{T}} \begin{cases} k_1 h \\ -k_3 h \\ 0 \end{cases} = xk_1 - yk_3, \quad v = \begin{cases} N_1 \\ N_2 \\ N_3 \end{cases}^{\mathrm{T}} \begin{cases} k_3 h \\ k_2 h \\ 0 \end{cases} = \underline{\qquad}.$$

Derivatives of u and v with respect to x and y

$$\frac{\partial u}{\partial x} = \underline{\qquad}, \quad \frac{\partial u}{\partial y} = \underline{\qquad}, \quad \frac{\partial v}{\partial x} = \underline{\qquad}, \quad \frac{\partial v}{\partial y} = \underline{\qquad}.$$

Strain components follow from the strain definition

$$\begin{cases}
\varepsilon_{xx} \\
\varepsilon_{yy} \\
\gamma_{xy}
\end{cases} =
\begin{cases}
\frac{\partial u}{\partial x} \\
\frac{\partial v}{\partial y}
\end{cases} =
\begin{cases}
\frac{\partial u}{\partial x} \\
\frac{\partial v}{\partial y}
\end{cases} =
\begin{cases}
\frac{\partial u}{\partial x}
\end{cases}$$

Stress components follow from the stress-strain relationship

$$\begin{cases}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{xy}
\end{cases} = \frac{E}{1 - v^2} \begin{bmatrix} 1 & v & 0 \\
v & 1 & 0 \\
0 & 0 & (1 - v)/2 \end{bmatrix} \begin{bmatrix} \varepsilon_{xx} \\
\varepsilon_{yy} \\
\gamma_{xy} \end{bmatrix} = \frac{E}{1 - v^2} \left\{ \frac{1}{1 - v^2} \right\}.$$