#### VISVESVARAYA TECHNOLOGICAL UNIVERSITY

"JnanaSangama", Belgaum -590014, Karnataka.



## LAB REPORT on

#### INTERNET OF THINGS LAB

Submitted by

SUSHANTH (1BM21CS227)

in partial fulfillment for the award of the degree of BACHELOR OF ENGINEERING
in
COMPUTER SCIENCE AND ENGINEERING



# B.M.S. COLLEGE OF ENGINEERING (Autonomous Institution under VTU) BENGALURU-560019 JAN-2024 to MAR-2024

B. M. S. College of Engineering, Bull Temple Road, Bangalore 560019 (Affiliated To Visvesvaraya Technological University, Belgaum)

#### **Department of Computer Science and Engineering**



#### **CERTIFICATE**

This is to certify that the Lab work entitled "IOT Lab" carried out by **SUSHANTH** (**1BM21CS227**), who is bonafide student of **B. M. S. College of Engineering.** It is in partial fulfillment for the award of **Bachelor of Engineering in Computer Science and Engineering** of the Visvesvaraya Technological University, Belgaum during the year 2023. The Lab report has been approved as it satisfies the academic requirements in respect of a **Internet of things lab - (222CS5PCIOT)** work prescribed for the said degree.

Dr. Shyamala G

Dr. Jyothi S Nayak

Assistant professor Department of CSE BMSCE, Bengaluru Professor and Head Department of CSE BMSCE, Bengaluru

`

### Index

Sl. No.	Date	Program Title	Page No.
1.	8/6/23	LED Blinking	1
2.	15/6/23	LED ON/OFF Using Pushbutton	3
3.	22/6/23	LED Fading using Potentiometer	13
4.	14/6/23	Nightlight Simulation	28
5.	14/6/23	PIR with Arduino UNO	36
6.	20/7/23	Ultrasound with Arduino UNO	45
7.	20/7/23	Fire Alert System	54
8.	27/8/23	Automatic irrigation controller simulation	70
9.	3/8/23	Reading the code present on RFID tag	77
10.	3/8/23	Access control through RFID	85
11.	10/8/23	HC-05 Bluetooth at Command prompt	91
12.	10/8/23	HC-05 Bluetooth Controlled by mobile	101
13.	10/8/23	Bluetooth-Master Slave	106
14.	17/8/23	GSM Module	114

#### 1. LED Blinking

#### Aim:

Turns on an LED on for one second, then off for one second, repeatedly

#### **Hardware Required:**


- Arduino Board
- LEDs

#### Code:

```
// Pin 13 has an LED connected on most Arduino boards int led = 13;
void setup() // the setup routine runs once when you press reset
{
// initialize the digital pin as an output.
pinMode(led, OUTPUT);
}
void loop() { // the loop routine runs over and over again forever
digitalWrite(led, HIGH); // turn the LED on (HIGH is the voltage level)
delay(1000); // wait for a second
digitalWrite(led, LOW); // turn the LED off by making the voltage LOW
delay(1000); // wait for a second
}
```

#### **Observation:**

The code establishes a basic program to toggle an LED on and off in one-second intervals. Pin 13 is configured as the output for the LED, and the main loop continuously switches the LED on for one second, then off for another second.

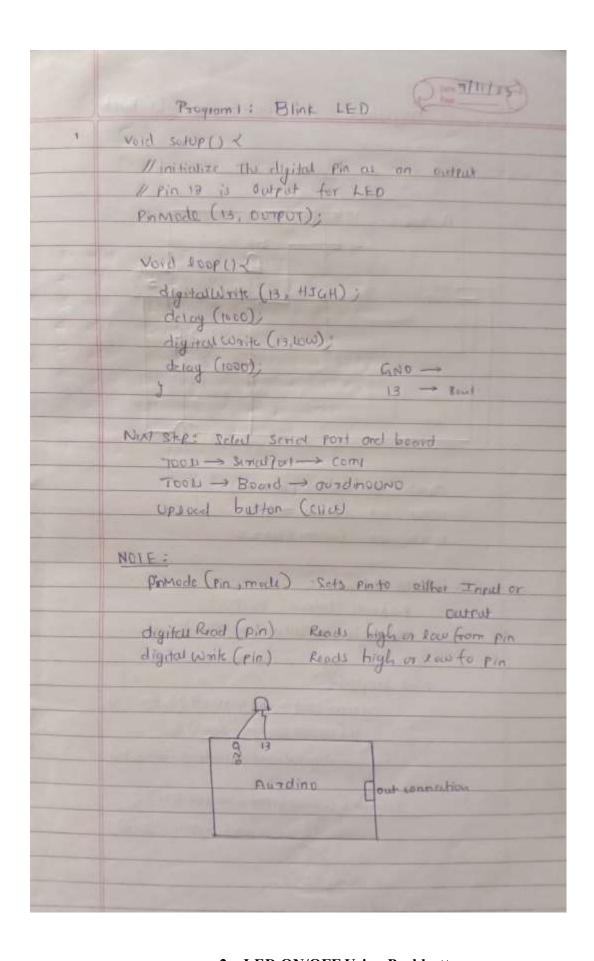

#### 2. LED ON/OFF Using Pushbutton

#### Aim:

Turn an LED ON /OFF using a Pushbutton.

#### Hardware Required:

- Arduino Board
- LED
- Push button

#### Circuit diagram:

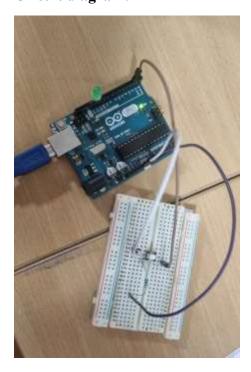


Fig.2.1. LED using push button

```
const int buttonPin = 2; // Pin connected to the push button
const int ledPin = 13; // Pin connected to the LED
int buttonState = 0; // Variable to store the state of the push button
void setup() {
   pinMode(ledPin, OUTPUT); // Initialize the LED pin as an output
   pinMode(buttonPin, INPUT); // Initialize the push button pin as an input
}

void loop() {
   buttonState = digitalRead(buttonPin); // Read the state of the push button
```

```
if (buttonState == HIGH) { // If the button is pressed
  digitalWrite(ledPin, HIGH); // Turn on the LED
} else { // If the button is not pressed
  digitalWrite(ledPin, LOW); // Turn off the LED
}
```

#### **Observation:**

The code effectively achieves the desired functionality of turning the LED on and off based on the state of the push button. When the button is pressed, the LED lights up, providing a clear visual indication of the button's influence on the output. This interactive behavior enhances the user experience, creating a responsive system where the LED state is directly controlled by the push button's input.

# Program 2: Push button to eight but 130 Authino Const int button pin = 13; const int tedpin = 9; const int (urren) Stake = 0; Y (lqubs biov Pin Mode (ledpin, OUTPUT); Pin Moch (buttons in , Inpor) Your Joop Diay if (current state = dig ited Read (button pin); y eligited write (Irdpin, IT GH); else it (coment state = ( + att) x digital write ( tedpin , ww) delay (50);

#### 3. LED Fading using Potentiometer

#### Aim:

To control the brightness of an LED using a Potentiometer.

#### Hardware Required:

- Arduino Board
- LED
- Potentiometer

#### Circuit diagram:

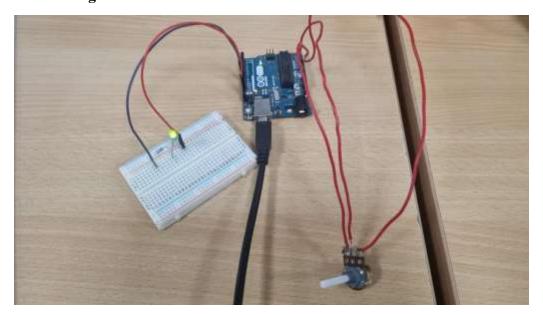


Fig. 3.1. LED ON by using potentiometer

```
const int potPin = A0; // Pin connected to the potentiometer
const int ledPin = 9; // Pin connected to the LED
void setup() {
    pinMode(ledPin, OUTPUT); // Initialize the LED pin as an output
}

void loop() {
    int potValue = analogRead(potPin); // Read the value from the potentiometer (0-1023)
    int brightness = map(potValue, 0, 1023, 0, 255); // Map the potentiometer value to
brightness (0-255)
    analogWrite(ledPin, brightness); // Set the brightness of the LED
}
```

# **Observation:** The code effectively achieves the desired outcome, enabling the dynamic control of the LED's brightness through the potentiometer. As the potentiometer is adjusted, the analogRead function captures its varying values (ranging from 0 to 1023). The subsequent mapping of these values to a brightness scale (0 to 255) results in a smooth and proportional adjustment of the LED's intensity.

	Program 3: Facle LFD Blink
	Ame to water the brightness of on 1 FD using a
	Potentioneter
	Hordword required !
	· Audino Bourd
	- LEO - Resistor
	. (Petintionalis)
750	Civroll Dive
	Circuit Diagram
	R
	9 1
	Aureliao
	The state of the s
	Code
	Cot tedpin = 9
-	Cond Schop (1)
	int 1 ed = 9;
	int brightness = 0;
	In! Facili amount = 5;
	Maria Carrier ()
	PinMods (Ind. OUTPUT)
	y proposition outpour
	The state of the s

```
Void 100P CH
 analyzente ( and , brightness)
  brightness = bayhtness facts Amount
  11 ( bayhlaus (-0 11 bayhlaus >= 225) x
     factomount = - factomount;
   deray (50);
  Main code:
 int ledgin = tr;
 Void Sctur () {
 Pinmode (ledgin, DUIPOT),
  void Deop () (
  for (int fadevalue = 0; fadevalue <= 255; factivalue
       analogumte (helpin, fodevalue);
     for (int factorius 255; factorius = 0,
          anaugurah (lidela, factorona)
```

#### 4. Nightlight Simulation

#### Aim:

Simulating a night light using LDR and PIR

#### **Hardware Required:**

- 1 LED
- 1 LDR
- 110K register

#### **Connection:**

- 1. Attach one leg of LDR to 5V and another leg to Arduino Analog pin A0
- 2. Attach one leg of 110K register with that leg of LDR connected to A0
- 3. Attach another leg of register to the ground
- 4. Connect the positive leg of LED to pin 11 and negative to GND

```
int LDR = 0; //analog pin to which LDR is connected, here we set it to 0 so it means A0
int LDRValue = 0; //that's a variable to store LDR values
int light sensitivity = 500; //This is the approx value of light surrounding your LDR
void setup()
Serial.begin(9600); //start the serial monitor with 9600 buad
pinMode(11, OUTPUT); //attach positive leg of LED to pin 11
}
void loop()
{
LDRValue = analogRead(LDR); //reads the ldr's value through LDR
Serial.println(LDRValue); //prints the LDR values to serial monitor
delay(50); //This is the speed by which LDR sends value to arduino
if (LDRValue < light sensitivity)
{
digitalWrite(11, HIGH);
}
else {
digitalWrite(11, LOW);
}
```

```
delay(1000);
}
```

#### Circuit diagram:

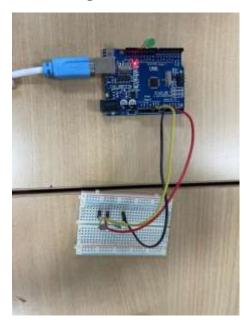



Fig 4.1- When it is bright, LED is off.




Fig- When it is dark, LED is on.

#### **Observation:**

The code successfully achieves the goal of simulating a night light based on the ambient light levels detected by the LDR. The analogRead function captures the LDR values, which are printed to the serial monitor for monitoring. The conditional statement compares these values to a light sensitivity threshold, and if the ambient light falls below this threshold, the LED is turned on, simulating a night light. Conversely, if the light exceeds the threshold, the LED is turned off. The delay at the end of the loop introduces a time delay between successive readings and LED state changes.

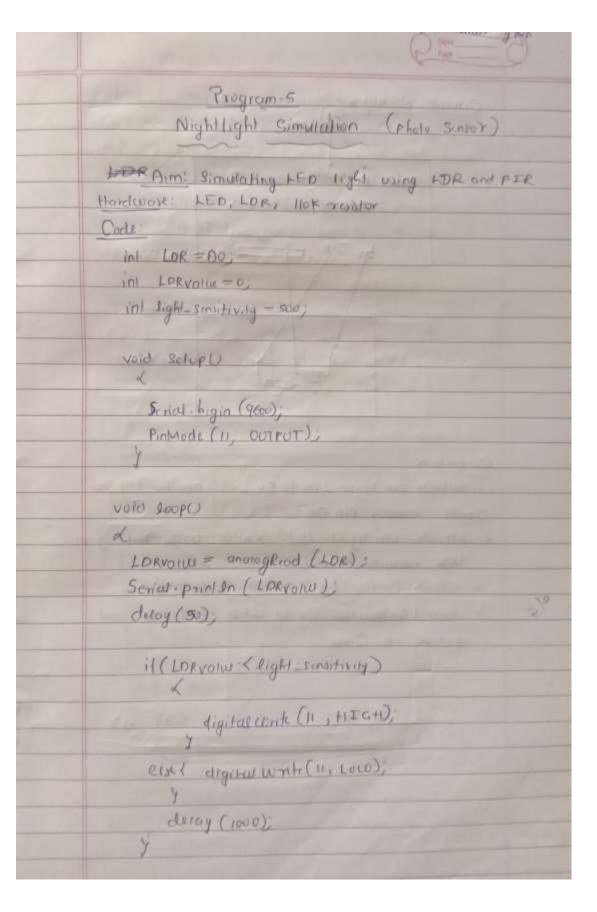

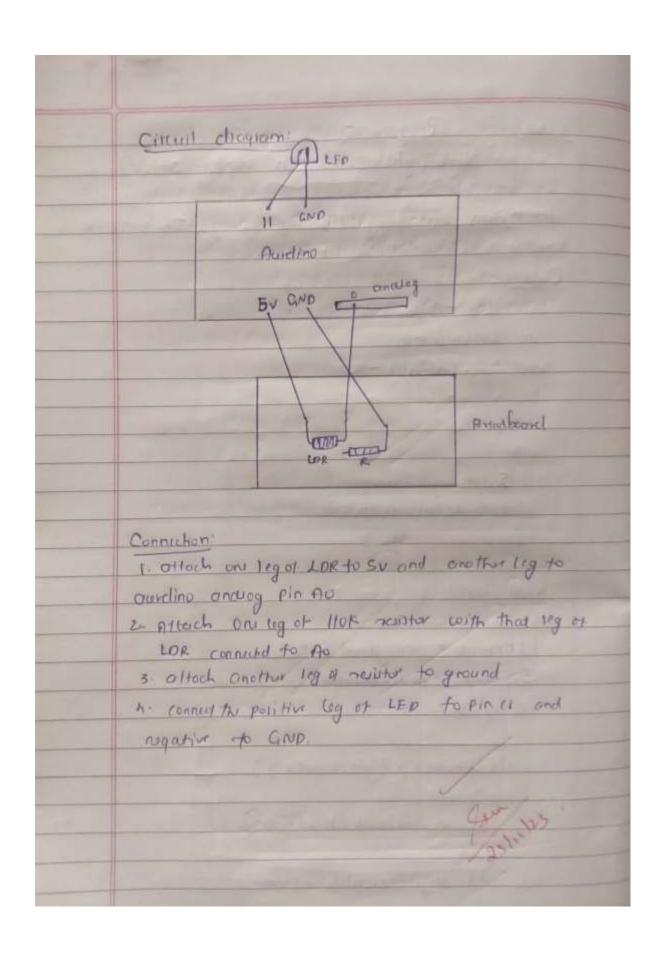

5. PIR with Arduino UNO

```
Code:
```

```
int sensorState = 0;
void setup()
pinMode(2, INPUT);
pinMode(13, OUTPUT);
Serial.begin(9600);
void loop()
// read the state of the sensor/digital input
sensorState = digitalRead(2);
// check if sensor pin is HIGH. if it is, set the
// LED on.
if (sensorState == HIGH) {
digitalWrite(13, HIGH);
Serial.println("Sensor activated!");
} else {
digitalWrite(13, LOW);
}
delay(10);
}
```

#### Circuit diagram:


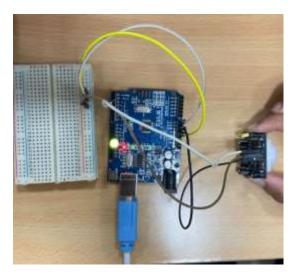


Fig 5.1- When motion is detected LED is high

#### **Observation:**

The code effectively utilizes the PIR sensor to detect motion and responds by controlling the state of the LED. When motion is detected, the LED is illuminated, and a message is printed to the serial monitor. Conversely, when no motion is sensed, the LED is turned off. The delay of 10 milliseconds at the end of the loop helps to stabilize the sensor readings and reduce false positives.

PIR with aurding ung
Dira: Detecting human motion
Hardware #
PER MANON
, YED
Codu:
int lensor stade=0;
void setupica 4
pinMods (2, INPOT);
Pinmode (13, OUTPUT)

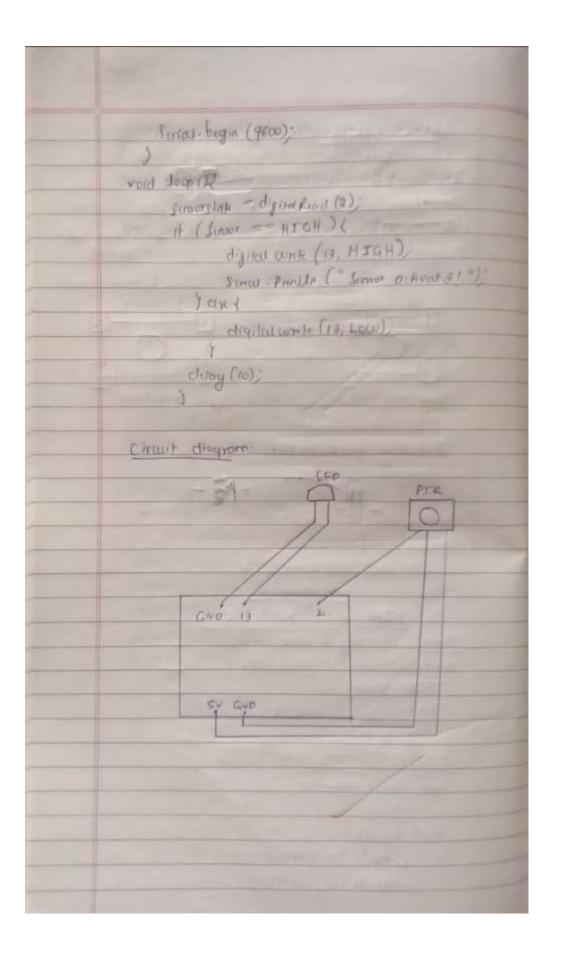

#### 6. Ultrasound with Arduino UNO

```
const int pingPin = 7;
const int echoPin=6;// Trigger Pin of Ultrasonic Sensor const int echoPin = 6; // Echo Pin of
Ultrasonic Sensor
void setup()
Serial.begin(9600);
pinMode(pingPin, OUTPUT);
pinMode(echoPin, INPUT);
void loop()
long duration, inches, cm;
digitalWrite(pingPin, LOW);
delayMicroseconds(2);
digitalWrite(pingPin, HIGH);
delayMicroseconds(10);
digitalWrite(pingPin, LOW);
duration = pulseIn(echoPin, HIGH);
inches = microsecondsToInches(duration);
Serial.print(inches);
Serial.print("inches");
cm = microsecondsToCentimeters(duration);
Serial.print(cm);
Serial.println("cm");
}
long microsecondsToInches(long microseconds)
return microseconds / 74 / 2;
```

```
}
long microsecondsToCentimeters(long microseconds)
{
return microseconds / 29 / 2;
}
```

#### Circuit diagram:


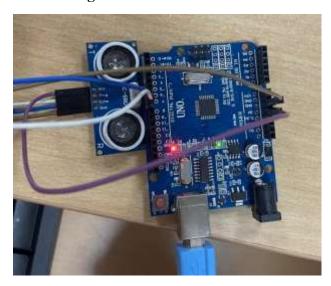


Fig 6.1-Measures distance of nearest object

#### **Observation:**

The code effectively utilizes the ultrasonic sensor to measure distance and provides readings in both inches and centimeters. In the loop, a pulse is generated by triggering the ultrasonic sensor, and the duration of the pulse is measured using the pulseIn() function. The microsecondsToInches() and microsecondsToCentimeters() functions convert the duration into distance measurements. The serial monitor output displays the measured distance in inches and centimeters.

	E-0
	Program 9
	ultrasonica with aurdine uno
100	Then Detroting the distance of object from the
	ottrasonic femor
	Hardobre.
	Ultrosonic Jemer
	Cocla:
	The state of the s
	Const int echopin = 6;
	COLD TO CENOPUL = 0)
	Void Schopul
	Jerrich . Cogn (9600)
	Pin Mode (Pingein, OUTPUT)
	PinMode (echopin, IN/UT);
	y
	void soopt) {
	long cluration , inches, (m)
	digital White [pingpin , Locu))
	delay Micro Schonds (2);
	digitalwrik (Pingpin , HIGH);
	deraymitrosecondo (10)
	dynamicante (Pingelin, Low); duration = pulsin (echopin, HIGH);
	Inches = mun squares To Inches (duration);
	Since proten (roches)
	Strau- Printle (" inches")
	Cm = micro scando To antimetros ( dualism )
	I con Parint (cm);
	Scraw Printer ("cm")
	1
	long muse sword To Inches (long muretagods)

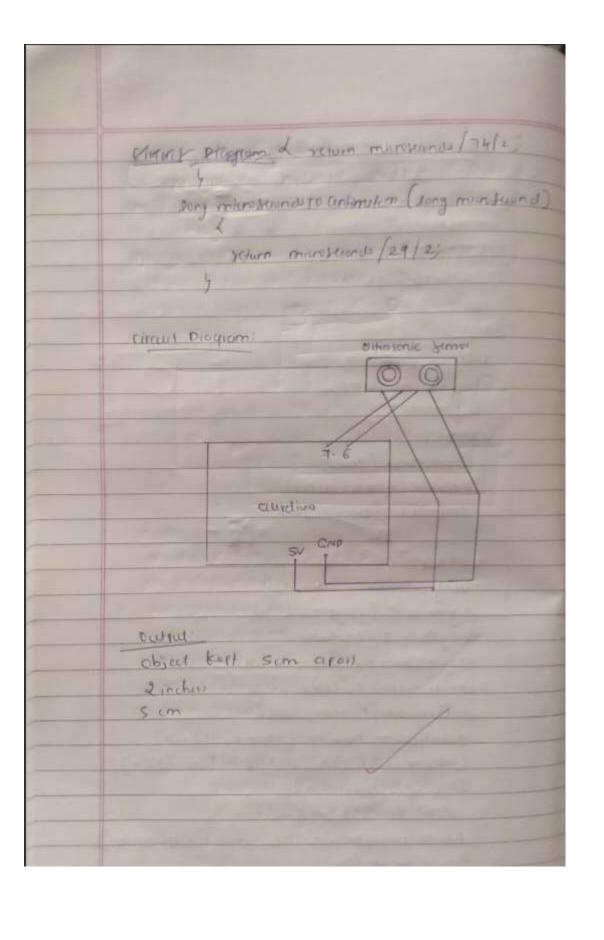

#### 7. Fire Alert

#### Aim:

Fire alarm simulation

#### **Hardware Required:**

- Flame sensor (Analogue Output)
- Arduino
- Bread board
- LED
- Buzzer
- Connecting wires

#### **Connections:**

#### Flame sensor interfacing to Arduino

Flame sensor to Arduino

vcc to vcc

gnd to gnd

A0 to A0

#### Led interfacing to Arduino

LED +ve is connected to 9th pin of Arduino

LED -ve is connected to gnd pin of arduino

#### **Buzzer interfacing to Arduino**

Buzzer +ve is connected to 12th pin of Arduino

Buzzer -ve is connected to GND pin of Arduino

```
int sensorPin = A0; // select the input pin for the LDR
int sensorValue = 0; // variable to store the value coming from the sensor
int led = 9; // Output pin for LED
int buzzer = 12; // Output pin for Buzzer
void setup() {
// declare the ledPin and buzzer as an OUTPUT:
pinMode(led, OUTPUT);
```

```
pinMode(buzzer,OUTPUT);
Serial.begin(9600);
}
void loop()
{
sensorValue = analogRead(sensorPin);
Serial.println(sensorValue);
if (sensorValue < 100)
Serial.println("Fire Detected");
Serial.println("LED on");
digitalWrite(led,HIGH);
digitalWrite(buzzer,HIGH);
delay(1000);
}
digitalWrite(led,LOW);
digitalWrite(buzzer,LOW);
delay(sensorValue);
```

#### Circuit diagram:


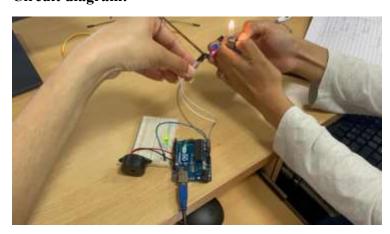


Fig 7.1- When fire is detected LED is on

#### **Observation:**

The code effectively simulates a fire alarm by monitoring the analog output of the flame sensor. When the sensor value falls below a predefined threshold (100 in this case), indicating

the detection of a flame, the LED and buzzer are activated, and the corresponding messages are printed to the serial monitor. The LED and buzzer remain active for a brief period (1 second) as part of the alarm simulation.

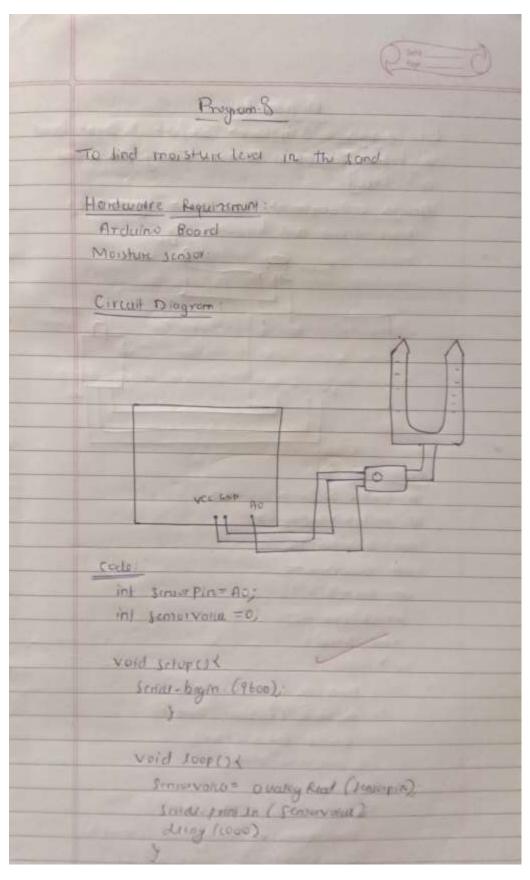

8. Automatic irrigation controller simulation

Aim:

Sensing the soil moisture and sprinkling the Water simulation

#### **Hardware Required:**

- Arduino
- Moisture Sensor
- Breadboard
- Min servo motor

#### **Connections:**

Moisture sensor VCC to Arduino 5V

Moisture sensor GND to Arduino GND

Moisture sensor A0 to Arduino A0

Servo motor VCC to Arduino 5V

Servo motor GND to Arduino GND

Servo Motor Signal to Arduino digital pin 9

```
#include <Servo.h>;
Servo myservo; // create servo object to control a servo
// twelve servo objects can be created on most boards
int pos = 0; // variable to store the servo position
int sensorPin = A0; // select the input pin for the potentiometer
int sensorValue = 0; // variable to store the value coming from the sensor
void setup() {
  myservo.attach(9); // attaches the servo on pin 9 to the servo object
  Serial.begin(9600);
}
void loop() {
  // read the value from the sensor:
  sensorValue = analogRead(sensorPin);
  Serial.println (sensorValue);
  if(sensorValue<500)</pre>
```

```
{
for (pos = 0; pos < 180; pos += 1) { // goes from 0 degrees to 180 degrees

// in steps of 1 degree

myservo.write(pos);

delay(15); // waits 15ms for the servo to reach the position
}

for (pos = 180; pos < 0; pos -= 1) { // goes from 180 degrees to 0 degrees

myservo.write(pos); // tell servo to go to position in variable &#39;pos&#39;

delay(15); // waits 15ms for the servo to reach the position
}

delay (1000);
```

#### Circuit diagram:


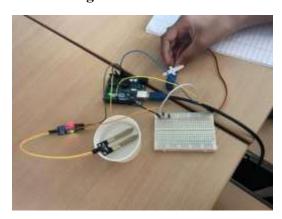


Fig 8.1- When moisture detected LED High, else Servo motor is on

#### **Observation:**

The code effectively simulates an automatic irrigation controller by utilizing a moisture sensor to monitor soil moisture levels. When the moisture level drops below the defined threshold, the servo motor moves to simulate the activation of a sprinkler system. The servo motor moves from 0 to 180 degrees in steps and then returns from 180 to 0 degrees. These movements represent the irrigation process.

Program-10
To pergn and implement Smart Fortgation lysten wing soll moisture Servor and Servo meter
Hardwar riguraminu:
· Muisture sensor VCC to A redulino SV
· Moisture Semer GNO to Arduno GNO
- Moisture Sinur Ao to Arcluino Ao
. 3 ervo motor vec to Ardune sv
· Serve motor GND to Arduine GND
· Some motor Signed to Anduino digital ping.
_codu
Hinduch ( serve h)
Serve my herve;
int Pox = 0
in Jensey Pin = Ac,
Int Sensoryona-0;
void setup() {
mysone-attach (9);
Scriul, bryin (9600);
y
void scop()
4
Pensorvoice - analog Read (sensorpin),
Soku phot (seminatus)
A ( Sensor volus >500)
4
for (pw=0; pw<=130; pox+=1) {
mysono-wate (ros),
duay (15)

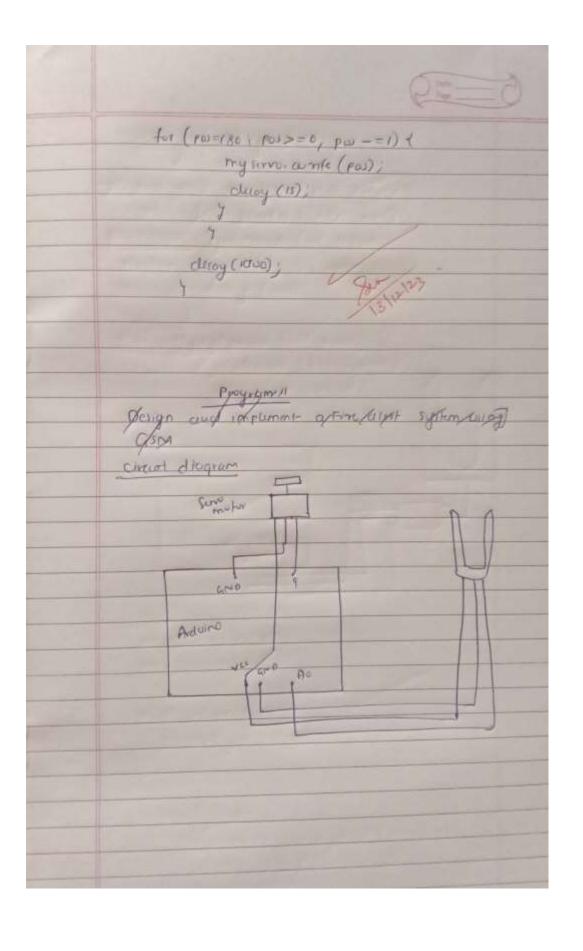

#### 9. Reading the code present on RFID tag

#### Aim:

The following code will read the code present on RFID tag and print it in serial monitor.

#### **Connection:**

5V-Arduino 5V

GND-Arduino GND

Tx-pin 9

#### Circuit Diagram:



Fig. 9.1. RFID with tag

```
{
  count = 0;
  while(mySerial.available() && count < 12)
  {
    input[count] = mySerial.read();
    count++;
    delay(5);
}
Serial.print(input);  // Print RFID tag number
  }
}</pre>
```

#### **Observation:**

The output in the serial monitor is the RFID tag number, and it allows for real-time monitoring and verification of the data read from the RFID tag. The code, when executed, continuously checks for available data on the SoftwareSerial port, captures the RFID tag code, and promptly displays it in the serial monitor.

```
Program 7
        Ultrasonica with purding uno
Aim: Detroting the distance of object from the
 othersonic femor
Hardone .
 Ulhasonic femor
Code
 Const int pingpin = 7;
 Const in echopin = 6;
 Vold SHUPUL
    serial . begin (9600)
   PINMOCKS (PINGPIN, OUTPUT);
  PinMode (echopin, IN/UT);
  Void soop () 1
  long cluration, inhu, cm;
  digital White (pingpin, Low)
  deray Micro Serondi (2);
   digitalizate (Pingpin, HIGH);
   deraymurosundo (10)
   dynamont (Pingein, Low);
duration = pulse In (cohopin, HI GH);
   Inches = micro secures To Tricher (duration);
    Senow proten (inches)
    Benow Printer (" inches")
    Cm = micro Sciende To Contirnation ( duration )
    I Com Herrott (cm);
    School Printin ("cm")
  Long micro second To Inches (long musterends)
```

10. Access control through RFID

#### Aim:

The following code will read the code present on RFID tag tapped. If the code matches with

the previously known tag (configured in the code), it will grant access (here LED will glow), otherwise access will be denied.

## **Connection:** 5V-Arduino 5V **GND-Arduino GND** Tx-pin 9 Led-pin 12 Code: #include<SoftwareSerial.h>; SoftwareSerial mySerial(9, 10); #define LEDPIN 12 char tag[] ="5300292DD087;" // Replace with your own Tag ID char input[12]; // A variable to store the Tag ID being presented int count = 0; // A counter variable to navigate through the input[] character array boolean flag = 0; // A variable to store the Tag match status void setup() Serial.begin(9600); mySerial.begin(9600); pinMode(LEDPIN,OUTPUT); //WRONG TAG INDICATOR } void loop() { if(mySerial.available())// Check if there is incoming data in the RFID Reader Serial Buffer. count = 0;while(mySerial.available() & p; & amp; & count & lt; 12)

{

```
input[count] = mySerial.read();
count++; // increment counter
delay(5);
}
if(count == 12)
count =0; // reset counter varibale to 0
flag = 1;
while(count<12 && flag !=0)
if(input[count]==tag[count])
flag = 1;
else
flag=0;
count++;
}
if(flag == 1)
Serial.println("Access Allowed!");
digitalWrite(LEDPIN,HIGH);
delay (2000);
digitalWrite (LEDPIN,LOW);
}
else
{
Serial.println("Access Denied"); // Incorrect Tag Message
digitalWrite(LEDPIN,LOW);
delay(2000);
}
```

```
for(count=0; count<12; count++)
{
input[count]= &#39;F&#39;;
}
count = 0; // Reset counter variable
}
}
```

Upon tapping an RFID tag, the code reads the tag's code and compares it with the predefined tag ('tag[]'). If the codes match, access is granted, and the LED indicator lights up for a brief period. If there is no match, access is denied, and the LED remains off. The output in the serial monitor provides information about the access status, whether it's allowed or denied, offering a real-time log of access attempts. The LED serves as a visual indicator, providing immediate feedback on the access control decision. This code can be expanded and adapted for various applications, such as door security systems or attendance tracking.

```
Program 7
    ultrasonice with ourding uno
Ohim: Detroting The distance of object from the
 othersonic tensor
Maidouse.
Ultrasonic femor
code
 Const int phypin = 7;
 Const in echopin = 6;
 Void SHOPUL
   serial . begin (9600)
  PINNOCE (PINGPIN, OUTPUT);
  PinMode (echopin, INTUT);
  vaid soop () 1
  long claration, inches, cm;
  digital Write [pingpin, Loca)
  deray Micro Seconds (2);
   digitalizate (Pingpin, HIGH);
   decayminosuondo (10)
   digitations (Pingpin, Low);
   duration = pulsi In (cohopin, HIGH);
   Inches = micro secures To Inches (duration);
   Senow proten (inches)
   Jenas Printer (" inches")
    Cm = micro sciende To antimetra ( dualias )
   I Const - Operat (cm);
    School Prinish ("cm")
  long micro second To Inches (long coursecond)
```

**HC-05 Bluetooth Module** 

```
HC-05 PinOut (Right):
```

• KEY: If brought HIGH before power is applied, forces AT Command Setup Mode.

LED blinks slowly (2 seconds)

- VCC: +5 Power
- GND: System / Arduino Ground
- TXD: Transmit Serial Data from HC-05 to Arduino Serial Receive. NOTE: 3.3V

HIGH level: OK for Arduino

- RXD: Receive Serial Data from Arduino Serial Transmit
- STATE: Tells if connected or not

# 11. HC-05 at Command prompt:

## Code:

```
(For this program to work, HC-05 must be in command mode)
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup()
{
    Serial.begin(9600);
    Serial.println("Enter AT commands:');
    BTSerial.begin(38400); // HC-05 default speed in AT command more
}
void loop()
{
    if (BTSerial.available())
        Serial.write(BTSerial.read());
    if (Serial.available())
        BTSerial.write(Serial.read());
}
```

## 12. HC-05 Controlled by mobile

## Code:

```
(For this code to work, HC-05 must be in DATA mode and Arduino Bluetooth App)
#define ledPin 13
int state = 0;
void setup() {
 pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(38400);
 // Default communication rate of the Bluetooth module
void loop() {
 if(Serial.available() < 0)
 // Checks whether data is comming from the serial port
  state = Serial.read(); // Reads the data from the serial port
}
if (state == "0") \{
 digitalWrite(ledPin, LOW); // Turn LED OFF
 Serial.println("LED: OFF");
 state = 0;
else if (state = "1") {
 digitalWrite(ledPin, HIGH);
 Serial.println("LED: ON");;
 state = 0;
```

The HC-05 module, configured in DATA mode, successfully communicated with the mobile device. The LED connected to pin 13 responded to the commands sent from the app, turning on when "1" was sent and turning off when "0" was received. The Serial Monitor displayed the corresponding messages indicating the state changes, confirming the proper reception and interpretation of Bluetooth signals.

## 13. BT-Master Slave

```
BT-Slave Program:
```

```
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup() {
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
void loop() {
if(Serial.available())
 String message = Serial.readString();
 Serial.println (message);
  BTSerial.write(message.c str());
BT-Master Program:
```

```
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
#define ledPin 9
String message;
int potValue = 0;
void setup() {
 pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
```

```
void loop() {
  if(BTSerial.available() < 0) {
    message = BTSerial.readString();
  if(message.indexOf("SWITCH ON")<=0)
    {
      digitalWrite(ledPin, HIGH); // LED ON
      }
    else if(message.indexOf("SWITCH OFF")<=0)
      {
       digitalWrite(ledPin, LOW); // LED OFF
      }
      delay(100); }
    delay(100);
}</pre>
```

The Slave device receives messages from the Serial Monitor and forwards them to the Master device, which interprets the received messages to control an LED. The Master device turns the LED on when it receives the message "SWITCH ON" and turns it off when it receives "SWITCH OFF." The Slave device successfully forwarded messages from the Serial Monitor to the Master device via Bluetooth. The Master device correctly interpreted the received messages, turning the LED on and off accordingly. The delay(100) in the Master's loop ensured smooth processing of incoming messages. The implementation demonstrates an effective Master-Slave Bluetooth communication setup, showcasing bidirectional data transmission and control between two Arduino devices.

# 14. GSM Module 15.

## 1. GSM Module: Call to a particular number

#### Aim:

Call using Arduino and GSM Module – to a specified mobile number inside the program.

## Program:

```
#include <SoftwareSerial.h>;
SoftwareSerial cell(2,3); // (Rx, Tx)
void setup() {
```

```
cell.begin(9600);
delay(500);
Serial.begin(9600);
Serial.println("CALLING......");
cell.println("ATD+9538433364;"); // ATD – Attention Dial
delay(20000);
}
void loop() {
}
```

The code successfully initiates a call to the specified mobile number using the GSM module. The "CALLING......" message is printed to the Serial Monitor, indicating the initiation of the call. The AT command "ATD+9538433364;" is sent to the GSM module, instructing it to dial the specified number. The delay of 20 seconds allows for the call to be established. During this time, we observe the Serial Monitor for responses and indications of the call status.

## 2. Call to a particular number on an alert

## Aim:

Call a specified mobile number mentioned in the program using Arduino and GSM Module when a flame sensor detects "fire".


## **Connections for flame sensor:**

```
Arduino Flame Sensor
5V VCC
GND GND
A0 A0
Program:
#include <SoftwareSerial.h>
SoftwareSerialcell(2,3);
void setup() {
cell.begin(9600);
delay(500);
Serial.begin(9600);
```

```
void loop() {
intval=analogRead(A0);
Serial.println(val);
delay(1000);
if (val<50)
{
Serial.println("CALLING......");
cell.println("ATD+919742980606;");
delay(10000);
cell.println("ATH"); // Attention Hook Control
}
}
```

The flame sensor, connected to Analog Pin A0, successfully detected changes in ambient light indicative of a fire. Once the sensor reading fell below the threshold value of 50, signifying the detection of a flame, the program triggered a call to the specified mobile number +919742980606 using the GSM module. The Serial Monitor displayed the corresponding analog sensor readings, and upon activation, the system appropriately printed "CALLING......" as confirmation.

	Program-7
	ultrasonica with ourding uno
1	Thim Detroting the distance of object from the
	ottrasonic tensor
	Hardware
	Ulhasonic Jemer
	The same of the sa
	Code
	Const int pingein = 7
	Const in echopin = 6;
	and the second second
4	Void Schope L
	serial · begin (9600).
	PINNOCKE (PINGPIN, OUTPUT);
	PinMode (echopin, Invert)
	y The state of the
	vard soop () 1
_	song cluration, inches, cm;
	digital write (pingpin, Loca)
	deray Micro Seconds (2);
	Orgitaliante (Pingpin, HIGH)
	descymicosciondo (10)
	dignacions (Pingeir, Low);
	duration = pulsa In (echopin, HIGH);
	Inches = mun second To Inches (duration);
	Senow - proten (inches)
	Beneut Printle ("Inches")
	Cm = micro Sciendo To Contimetros ( dusahar )
	Scrid print (cm);
	Person Printer ("cm"):
	A CONTRACTOR OF THE PARTY OF TH

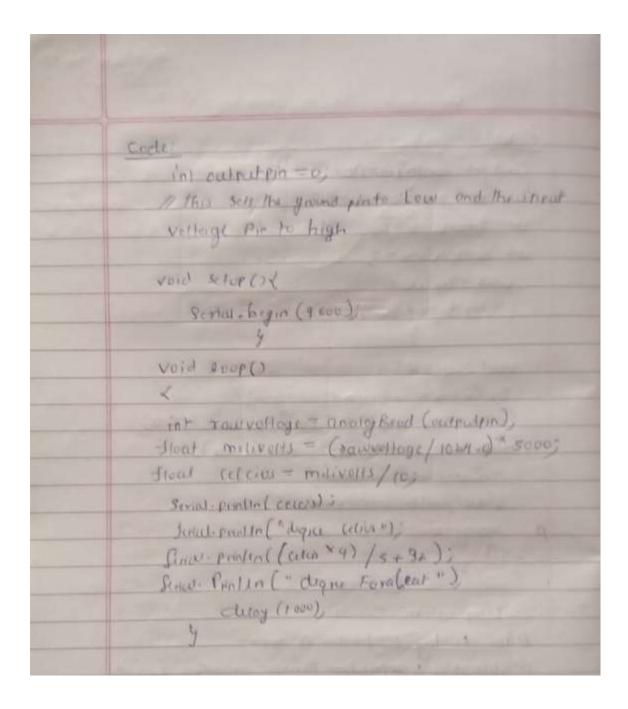

## 3. Sending and Receiving Message

## Aim:

- 1) Send SMS using Arduino and GSM Module to a specified mobile number inside the program
- 2) Receive SMS using Arduino and GSM Module to the SIM card loaded in the GSM Module.

## **Program:**

Note: According to the code, message will be sent and received when 's' and 'r' are pressed

```
through serial monitor respectively.
#include <SoftwareSerial.h>
SoftwareSerial mySerial(2, 3);
void setup()
mySerial.begin(9600); // Setting the baud rate of GSM Module
Serial.begin(9600); // Setting the baud rate of Serial Monitor (Arduino)
delay(100);
}
void loop()
if (Serial.available()<0)
switch(Serial.read())
Case "s":
SendMessage();
break;
case "r":
RecieveMessage();
break;
if (mySerial.available()<0)
Serial.write(mySerial.read());
}
voidSendMessage()
{
mySerial.println("AT+CMGF=1"); //Sets the GSM Module in Text Mode //AT+CMGF,
SMS Format
delay(1000); // Delay of 1000 milli seconds or 1 second
mySerial.println("AT+CMGS=\"+919742980606\"\r"); // AT+CMGS, Send Message
```

```
// Replace withyour mobile number
delay(1000);
mySerial.println("I am SMS from GSM Module");
// The SMS text you want to send
delay(100);
mySerial.println((char)26);
delay(1000);
}
voidRecieveMessage()
{
mySerial.println("AT+CNMI=2,2,0,0,0");
delay(1000);
}
```

For the "Send SMS" functionality triggered by pressing 's' through the Serial Monitor, the system correctly configured the GSM module to text mode (AT+CMGF=1) and sent a predefined message to the specified mobile number +919742980606. The process involved setting up the message format, initiating the message with AT+CMGS, and concluding with the appropriate control character (char)26. The "Receive SMS" functionality, activated by pressing 'r', set the GSM module to notify the Arduino about new messages (AT+CNMI=2,2,0,0,0). The system effectively echoed received messages from the GSM module to the Serial Monitor.

## 4. Controlling LED through received messages:

## Aim:

Use received message through Arduino and GSM Module to control Switching ON / OFF the LED.

Connection: Attach LED to pin 13 and GND.

## **Program:**

```
#include <SoftwareSerial.h>
SoftwareSerial cell(2,3);
Void readfn()
```

```
if (cell.available()) {
while (cell.available()) {
Serial.write(cell.read());
void setup() {
pinMode(13,OUTPUT);
Serial.begin(9600);
cell.begin(9600);
cell.println("AT");
delay(1000);
readfn();
//New SMS alert
cell.println("AT+CNMI=1,2,0,0,0");
}
void loop() {
if(cell.available())
String message =cell.readString();
Serial.println(message);
if(message.indexOf("SWITCH ON")=0)
{
digitalWrite(13,HIGH);
}
else if(message.indexOf("SWITCH OFF")=0)
digitalWrite(13,LOW);
```

```
else
{
Serial.println ("Nothing to do...");
}
}
```

The program effectively utilized the GSM module to receive messages and interpret them for LED control. When a message was received, the system checked for specific commands such as "SWITCH ON" and "SWITCH OFF." Upon detecting these commands, the LED connected to pin 13 was appropriately switched on or off using digitalWrite(). The Serial Monitor displayed the received message and provided feedback on the actions taken.