

# THE PERFECT STRANGERS



theperfectstrangers.band

Rider Updated: 2024.09.29

## Rider

---

These are the requirements each venue that hosts the band must provide.

- [Personnel](#)
  - [Entourage](#)
  - [Personnel for collecting entry fee](#)
- [Equipment](#)
  - [Stage area](#)
  - [Electrical](#)
- [Parking](#)
  - [Band Member Vehicles](#)
  - [Equipment Trailer](#)
- [Refusal to Perform](#)

## Personnel

---

### Entourage

Each band member may have an additional person in their entourage (typically a significant other). In addition, the band may also employ up to 2 sound engineers/stagehands. These people should be allowed the same access as the band members and be exempt from being charged any admission or access fee to a venue.

### Personnel for collecting entry fee

If an entry fee/cover charge is required, where the band gets 100% of the cover, the band will provide someone to take up the money. If the cover charge is being split with the venue, then the venue must also provide someone to observe the handling of the money. This helps to ensure everyone is satisfied that the money was handled properly at the end of the night. If the venue fails to provide someone, then they forfeit their rights to dispute anything regarding the handling of entry fee money.

If the venue is 21+ or has house rules to enforce (such as rules related to a liquor license), the venue must provide someone to ID individuals and enforce the house rules. Personnel provided by the band are only responsible for band related activities, such as taking up money at the door.

## Equipment

---

### Stage area

The band requires a dedicated stage area of at least 20' wide by 20' deep. This should be a dedicated area where through traffic is restricted. This is for the safety of the public, band member, and their equipment.

If a drum riser is to be used, it needs to be at least 10' wide by 10' deep. If the elevation of the riser is greater than 4 feet from the ground, a railing should be installed in the rear of the riser for safety.

### Electrical

The band will provide power conditioners and surge protectors for their equipment. We require the venue to provide enough dedicated breakers for our equipment to operate without issue.

- PA Speakers
  - 2 x 15 amp breakers
    - One near Downstage Left.
    - One near Downstage Right.
  - If the venue is providing PA sound, then these are not required.
- IEM box & Amps
  - 2 x 15 amp breakers
    - One new Upstage Right.
    - One new Upstage Left.
  - These are always required.

## Parking

---

### Band Member Vehicles

The band may need as many as 3 parking spots for members and one extended space for the equipment truck and trailer, totaling 4 spaces.

### Equipment Trailer

For a full band setup, the band uses a covered trailer to transport equipment. The trailer is approximately 9 feet tall (2.75 meters) and 6 feet wide (1.85 meters). This typically exceeds the height of most parking garages. Special parking accommodations close to the loading/unloading area must be made for the trailer if the venue/event utilizes a parking structure where the trailer will not meet the clearance requirements.

The trailer will need to have access close to the area designated for the band to load/unload equipment. This may require the use of parking cones to reserve the space until the band arrives. Please notify the band beforehand if any procedures need to be followed before the band's arrival.


# Refusal to Perform

---

The band reserves the right to refuse to perform for any reason regarding band member or equipment safety. Such reasons are, but not limited to:

- Unstable or unsafe building or performance area
- Volatile or threatening crowd
- Excessive moisture in the air
- Threat of severe rain or lightning
- etc.

We hope never to refuse to perform, but the safety of our band members is our number one priority, followed by the safety of our equipment.

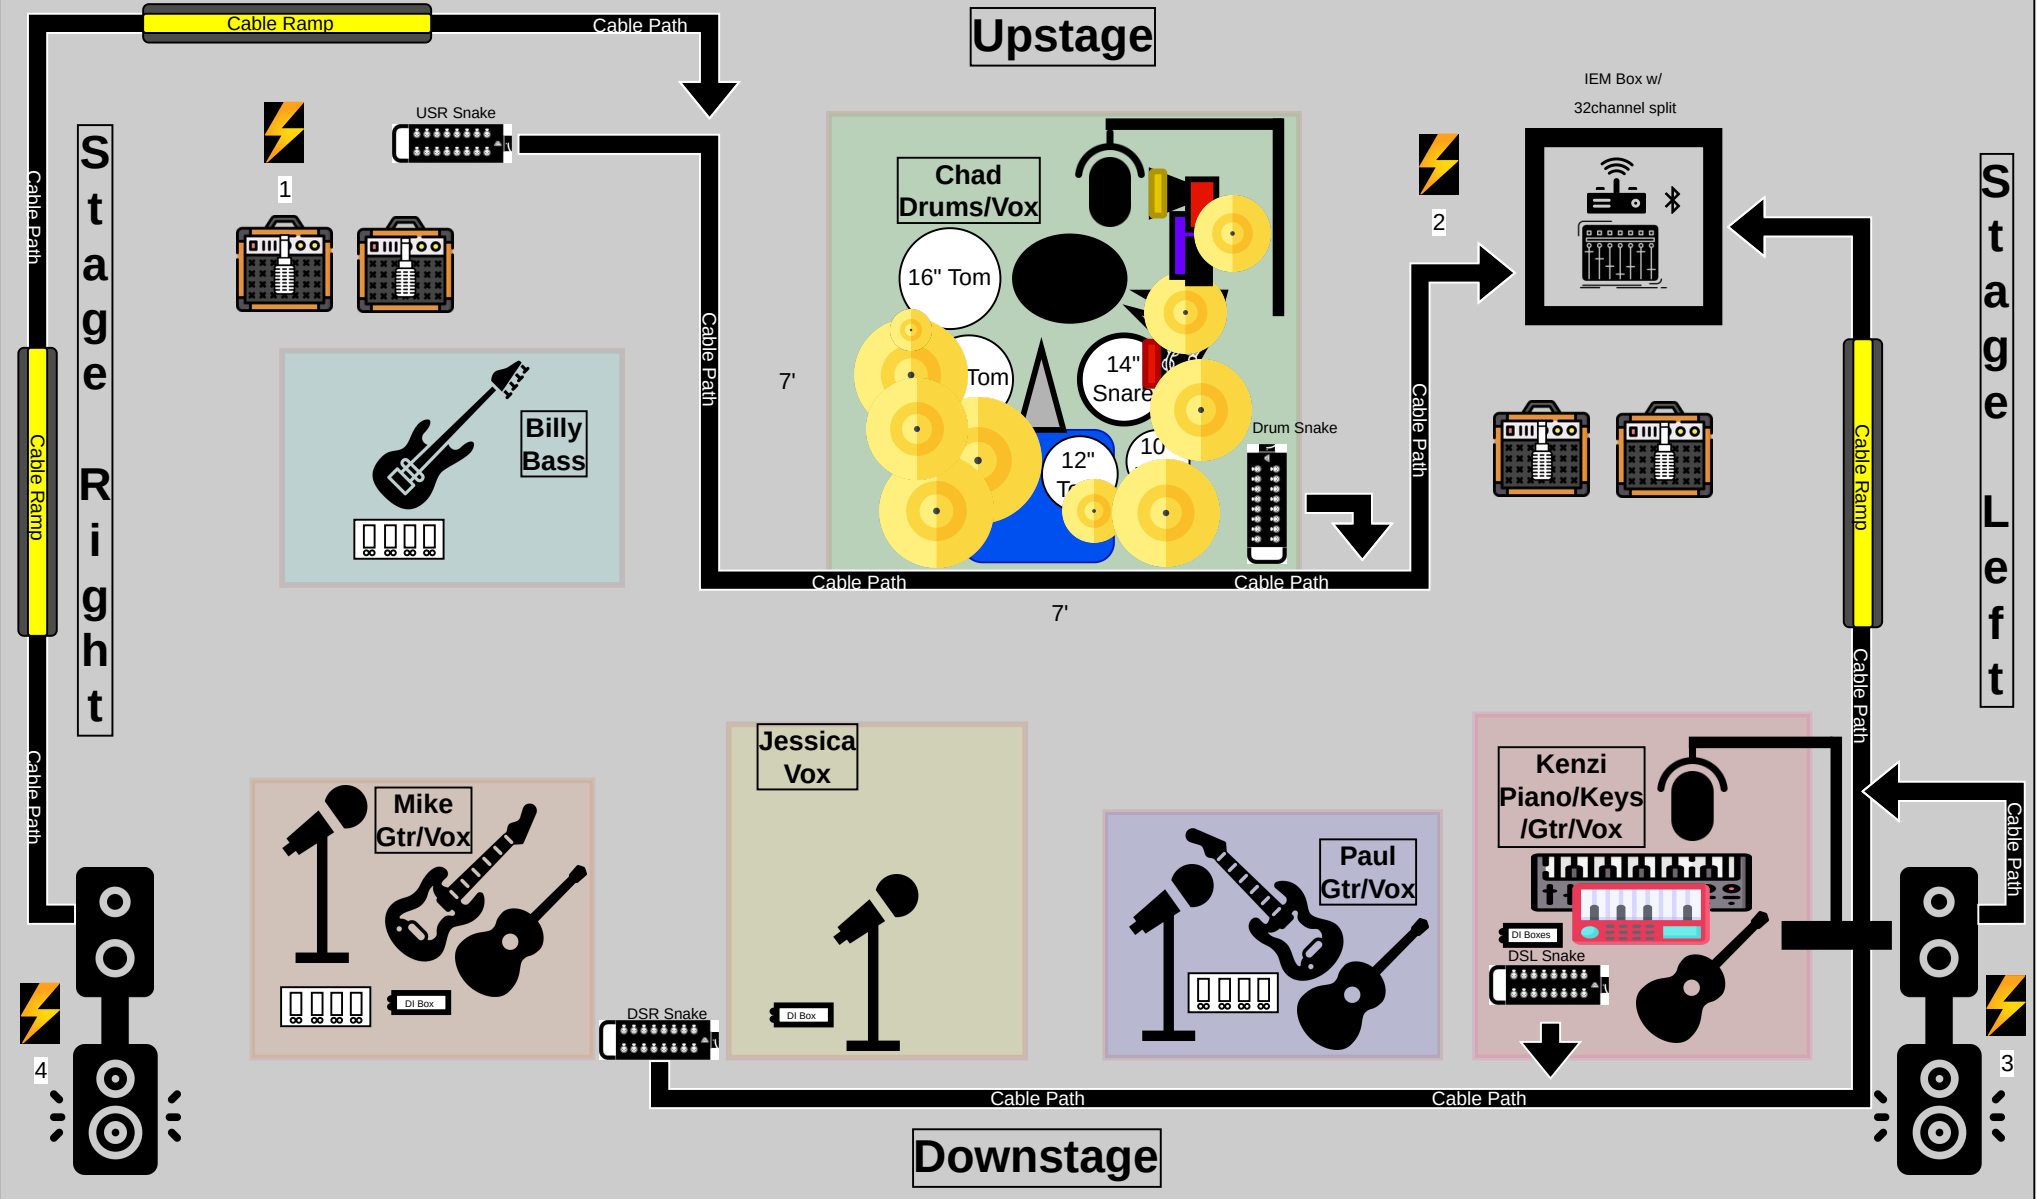

**⚡POWER⚡**

All power drops are 120V/15A.

- 1. 2 Guitar Amps
- 2. IEM Box, 2 Guitar Amps
- 3. 1 Piano, 1 Keyboard,
- 3\*. 1 QSC Speaker, 1 QSC Sub
- 4\*. 1 QSC Speaker, 1 QSC Sub

\* Only needed if band is providing FOH sound system

**Band: The Perfect Strangers**

Contact 1: Chad Birch | Chad@ThePerfectStrangers.band | 859.771.2703

Contact 2: Paul Mallory | Paul@ThePerfectStrangers.band | 859.227.6225

Diagrams/Input List: github.com/ThePerfectStrangers

Website: ThePerfectStrangers.band



**Drums**

- 1. Kick
- 2. Snare,
- 3. 4 Toms
- 4. Hi-Hat
- 5. 2 Overheads
- 6. Vocals

\* All 10 inputs running into Drum Snake

**Date Updated: 2026-07-26**

# Full Band Setup

| Musician       | Position         | Channel | Input  | Sub Snake     | Input Name     | Mic/DI             | Stand          | Notes                                    |
|----------------|------------------|---------|--------|---------------|----------------|--------------------|----------------|------------------------------------------|
| Chad           | Drums            | 1       | L1     | Drum 1        | Chad Vocals    | Shure Beta 56A     | Overhead Stand | Light reverb. Light Delay                |
|                |                  | 2       | L2     | Drum 2        | Kick           | Shure Beta 52A     | Internal       | Suspended inside bass drum               |
|                |                  | 3       | L3     | Drum 3        | Snare (Top)    | Shure Beta 56A     | Drum Clamp     |                                          |
|                |                  | 4       | L4     | Drum 4        | Snare (Bottom) | Shure SM57         | Base Stand     |                                          |
|                |                  | 5       | L5     | Drum 5        | Aux            | Shure SM137        | Drum Clamp     | 48V provided by IEM Box                  |
|                |                  | 6       | L6     | Drum 6        | Tom 1          | Shure Beta 98AMP/C | Drum Clamp     | 48V provided by IEM Box                  |
|                |                  | 7       | L7     | Drum 7        | Tom 2          | Shure Beta 98AMP/C | Drum Clamp     | 48V provided by IEM Box                  |
|                |                  | 8       | L8     | Drum 8        | Tom 3          | Shure Beta 98AMP/C | Drum Clamp     | 48V provided by IEM Box                  |
|                |                  | 9       | L9     | Drum 9        | Tom 4          | Shure Beta 98AMP/C | Drum Clamp     | 48V provided by IEM Box                  |
|                |                  | 10      | L10    | Drum 10       | Overhead Ride  | Shure SM137        | Boom Stand     | 48V provided by IEM Box                  |
|                |                  | 11      | L11    | Drum 11       | Overhead Hat   | Shure SM137        | Boom Stand     | 48V provided by IEM Box                  |
|                |                  | 12      |        |               |                |                    | Unused         |                                          |
|                |                  | 13      |        |               |                |                    | Unused         |                                          |
| Billy Bass     | Upstage Left     | 14      | A1     |               | Billy Vocals   | Shure Beta 58      | Boom Stand     | Not for live shows, only practice space. |
|                |                  | 15      | A2     | USR 1         | Billy Bass     | Behringer BDI 21   | Direct         |                                          |
|                |                  | 16      |        |               |                |                    | Unused         |                                          |
| Jessica Vocals | Downstage Center | 17      | A3     | DSR 1         | Jessica Vocals | Shure Beta 58A     | Boom Stand     | Increase EQ on lows & mids, heavy reverb |
| Paul Guitar    | Downstage Right  | 18      | A4     | DSL 1         | Paul Vocals    | Shure 55SH         | Boom Stand     | Light reverb. Light Delay                |
|                |                  | 19      | A5     |               | Paul Vox       | Sennheiser E609    | Amp Hang       |                                          |
|                |                  | 20      | A6     |               | Paul Fender    | Sennheiser E609    | Amp Hang       |                                          |
|                |                  | 21      | A7     | DSL 2         | Paul Acoustic  | Behringer DI4800A  | Floor Stand    |                                          |
|                |                  | 22      |        |               |                |                    | Unused         |                                          |
| Mike Guitar    | Upstage Right    | 23      | A8     | DSR 2         | Mike Vocals    | Shure SM57         | Boom Stand     | Light reverb. Light Delay                |
|                |                  | 24      | A9     | USR 2         | Mike Amp 1     | Shure SM57         | Floor Stand    |                                          |
|                |                  | 25      | A10    | USR 3         | Mike Amp 2     | Shure SM57         | Floor Stand    |                                          |
|                |                  | 26      | A11    | DSR 3         | Mike Acoustic  | DI Box             | Direct         |                                          |
| Kenzi Keys     | Downstage Left   | 27      | A12    | DSL 3         | Kenzi Vocals   | Telefunken M80     | Overhead Stand | Light reverb. Light Delay                |
|                |                  | 28      | A13    | DSL 4         | Kenzi Piano    | Behringer DI4800A  | Piano Stand    |                                          |
|                |                  | 29      | A14    | DSL 5         | Kenzi Keyboard | Behringer DI4800A  | Piano Stand    |                                          |
|                |                  | 30      | A15    | DSL 6         | Kenzi Acoustic | Behringer DI4800A  | Floor Stand    |                                          |
|                |                  | 31      |        |               |                |                    | Unused         |                                          |
| Guest          | Downstage        | 32      | A16    | DSR 4   DSL 7 | Guest Vocals   | Shure SM57         | Boom Stand     | Light reverb. Light Delay. May not need. |
| Utility        | Crowd            | 33      | L17/18 |               | Crowd Left     | House              | House          | Stage left house crowd mic               |
|                |                  | 34      |        |               |                |                    | Unused         |                                          |
|                |                  | 35      |        |               |                |                    | Unused         |                                          |
|                |                  | 36      |        |               |                |                    | Unused         |                                          |
|                |                  | 37      |        |               |                |                    | Unused         |                                          |
|                | Bluetooth        | 38      | L21/22 |               | Bluetooth Left | Direct             | N/A            |                                          |
|                |                  | 39      |        |               |                |                    | Unused         |                                          |
|                | Talkback         | 40      | L24    |               | Bluetooth Left | Direct             | N/A            |                                          |



# Full Band Setup

theperfectstrangers.band

Date Updated: 2026.07.26

| WING Rack Rear Input (Local) |             |             |                |         |          |       |          |
|------------------------------|-------------|-------------|----------------|---------|----------|-------|----------|
| 1                            | 2           | 3           | 4              | 5       | 6        | 7     | 8        |
| Chad Vocals                  | Kick        | Snare (Top) | Snare (Bottom) | Hi-Hat  | Tom 1    | Tom 2 | Tom 3    |
| 17                           | 18          | 19          | 20             | 21      | 22       | 23    | 24       |
| Crowd Left                   | Crowd Right |             |                | BT Left | BT Right |       | Talkback |

| WING Rack Rear Input (Local) |                |            |    |    |    |    |    |
|------------------------------|----------------|------------|----|----|----|----|----|
| 9                            | 10             | 11         | 12 | 13 | 14 | 15 | 16 |
| Tom 4                        | Overhd Ride    | Overhd Hat |    |    |    |    |    |
| Output                       |                |            |    |    |    |    |    |
| 1                            | 2              | 3          | 4  | 5  | 6  | 7  | 8  |
| Chad IEM Left                | Chad IEM Right |            |    |    |    |    |    |

| Midas DL32 Front Input (AES50A) |                 |                  |                   |               |                |                |                 |
|---------------------------------|-----------------|------------------|-------------------|---------------|----------------|----------------|-----------------|
| Input                           |                 |                  |                   |               |                |                |                 |
| 1                               | 2               | 3                | 4                 | 5             | 6              | 7              | 8               |
| Billy Vocals                    | Billy Bass      | Jessica Vocals   | Paul Vocals       | Paul Vox      | Paul Fender    | Paul Acoustic  | Mike Vocals     |
| Input                           |                 |                  |                   |               |                |                |                 |
| 17                              | 18              | 19               | 20                | 21            | 22             | 23             | 24              |
|                                 |                 |                  |                   |               |                |                |                 |
| Output                          |                 |                  |                   |               |                |                |                 |
| 1                               | 2               | 3                | 4                 | 5             | 6              | 7              | 8               |
| Billy IEM Left                  | Billy IEM Right | Jessica IEM Left | Jessica IEM Right | Paul IEM Left | Paul IEM Right | Kenzi IEM Left | Kenzi IEM Right |

| Midas DL32 Front Input (AES50A) |                |            |              |             |            |             |              |
|---------------------------------|----------------|------------|--------------|-------------|------------|-------------|--------------|
| Input                           |                |            |              |             |            |             |              |
| 9                               | 10             | 11         | 12           | 13          | 14         | 15          | 16           |
| Mike Amp 1                      | Mike Amp 2     | Mike Acstc | Kenzi Vocals | Kenzi Piano | Kenzi Keys | Kenzi Acstc | Guest Vocals |
| Input                           |                |            |              |             |            |             |              |
| 25                              | 26             | 27         | 28           | 29          | 30         | 31          | 32           |
|                                 |                |            |              |             |            |             |              |
| Output                          |                |            |              |             |            |             |              |
| 9                               | 10             | 11         | 12           | 13          | 14         | 15          | 16           |
| Mike IEM Left                   | Mike IEM Right | Wedge 1    | Wedge 2      | Subs Left   | Subs Right | Main Left   | Main Right   |

| IEM Operating Frequencies |                |               |
|---------------------------|----------------|---------------|
| Device                    | Model          | Frequencies   |
| Chad's IEM                | Sennheiser XSW | 476 - 500 MHz |
| Kenzi's IEM               | Shure PSM 300  | 488-512 MHz   |
| Jessica & Paul 's IEM     | Shure PSM 200  | 518 - 554 MHz |
| Mike & Billy's IEM        | Shure PSM 200  | 518 - 554 MHz |

| Notes |                                                                                 |
|-------|---------------------------------------------------------------------------------|
| 1     | Paul's IEM transmitter Port 1 does not work (capped)                            |
| 2     | USB out on back of IEM box is controlled by USB switch underneath the port      |
| 3     | Colored cables = band vocals & instruments                                      |
| 4     | All WING Rack Local Inputs are patched to rear patch panel or to racked devices |
| 5     | Talkback is set to Auto. Can be activated by using Wing Edit app                |
| 6     | Guest Vocals is optional and may not appear at all performances                 |