
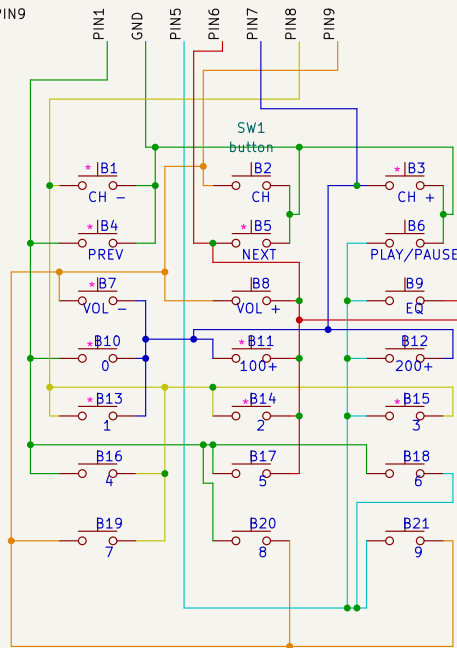
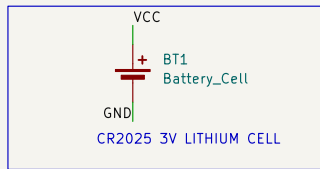
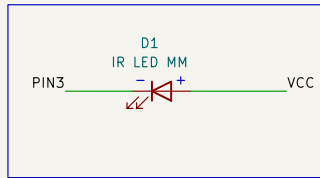
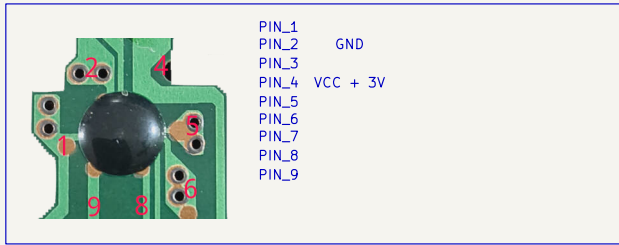


Transmitter

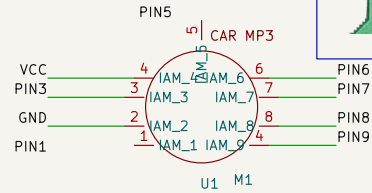

WORKING_BUTTONS TOT=10

1, 5, 3
4, 7, 10, 11, 13, 14, 15

WHY WORK?

PIN 1 8 7

NON-WORKING_BUTTONS TOT=11

2, 6, 8, 9, 12, 16, 17, 18, 19, 20, 21

WHY NOT WORK?

PIN 5 ?? OR PIN 8 9 ??

MCU PIN 1 ---- buttons 4, 10, 16, 17, 18, 20
MCU PIN 2 ---- buttons 1, 2, 3, 4, 5, 6
MCU PIN 5 ---- buttons 6, 9, 12, 15, 18, 21
MCU PIN 6 ---- buttons 5, 8, 9, 11, 14, 17
MCU PIN 7 ---- buttons 3, 7, 10, 11, 12, 13
MCU PIN 8 ---- buttons 1, 13, 14, 15, 16, 19
MCU PIN 9 ---- buttons 2, 7, 8, 19, 20, 21


Rearrangement

MCU PIN 2 GND buttons 1, 2, 3, 4, 5, 6
MCU PIN 8 ---- buttons 1, 13, 14, 15, 16, 19
MCU PIN 9 ---- buttons 2, 7, 8, 19, 20, 21
MCU PIN 7 ---- buttons 3, 7, 10, 11, 12, 13
MCU PIN 1 ---- buttons 4, 10, 16, 17, 18, 20
MCU PIN 6 ---- buttons 5, 8, 9, 11, 14, 17
MCU PIN 5 ---- buttons 6, 9, 12, 15, 18, 21

@ Good x Not	GND	PIN 1	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9
GND	NIL	*	*	*	*	*	*
PIN 1	@/B4	NIL	*	*	*	*	*
PIN 5	*	*	NIL	*	*	*	*
PIN 6	@/B5	*	*	NIL	*	*	*
PIN 7	@/B3	@/B10	*	@/B11	NIL	*	*
PIN 8	@/B1	*	@/B15	@/B14	@/B13	NIL	*
PIN 9	*	*	*	*	@/B7	*	NIL

Final Conclusion:

I'm not sure why it is not working. The MCU pins are not accessible because they are covered with epoxy. I will investigate it further later.

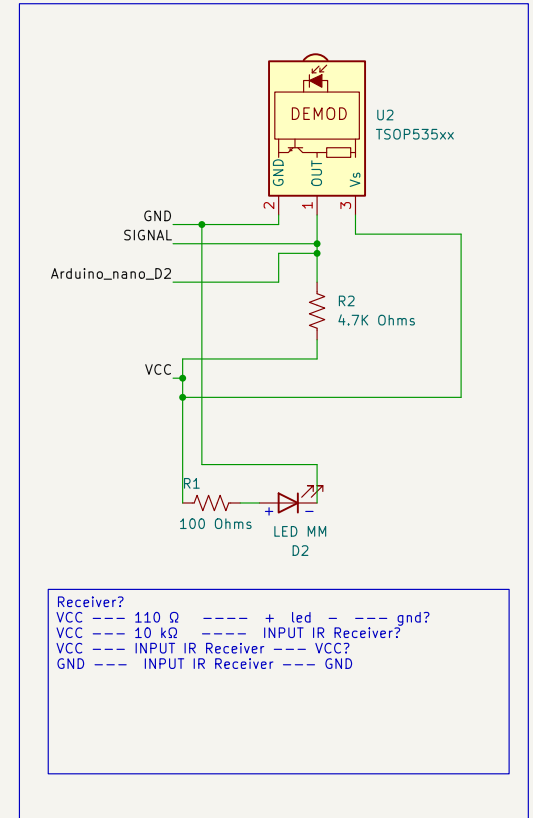

Receiver?
VCC --- 110 Ω ---- + led - --- gnd?
VCC --- 10 kΩ ---- INPUT IR Receiver?
VCC --- INPUT IR Receiver --- VCC?
GND --- INPUT IR Receiver --- GND

Sheet: /
File: car_mp3.kicad_sch

Title:

Size: A4
KiCad E.D.A. 10.0.5

Date:

Rev:

Id: 1/1