




CH-14 PPE

Homework Answers

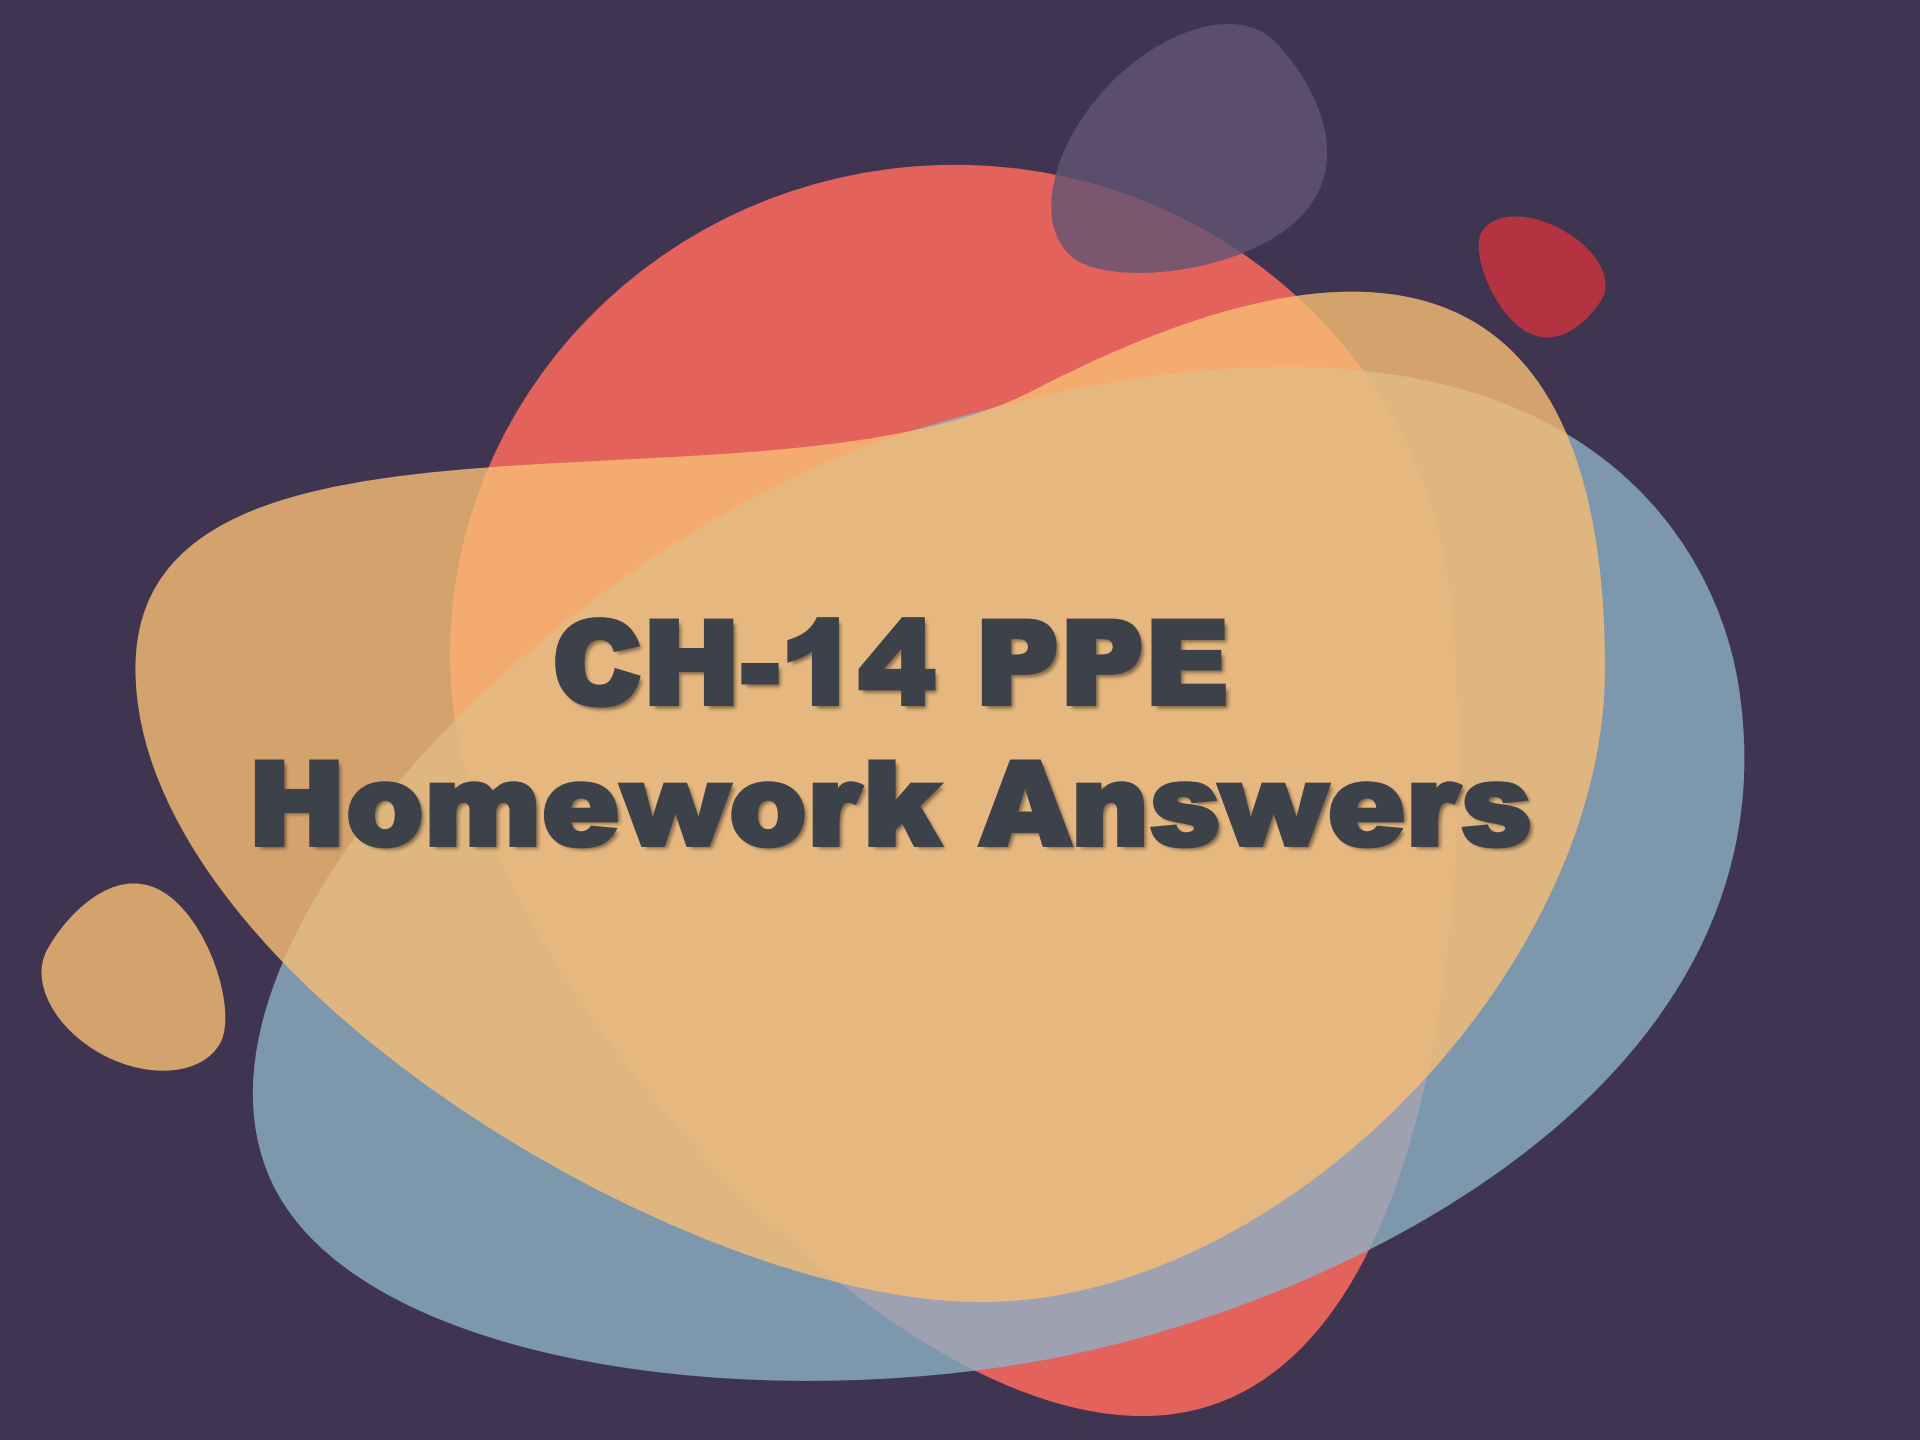

01

What should be used prior to implementing a PPE program?

- A. Administrative controls
- B. Substitution
- C. Engineering controls
- D. All of the above**

02


Which of the following is NOT an example of protective footwear?

A. Safety-toed boots

B. Metatarsal guards

C. Molders (foundry) shoes

D. Conductive footwear

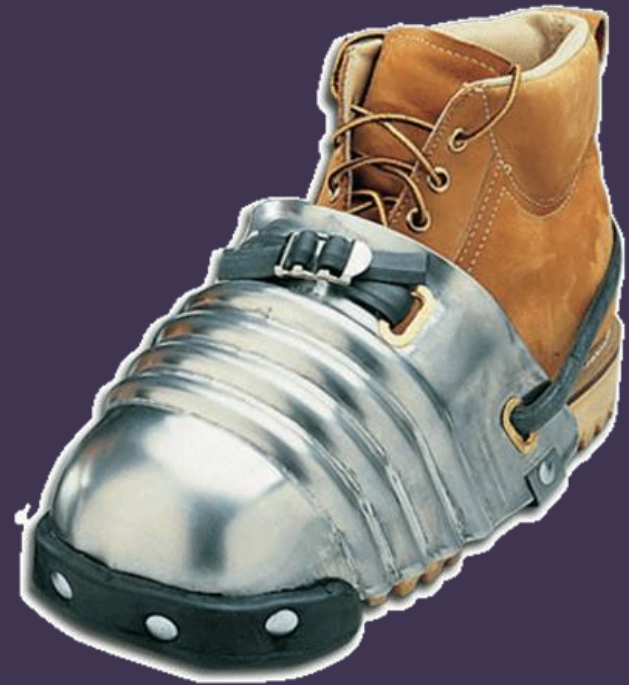



03

Jet engines can produce noise levels above 140 dBA. What type of hearing protection is needed to protect against these exposures?

A. No hearing protection

B. Ear plugs

C. Earmuffs

D. Ear plugs and earmuffs



04

Which glove would offer the best protection against halogenated hydrocarbons?

A. PVC

B. Neoprene

C. Viton

D. Natural Rubber



05

What is the minimum level of oxygen required to safely wear an air-purifying respirator?

A. 16.0%

B. 19.5%

C. 20.9%

D. 22.5%

06

Which level of protection for hazardous materials does not require a respirator?

A. Level A

B. Level B

C. Level C

D. Level D





07

An SCBA should be operated in what pressure mode to minimize contamination?

A. Positive-pressure, pressure-demand

B. Negative-pressure, pressure-demand

C. Continuous flow

D. Timed cycle mode

08

What is the maximum concentration a half-face respirator can be used in a contaminated environment when the contaminant PEL is 10 ppm?

A. 50 ppm

B. 100 ppm

C. 500 ppm

D. 1000 ppm

Type of Respirator	Quarter Mask	Half Mask	Full Facepiece	Helmet/Hood	Loose-Fitting Facepiece
1. Air-Purifying Respirator	5	10	50	—	—
2. Powered Air-Purifying Respirator (PAPR)	—	50	1,000	25/1,000	25
3. Supplied-Air Purifying Respirator (SAR) or Airline Respirator					
• Demand mode	—	10	50	—	—
• Continuous flow mode	—	50	1,000	25/1,000	25
• Pressure-demand or other positive-pressure mode	—	50	1,000	—	—
4. Self-Contained Breathing Apparatus (SCBA)					
• Demand Mode	—	10	50	50	—
• Pressure-demand or other positive-pressure mode (e.g., open/closed circuit)	—	—	10,000	10,000	—



09

What is the most expedient method of protecting a worker from noise?

A. Ear protection

B. Limited exposure time

C. Engineering controls

D. Administrative controls



10

Why is PPE typically considered the last resort for controlling hazards?

- A. Workers do not fit in many PPE. Front-line workers are involved in the PPE selection process.
- B. PPE needs to be constantly replaced.
- C. PPE doesn't eliminate hazards and sometimes introduces them.**
- D. Workers do not want to wear it because it is uncomfortable.