# Ministerul Educatiei al Republicii Moldova Universitatea Tehnica a Moldovei Filiera Anglofona



at Embedded Systems

Laboratory Work #1

**Topic:** Introduction to MCU. Serial interfacing using UART – Universal Asynchronous Receiver/Transmitter

Performed by:

Dariev Alexei

Verified by:

Andrei Bragarenco

## **Topic:**

Introduction to MCU. Serial interfacing using UART – Universal Asynchronous Receiver/Transmitter

## **Objectives:**

- Get in touch with what MCU means
- Study UART and understand basic concept
- Write and execute the program for 8 bit ATMega32 MCU using PROTEUS simulator

### Task:

Write a program that every second will print on the virtual terminal, using UART, the value of a counter variable. Simulate the program on a scheme, constructed with Proteus.

#### Overview:

## **Embedded systems**

An **embedded system** is some combination of computer hardware and software, either fixed in capability or programmable, that is specifically designed for a particular function. Industrial machines, automobiles, medical equipment, cameras, household appliances, airplanes, vending machines and toys (as well as the more obvious cellular phone and PDA) are among the myriad possible hosts of an embedded system. Embedded systems that are programmable are provided with programming interfaces, and embedded systems programming is a specialized occupation.


#### Microcontrollers

A **microcontroller** (or **MCU**) is a small computer on a single integrated circuit containing a processor core, memory, and programmable input/output peripherals. Program memory in the form of Ferroelectric RAM, NOR flash or OTP ROM is also often included on chip, as well as a typically small amount of RAM. Microcontrollers are designed for embedded applications, in contrast to the microprocessors used in personal computers or other general purpose applications consisting of various discrete chips.

Microcontrollers are used in automatically controlled products and devices, such as automobile engine control systems, implantable medical devices, remote controls, office machines, appliances, power tools, toys and other embedded systems. By reducing the size and cost compared to a design that uses a separate microprocessor, memory, and input/output devices, microcontrollers make it economical to digitally control even more devices and processes. Mixed signal microcontrollers are common, integrating analog components needed to control non-digital electronic systems.

### **MCU** Architecture


A basic CPU architecture is depicted in Figure 2.1. It consists of the data path, which executes instructions, and of the control unit, which basically tells the data path what to do.

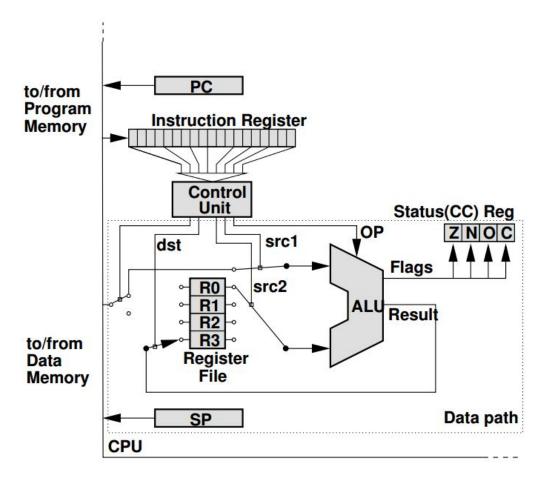

Representation MCU Architecture

## Atmel®AVR®ATmega32

The Atmel®AVR®ATmega32 is a low-power CMOS 8-bit microcontroller based on the AVR enhanced RISC architecture. By executing powerful instructions in a single clock cycle, the ATmega32 achieves throughputs approaching 1 MIPS per MHz allowing the system designer to optimize power consumption versus processing speed.

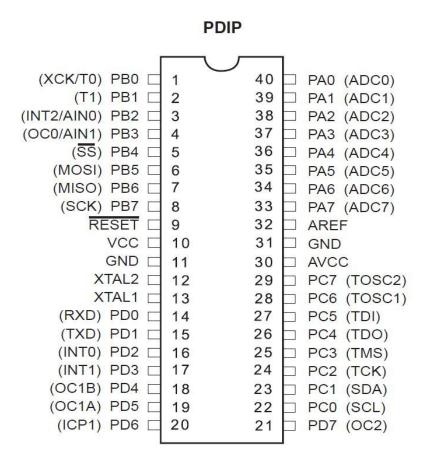

Representation of ATMega32 MCU

## **UART** - Universal Asynchronous Receiver/Transmitter

A UART (Universal Asynchronous Receiver/Transmitter) is the microchip with programming that controls a computer's interface to its attached serial devices. Specifically, it provides the computer with the RS-232C Data Terminal Equipment (DTE) interface so that it can "talk" to and exchange data with modems and other serial devices. As part of this interface, the UART also:

Converts the bytes it receives from the computer along parallel circuits into a single serial bit stream for outbound transmission

On inbound transmission, converts the serial bit stream into the bytes that the computer handles Adds a parity bit (if it's been selected) on outbound transmissions and checks the parity of incoming bytes (if selected) and discards the parity bit

Adds start and stop delineators on outbound and strips them from inbound transmissions Handles interrupts from the keyboard and mouse (which are serial devices with special port s) May handle other kinds of interrupt and device management that require coordinating the computer's speed of operation with device speeds

## **Tools and Technologies used:**

#### **Atmel Studio**

Atmel Studio 7 is the integrated development platform (IDP) for developing and debugging Atmel® SMART ARM®-based and Atmel AVR® microcontroller (MCU) applications. Studio 7 supports all AVR and Atmel SMART MCUs. The Atmel Studio 7 IDP gives you a seamless and easy-to-use environment to write, build and debug your applications written in C/C++ or assembly code. It also connects seamlessly to Atmel debuggers and development kits.

Additionally, Atmel Studio includes Atmel Gallery, an online apps store that allows you to extend your development environment with plug-ins developed by Atmel as well as by third-party tool and embedded software vendors. Atmel Studio 7 can also able seamlessly import your Arduino sketches as C++ projects, providing a simple transition path from Makerspace to Marketplace.


#### **Proteus**

Proteus is a Virtual System Modelling and circuit simulation application. The suite combines mixed mode SPICE circuit simulation, animated components and microprocessor models to facilitate co-simulation of complete microcontroller based designs. Proteus also has the ability to simulate the interaction between software running on a microcontroller and any analog or digital electronics connected to it. It simulates Input / Output ports, interrupts, timers, USARTs and all other peripherals present on each supported processor.

## **Solution:**

In order to proceed to use UART we wrote a driver to actually interact with the virtual terminal, which is, by means, the essence of the laboratory work.

But, before proceeding to explain which is what, I will first include here the project structure of the:

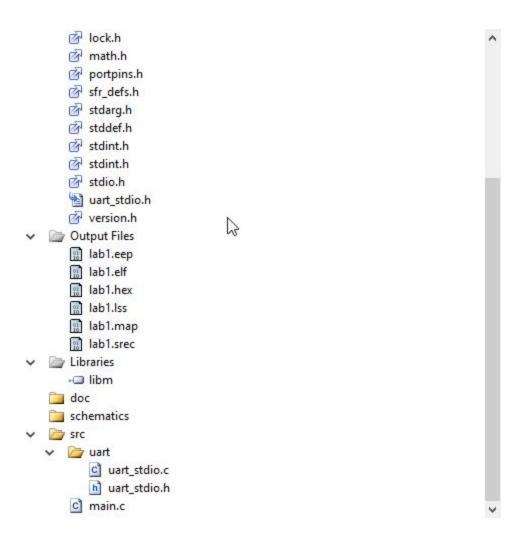

## **Uart Driver**

In UART driver implementation I used the following dependencies:

#include <stdio.h> - used for defining UART as STD stream for IO library.

#include <avr/io.h> - header file including the appropriate IO definitions for the device that has been specified by the -mmcu= compiler command-line switch.

## uart stdio.h

It is the header file for the written UART driver. It contains the specific includes and the functions prototypes:

```
void uart_Stdio_Init(void);
int uart_PutChar(char c, FILE *stream);
```

### uart stdio.c

It is the file where the implementation functions for the written UART driver are written.

## main.c

This is the entry point of the program. It works in the following way:

1) Declares the global variable for counting:

```
int count = 0;
```

2) Initializes UART Driver

```
uart_Stdio_Init();
```

3) Enters the infinite while loop:

With a frequency of 1000 ms ( delay ms(1000);)

i) Increments the counter:


```
count = count + 1;
```

ii) Prints the counter on the screen:

```
printf("%d\n", count);
```

The \_delay\_ms() function is retrieved from <avr/delay.h> library.

Here is the scheme constructed in Proteus:

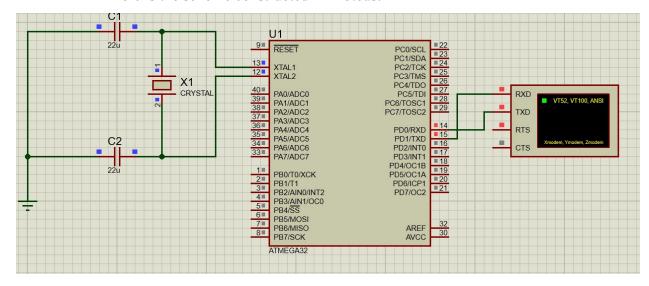

## Construction of the scheme - Virtual Terminal Interfacing

## **Result:**

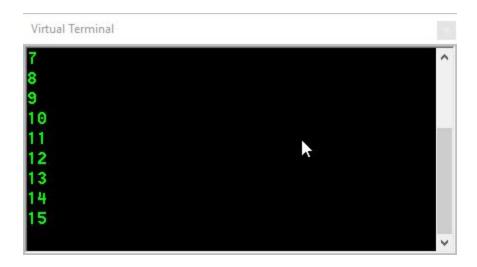


Figure 4: Output of the program

## **Conclusion:**

In this laboratory work I've learned the basic concepts of what a MCU is, how to connect code to the hardware and even how it deals with communication - by working with UART.

# **Appendix:**

## main.c

```
#include <avr/io.h>
#include <avr/delay.h>
#include "uart/uart_stdio.h"

int count = 0;

void main() {
   uart_Stdio_Init();

while(1){
```

```
count = count + 1;
       printf("%d\n",count);
      _delay_ms(1000);
   }
}
In uart folder:
uart_stdio.h
#ifndef _UART_STDIO_H
#define _UART_STDIO_H
#define UART_BAUD 9600
           #define F_CPU 1000000UL
#include <stdio.h>
#include <avr/io.h>
   void uart_Stdio_Init(void);
        uart_PutChar(char c, FILE *stream);
#endif
uart_stdio.c
#include "uart_stdio.h"
  FILE my_stream = FDEV_SETUP_STREAM(uart_PutChar, NULL, _FDEV_SETUP_WRITE);
  void uart_Stdio_Init(void) {
      stdout = &my_stream;
#if F_CPU < 2000000UL && defined(U2X)
      UCSRA = BV(U2X);
                                   /* improve baud rate error (2x clock) */
      UBRRL = (F_CPU / (8UL * UART_BAUD)) - 1;
```

```
#else
    UBRRL = (F_CPU / (16UL * UART_BAUD)) - 1;
#endif

    UCSRB = _BV(TXEN) | _BV(RXEN); /* enable transmitter and receiver
registers*/
}

int uart_PutChar(char c, FILE *stream) {

    if (c == '\n')
        uart_PutChar('\r', stream);

    while (~UCSRA & (1 << UDRE));
    UDR = c;

    return 0;
}</pre>
```