



Residential Window Cleaning

Professional Process Guide

Pure water. No ladders against your siding. No streaks, no residue.

IPC HydroCart Pro 4-Stage Pure Water System + Reverse Osmosis & Deionisation + Carbon Fibre Poles to 5 Storeys

PREPARED EXCLUSIVELY FOR

Client Name _____

Property Address _____

Phone _____

Email _____

What's Included

Interior and exterior glass on every pane, plus frames, sills, tracks and screens. We use the IPC HydroCart Pro 4-stage pure water system, filtered through reverse osmosis and deionisation, so every pane dries completely spot free with no chemical residue left on the glass. Telescopic carbon fibre poles reach up to five storeys safely from the ground, so no ladder ever leans against your siding, gutters or window frames.



London Ontario home exterior. Glass, frames and surrounding siding cleaned in one visit.

Why This Process Matters

The Streaks Are the Soap, Not the Dirt

Tap water in London Ontario carries dissolved minerals: calcium, magnesium and other total dissolved solids. When ordinary tap water dries on glass, the water evaporates and every one of those minerals stays behind as a white spot. Add dish soap or a commercial glass cleaner and now you also have surfactant residue on the pane, which attracts dust and dries as streaking. That is why a window cleaned with a squeegee and a bucket looks worse two weeks later than one that was never touched.

Pure water solves this at the source. Our IPC HydroCart Pro runs your water through a four stage process, ending with reverse osmosis and deionisation, which strips the total dissolved solids down to effectively zero. Pure water is aggressive on its own, so it lifts dirt without any detergent, and because there is nothing dissolved in it there is nothing left behind when it evaporates. The glass dries spot free on its own with no squeegee, no towel and no chemical film.

The Complete Package

- Every exterior pane cleaned with pure water, plus interiors on request
- Frames, sills, tracks and ledges wiped out, not just the glass
- Screens removed, cleaned and reinstalled in their original openings
- Cobwebs, wasp nests and debris cleared from window corners and eaves overhangs
- Carbon fibre telescopic poles reach up to five storeys entirely from the ground
- No ladders leaned against siding, eavestroughs or window frames at any point
- Landscaping and beds protected, and a final walkthrough with you before we leave

What You Can Expect: 6 Phases

- Phase 1 - Property walkthrough, pane count and glass condition assessment
- Phase 2 - Site protection, screen removal and equipment staging
- Phase 3 - Interior glass, sills and track cleaning
- Phase 4 - Exterior pure water wash, frames and sills
- Phase 5 - Screen cleaning, reinstallation and detail work
- Phase 6 - Final inspection, walkthrough and drying guidance

Pricing & Timeline

Window cleaning is quoted by pane count, storey height, and whether you want interior, exterior or both. We confirm the exact count during a free walkthrough or over the phone if you know your window layout. The ranges below are what most London area homes fall into.

Exterior only, standard residential pane	From \$6 / pane
Interior and exterior, standard residential pane	From \$10 / pane
Average bungalow, exterior only	From \$180
Average two storey home, interior and exterior	From \$350
Screen cleaning and track detailing	Included

Screens, frames, sills and tracks are included in every quote rather than added on afterward. Storm windows, leaded or stained glass, hard water staining, construction residue and paint overspray need specialist treatment and are quoted separately after we see them.

Typical Timeline

An average bungalow exterior is two to three hours. A two storey home inside and out is a half to full day depending on pane count and how much track and sill detail work is involved. We are usually in and out in a single visit and we do not need to be in your home unless you have booked interiors.

Which Service Do You Need?

Every job starts with a free walkthrough or a phone quote if you know your window count. No obligation. Call 519-712-1431.

IF THIS SOUNDS LIKE YOUR WINDOWS	WHAT YOU LIKELY NEED
Windows look fine from inside but the outside is dusty, spotted or has bug residue.	Exterior only. Most common residential booking and the best value.
You can see film, fingerprints or cooking residue on the inside of the glass.	Interior and exterior. Interiors need a different method than pure water.
White chalky spots that do not come off, usually where sprinklers hit the glass.	Hard water stain removal. Separate treatment, quoted after we assess it.
Listing the house, or you have just finished a renovation.	Full interior and exterior with track and screen detail.

Step by Step Process

Below is exactly what happens on a Core Exteriors residential window cleaning visit. The sequence is deliberate, and we

PHASE 1

Walkthrough, Pane Count & Glass Assessment

We confirm scope and check the glass before we touch anything, so there are no surprises for either of us.

1.1 Pane Count & Access Confirmation

We count every pane in scope and confirm access to each one: gates, side yards, decks, window wells and any area behind locked fencing. Anything unreachable is identified now, not discovered halfway through.

1.2 Glass Condition Check

We inspect for existing damage before we start: scratches, chips, cracked panes, failed seals showing fogging between the panes, and hard water etching. We point these out to you up front so pre-existing conditions are documented and never mistaken for our work.

1.3 Frame, Seal & Screen Inspection

Frames, glazing beads, caulking and screens are checked. Brittle or damaged screens are flagged before we remove them, because an old screen that has gone brittle in the sun can tear during handling and we will not remove one without telling you first.

1.4 Special Glass Identification

Tinted film, leaded glass, stained glass, older single pane and any coated or specialty glazing is identified and handled with the appropriate method. Some coatings and films cannot take a standard clean.

1.5 Water Source & TDS Test

We connect to your outdoor spigot and test the incoming total dissolved solids reading. The filtration is then verified as producing zero TDS output before a single pane is touched. If the water is not pure, the windows will spot, so we confirm rather than assume.

PHASE 2

Site Protection, Screens & Staging

The prep is what keeps the job clean and keeps your property undamaged.

2.1 Screen Removal & Labelling

Screens are removed and labelled by opening so every one goes back into the window it came out of. Screens are not interchangeable even when they look identical, and a mismatched screen will not sit properly in the frame.

2.2 Interior Protection

Where interiors are in scope, we lay drop cloths under every window, move furniture and window treatments clear of the sill, and remove items from the ledge before any moisture is introduced.

2.3 Landscaping & Walkway Protection

Garden beds and shrubs directly beneath windows are noted and the cart is positioned so runoff does not pool in the beds. Pure water is harmless to plants, but volume and foot traffic still need managing.

2.4 Equipment Staging

The HydroCart Pro is positioned central to the run, hose reach is confirmed to the furthest pane, and carbon fibre poles are

PHASE 3

Interior Glass, Sills & Tracks

Interiors come first, while the exterior is still untouched, so nothing carries in through a wet doorway.

3.1 Dry Detail First

Sills, tracks and frames are vacuumed and brushed dry before any liquid is introduced. Wetting a track full of dry dust and dead insects creates mud, and mud in a track is far harder to remove than dust.

3.2 Interior Glass Method

Interior glass is cleaned by hand with a professional squeegee and a low residue solution, not the pure water system, because interiors need to be dried immediately rather than left to evaporate. Edges and corners are detailed by hand.

3.3 Sills, Ledges & Frames

Every sill, ledge and frame is wiped down. This is the part homeowners actually notice at eye level and it is the part most companies rush.

3.4 Track Detailing

Sliding door and window tracks are cleaned out properly. Grit left in a track wears the rollers and is the reason older sliders get progressively harder to open.

PHASE 4

Exterior Pure Water Wash

This is where the system earns its place. No ladders, no detergent, no squeegee and no towel.

4.1 Four Stage Filtration

Water passes through sediment filtration, carbon filtration, reverse osmosis and finally deionisation resin. The result reads zero total dissolved solids, which means when it dries there is nothing left on the glass to see.

4.2 Agitation Then Rinse

The brush head agitates the full pane, frame and gasket to release dirt, bug residue and pollen. Then the pane is flooded with pure water in overlapping vertical passes so all the loosened material is carried down and off the glass.

4.3 Frames, Gaskets & Surrounds

The frame, gasket and surrounding trim are washed with the same pass. Dirt left sitting in the frame runs back down onto clean glass with the first rain, which is why cleaning the glass alone never lasts.

4.4 Ground Level Reach to Five Storeys

Carbon fibre telescopic poles reach up to five storeys entirely from the ground. Nothing leans against your siding, eavestrough or window frames, which eliminates the dents, scuffs and bent gutter aprons that ladder work causes. For commercial buildings above five storeys our crew carries Working at Heights certification.

4.5 No Squeegee, No Towel, No Touch

Once rinsed, the glass is left to air dry. Because the water is pure there is nothing to spot, and because nothing touches the

PHASE 5

Screens, Reinstallation & Detail Work

Screens are part of the job, not an upsell.

5.1 Screen Cleaning

Screens are washed and rinsed on both faces to remove the accumulated dust and pollen that otherwise transfers straight back onto the glass the next time it rains.

5.2 Frame & Spline Check

While the screens are out we check the frames and spline for damage and let you know if any need re-screening. We do not charge for the inspection and we will not reinstall a screen that is going to fall out.

5.3 Labelled Reinstallation

Every screen goes back into the opening it was removed from and is checked for a proper seat in the frame.

5.4 Cobwebs, Nests & Overhangs

Cobwebs, wasp nests and debris are cleared from window corners, eaves overhangs and light fixtures near the windows. Leaving them means the glass looks dirty again within days.

PHASE 6

Final Inspection, Walkthrough & Drying

We do not leave until the job meets our standard and you have seen the result.

6.1 Quality Inspection Checklist

We verify: every pane in scope cleaned inside and out as booked, frames and sills wiped, tracks cleared, all screens reinstalled in the correct openings, drop cloths lifted, furniture returned, hoses coiled and nothing left on the property.

6.2 Client Walkthrough & Sign Off

We walk the property with you and check panes together. If anything is not right we re-do it on the spot. You sign off before we close the job file.

6.3 The Drying Window

Exterior glass may look slightly wet or beaded when we leave. That is expected and it is the process working. As the pure water evaporates it leaves nothing behind and the pane dries completely clear, usually within 20 to 40 minutes depending on temperature.

6.4 Spot-Free Guarantee

If any exterior pane dries with a spot or a streak, call us within seven days and we come back and re-do it at no charge. Pure water makes that a straightforward promise to keep.

Why Pure Water Beats Squeegee and Soap


THE PROBLEM WITH THE TRADITIONAL METHOD	HOW WE HANDLE IT
Detergent residue left on the pane, which attracts dust and dries as streaking.	Pure water uses no detergent at all. Nothing is left to attract dust.
Mineral spotting when ordinary tap water evaporates on the glass.	Zero total dissolved solids means nothing remains when it dries.
Ladders leaned against siding, gutters and window frames, causing dents and scuffs.	Carbon fibre poles reach five storeys entirely from the ground.
Frames and gaskets left dirty, so the next rain runs grime back down clean glass.	Frames, gaskets and surrounds are washed in the same pass as the pane.
Towel fibres and fingerprints left along the pane edges after drying by hand.	Nothing touches the glass after rinsing. It air dries untouched.

Our Work

Core Exteriors residential work across London and surrounding areas. Window cleaning is regularly booked alongside a house soft wash, which is the fastest way to change how a property looks from the street.



Masonville, London. Full exterior including glass, frames and siding.

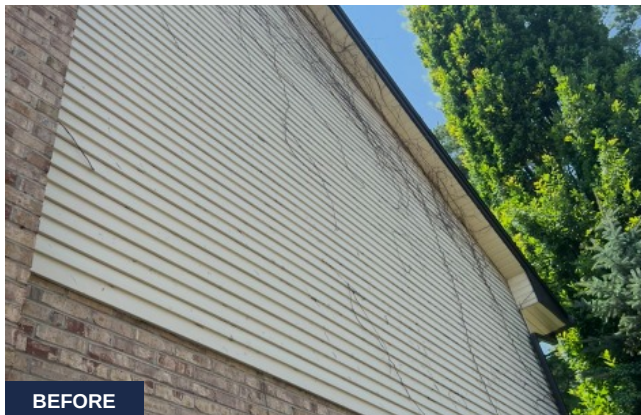

Hyde Park, London. Vine growth cleared, siding washed and glass cleaned in one visit.



Book Windows With Your House Wash

Setup, water access and equipment staging happen once instead of twice, so bundling window cleaning with a house soft wash is always cheaper than booking them as separate visits. Ask us for a combined quote.

Questions Homeowners Ask Us

What is pure water and why does it clean better?

Pure water is water with the dissolved minerals stripped out through reverse osmosis and deionisation. Water in that state is aggressive and actively pulls dirt off surfaces without any detergent. Because there is nothing dissolved in it, there is nothing left behind when it evaporates, so the glass dries spot free on its own.

My windows still look wet when you leave. Is that normal?

Yes, and it is the process working correctly. The glass air dries rather than being wiped, usually within 20 to 40 minutes. When the pure water evaporates it leaves nothing behind. If any pane dries with a spot, call us within seven days and we re-do it at no charge.

Do you use ladders against my house?

No. Carbon fibre telescopic poles reach up to five storeys entirely from the ground. That removes the dents in siding, scuffed trim and bent gutter aprons that ladder work causes, and it removes the fall risk from your property entirely.

Do I need to be home?

Not for exterior work. We need access to an outdoor spigot and any gates unlocked. For interior cleaning we do need access to the home, and we will schedule that at a time that works for you.

Are screens and tracks included or extra?

Included. Screens are removed, cleaned on both faces, and reinstalled in the openings they came out of. Frames, sills and tracks are cleaned as part of every visit. We do not price these as add-ons.

Can you remove the white spots that will not come off?

Those are usually hard water etching from sprinklers or runoff, and they are mineral deposits bonded into the surface of the glass rather than dirt sitting on top of it. Standard cleaning will not touch them. There is a separate restoration treatment which works in most cases, and we assess and quote it after seeing the glass. In advanced cases the etching is permanent and we will tell you that honestly rather than take your money.

How often should I have my windows cleaned?

Twice a year suits most London homes, typically spring and fall. Once a year in spring is enough if you are not near a busy road or heavy tree cover. Properties near construction, on arterial roads, or with a lot of pollen exposure benefit from three visits.

Will the water hurt my plants or my lawn?

No. It is pure water with no detergent or chemistry in it at all, so it is the safest thing we could possibly put on your landscaping. We still position the cart to avoid pooling in garden beds.

What about broken seals or fogging between the panes?

That is a failed thermal seal inside the window unit and no amount of cleaning reaches it, because the moisture is sealed between the two panes. We identify it during Phase 1 and point it out to you so it is documented before we start. It needs glass unit replacement, which is outside what we do.

Do you do commercial buildings too?

Yes. Storefronts, offices and multi-unit buildings, with scheduled recurring service available. For buildings above five storeys our crew carries Working at Heights certification. Ask us for a commercial service schedule.

Guarantee & Next Steps

The Job-Complete Guarantee

We do not leave the site until you are 100 percent satisfied with the work. If any exterior pane dries with a spot or streak, call us within seven days and we come back and re-do it at no charge.

Equipment We Use

IPC Eagle HydroCart Pro 4-stage pure water system with electric pump, running sediment filtration, carbon filtration, reverse osmosis and deionisation resin to a zero total dissolved solids output. Tucker carbon fibre telescopic poles for reach up to five storeys from ground level, professional squeegees and low residue solution for interior glass.

Aftercare Essentials

- Allow 20 to 40 minutes for exterior glass to air dry completely. Do not wipe it.
- Avoid running sprinklers onto the glass. Sprinkler overspray is the main cause of hard water etching.
- Trim shrubs and vines back off the window frames to slow how fast the glass re-soils.
- For touch ups between visits, use a clean microfibre and plain water, not household glass cleaner.
- Book spring and fall for most London homes. We can set a recurring schedule so you do not have to remember.

Credentials

- \$5 Million commercial general liability insurance
- Fully WSIB compliant with clearance certificate available on request
- Working at Heights certified crew for elevated commercial work
- HST registered, London Ontario based, operating since 2022
- Serving London. St. Thomas. Strathroy. Dorchester and surrounding communities

Ready to Book?

We can quote over the phone if you know your window count, or book a free walkthrough and we will count the panes, check the glass condition and put it in writing before any work begins. No obligation and no pressure to book on the spot.

Luke Cairns | 519-712-1431 | coreexteriors@gmail.com | coreexteriors.ca