



STM32 CubeMX

1. Description

1.1. Project

Project Name	debug
Board Name	NUCLEO-H753ZI
Generated with:	STM32CubeMX 6.16.1
Date	02/11/2026


1.2. MCU

MCU Series	STM32H7
MCU Line	STM32H743/753
MCU name	STM32H753ZITx
MCU Package	LQFP144
MCU Pin number	144

1.3. Core(s) information

Core(s)	ARM Cortex-M7
---------	---------------

2. Pinout Configuration

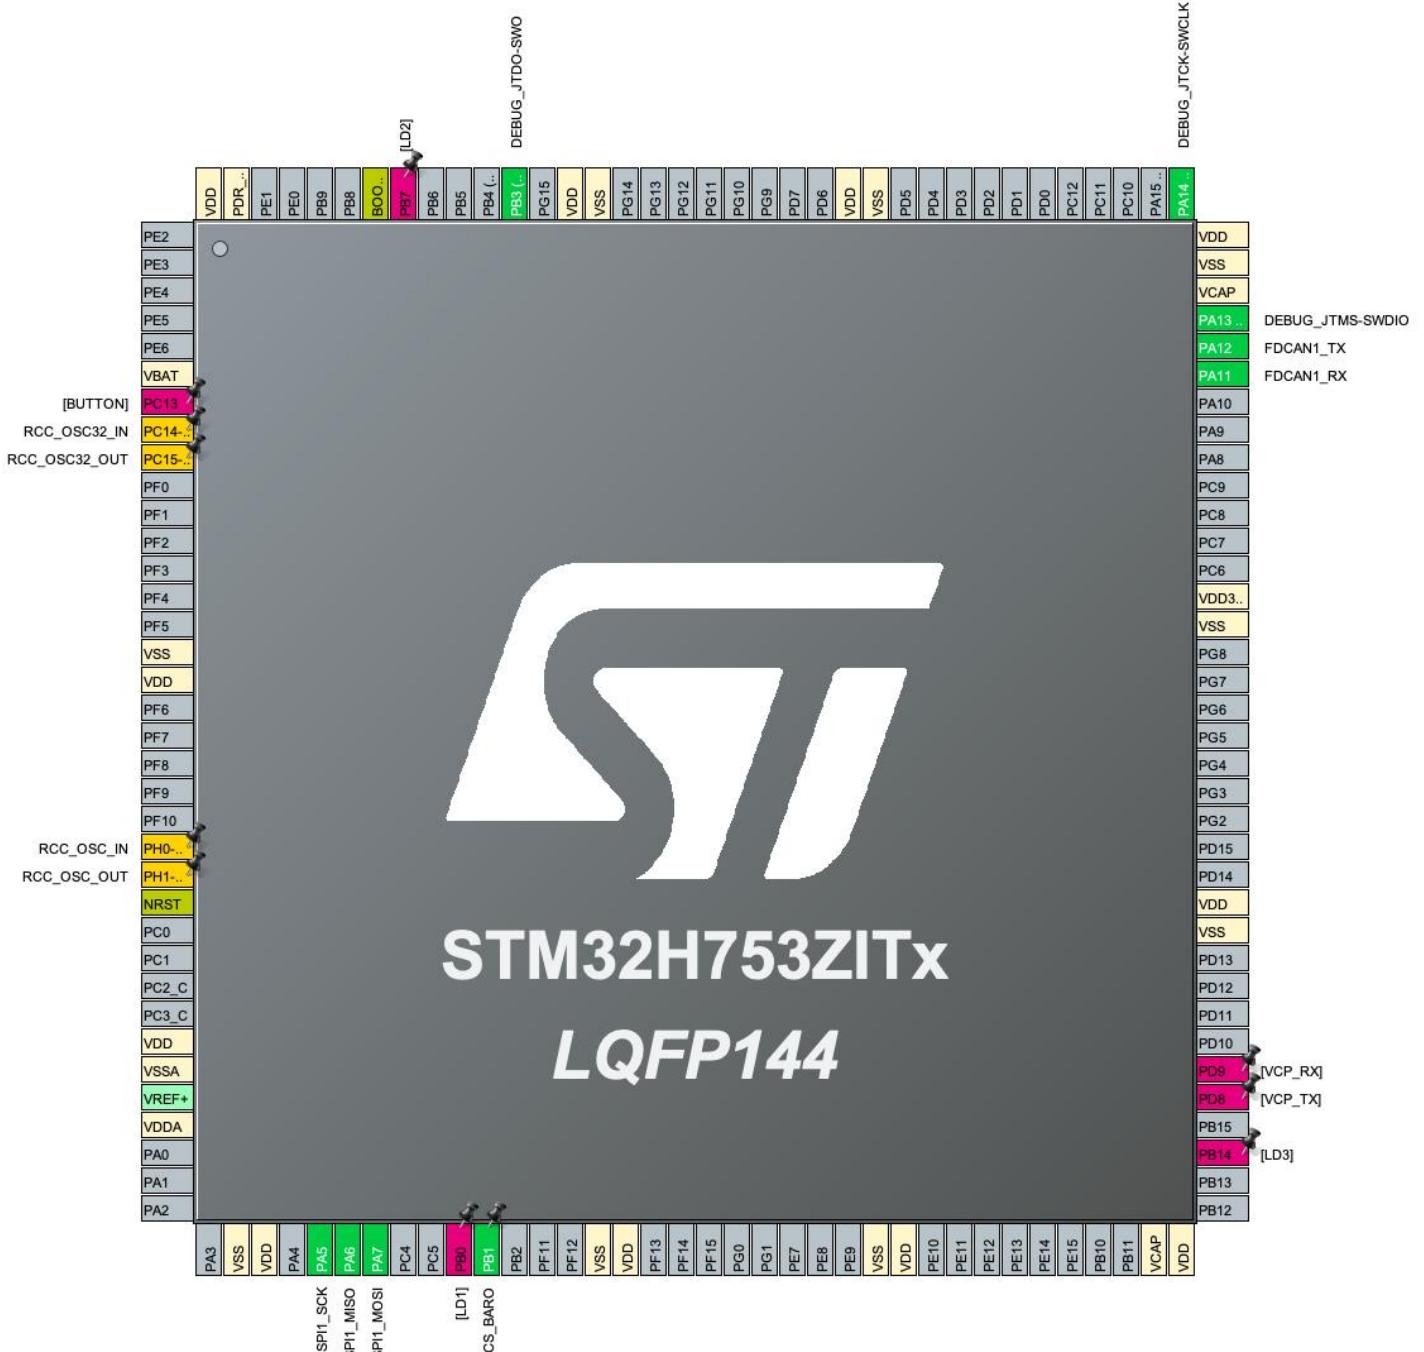

3. Pins Configuration

Pin Number LQFP144	Pin Name (function after reset)	Pin Type	Alternate Function(s)	Label
6	VBAT	Power		
7	PC13	I/O		
8	PC14-OSC32_IN (OSC32_IN) *	I/O	RCC_OSC32_IN	
9	PC15-OSC32_OUT (OSC32_OUT) *	I/O	RCC_OSC32_OUT	
16	VSS	Power		
17	VDD	Power		
23	PH0-OSC_IN (PH0) *	I/O	RCC_OSC_IN	
24	PH1-OSC_OUT (PH1) *	I/O	RCC_OSC_OUT	
25	NRST	Reset		
30	VDD	Power		
31	VSSA	Power		
33	VDDA	Power		
38	VSS	Power		
39	VDD	Power		
41	PA5	I/O	SPI1_SCK	
42	PA6	I/O	SPI1_MISO	
43	PA7	I/O	SPI1_MOSI	
46	PB0	I/O		
47	PB1 **	I/O	GPIO_Output	CS_BARO
51	VSS	Power		
52	VDD	Power		
61	VSS	Power		
62	VDD	Power		
71	VCAP	Power		
72	VDD	Power		
75	PB14	I/O		
77	PD8	I/O		
78	PD9	I/O		
83	VSS	Power		
84	VDD	Power		
94	VSS	Power		
95	VDD33_USB	Power		
103	PA11	I/O	FDCAN1_RX	
104	PA12	I/O	FDCAN1_TX	


debug Project
Configuration Report

Pin Number LQFP144	Pin Name (function after reset)	Pin Type	Alternate Function(s)	Label
105	PA13 (JTMS/SWDIO)	I/O	DEBUG_JTMS-SWDIO	
106	VCAP	Power		
107	VSS	Power		
108	VDD	Power		
109	PA14 (JTCK/SWCLK)	I/O	DEBUG_JTCK-SWCLK	
120	VSS	Power		
121	VDD	Power		
130	VSS	Power		
131	VDD	Power		
133	PB3 (JTDO/TRACESWO)	I/O	DEBUG_JTDO-SWO	
137	PB7	I/O		
138	BOOT0	Boot		
143	PDR_ON	Power		
144	VDD	Power		

** The pin is affected with an I/O function

* The pin is affected with a peripheral function but no peripheral mode is activated

4. Clock Tree Configuration

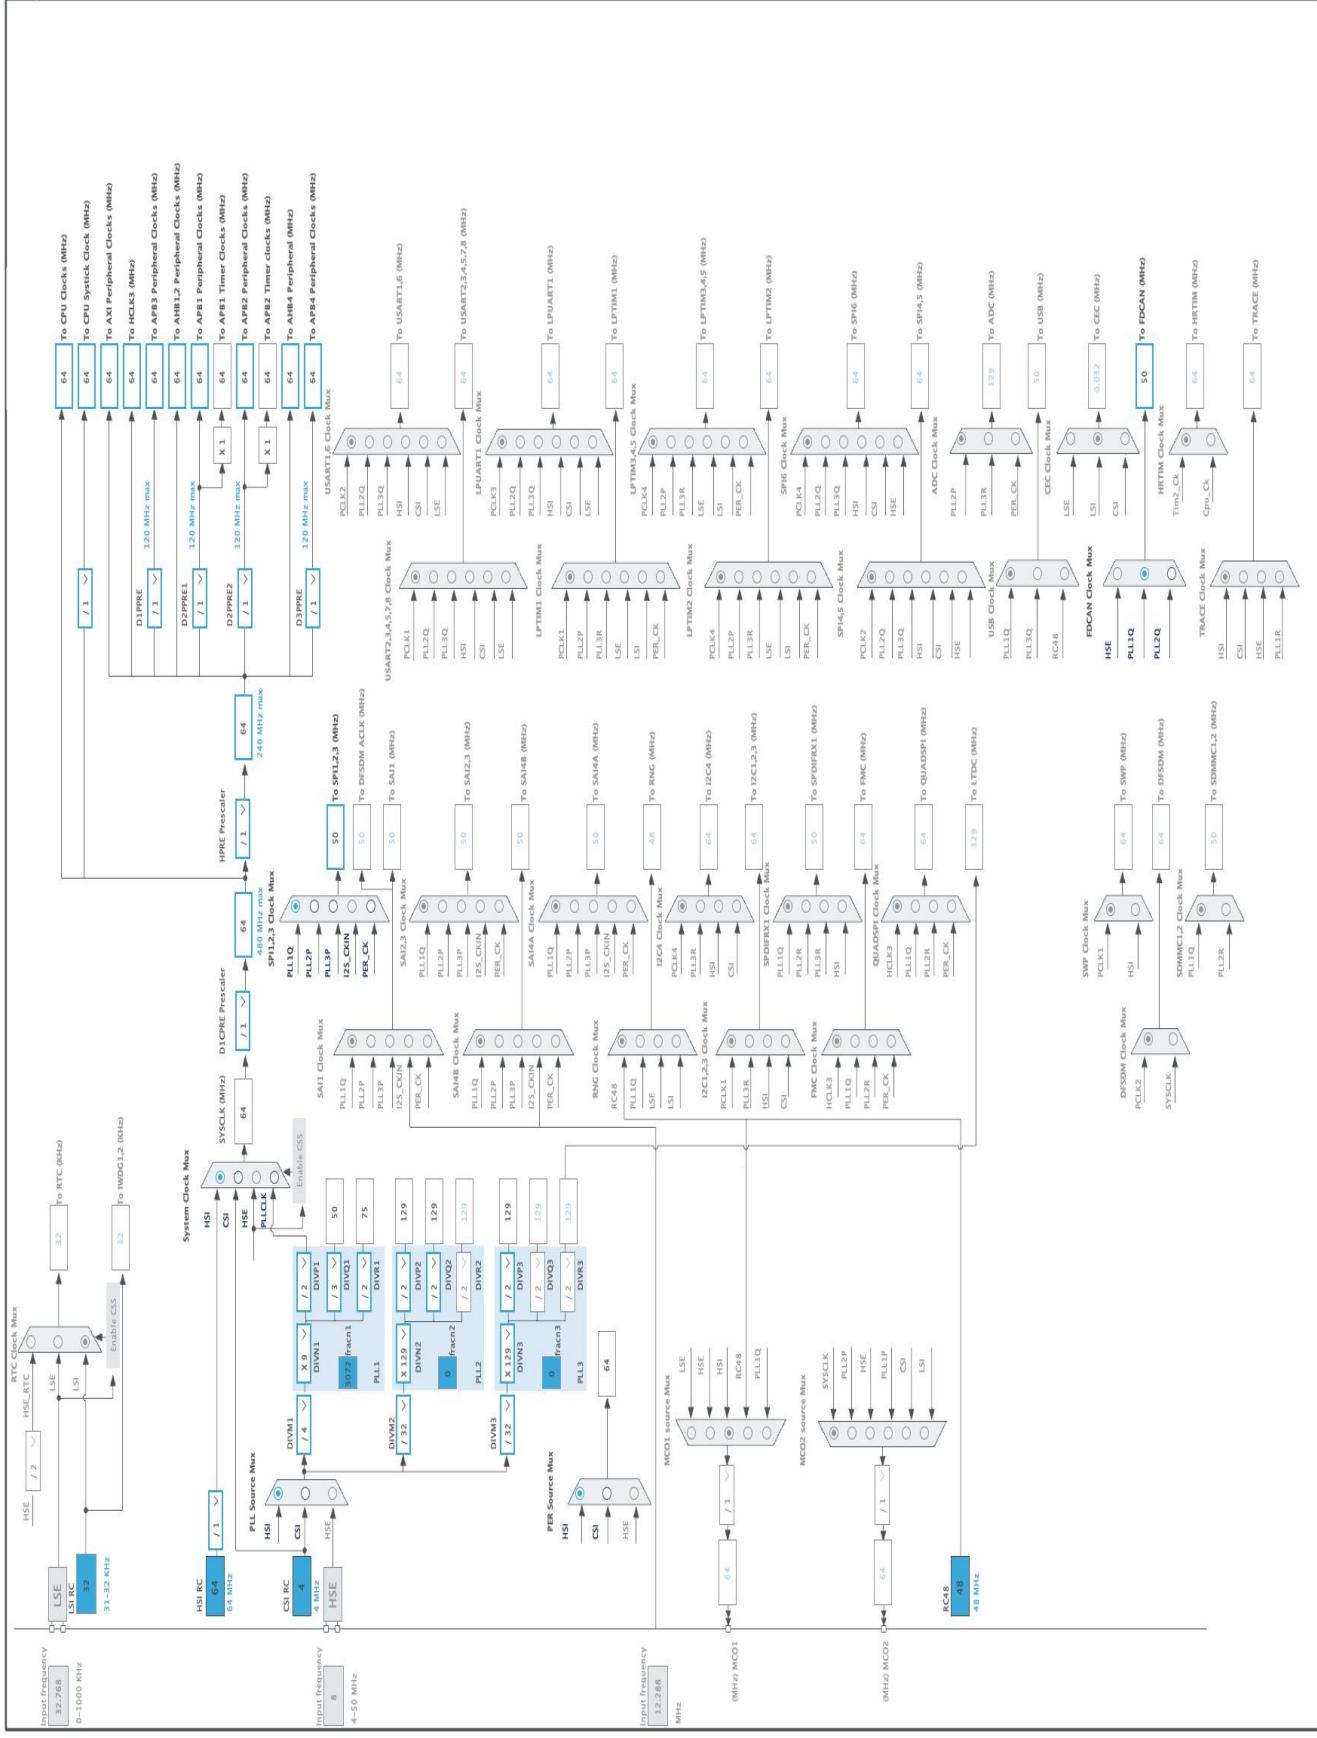

1. Power Consumption Calculator report

1.1. Microcontroller Selection

Series	STM32H7
Line	STM32H743/753
MCU	STM32H753ZITx
Datasheet	DS12117_Rev7

1.2. Parameter Selection

Temperature	25
Vdd	3.0

1.3. Battery Selection

Battery	Alkaline(9V)
Capacity	625.0 mAh
Self Discharge	0.3 %/month
Nominal Voltage	9.0 V
Max Cont Current	200.0 mA
Max Pulse Current	0.0 mA
Cells in series	1
Cells in parallel	1


1.4. Sequence

Step	Step1	Step2
Mode	RUN	STOP
Vdd	3.0	3.0
Voltage Source	Battery	Battery
Range	VOS0: Scale0-High	SVOS5: System-Scale5
D1 Mode	DRUN/CRUN	DSTANDBY
D2 Mode	DRUN	DSTANDBY
D3 Mode	DRUN	DSTOP
Fetch Type	ITCM	NA
CPU Frequency	480 MHz	0 Hz
Clock Configuration	HSE BYP PLL	Flash-OFF
Clock Source Frequency	24 MHz	0 Hz
Peripherals		
Additional Cons.	0 mA	0 mA
Average Current	148 mA	150 µA
Duration	0.1 ms	0.9 ms
DMIPS	1027.0	0.0
Ta Max	105.46	124.98
Category	In DS Table	In DS Table

1.5. Results

Sequence Time	1 ms	Average Current	14.94 mA
Battery Life	1 day, 17 hours	Average DMIPS	1027.2001 DMIPS

1.6. Chart

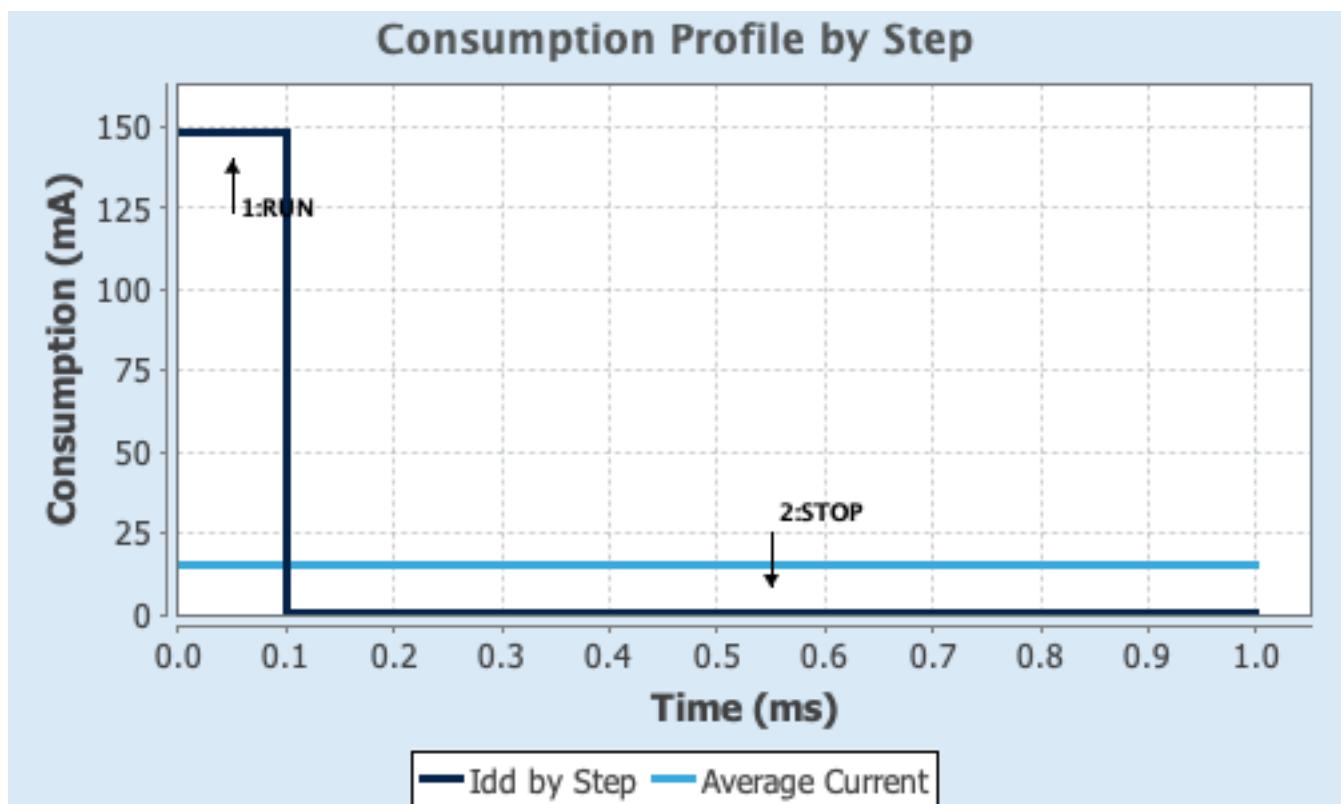

2. Software Project

2.1. Project Settings

Name	Value
Project Name	debug
Project Folder	/Users/edwardcarter/debug
Toolchain / IDE	STM32CubeIDE
Firmware Package Name and Version	STM32Cube FW_H7 V1.12.1
Application Structure	Advanced
Generate Under Root	Yes
Do not generate the main()	No
Minimum Heap Size	0x200
Minimum Stack Size	0x400

2.2. Code Generation Settings

Name	Value
STM32Cube MCU packages and embedded software	Copy only the necessary library files
Generate peripheral initialization as a pair of '.c./h' files	No
Backup previously generated files when re-generating	No
Keep User Code when re-generating	Yes
Delete previously generated files when not re-generated	Yes
Set all free pins as analog (to optimize the power consumption)	No
Enable Full Assert	No

2.3. Advanced Settings - Generated Function Calls

Rank	Function Name	Peripheral Instance Name
1	SystemClock_Config	RCC
2	MX_GPIO_Init	GPIO
3	MX_SPI1_Init	SPI1
4	MX_FDCAN1_Init	FDCAN1

3. Peripherals and Middlewares Configuration

3.1. DEBUG

Debug: Trace Asynchronous Sw

3.2. FDCAN1

mode: Activated

3.2.1. Parameter Settings:

Basic Parameters:

Frame Format	Classic mode
Mode	Internal LoopBack mode *
Auto Retransmission	Disable
Transmit Pause	Disable
Protocol Exception	Disable
Nominal Sync Jump Width	1
Data Prescaler	1
Data Sync Jump Width	1
Data Time Seg1	1
Data Time Seg2	1
Message Ram Offset	0
Std Filters Nbr	1 *
Ext Filters Nbr	0
Rx Fifo0 Elmts Nbr	8 *
Rx Fifo0 Elmt Size	8 bytes data field
Rx Fifo1 Elmts Nbr	0
Rx Fifo1 Elmt Size	8 bytes data field
Rx Buffers Nbr	0
Rx Buffer Size	8 bytes data field
Tx Events Nbr	0
Tx Buffers Nbr	0
Tx Fifo Queue Elmts Nbr	8 *
Tx Fifo Queue Mode	FIFO mode
Tx Elmt Size	8 bytes data field

Clock Calibration Unit:

Clock Calibration	Disable
-------------------	---------

Bit Timings Parameters:

Nominal Prescaler	16
Nominal Time Quantum	320.0 *
Nominal Time Seg1	1

Nominal Time Seg2	1
Nominal Time for one Bit	960 *
Nominal Baud Rate	1041666 *

3.3. MEMORYMAP

mode: Activated

3.4. NUCLEO-H753ZI

mode: Human Machine Interface

3.4.1. Human Machine Interface:

Led:

USER LED GREEN (LD1)	true *
USER LED BLUE (LD2)	true *
USER LED RED (LD3)	true *

Button:

USER BUTTON	Mode EXTI *
-------------	--------------------

VCOM:

Virtual Com Port	true *
------------------	---------------

Demonstration code:

Generate demonstration code	Disabled
-----------------------------	----------

3.5. RCC

3.5.1. Parameter Settings:

Power Parameters:

SupplySource	PWR_LDO_SUPPLY
Power Regulator Voltage Scale	Power Regulator Voltage Scale 3

RCC Parameters:

TIM Prescaler Selection	Disabled
HSE Startup Timeout Value (ms)	100
LSE Startup Timeout Value (ms)	5000
CSI Calibration Value	32
HSI Calibration Value	64

System Parameters:

VDD voltage (V)	3.3
Flash Latency(WS)	1 WS (2 CPU cycle)
Product revision	rev.V

PLL range Parameters:

PLL1 clock Input range	Between 8 and 16 MHz
PLL1 clock Output range	MEDIUM VCO range

3.6. SPI1

Mode: Full-Duplex Master

3.6.1. Parameter Settings:

Basic Parameters:

Frame Format	Motorola
Data Size	8 Bits *
First Bit	MSB First

Clock Parameters:

Prescaler (for Baud Rate)	64 *
Baud Rate	781.25 KBits/s *
Clock Polarity (CPOL)	Low
Clock Phase (CPHA)	1 Edge

Advanced Parameters:

CRC Calculation	Disabled
NSSP Mode	Disabled *
NSS Signal Type	Software
Fifo Threshold	Fifo Threshold 01 Data
Tx Crc Initialization Pattern	All Zero Pattern
Rx Crc Initialization Pattern	All Zero Pattern
Nss Polarity	Nss Polarity Low
Master Ss Idleness	00 Cycle
Master Inter Data Idleness	00 Cycle
Master Receiver Auto Susp	Disable
Master Keep Io State	Master Keep Io State Disable
IO Swap	Disabled

3.7. SYS

Timebase Source: TIM6

3.8. FREERTOS

Interface: CMSIS_V2

3.8.1. Config parameters:

API:

FreeRTOS API CMSIS v2

Versions:

FreeRTOS version 10.3.1

CMSIS-RTOS version 2.1.3

MPU/FPU:

ENABLE_MPU Disabled

ENABLE_FPU Disabled

Kernel settings:

USE_PREEMPTION Enabled

CPU_CLOCK_HZ SystemCoreClock

TICK_RATE_HZ 1000

MAX_PRIORITIES 56

USE_SB_COMPLETED_CALLBACK 0

USE_MINI_LIST_ITEM 1

MINIMAL_STACK_SIZE 128

MAX_TASK_NAME_LEN 16

USE_16_BIT_TICKS Disabled

IDLE_SHOULD_YIELD Enabled

USE_MUTEXES Enabled

USE_RECURSIVE_MUTEXES Enabled

USE_COUNTING_SEMAPHORES Enabled

QUEUE_REGISTRY_SIZE 8

USE_APPLICATION_TASK_TAG Disabled

ENABLE_BACKWARD_COMPATIBILITY Enabled

USE_PORT_OPTIMISED_TASK_SELECTION Disabled

USE_TICKLESS_IDLE Disabled

USE_TASK_NOTIFICATIONS Enabled

RECORD_STACK_HIGH_ADDRESS Disabled

Memory management settings:

Memory Allocation Dynamic / Static

TOTAL_HEAP_SIZE 15360

Memory Management scheme heap_4

Hook function related definitions:

USE_IDLE_HOOK Disabled

USE_TICK_HOOK Disabled

USE_MALLOC_FAILED_HOOK	Disabled
USE_DAEMON_TASK_STARTUP_HOOK	Disabled
CHECK_FOR_STACK_OVERFLOW	Disabled

Run time and task stats gathering related definitions:

GENERATE_RUN_TIME_STATS	Disabled
USE_TRACE_FACILITY	Enabled
USE_STATS_FORMATTING_FUNCTIONS	Disabled

Co-routine related definitions:

USE_CO_Routines	Disabled
MAX_CO_ROUTINE_PRIORITIES	2

Software timer definitions:

USE_TIMERS	Enabled
TIMER_TASK_PRIORITY	2
TIMER_QUEUE_LENGTH	10
TIMER_TASK_STACK_DEPTH	256

Interrupt nesting behaviour configuration:

LIBRARY_LOWEST_INTERRUPT_PRIORITY	15
LIBRARY_MAX_SYSCALL_INTERRUPT_PRIORITY	5

Added with 10.2.1 support:

MESSAGE_BUFFER_LENGTH_TYPE	size_t
USE_POSIX_ERRNO	Disabled

CMSIS-RTOS V2 flags:

USE_OS2_THREAD_SUSPEND_RESUME	Enabled
USE_OS2_THREAD_ENUMERATE	Enabled
USE_OS2_EVENTFLAGS_FROM_ISR	Enabled
USE_OS2_THREAD_FLAGS	Enabled
USE_OS2_TIMER	Enabled
USE_OS2_MUTEX	Enabled

3.8.2. Include parameters:

Include definitions:

vTaskPrioritySet	Enabled
uxTaskPriorityGet	Enabled
vTaskDelete	Enabled
vTaskCleanUpResources	Disabled
vTaskSuspend	Enabled
vTaskDelayUntil	Enabled
vTaskDelay	Enabled
xTaskGetSchedulerState	Enabled
xTaskResumeFromISR	Enabled

xQueueGetMutexHolder	Enabled
xSemaphoreGetMutexHolder	Disabled
pcTaskGetName	Disabled
uxTaskGetStackHighWaterMark	Enabled
xTaskGetCurrentTaskHandle	Enabled
eTaskGetState	Enabled
xEventGroupSetBitFromISR	Disabled
xTimerPendFunctionCall	Enabled
xTaskAbortDelay	Disabled
xTaskGetHandle	Disabled
uxTaskGetStackHighWaterMark2	Disabled

3.8.3. Advanced settings:

Newlib settings (see parameter description first):

USE_NEWLIB_REENTRANT Disabled

Project settings (see parameter description first):

Use FW pack heap file Enabled

*** User modified value**

4. System Configuration

4.1. GPIO configuration

IP	Pin	Signal	GPIO mode	GPIO pull/up pull down	Max Speed	User Label
DEBUG	PA13 (JTMS/SWDI O)	DEBUG_JTMS-SWDIO	n/a	n/a	n/a	
	PA14 (JTCK/SWC LK)	DEBUG_JTCK-SWCLK	n/a	n/a	n/a	
	PB3 (JTDO/TRA CESWO)	DEBUG_JTDO-SWO	n/a	n/a	n/a	
FDCAN1	PA11	FDCAN1_RX	Alternate Function Push Pull	No pull-up and no pull-down	Low	
	PA12	FDCAN1_TX	Alternate Function Push Pull	No pull-up and no pull-down	Low	
SPI1	PA5	SPI1_SCK	Alternate Function Push Pull	No pull-up and no pull-down	Low	
	PA6	SPI1_MISO	Alternate Function Push Pull	No pull-up and no pull-down	Low	
	PA7	SPI1_MOSI	Alternate Function Push Pull	No pull-up and no pull-down	Low	
Single Mapped Signals	PC14-OSC32_IN (OSC32_IN)	RCC_OSC32_IN	n/a	n/a	n/a	
	PC15-OSC32_OUT	RCC_OSC32_OUT	n/a	n/a	n/a	
	PH0-OSC_IN (PH0)	RCC_OSC_IN	n/a	n/a	n/a	
	PH1-OSC_OUT (PH1)	RCC_OSC_OUT	n/a	n/a	n/a	
GPIO	PB1	GPIO_Output	Output Push Pull	Pull-up *	High *	CS_BARO

4.2. DMA configuration

nothing configured in DMA service

4.3. BDMA configuration

nothing configured in DMA service

4.4. MDMA configuration

nothing configured in DMA service

debug Project
Configuration Report

4.5. NVIC configuration

4.5.1. NVIC

Interrupt Table	Enable	Preenemption Priority	SubPriority
Non maskable interrupt	true	0	0
Hard fault interrupt	true	0	0
Memory management fault	true	0	0
Pre-fetch fault, memory access fault	true	0	0
Undefined instruction or illegal state	true	0	0
System service call via SWI instruction	true	0	0
Debug monitor	true	0	0
Pendable request for system service	true	15	0
System tick timer	true	15	0
EXTI line[15:10] interrupts	true	5	0
TIM6 global interrupt, DAC1_CH1 and DAC1_CH2 underrun error interrupts	true	15	0
PVD and AVD interrupts through EXTI line 16		unused	
Flash global interrupt		unused	
RCC global interrupt		unused	
FDCAN1 interrupt 0		unused	
FDCAN1 interrupt 1		unused	
SPI1 global interrupt		unused	
FDCAN calibration unit interrupt		unused	
FPU global interrupt		unused	
HSEM1 global interrupt		unused	

4.5.2. NVIC Code generation

Enabled interrupt Table	Select for init sequence ordering	Generate IRQ handler	Call HAL handler
Non maskable interrupt	false	true	false
Hard fault interrupt	false	true	false
Memory management fault	false	true	false
Pre-fetch fault, memory access fault	false	true	false
Undefined instruction or illegal state	false	true	false
System service call via SWI instruction	false	false	false
Debug monitor	false	true	false
Pendable request for system service	false	false	false
System tick timer	false	false	true
EXTI line[15:10] interrupts	false	true	true
TIM6 global interrupt, DAC1_CH1 and DAC1_CH2 underrun error interrupts	false	true	true

* User modified value

5. System Views

5.1. Category view

5.1.1. Current

The screenshot shows the 'Category view' of the System View. At the top, there are tabs for 'Category view' (which is selected) and 'Power Domain view'. Below this is a toolbar with icons for file operations (New, Open, Save, Copy, Paste, Find, Refresh) and a 'Choose filters ...' dropdown menu. A '... by Power Domain' dropdown menu is also present, with options D1, D2, D3, and None, where 'None' is selected.

In the center, there's a section titled 'Middleware' with a button labeled 'FREERTOS' with a checkmark.

At the bottom, there's a horizontal navigation bar with categories: System Core, Analog, Timers, Connectivity, Multimedia, Security, Computing, Trace and Debug, Power and Thermal, Bsp, and Other. Under 'System Core', several components are listed with status indicators:

- BDMA (Status: OK)
- CORTEX_M7 (Status: OK)
- DMA (Status: OK)
- GPIO (Status: OK)
- MDMA (Status: OK)
- NVIC (Status: OK)
- RCC (Status: OK)
- SYS (Status: OK)

Under 'Connectivity', two components are listed:

- FDCAN1 (Status: OK)
- SPI1 (Status: OK)

Under 'Trace and Debug', one component is listed:

- DEBUG (Status: OK)


Under 'Bsp', one component is listed:

- NUCLEO-H753ZI (Status: OK)

5.1.2. Without filters

The screenshot shows the debug Project Configuration Report interface. The top navigation bar has 'Category view' selected. Below it is a 'Choose filters ...' section with options for '... by Power Domain' (D1, D2, D3, None) and 'None'. The main area is divided into several tabs: System Core, Analog, Timers, Connectivity, Multimedia, Security, Computing, Trace and Debug, Power and Thermal, Bsp, and Other. Under System Core, components like BDMA, CORTEX_M7, DMA, GPIO, MDMA, NVIC, RCC, and SYS are listed. Under Connectivity, FDCAN1 and SPI1 are listed. The 'Trace and Debug' tab shows DEBUG selected. The 'Bsp' tab shows NUCLEO-H753ZI selected. The 'FREERTOS' middleware is also visible.

5.2. Power Domain view

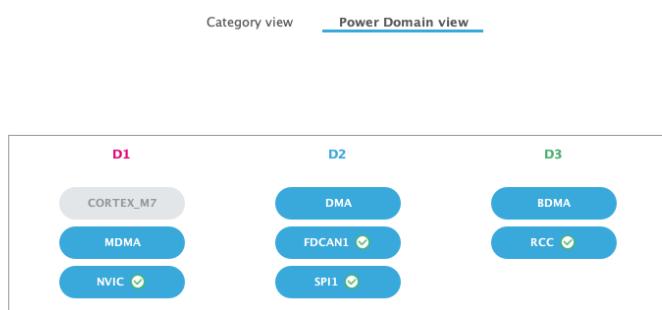

6. Docs & Resources

Type	Link
BSDL files	https://www.st.com/resource/en/bsdl_model/stm32h7_bsdl.zip
IBIS models	https://www.st.com/resource/en/ibis_model/stm32h7_ibis.zip
System View	https://www.st.com/resource/en/svd/stm32h7-svd.zip
Description	
Presentations	https://www.st.com/resource/en/product_presentation/microcontrollers_stm32h7_series_product_overview.pdf
Presentations	https://www.st.com/resource/en/product_presentation/stm32-stm8_embedded_software_solutions.pdf
Presentations	https://www.st.com/resource/en/product_presentation/stm32_eval-tools_portfolio.pdf
Presentations	https://www.st.com/resource/en/product_presentation/stm32_stm8_functional-safety-packages.pdf
Presentations	https://www.st.com/resource/en/product_presentation/stm32-stm8_software_development_tools.pdf
Presentations	https://www.st.com/resource/en/product_presentation/microcontrollers-stm32-family-overview.pdf
Presentations	https://www.st.com/resource/en/product_presentation/microcontrollers-stm32h7rs-lines-overview.pdf
Brochures	https://www.st.com/resource/en/brochure/brstm32h7.pdf
Flyers	https://www.st.com/resource/en/flyer/flstm32nucleo.pdf
Flyers	https://www.st.com/resource/en/flyer/flstm32trust.pdf
Flyers	https://www.st.com/resource/en/flyer/flpowerstbd.pdf
Flyers	https://www.st.com/resource/en/flyer/flstm32h7rs.pdf
Security Bulletin	https://www.st.com/resource/en/technical_note/tn1489-security-bulletin-tn1489stpsirt-physical-attacks-on-stm32-and-stm32cube-firmware-stmicroelectronics.pdf
Security Bulletin	https://www.st.com/resource/en/security_bulletin/sb0023-eucleak-protection-statement-for-stmicroelectronics-certified-products-stmicroelectronics.pdf

- Application Notes https://www.st.com/resource/en/application_note/an1709-emc-design-guide-for-stm8-stm32-and-legacy-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an3126-audio-and-waveform-generation-using-the-dac-in-stm32-products-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an3155-usart-protocol-used-in-the-stm32-bootloader-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an3156-usb-dfu-protocol-used-in-the-stm32-bootloader-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4221-i2c-protocol-used-in-the-stm32-bootloader-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4286-spi-protocol-used-in-the-stm32-bootloader-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4539-hrtim-cookbook-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4655-virtually-increasing-the-number-of-serial-communication-peripherals-in-stm32-applications-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4750-handling-of-soft-errors-in-stm32-applications-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4776-generalpurpose-timer-cookbook-for-stm32-microcontrollers-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4803-highspeed-si-simulations-using-ibis-and-boardlevel-simulations-using-hyperlynx-si-on-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4839-level-1-cache-on-stm32f7-series-and-stm32h7-series-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4891-stm32h72x-stm32h73x-and-singlecore-stm32h74x75x-system-architecture-and-performance-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4936-migration-of-microcontroller-applications-from-stm32f7-series-to-stm32h743753-line-stmicroelectronics.pdf

- Application Notes https://www.st.com/resource/en/application_note/an4989-stm32-microcontroller-debug-toolbox-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4990-getting-started-with-sigmadelta-digital-interface-on-applicable-stm32-microcontrollers-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5027-interfacing-pdm-digital-microphones-using-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5033-stm32cube-mcu-package-examples-for-stm32h7-series-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5073-receiving-spdif-audio-stream-with-the-stm32f4f7h7-series-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5312-migration-from-rev-y-to-rev-x-for-stm32h743753-and-stm32h750-value-line-microcontrollers-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5354-getting-started-with-the-stm32h7-series-mcu-16bit-adc-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4760-quadspi-interface-on-stm32-microcontrollers-and-microprocessors-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4899-stm32-microcontroller-gpio-hardware-settings-and-lowpower-consumption-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5612-esd-protection-of-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5293-migration-guide-from-stm32f7-series-to-stmh74x75x-stm32h72x73x-and-stmh7a37bx-devices-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4991-how-to-wake-up-an-stm32-microcontroller-from-lowpower-mode-with-the-usart-or-the-lpuart-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4838-introduction-to-memory-protection-unit-management-on-stm32-mcus-stmicroelectronics.pdf

- Application Notes https://www.st.com/resource/en/application_note/an5927-i3c-protocol-used-in-the-stm32-bootloader-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4879-introduction-to-usb-hardware-and-pcb-guidelines-using-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5225-introduction-to-usb-typec-power-delivery-for-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5342--how-to-use-error-correction-code-ecc-management-for-internal-memories-protection-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4938-getting-started-with-stm32h74xig-and-stm32h75xig-mcu-hardware-development-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5537-how-to-use-adc-oversampling-techniques-to-improve-signaltonoise-ratio-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5036-guidelines-for-thermal-management-on-stm32-applications-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4992-introduction-to-secure-firmware-install-sfi-for-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5405-how-to-use-fdcan-bootloader-protocol-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5690-how-to-use-vrefbuf-peripheral-on-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4230-introduction-to-random-number-generation-validation-using-the-nist-statistical-test-suite-for-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an2867-guidelines-for-oscillator-design-on-stm8afals-and-stm32-mcusmpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4013-introduction-to-timers-for-stm32-mcus-stmicroelectronics.pdf

- Application Notes https://www.st.com/resource/en/application_note/an4277-how-to-use-pwm-shutdown-for-motor-control-and-digital-power-conversion-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4635-how-to-optimize-lpuart-power-consumption-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4759-introduction-to-using-the-hardware-realtime-clock-rtc-and-the-tamper-management-unit-tamp-with-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4861-introduction-to-lcdtft-display-controller-ltdc-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4908-getting-started-with-usart-automatic-baud-rater-detection-for-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4943-how-to-use-chromart-accelerator-to-refresh-an-lcdtft-display-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5156-introduction-to-security-for-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5224-introduction-to-dmamux-for-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5507-how-to-use-crc-to-check-the-integrity-of-the-internal-flash-memory-on-stm32h7-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5543-guidelines-for-enhanced-spi-communication-on-stm32-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5337-guidelines-for-estimating-stm32h7-mcus-lifetime-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4996-how-to-use-the-jpeg-codec-peripheral-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5348-introduction-to-fdcan-peripherals-for-stm32-mcus-stmicroelectronics.pdf

- Application Notes https://www.st.com/resource/en/application_note/cd00211314-how-to-optimize-the-adc-accuracy-in-the-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an2639-soldering-recommendations-and-package-information-for-leadfree-ecopack2-mcus-and-mpus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5020-introduction-to-digital-camera-interface-dcmi-for-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4566-how-to-extend-the-dac-performance-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5647-the-goertzel-algorithm-to-compute-individual-terms-of-the-discrete-fourier-transform-dft-in-stm32-products-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an2606-introduction-to-system-memory-boot-mode-on-stm32-mcus-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5200-getting-started-with-the-stm32h7-mcu-sdmmc-host-controller-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4323-getting-started-for-related-tools-with-stemwin-library-stmicroelectronics.pdf
- & Software
- Application Notes https://www.st.com/resource/en/application_note/an4435-guidelines-for-related-tools-obtaining-ulcsaiec-607301603351-class-b-certification-in-any-stm32-application-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an4657-stm32-inapplication-programming-iap-using-the-usart-stmicroelectronics.pdf
- & Software
- Application Notes https://www.st.com/resource/en/application_note/an4841-digital-signal-processing-for-stm32-microcontrollers-using-cmsis-stmicroelectronics.pdf
- & Software
- Application Notes https://www.st.com/resource/en/application_note/an4891-stm32h72x-stm32h73x-and-singlecore-stm32h74x75x-system-architecture-and-performance-stmicroelectronics.pdf
- Application Notes https://www.st.com/resource/en/application_note/an5001-stm32cube-expansion-package-for-stm32h7-series-mdma-stmicroelectronics.pdf
- & Software

Application Notes https://www.st.com/resource/en/application_note/an5014-stm32h7x3-for-related-tools-smart-power-management-expansion-package-for-stm32cube-&Software-stmicroelectronics.pdf

Application Notes [& Software](https://www.st.com/resource/en/application_note/an5033-stm32cube-for-related-tools-mcu-package-examples-for-stm32h7-series-stmicroelectronics.pdf)

Application Notes [for related Tools](https://www.st.com/resource/en/application_note/an5056-integration-for-related-tools-guide-for-the-xcubesbsfu-stm32cube-expansion-package-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5360-getting-started-for-related-tools-with-projects-based-on-the-stm32mp1-series-in-stm32cubeide-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5361-getting-started-for-related-tools-with-projects-based-on-dualcore-stm32h7-microcontrollers-in-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5394-getting-started-for-related-tools-with-projects-based-on-the-stm32l5-series-in-stm32cubeide-&Software-stmicroelectronics.pdf)

Application Notes [& Software](https://www.st.com/resource/en/application_note/an5418-how-to-build-a-for-related-tools-simple-usbpd-sink-application-with-stm32cubemx-stmicroelectronics.pdf)

Application Notes [for related Tools](https://www.st.com/resource/en/application_note/an5426-migrating-for-related-tools-graphics-middleware-projects-from-stm32cubemx-540-to-stm32cubemx-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5564-getting-started-for-related-tools-with-projects-based-on-dualcore-stm32wl-microcontrollers-in-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an4865-lowpower-timer-for-related-tools-lptim-applicative-use-cases-on-stm32-mcus-and-mpus-&Software-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5698-adapting-the-for-related-tools-xcubestl-functional-safety-package-for-stm32-iec-61508-compliant-to-&Software-other-safety-standards-stmicroelectronics.pdf)

Application Notes [with Software](https://www.st.com/resource/en/application_note/an5731-stm32cubemx-)

- for related Tools [and-stm32cubeide-threadsafe-solution-stmicroelectronics.pdf](https://www.st.com/resource/en/design_tip/dt0117-microphone-array-beamforming-in-the-pcm-and-pdm-domain-stmicroelectronics.pdf)
& Software
- Application Notes https://www.st.com/resource/en/application_note/an5450-stm32h7a37b3-lines-and-stm32h7b0-value-line-smart-power-management-expansion-package-for-stm32cube-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an4502-stm32-smbuspmbus-expansion-package-for-stm32cube-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an5952-how-to-use-cmake-in-stm32cubeide-stmicroelectronics.pdf
& Software
- Application Notes https://www.st.com/resource/en/application_note/an4635-how-to-optimize-lpuart-power-consumption-on-stm32-mcus-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an5054-how-to-perform-secure-programming-using-stm32cubeprogrammer-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an6088-how-to-use-mce-for-encryptiondecryption-on-stm32-mcus-stmicroelectronics.pdf
& Software
- Application Notes https://www.st.com/resource/en/application_note/an6179-how-to-integrate-the-stl-firmware-into-a-time-critical-user-application-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an6127-getting-started-with-stm32h7rx7sx-mcus-in-stm32cubeide-stmicroelectronics.pdf
for related Tools
& Software
- Application Notes https://www.st.com/resource/en/application_note/an6265-getting-started-with-stm32n6-mcus-in-stm32cubeide-stmicroelectronics.pdf
for related Tools
& Software
- Design Notes & https://www.st.com/resource/en/design_tip/dt0117-microphone-array-beamforming-in-the-pcm-and-pdm-domain-stmicroelectronics.pdf
Tips
- Errata Sheets https://www.st.com/resource/en/errata_sheet/es0392-stm32h742xig-stm32h743xig-stm32h750xb-stm32h753xi-device-errata-stmicroelectronics.pdf

Datasheet	https://www.st.com/resource/en/datasheet/dm00388325.pdf
Programming Manuals	https://www.st.com/resource/en/programming_manual/pm0253-stm32f7-series-and-stm32h7-series-cortexm7-processor-programming-manual-stmicroelectronics.pdf
Reference Manuals	https://www.st.com/resource/en/reference_manual/rm0433-stm32h742-stm32h743753-and-stm32h750-value-line-advanced-armbased-32bit-mcus-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1163-description-of-wlcsp-for-microcontrollers-and-recommendations-for-its-use-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1204-tape-and-reel-shipping-media-for-stm32-microcontrollers-in-bga-packages-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1205-tape-and-reel-shipping-media-for-stm8-and-stm32-microcontrollers-in-fpn-packages-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1206-tape-and-reel-shipping-media-for-stm8-and-stm32-microcontrollers-in-qfp-packages-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1207-tape-and-reel-shipping-media-for-stm8-and-stm32-microcontrollers-in-so-packages-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1208-tape-and-reel-shipping-media-for-stm8-and-stm32-microcontrollers-in-tssop-and-ssop-packages-stmicroelectronics.pdf
Technical Notes & Articles	https://www.st.com/resource/en/technical_note/tn1433-reference-device-marking-schematics-for-stm32-microcontrollers-and-microprocessors-stmicroelectronics.pdf
User Manuals	https://www.st.com/resource/en/user_manual/um2840-stm32h7-dualcore-series-safety-manual-stmicroelectronics.pdf
User Manuals	https://www.st.com/resource/en/user_manual/um2331-stm32h7-singlecore-series-safety-manual-stmicroelectronics.pdf
User Manuals	https://www.st.com/resource/en/user_manual/um3252-stm32h7-series-ulcsaiec-607301603351-selftest-library-user-guide-stmicroelectronics.pdf