



HOW TO MAKE A HAND


STEP 1: Insert a cube and change its length and breadth to **100*20**.

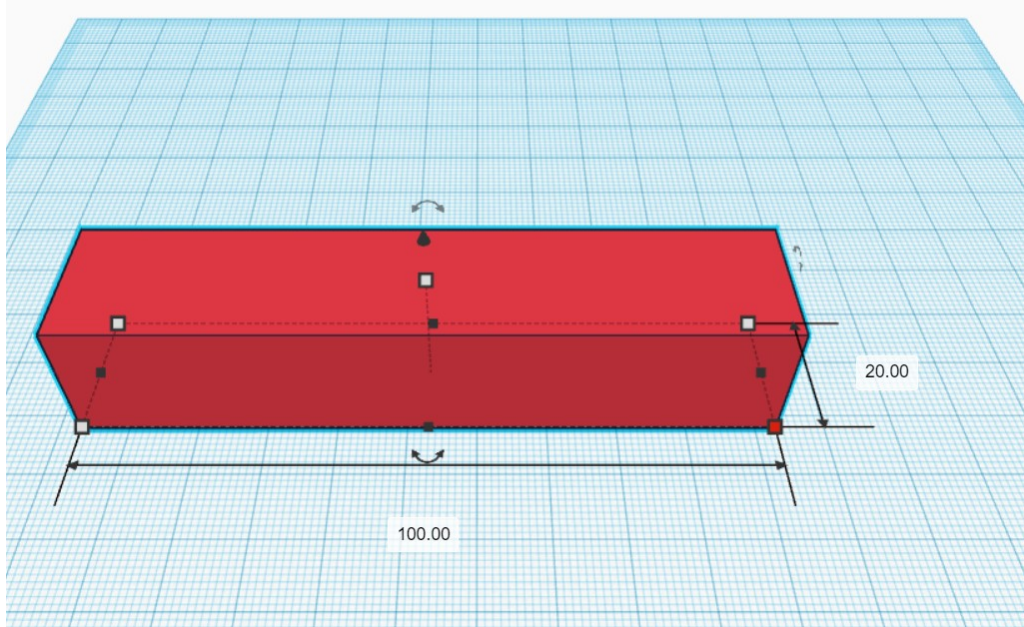


STEP 2: Insert another cube and raise it up by a value of **20**.

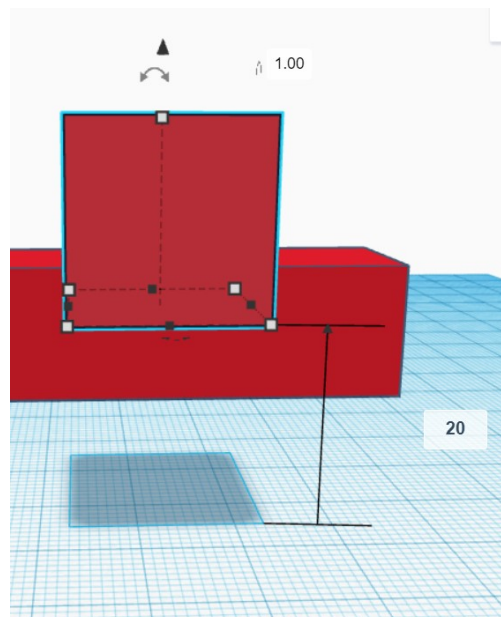


STEP 3: Place the cube on top of the cuboid as shown in the image given below. Select the two objects and click on the **Align** option. Select the dots highlighted by the arrow. Select the two objects and click on the **Group** option.

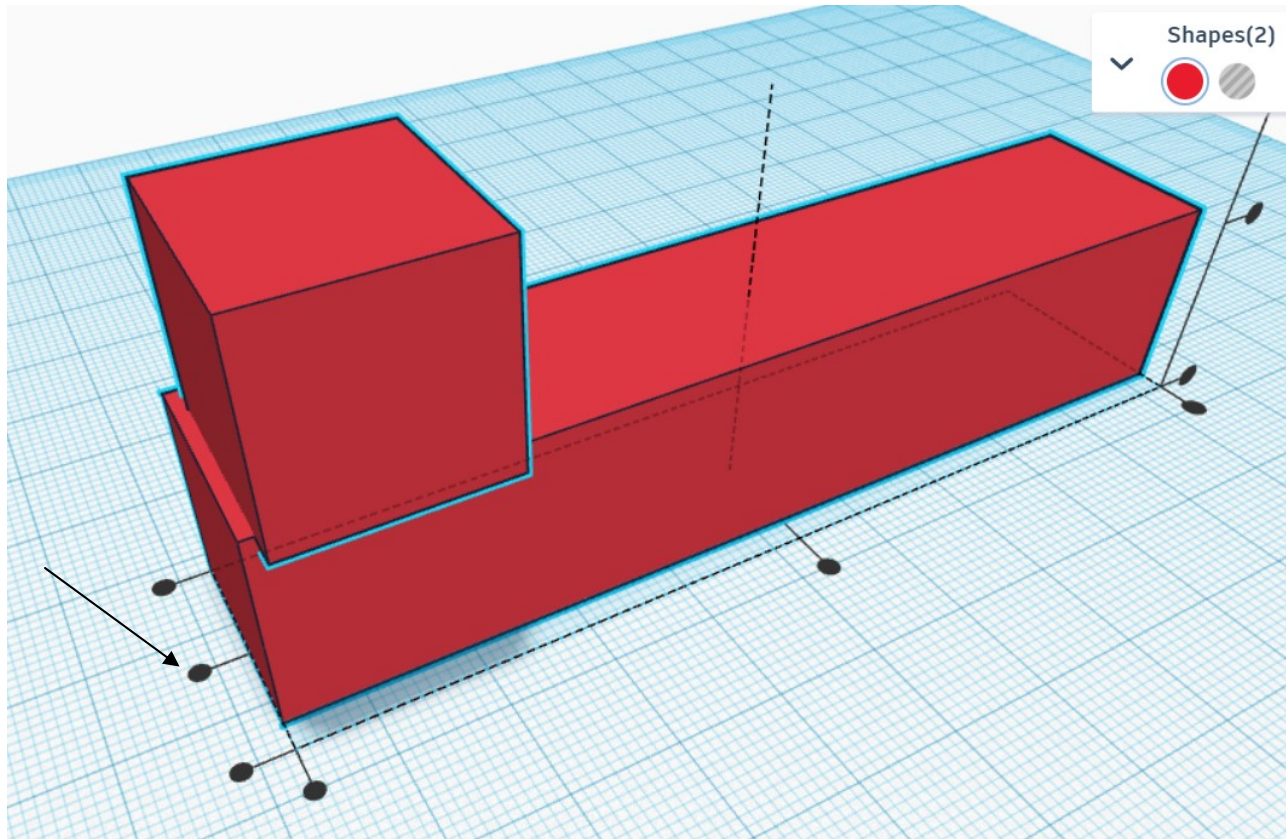


STEP 4: Insert another cube into the workplane and change its length and breadth to **60*20** and its height to **40**. Raise it up by a value of **20** and place it on top of the cuboid as shown in the image given below. Select the two objects and click on the **Align** option and click on the dot highlighted by the arrow and select the **Group** option.

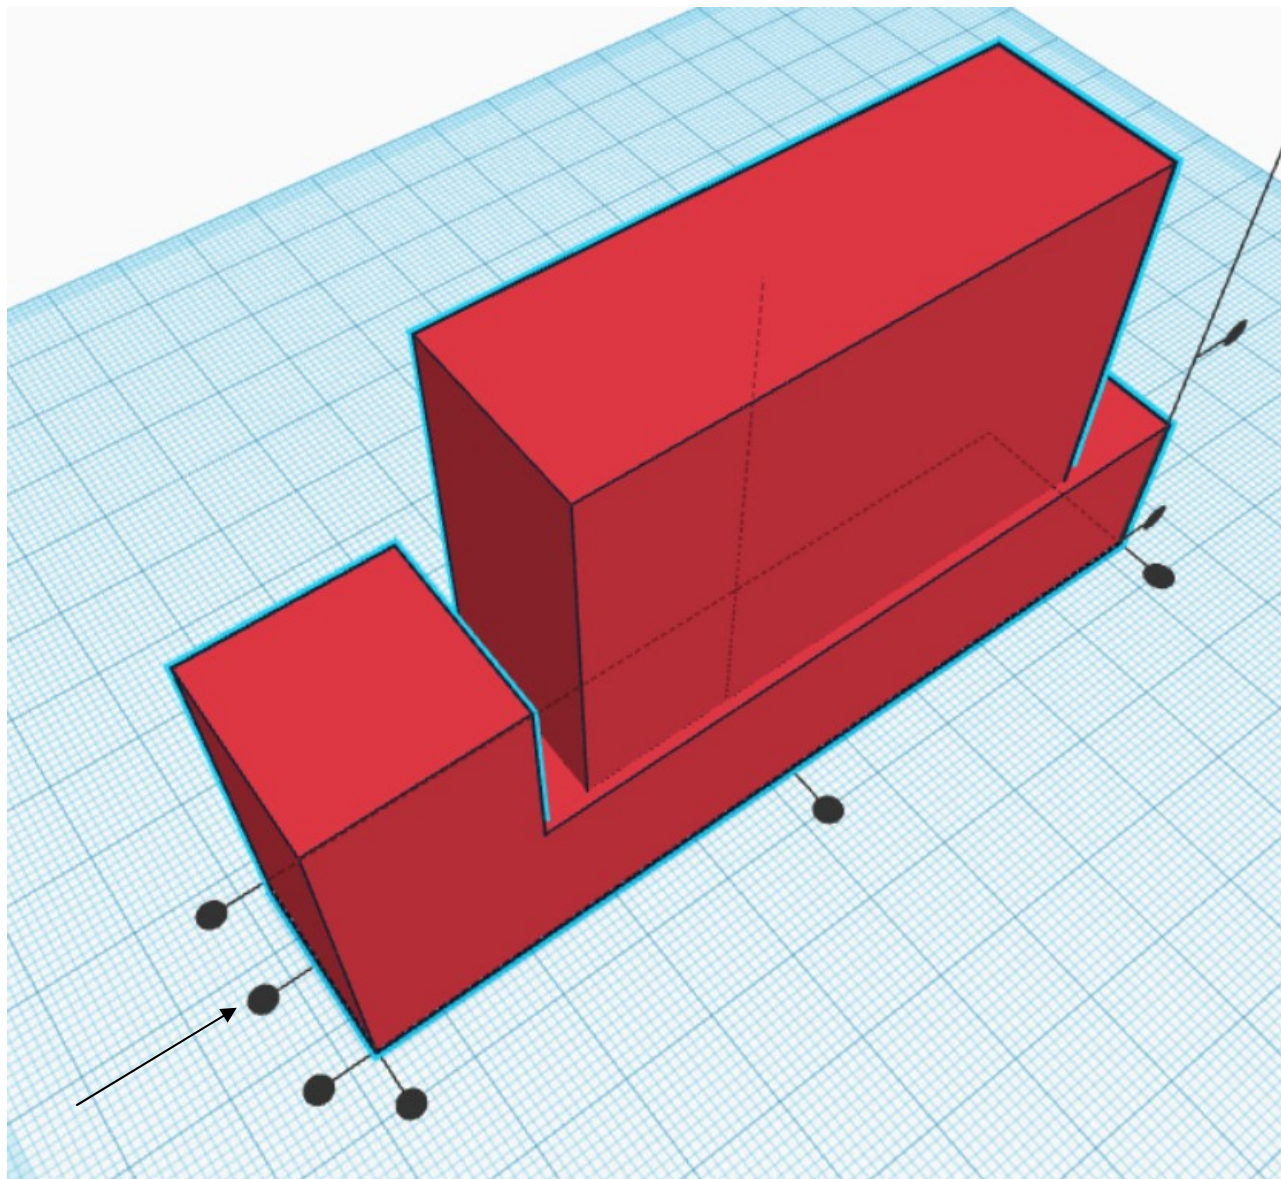


STEP 5: Insert another cube into the workplane and change its height to **30**. Raise it up by a value of **20** and place it on top of the longest cuboid as shown in the image given below. Select the two objects and click on the **Align** option and click on the dot highlighted by the arrow and select the **Group** option.

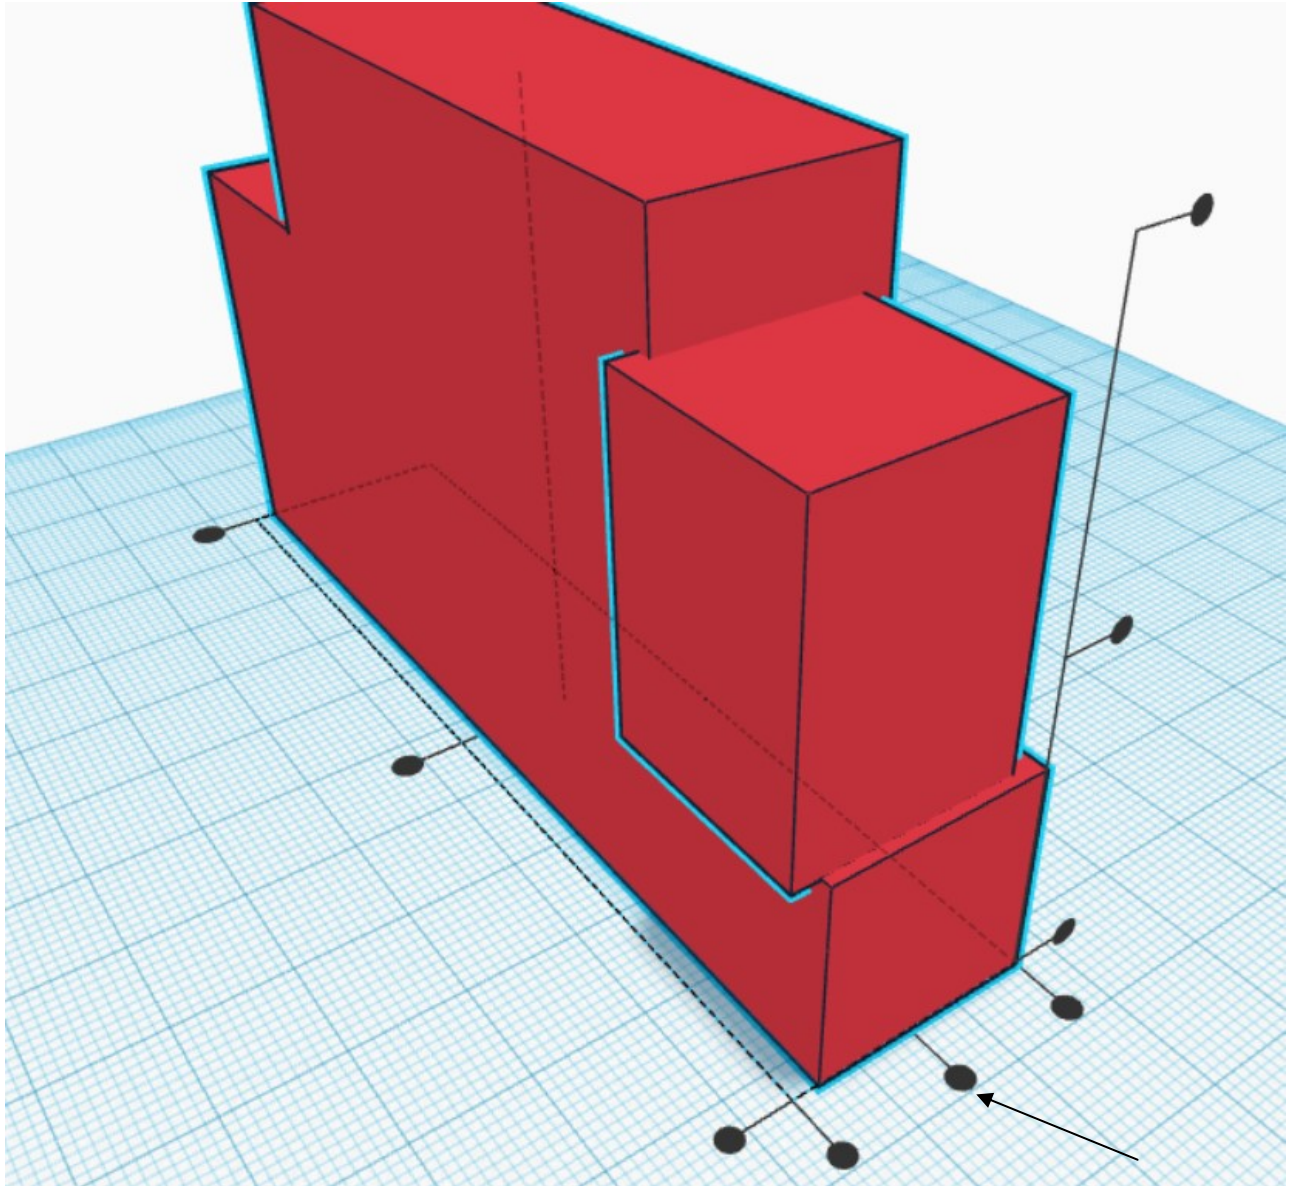


STEP 6: Select the **Basic Shape** option as highlighted by the arrow in the image given below.

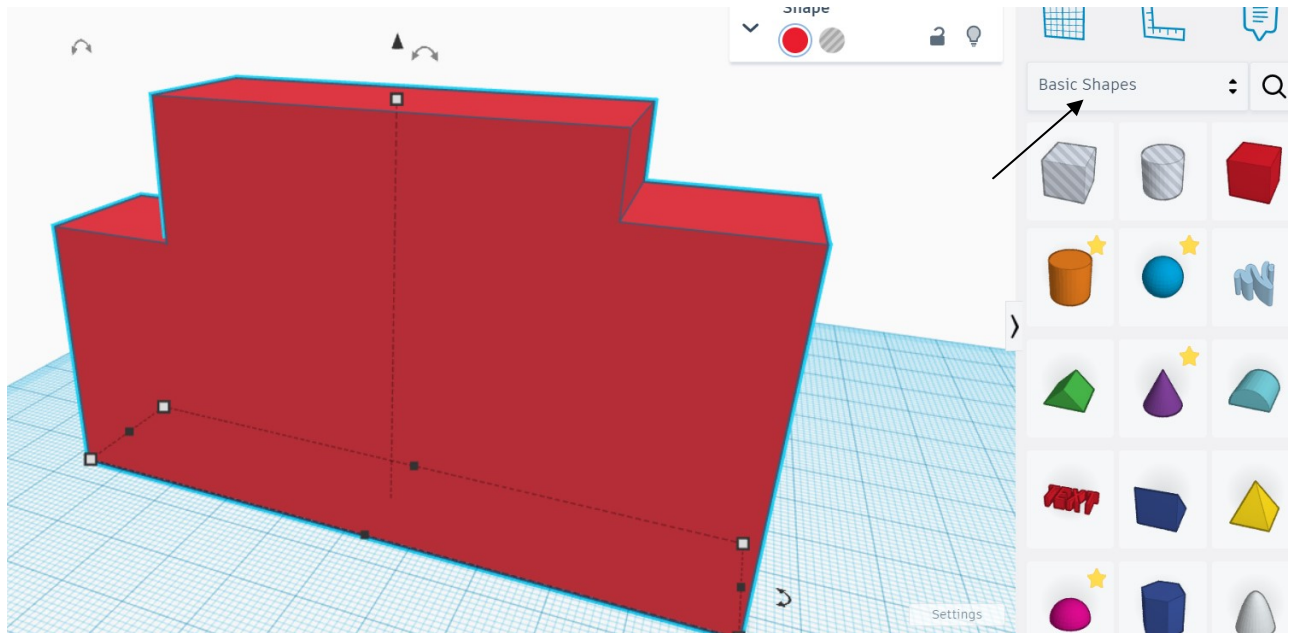


STEP 7: Click on the **Hardware** option and select the **Ball** shape to be placed into the workplane.

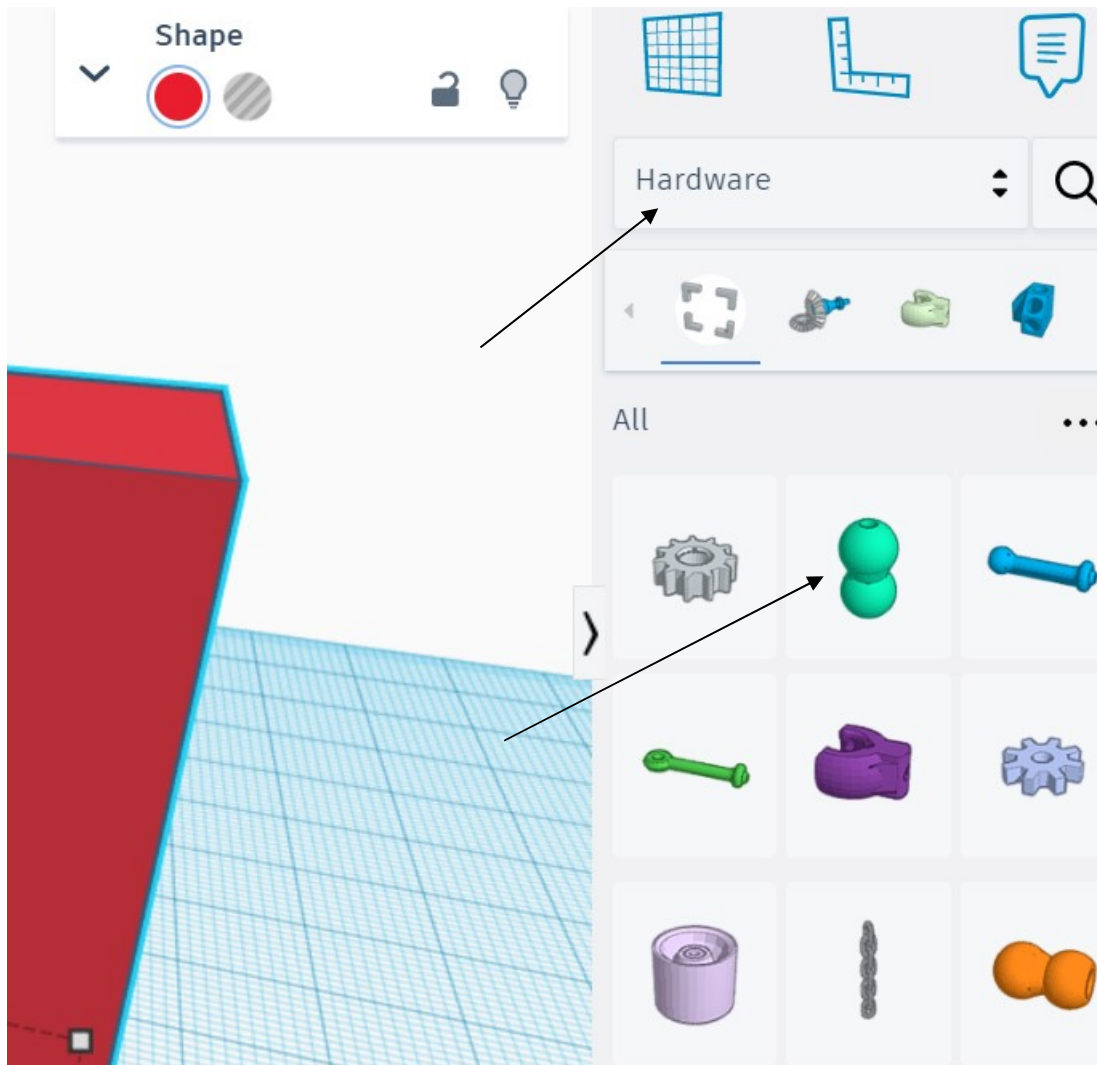


STEP 8: Create four more copies of the **Ball** shape. This will be used to make the fingers of the hand.

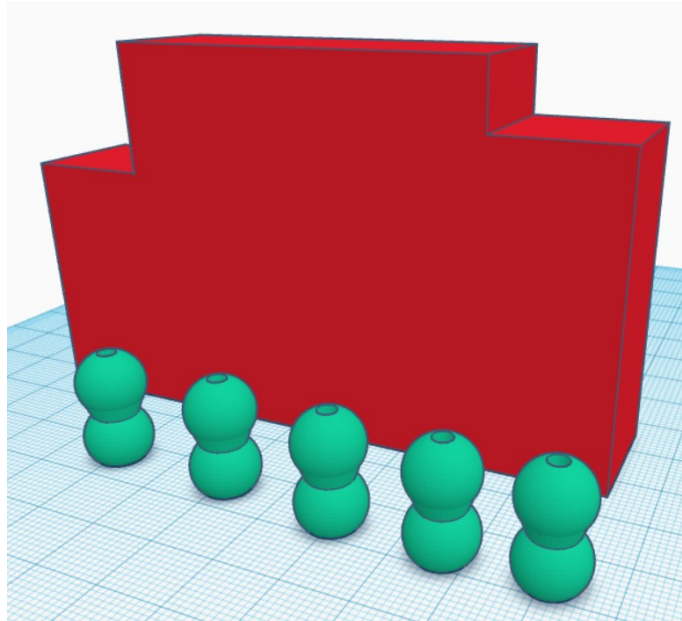


STEP 9: Click on the **Hardware** option and go back to **Basic Shapes** option. Insert the cylinder into the workplane and change its length and breadth to **10*10**.

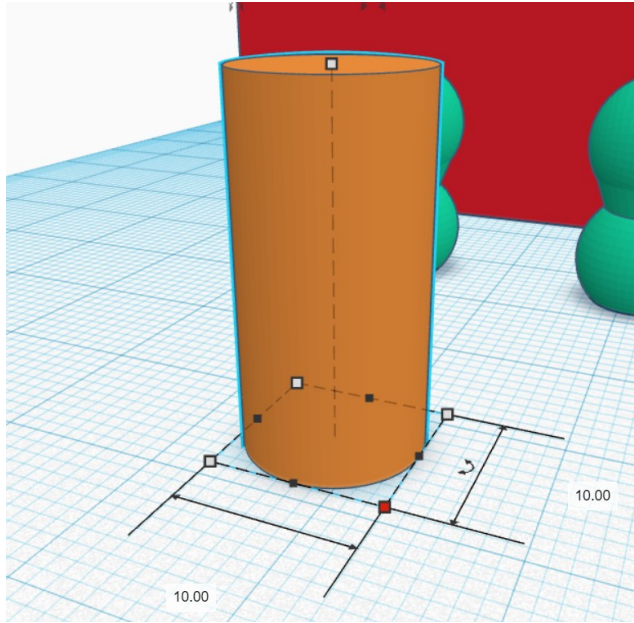


STEP 10: Raise the cylinder by a certain height and place it on top of the **Ball** shape. Select the two shapes and click on the **Align** option. Select the two centre dots as highlighted by the arrows in the image given below.

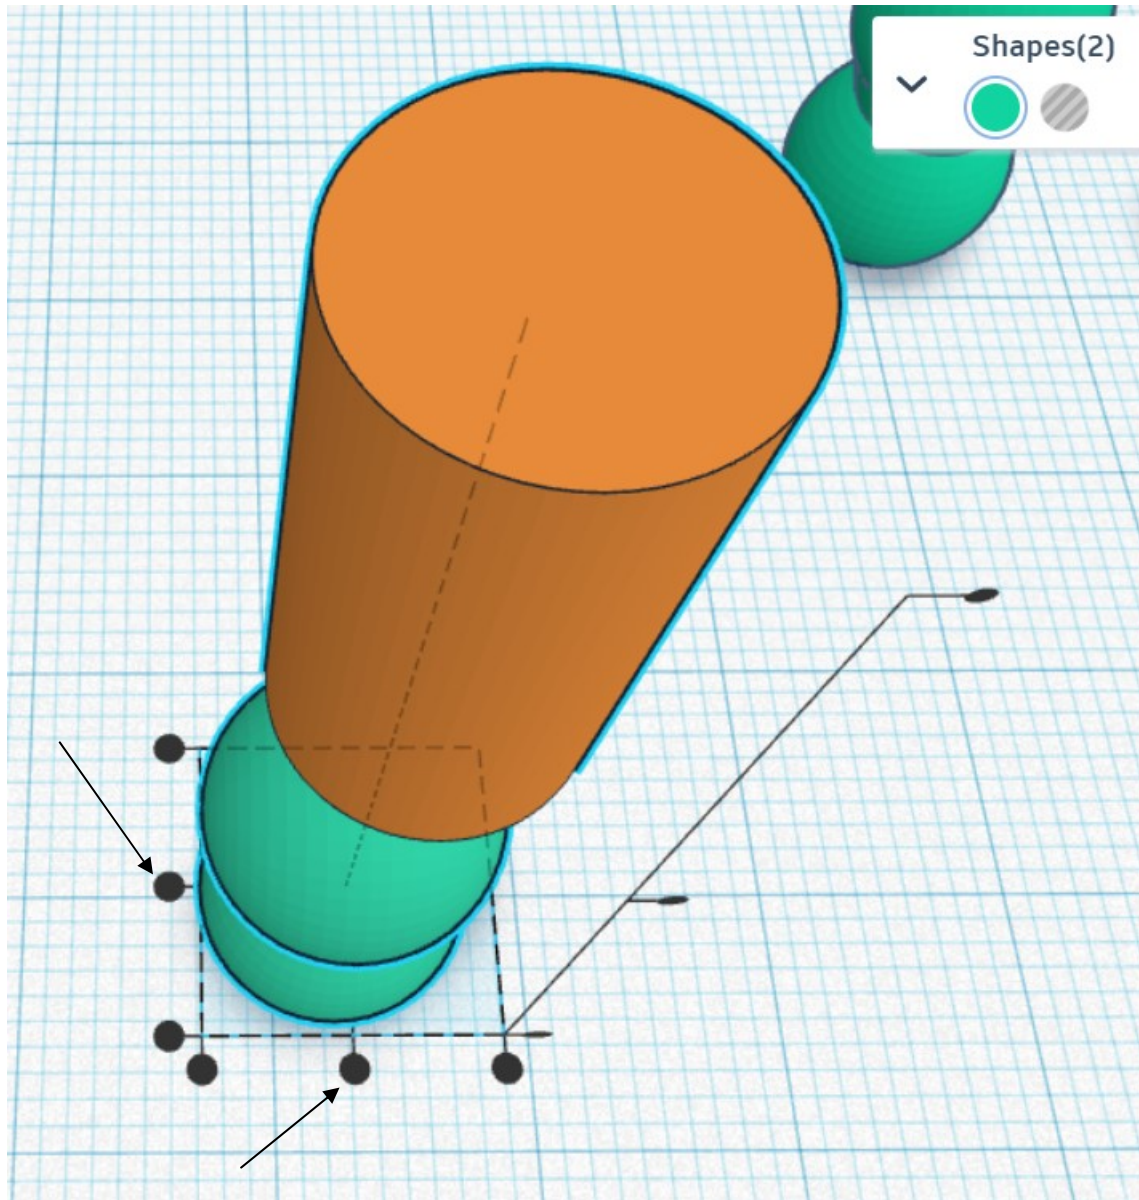


STEP 11: Lower the cylinder such that the lower surface matches with the position of the ball as shown in the image given below.

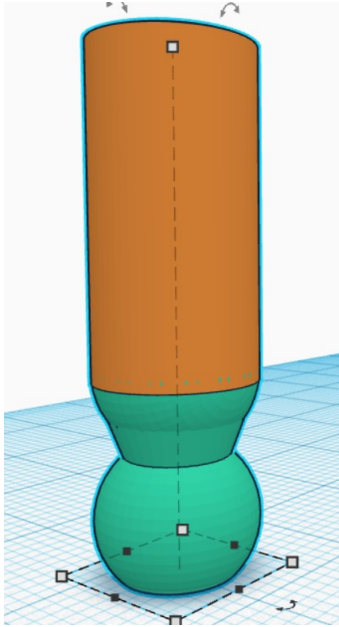


STEP 12: Select the two objects and click on the **Group** option. Select the grouped object and change it to multicolour.

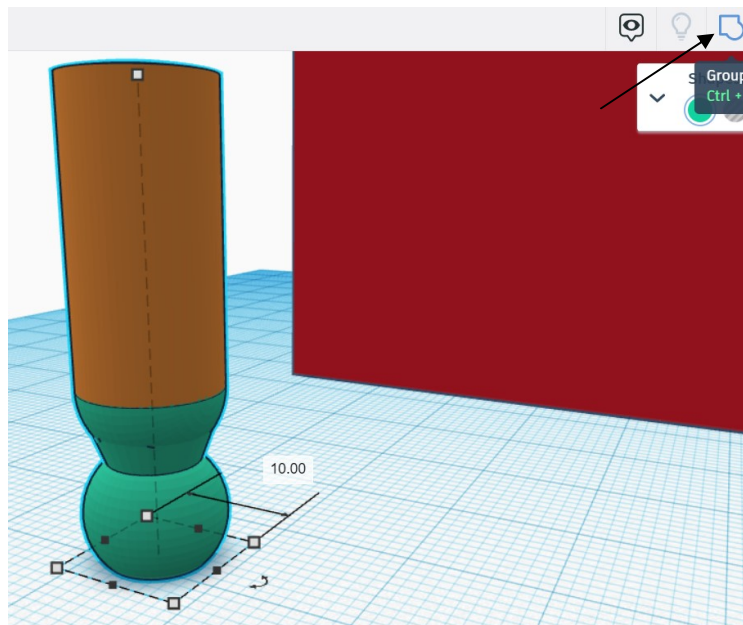


STEP 13: As the length of each of the fingers are different (*in this case the height*) therefore make four more copies of the cylinder and make each of **different height** but the **same length and breadth**. Repeat **STEPS 10, 11 and 12** to make the other fingers.

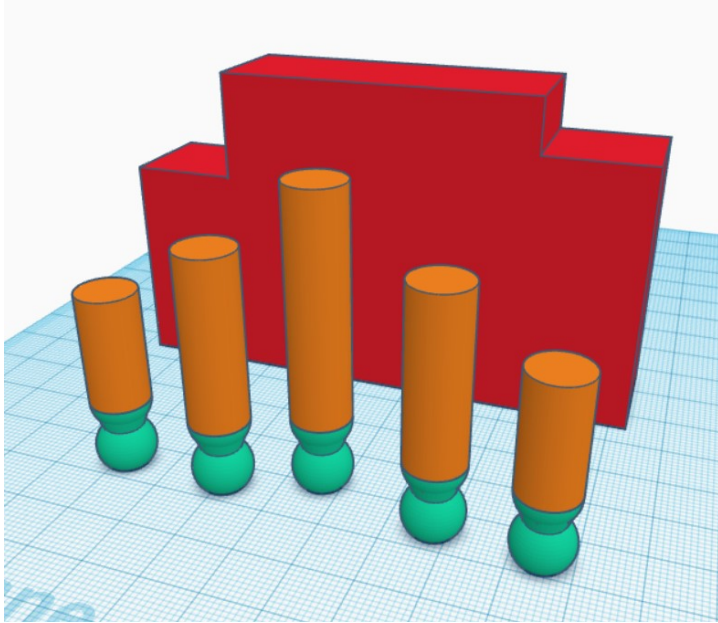


STEP 14: Go to the **Basic Shape** option click it and select the **Hardware** option. Then select the **Socket** shape and drop it in the workplane. Create a total of **five** copies of it.

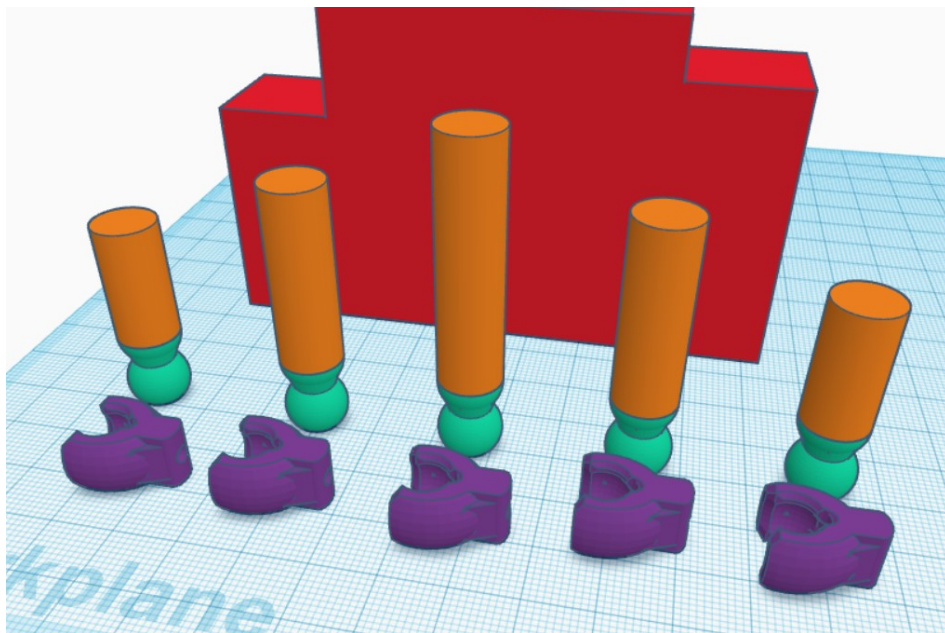


STEP 15: Place the socket along with the finger as shown in the image given below. Select the two objects and click on the **Align** option. Select the dot highlighted by the arrow. Select the two objects and click on the **Group** option.

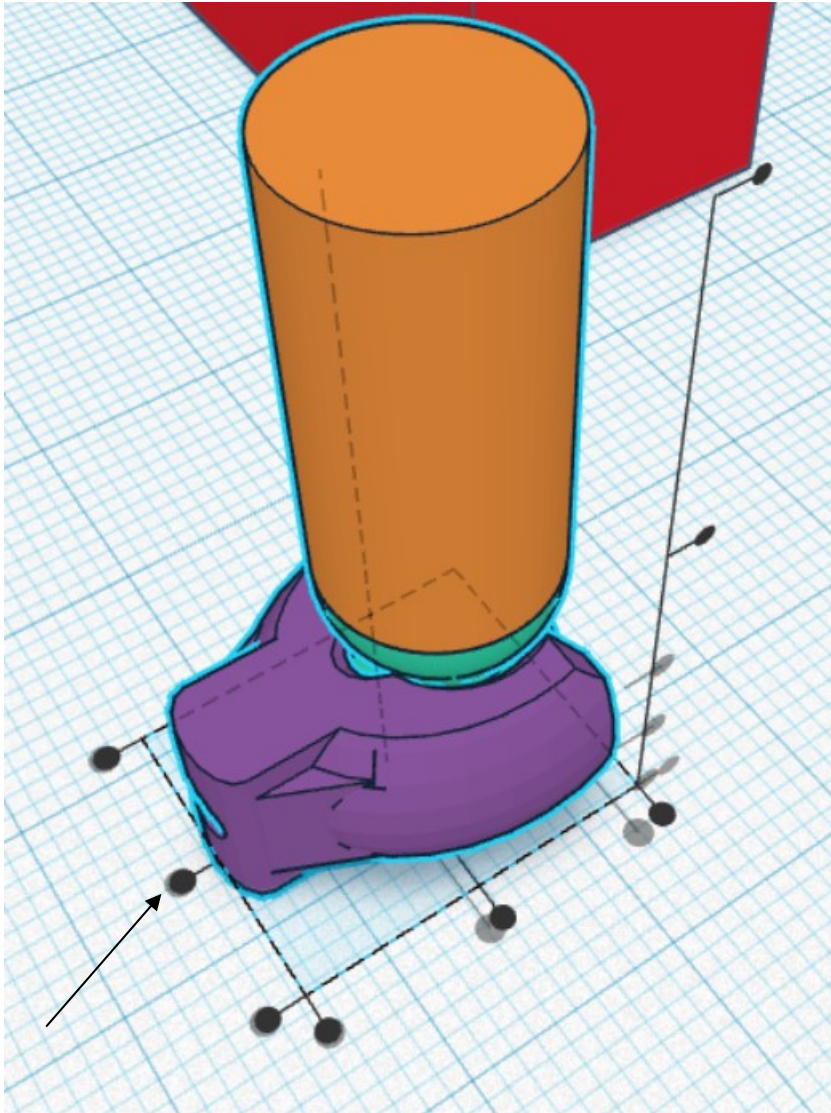


STEP 16: Repeat **STEP 15** so as to make the other four fingers.

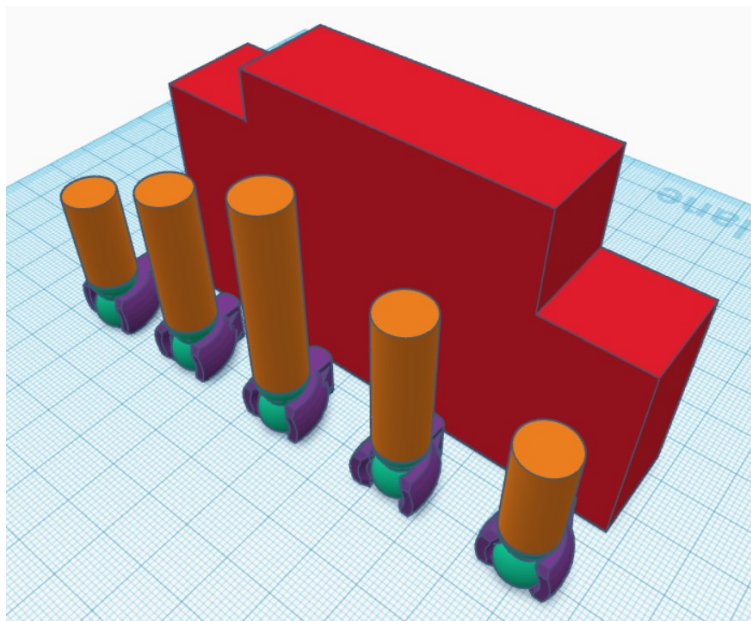


STEP 17: Select all the five fingers and make a copy of them.

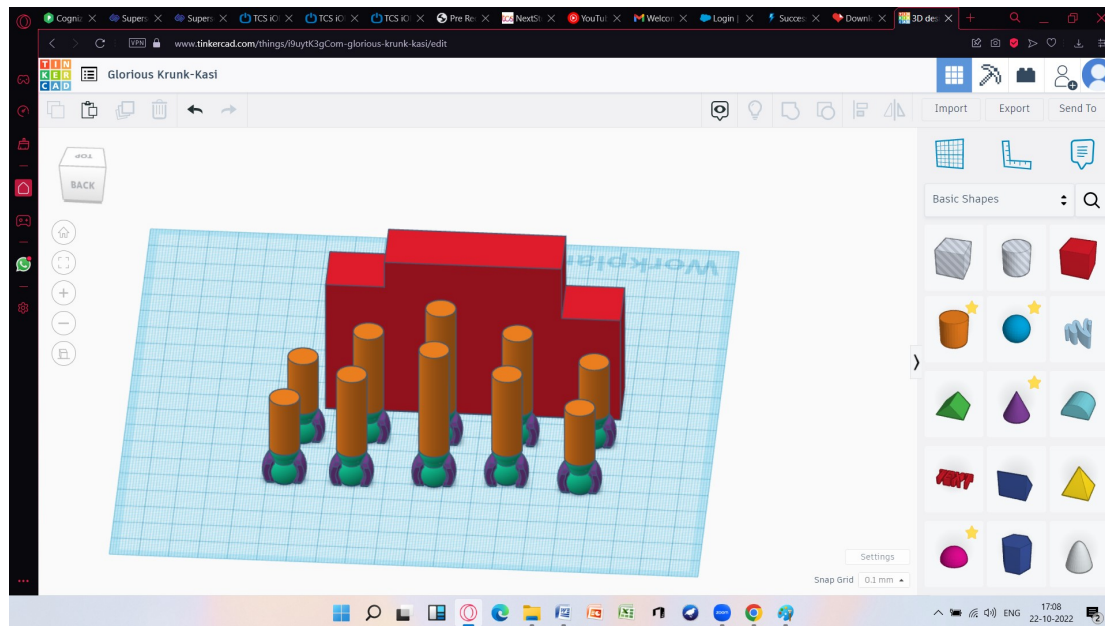


STEP 18: Raise the finger and place it as shown in the image given below. Select the two objects and click on the **Align** option. Select the dot highlighted by the arrow and click on the **Group** option.

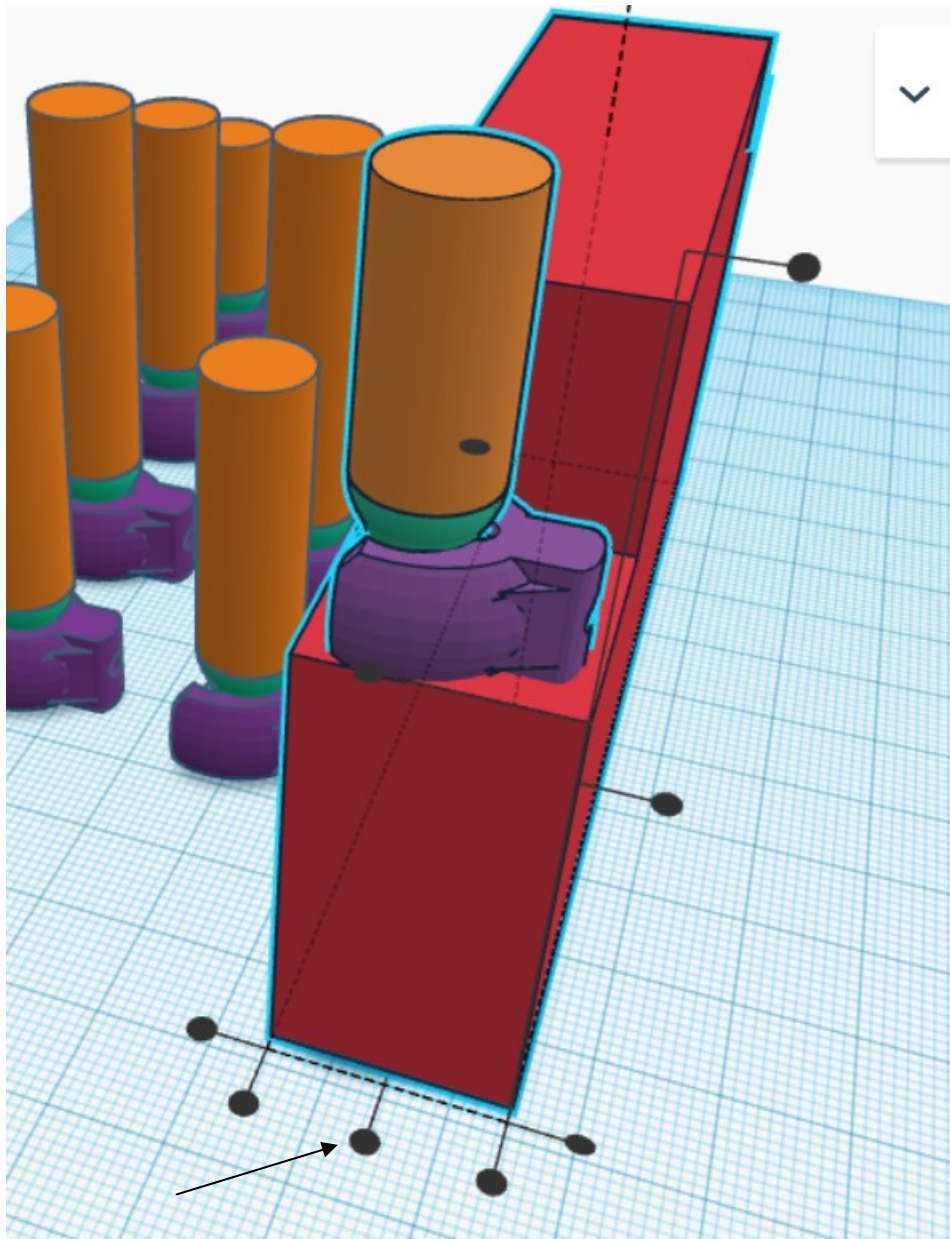


STEP 19: Repeat **STEP 18** to complete all the fingers.

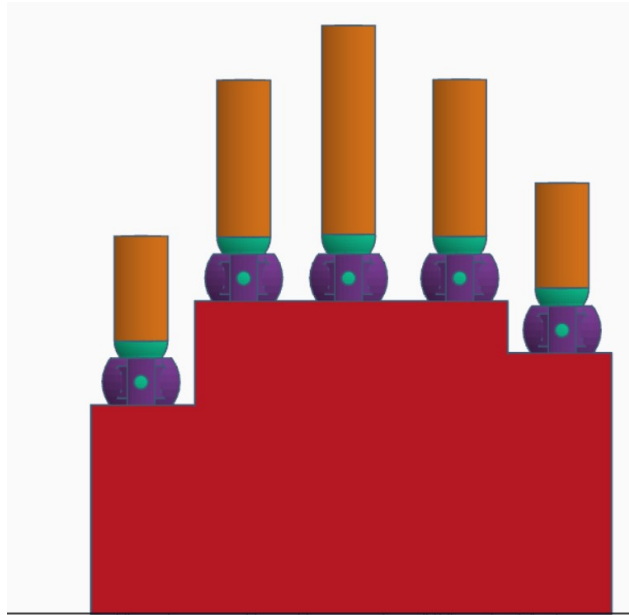


STEP 20: Place the upper part of the finger on top of the thumb as shown in the image given below.

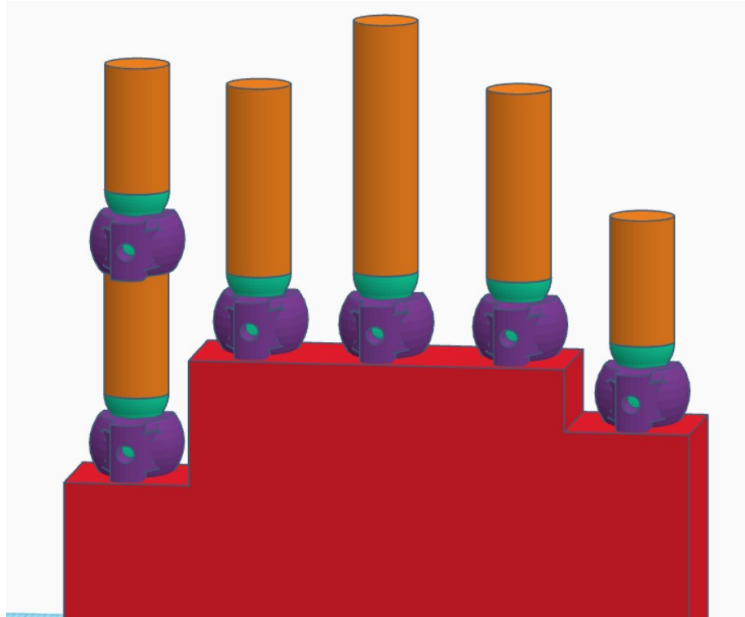


STEP 21: Repeat **STEPS 20** for the other fingers as well as shown in the image given below. Keep in mind to put the fingers according to their lengths (*in this case the heights*). Select all the objects and click on the **Group** option.

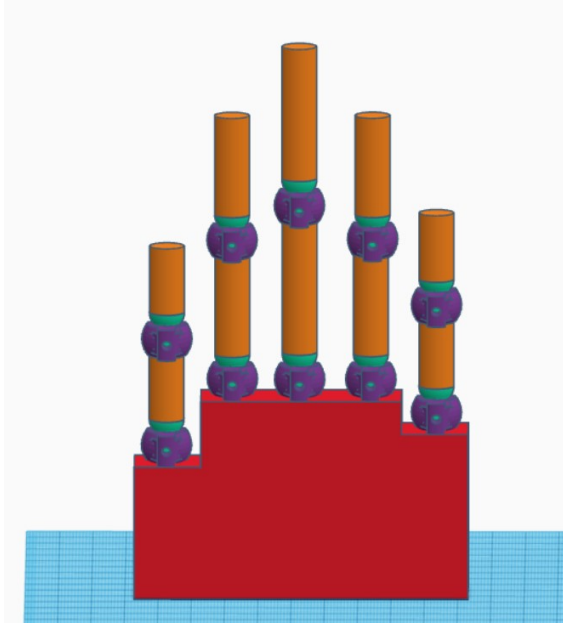


STEP 22: Now to make the tips of the fingers we are going to insert the **paraboloid** shape into the workplane. Change its length and breadth to **10*10** and also its height to **10**.

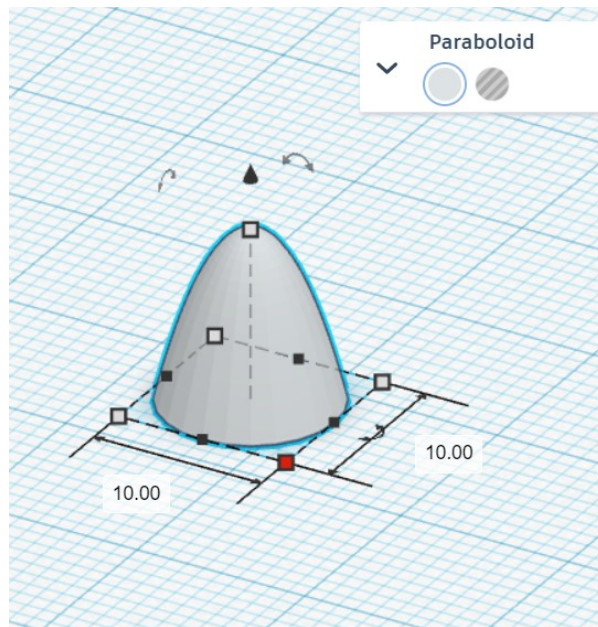


STEP 23: Place the paraboloid on the fingers as shown in the image below. As the shapes cannot be aligned using the Align option for the fingers contain different shapes, therefore we have to align them manually.

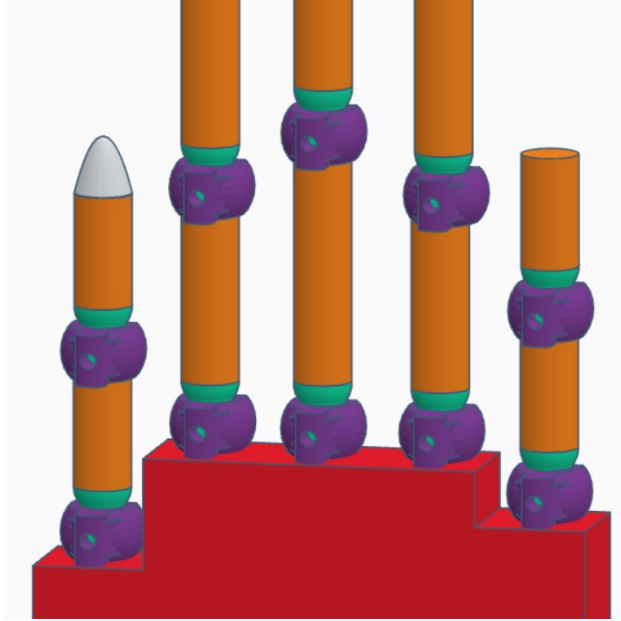


STEP 24: Repeat **STEP 22** and **STEP 23** to place the tip on each of the fingers. Select all the objects and click on the **Group** option.

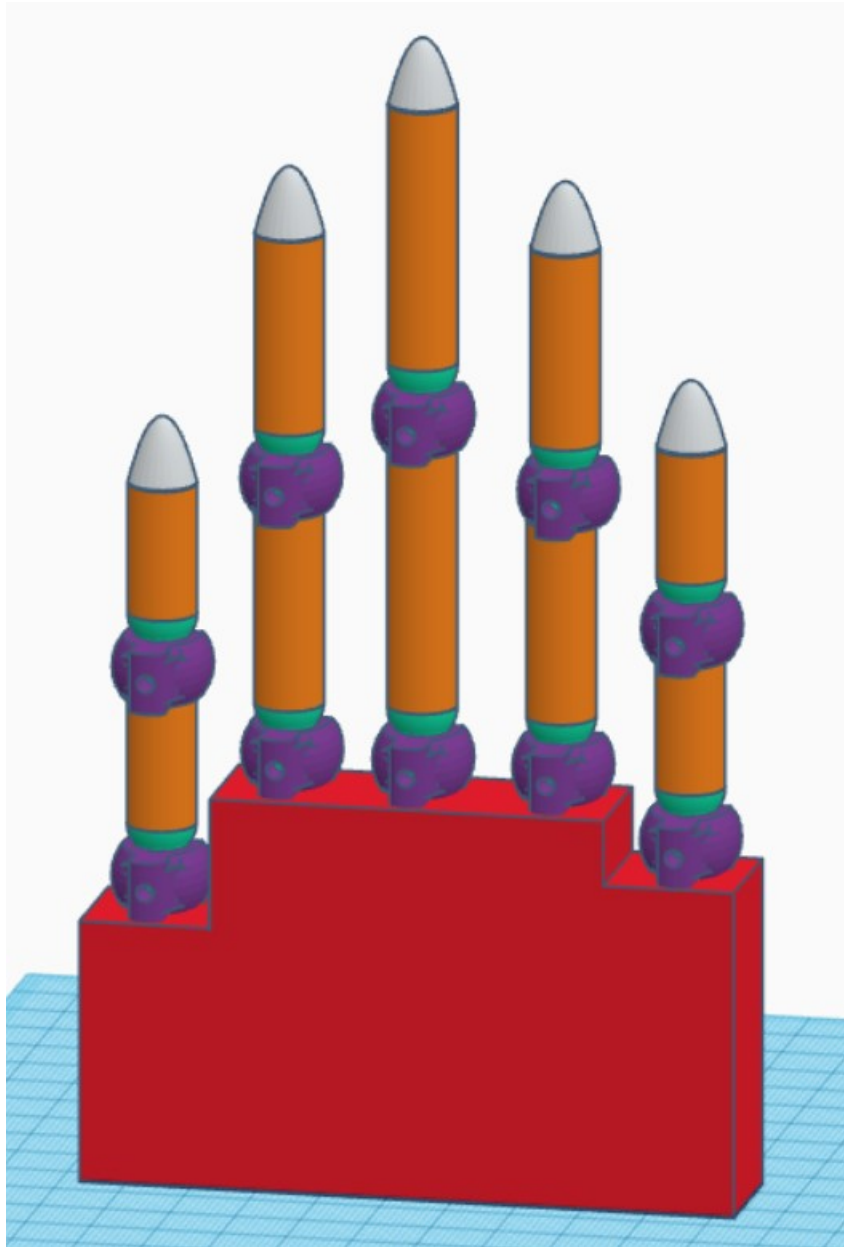


STEP 25: Insert the **Round Roof** shape into the workplane and rotate it by an angle of **180°**.

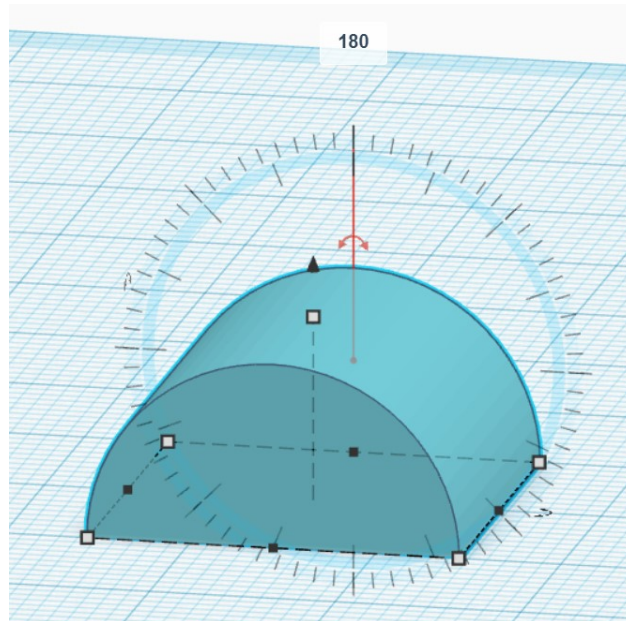


STEP 26: Change the length of the **Round Roof** to **100** and its height to **20**.

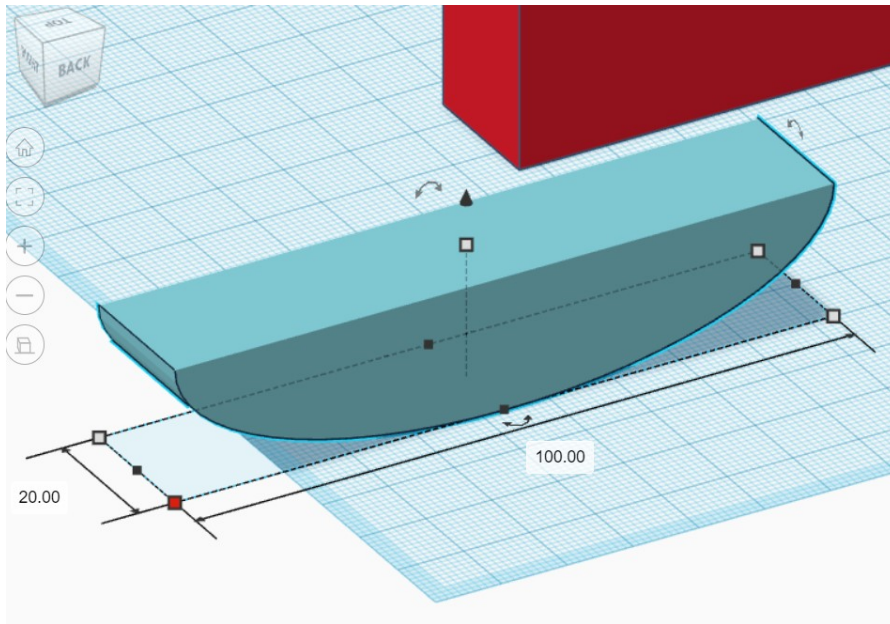

STEP 27: Raise the hand by a value of **20**.

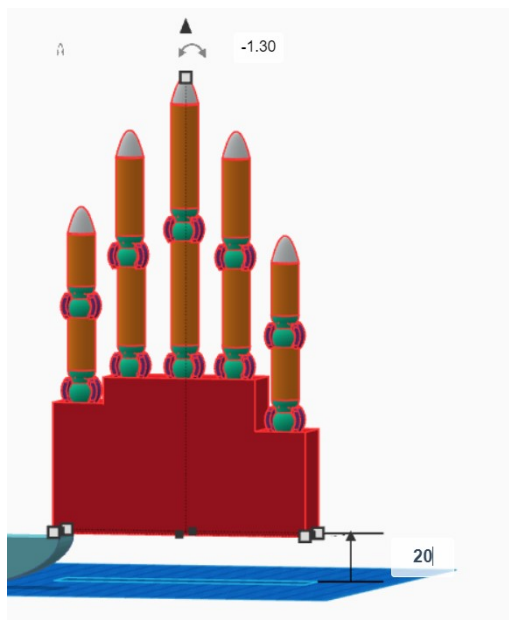

STEP 31: Place the hand on top of the **Round Roof** as shown in the image given below. Select the two objects and click on the **Align** option. Select the two centre nodes and click on the **Group** option.

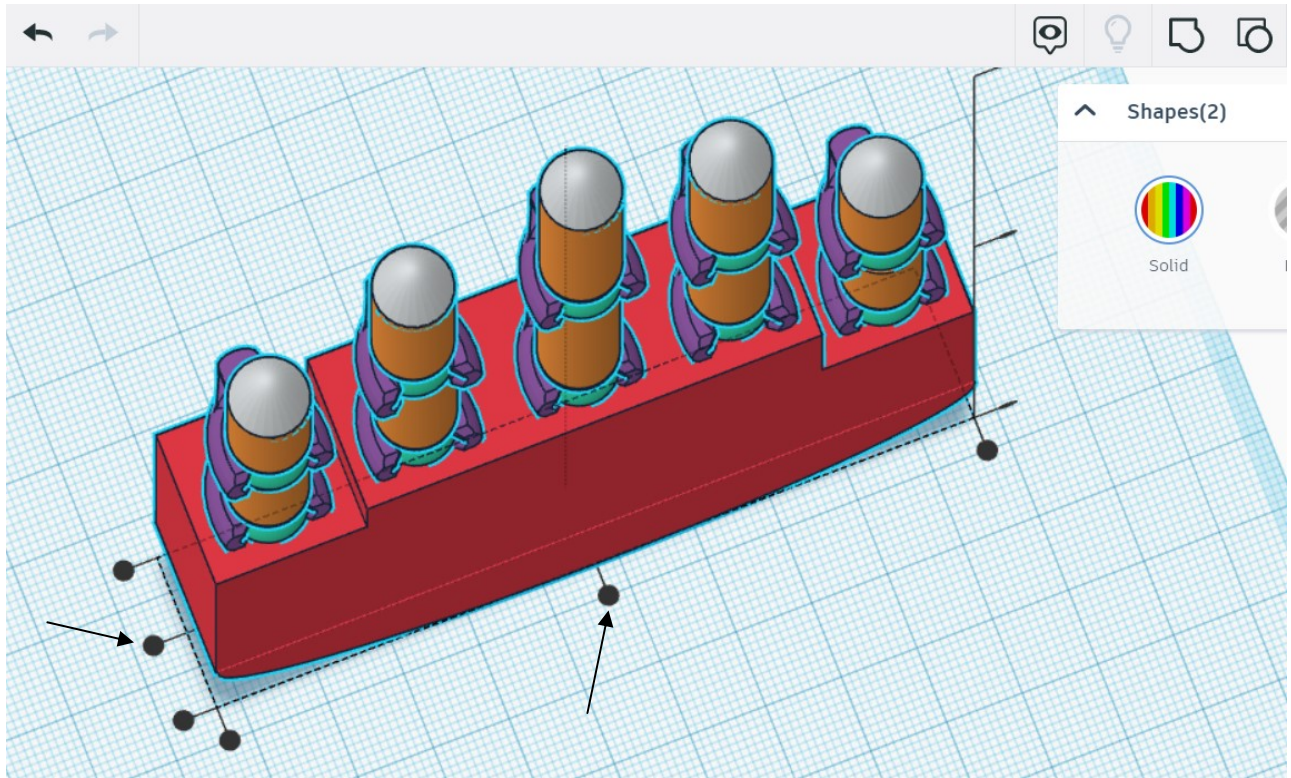

And there you have it. A beautifully designed arm. Congratulations!!

