

J3ZZ MONITORS : Vocals, Bass, Violin(s), Speaker-1, Speaker-2, MoogMix, , iPad, Loop, Rx,

Wifi : VIBROTANICA\_5G

RME : DUREC + REC INGE SON AUDIO + INSTA360

RADIAL REAMP

LOOPER MIDI IN from KENTON      MIDI OUT to Timeline

FX      Jacks IN : Octaver      Jacks OUT : Black Hole      MIDI IN : Timeline

*MIDI CHAIN      midiHUB FX > Kenton > Boomerang > Timeline > (Microcosm > Pitchfactor) > BlackHole*

ABLETON

Settings : RME chosen as device I/O

Link

Put down SENDS A/B for **VOCALS** MIX, Kickbass , **Pback-iPads**, **looprxtrn**, **fxrtrn**, **violin**, **ipad**, **MoogMix**

Adjust water levels

BOOMERANG PEDAL

Sync + Free mode + Volume of each loop to  $\frac{3}{4}$

iPad

TC TRANSFORMER : Load : Transpose : G minor Pent

XYNTHSIZR : CLEAR + low pass filter to the max

PATTERNING : CLEAR + low pass filter to the max

MOOGS

SETTINGS

M32 : CUTOFF to 0 + Volume to 0 + Mix VCO to 0

MINITAUR : CUTOFF to 0 + Volume to 0

ETC : trigger adjust + mode 55

PEDALS : SETUP


PLANTS : adjust trigger

CH	SOURCE	WHAT IS GOING ON?	WHAT TO DO?
01	Speaker-1	Water+Moving(Birds+Chimes+Noises)+plantsynth	Mixed by J3ZZ
02	Speaker-2	Water+Moving(Birds+Chimes+Noises)+plantsynth	Mixed by J3ZZ
03	Speaker-3	Water+Moving(Birds+Chimes+Noises)+plantsynth	Mixed by J3ZZ
04	Speaker-4	Water+Moving(Birds+Chimes+Noises)+plantsynth	Mixed by J3ZZ
05	Violin	Dry violin	Add REVERB etc. Send to the front
06	MoogMix	Moog synth	Send to the front
07	Bass	Kick + Bass	Send everywhere (mono)
08	iPad-L	pads, drums, synths, spatial	Send to the front
09	iPad -R	pads, drums, synths, spatial	Send to the front
10	Vocals-L	Vocals	Send everywhere (stereo front)
11	Vocals-R	Vocals	Send everywhere (stereo back)
12	Loop-L	Looped violin with effects	Send to the front
13	Loop-R	Looped Violin with effects	Send to the front
14	Fx-L	Effects	Send to the front
15	Fx-R	Effects	Send to the front
16	Vocal-HF	SHURE BETA 58 HF	Send to the front
17	Violin-direct	Dry violin	Add REVERB etc. Send to the front

## Back rig NME#5


23.10.2023

(to FOH to mix)

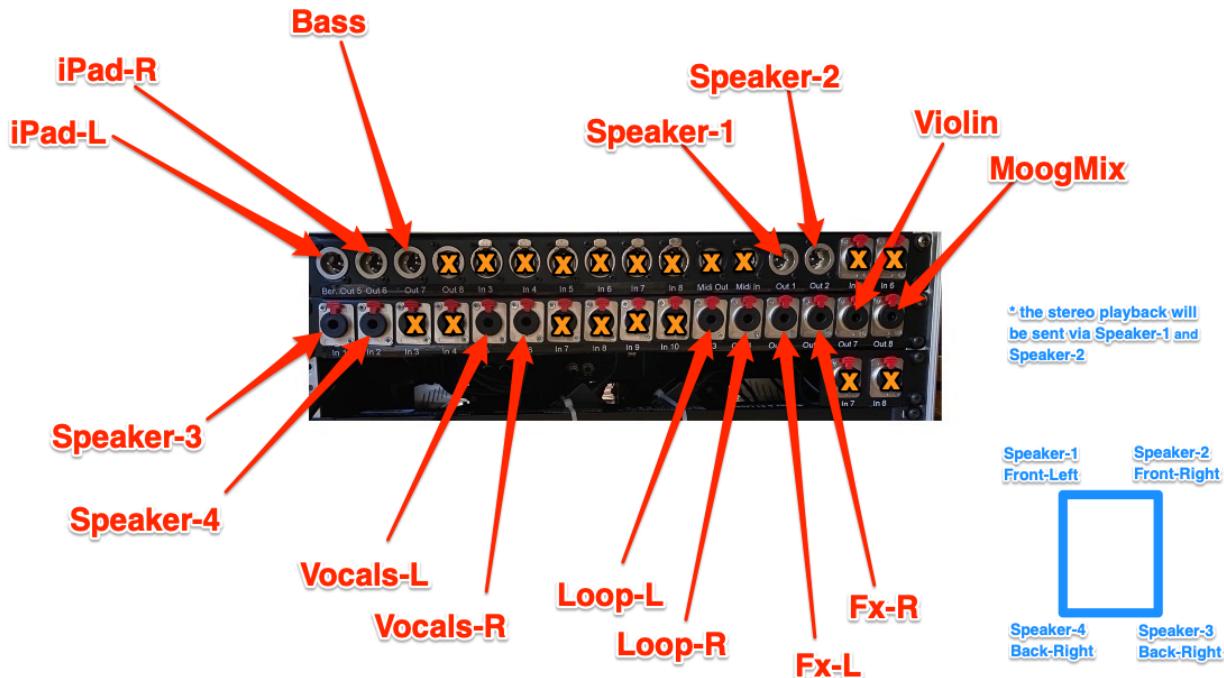

## Stage plot

### Power 16 amp independent circuit

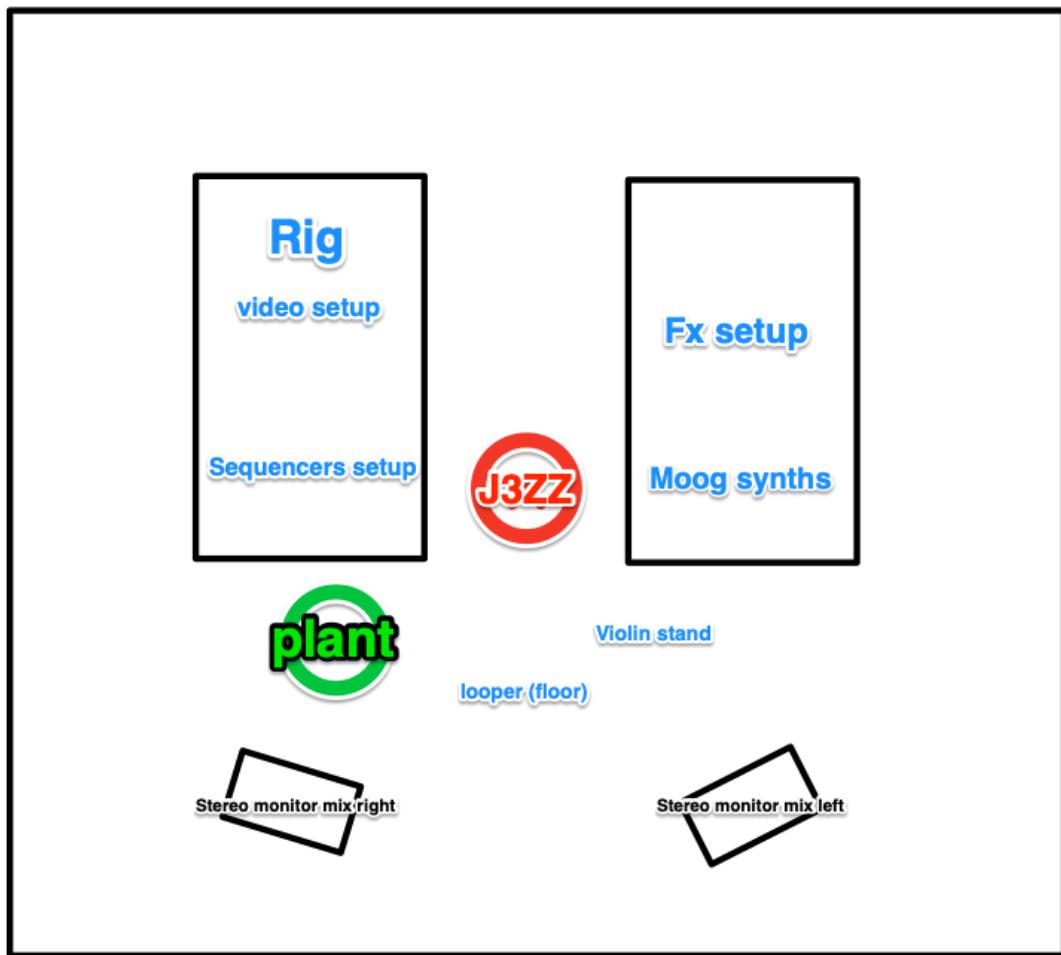

## Outputs

01	Main-L (Sub) - Speaker-1 Front-Left
02	Main-R (Sub) - Speaker-2 Front-Right
03	Speaker-3 Back-Right
04	Speaker-4 Back-Left
05	Stereo monitor - L J3ZZ
06	Stereo monitor - R J3ZZ

Out	In	units	10 chargers including iPad and laptop
1		1	violin
1		1	Violin stand
1		1	Dpa 4099v
1		1	Akg B29L + C411L
		1	iPad Pro 12,9+ <b>charger</b> 45W
1		1	RADIAL DI Stage bug
2		2	RADIAL DI J48 STEREO
1		1	Pedal Board
2		2	<b>Cable</b> TRS stereo 6,5mm - TRS stereo 6,5mm
11		11	<b>Cable</b> TS mono 6,5mm - TS mono 6,5mm
6		6	<b>Cable</b> midi
1		1	<b>Cable</b> XLR male – XLR female
2		2	<b>Cable</b> TRS stereo 6,5mm – XLR male
1		1	<b>Cable</b> UM-ONE Roland Midi – USB + Apple camera kit usb
1		1	cable patch TS mono 6,5mm - TS mono 6,5mm
1		1	<b>Cable</b> USB-A – USB-B
3		3	cable patch 3,5mm
		1	cable USB-C <> lightning
1	1	1	cable apple 2m USB-C <> USB-C
1		1	Pedal BOOMERANG + <b>charger</b>
1		1	Pedal RADIAL TONEBONE PZ PRE+ <b>charger</b>
1		1	Pedal tc electronic POLYTUNE +
4		4	Power strip
1		1	SANDISK DUREC <b>USB KEY</b>
1		1	SYNTH MOOG MINITAUR + <b>charger</b>
1		1	SYNTH MOOG MOTHER32 + <b>charger</b>
1		1	SYNTH MOOG DFAM + <b>charger</b>
1		1	KENTON PRO SOLO Mk3 + <b>charger</b>
1		1	midiHUB
1		1	1 ETC critteri + <b>charger</b>
1		1	Vibrotanica box + TENS <b>cables</b> + sensors
1		1	Router Wifi tp-link + <b>charger</b>
1		1	Rouleau Gaffer rose

