THE FACTORY FLOOR
TECHNICAL SPECIFICATIONS

Current as of May 2023

CONTACTS

The Factory Theatre
105 Victoria Road, Marrickville
NSW Australia, 2205
+61 2 9660 9060 (Box Office)

Century Venues
105 Victoria Road, Marrickville
NSW Australia, 2205
+61 2 9519 9231

INDICITIVE CHARGES: FACTORY FLOOR

The below indicative charges are EX GST and should be factored into event budgeting. These costs will be itemised on the venue settlement on completion of the show.

Early / Late Access
Contractual bump in time is from 6.00pm.
A venue hire charge of $50 + GST/hour + staff applies for hours outside of the contractual period.

House Audio Component
House Audio Component (as listed below in this document) is included in your contract

House Lighting Component
House Lighting Component (as listed below in this document) is included in your contract

House Technicians
The House Technicians will operate FOH Audio and Lighting control, Minimum 1 x house technician is required to operate this room.

Additional Production Items
Please contact Event Coordinator for prices and availability of production items outside of the standard as listed in this document.

All technical advancing and prices for hires & staff for all shows to be coordinated through Event Manager / Production Manager.

STAGE DIMENSIONS

Stage Width	4.8m
Stage Depth	4.8m
Height from stage to ceiling	3.8m
Stage Surface	Timber floor, carpet covered.

AUDITORIUM DIMENSIONS

DSE to Audio & Lighting Mix Pos 10.8m
Theatre Floor Width 9.5m
3 x Tiered Platforms

AUDITORIUM CONFIGURATIONS

Concert	250 capacity
Seated	140 capacity

POWER

3 Phase power is not a standard in the Factory Floor. Please contact Event Coordinator for prices on 1 x 32amp wilco install


STAGE FITTINGS

Black Stage curtains
Screen 3.0m x 2.0m

LIGHTING

Control: Grand MA 3 on PC With Fader wing

Plot ID	Address	Location	Fixture	Mode
1	1	FOH Truss	Dimmer- Par 64 (Pair)	1ch
2	2	FOH Truss	Dimmer- Par 64 (Pair)	1ch
3	3	FOH Truss	Dimmer- Par 64 (Pair)	1ch
-	4 to 12	Spare	Dimmer- Spare	1ch
301	13	DS - SR	Acme- Stage Par Colour	6ch
302	19	DS - SL	Acme- Stage Par Colour	6ch
11	25	FOH Truss	Silver Star- Led Fresnel 150 HEX	TR.16 - 20ch
12	45	FOH Truss	Silver Star- Led Fresnel 150 HEX	TR.16 - 20ch
21	65	DS	Led Blinder	1ch
22	66	DS	Led Blinder	1ch
201	67	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
202	75	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
203	83	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
204	91	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
205	99	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
206	107	MS	Event Lighting- ProPar 12x12 RGBWAUV	8ch
207	115	US	Event Lighting- ProPar 12x12 RGBWAUV	8ch
208	123	US	Event Lighting- ProPar 12x12 RGBWAUV	8ch
209	131	US	Event Lighting- ProPar 12x12 RGBWAUV	8ch
210	139	US	Event Lighting- ProPar 12x12 RGBWAUV	8ch
101	147	MS	Acme- Oxygen	Mode 1 - 17ch
102	165	MS	Acme- Oxygen	Mode 1 - 17ch
103	181	MS	Acme- Oxygen	Mode 1 - 17ch
104	198	MS	Acme- Oxygen	Mode 1 - 17ch

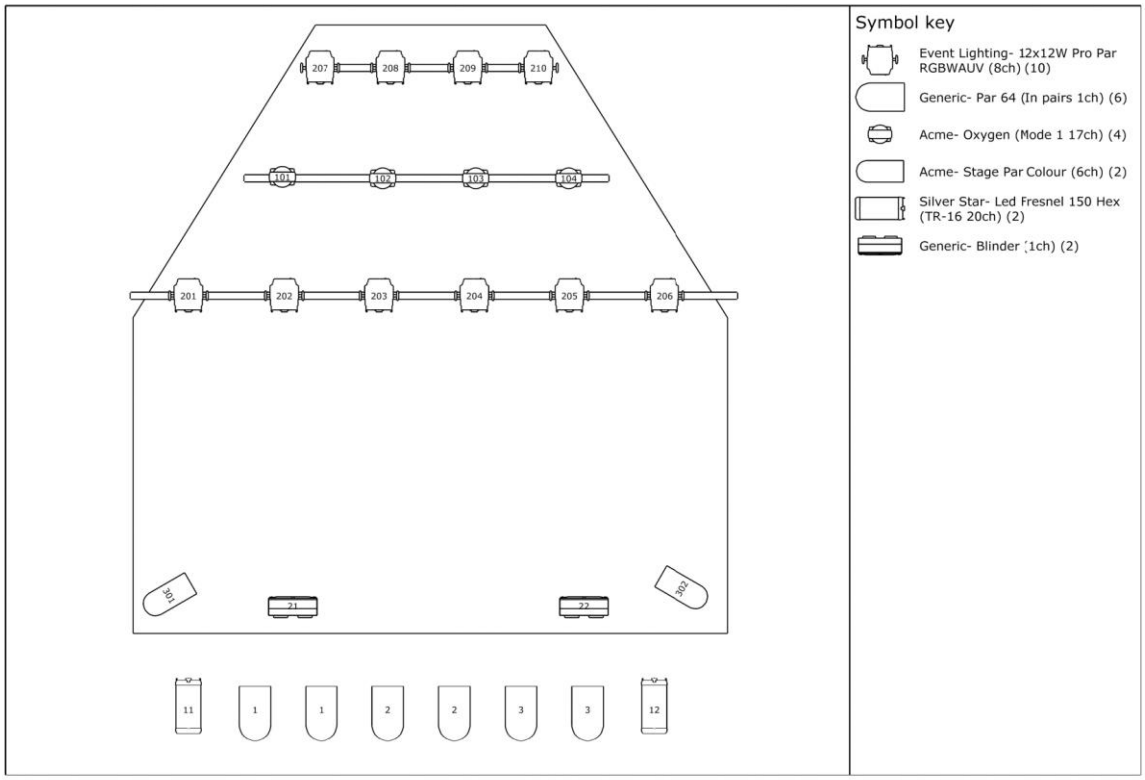

Additional Lighting Packages Available
Please contact your Event Coordinator for prices and availability.

RIGGING

All rigging and requirements installed and operated by in-house riggers only. The Production Manager must approve additional rigging requirements in advance.

AUDIO

FOH Speaker System

EVX 3 Way (hi, mid, lo)	2
EV 2x18" Sub	2
DBX Drive rack	1
InterM P3200 Amplifier	2

FOH Control

Midas M32 Digital Console	1
Midas Digital Stage Box DL32	1

Monitor System (Mons control from FOH)

1502 Passive Wedges	4
C Audio Amp	1
Crown CE2000	1
Behringer Ultradrive DCX 2496	1
EV P1200	1

System Info

Shure Beta 52	1
Shure SM57	3
Shure SM58	4
Sennheiser 604	3
LA Audio D.I.	2
Behringer Stereo D.I.	1
Short Booms	4
Tall Booms	5

DRESSING ROOMS & PRODUCTION OFFICES


1 x Dressing rooms available rear of stage

LOADING AREAS

Loading Door located via Victoria road. Please contact Event Coordinator / Audio Tech upon arrival to ensure load in parking.

FACTORY FLOOR HOUSE RULES

BACKLINE SHARING BETWEEN BANDS IS HIGHLY ENCOURAGED
All doors, stage or house must be clear at all times for access.
No Gaff Tape to be used on stage, or curtains.
All stage equipment must enter via Loading Dock.
All FOH equipment must enter via the Foyer Doors.
No seats, armrests, or backrests can be used as a step.
Only house riggers may operate rigging equipment or rig.
Do not adjust stage drapery.
Vehicles may be permitted to enter into front entry for load in with prior consent given however vehicle will need to be removed immediately after load in.
Load out to be carried out safely and immediately after conclusion of performance.
The venue must be cleared of all patrons and the loading passage way cleared of patrons and rubbish before cases can be loaded out.

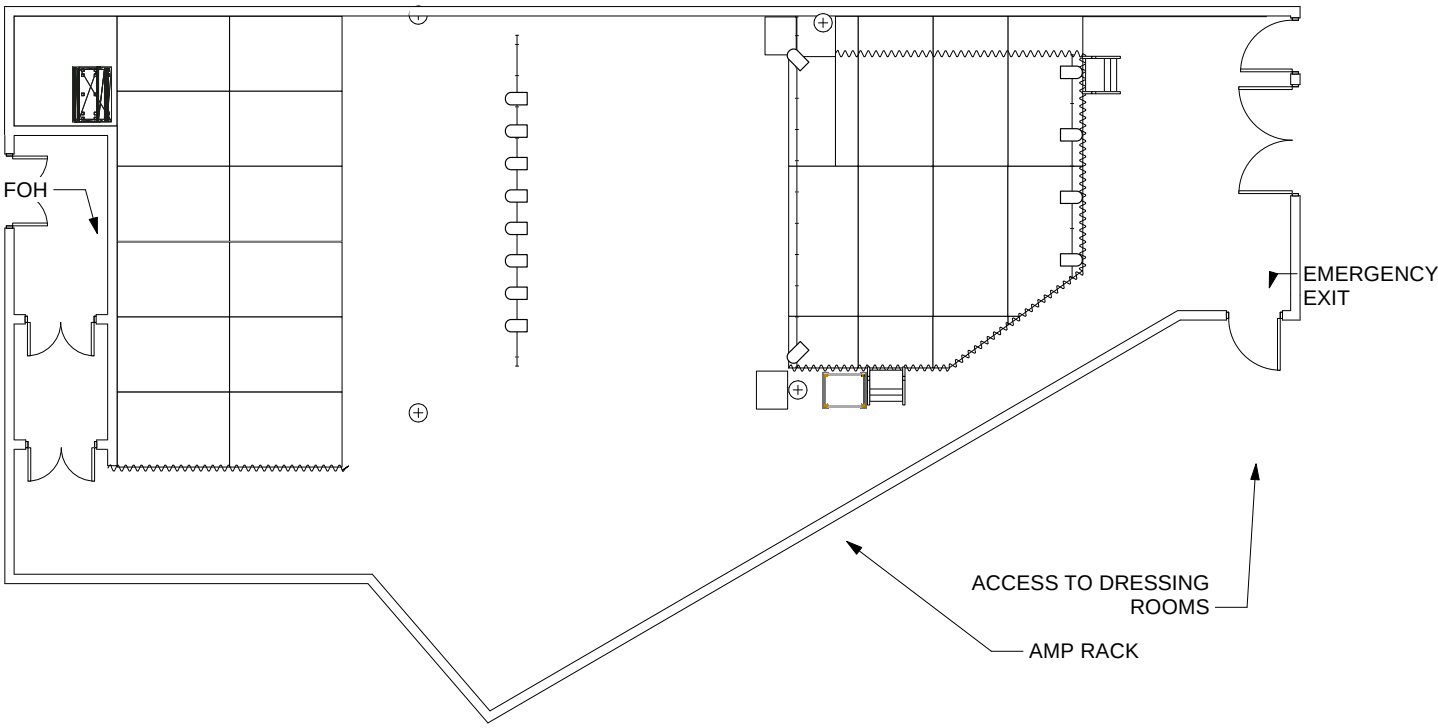
FOH
EMERGENCY EXIT
ACCESS TO DRESSING ROOMS
AMP RACK