Gmail

Ed Johnstone <johnedstone@gmail.com>

notecard serial debugging

1 message

[ed johnstone] <johnedstone@gmail.com> Sun, Apr 26, 2026 at 6:20 PM
To: Ed Johnstone <johnedstone@gmail.com>

```
dpkg -s notecard
Package: notecard
Status: install ok installed
Priority: optional
Installed-Size: 7240
Maintainer: Blues <support@blues.com>
Architecture: amd64
Version: 1.9.8
Description: Notecard CLI
Architecture-Variant: amd64v1
License: MIT
Homepage: https://blues.com
```

Debugging Notecard with the FTDI Debug Cable

Connect FTDI Cable to a Notecarrier

Connecting an FTDI cable to a Notecarrier (or a custom PCB with matching header pins) is a relatively simple process using the three provided wires from the cable:

- The orange `RX` wire connects to the `AUXRX` header.
- The yellow `TX` wire connects to the `AUXTX` header.
- The black ground wire connects to the `GND` header.

In addition, the `AUXEN` pin on the Notecarrier needs to be pulled high by bridging `AUXEN` to `<BAT`:

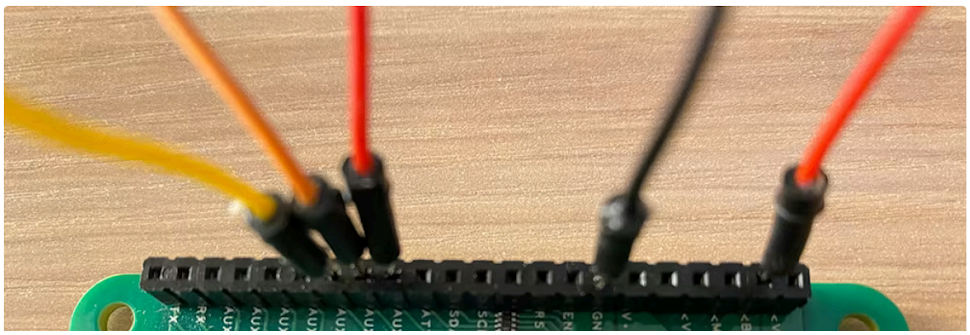

Python Library - IoT Connectivity at Blues

```
sudo notecard  -info -portconfig 115200 -port /dev/ttyUSB0  -interface serial

Blues Wireless Notecard
              ProductUID: com.gmail.xstone:wbna_500.69623
               DeviceUID: dev:x69623
           Serial Number:
            Notehub Host: a.notefile.net
         Firmware Version: notecard-8.2.3.17326
                     SKU: NOTE-WBNA-500
                   Modem: x7A03M1G_01.003.01.003
                   ICCID: x99278
                    IMSI: x59927
                    IMEI: x69623
             Provisioned: 2024-10-06T18:18:54Z (2024-10-06 6:18:54 PM EDT)
        Used Over-the-Air: 22985534 bytes
                Sync Mode: periodic
```

```
     Sync Outbound Period: usb:60;high:60;normal:60;low:60;dead:0
           Inbound Period: usb:1440;high:1440;normal:1440;low:0;dead:0
           Notehub Status: connected {connected-closed}
              Last Synced: 2026-04-26T17:21:26Z (2026-04-26 5:21:26 PM EDT)
                  Voltage: 3.72V
              Temperature: 27.19C
                 GPS Mode: periodic
                 Location: 39.857677,-86.096242 ()
            Current Time: 2026-04-26T17:57:24Z (2026-04-26 5:57:24 PM EDT)
               Boot Time: 2026-04-26T17:20:17Z (2026-04-26 5:20:17 PM EDT)
               Notefiles: sensors.qo, data.qo
   Notefile Storage Used: 2%
                     Env: {
                            "_comment": "Notecarrier A, Adafruit QT RP2040, WBNA-500",
                            "_fwc": "notecard-8.2.3.17326$20250812122356.bin",
                            "_fwc_retry": "1763493202",
                            "_tags": "10x15SolarLiPo BME280e",
                            "_tri_mins": "1440"
                          }
ejstone38@potter38:~$ sudo notecard  -req '{"req": "card.voltage"}' -portconfig 115200 -port
/dev/ttyUSB0  -interface serial |python3 -m json.tool
{
    "alert": true,
    "minutes": 57,
    "mode": "normal",
    "value": 3.726284190655776,
    "calibration": 0.19686010414627922
}

sudo notecard  -req '{"req": "card.voltage", "mode": "?"}' -portconfig 115200 -port /dev/ttyUSB0
 -interface serial |python3 -m json.tool
{
    "alert": true,
    "minutes": 59,
    "mode": "usb:4.6;high:3.8;normal:3.6;low:3.2;dead:0",
    "value": 3.7246044029979193,
    "calibration": 0.19647099087237335
}
```

Ed Johnstone Ô¿Ô¬
cell: 317.331.1848
email: johnedstone@gmail.com
'Discouragement is never from God, as it clouds faith and hope' - St Ignatius
'Be the first to love' - Chiara Lubich