
01 / Check the wall scale

Measurement worksheet | R001 | First checks

Calibrates the wall and valve scan; no CAD grid can establish physical scale.

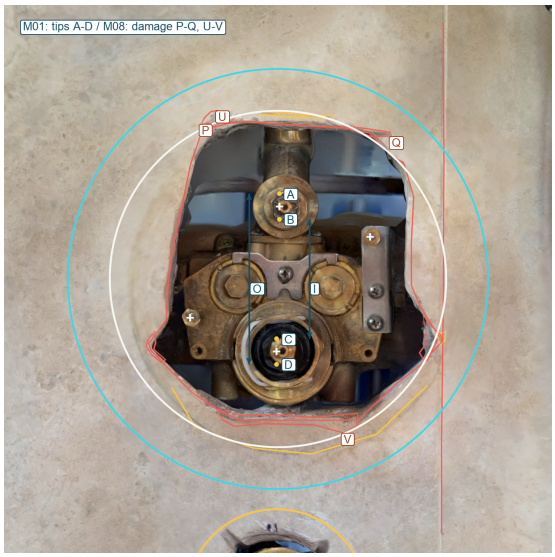

With the trim removed only if safely accessible, touch the two visible brass stem tips lightly. Measure along the line joining the tips: outside span O, then inside gap I. The center spacing is (O + I) / 2, even if tip diameters differ. Repeat both readings. If access risks turning hardware, have the installer take the readings. A straight-on photograph with a ruler beside both tips is the fallback, with lower accuracy.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M01-O O: farthest tip edges A upper outside tangent to D lower outside tangent	unknown Useful +/-0.25	_____	_____	_____
M01-I I: gap between nearest tip edges B upper inside tangent to C lower inside tangent	unknown Useful +/-0.25	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

02 / Identify the inner plate datums

Measurement worksheet | R001 | First checks

Replaces the assumed outline and prevents misleading hole coordinates.

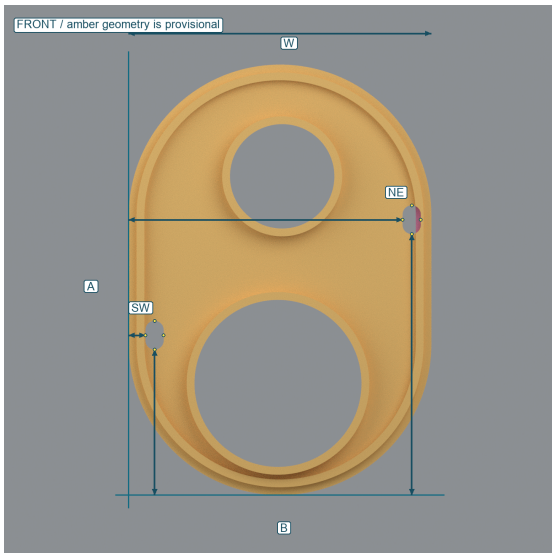

Place the loose factory inner plate on a padded surface. FRONT has the hubs facing you; BACK has the wall-facing foam. Do not remove or compress the gasket. Use the leftmost tangent as datum A and bottommost tangent as datum B. Record the overall width and height; photograph front and back with those labels. If the part is not capsule-shaped, trace its actual outline and describe the difference. For a span beyond the caliper range, use two square blocks and a steel ruler.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M02-W Maximum metal outline width A left tangent to opposite right tangent	116.0 Useful +/-0.5	_____	_____	_____
M02-H Maximum metal outline height B bottom tangent to top tangent	165.0 Useful +/-0.5	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

03 / Locate the two mounting openings

Measurement worksheet | R001 | First checks

Resolves hole/slot centers, size, and alignment with the actual diagonal studs.

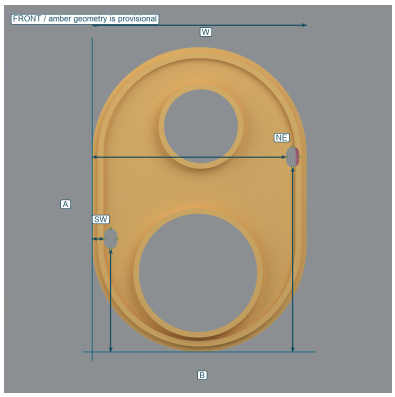

Use the same A and B tangent datums as Check 02. Measure to both the near and far edges of each opening, not an eyeballed center. X center from A = (XN + XF)/2; Y center from B = (YN + YF)/2. Opening width = XF - XN; height = YF - YN. Do not use a curved edge as a moving datum: square blocks against the outline can transfer A/B to a ruler. If these are round holes or different slots, record that and photograph them. Take the plate off only using the applicable factory procedure.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M03-SW-XN SW slot: near X edge datum A to left edge of this opening	6.4 Useful +/-0.2	_____	_____	_____
M03-SW-XF SW slot: far X edge datum A to right edge of this opening	13.4 Useful +/-0.2	_____	_____	_____
M03-SW-YN SW slot: near Y edge datum B to bottom edge of this opening	55.8 Useful +/-0.2	_____	_____	_____
M03-SW-YF SW slot: far Y edge datum B to top edge of this opening	66.8 Useful +/-0.2	_____	_____	_____
M03-NE-XN NE slot: near X edge datum A to left edge of this opening	104.9 Useful +/-0.2	_____	_____	_____
M03-NE-XF NE slot: far X edge datum A to right edge of this opening	111.9 Useful +/-0.2	_____	_____	_____
M03-NE-YN NE slot: near Y edge datum B to bottom edge of this opening	100.0 Useful +/-0.2	_____	_____	_____
M03-NE-YF NE slot: far Y edge datum B to top edge of this opening	111.0 Useful +/-0.2	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

04 / Separate sheet thickness from formed depth

Measurement worksheet | R001 | First checks

Controls the stack and rear interference; thin sheet can have a much larger formed envelope.

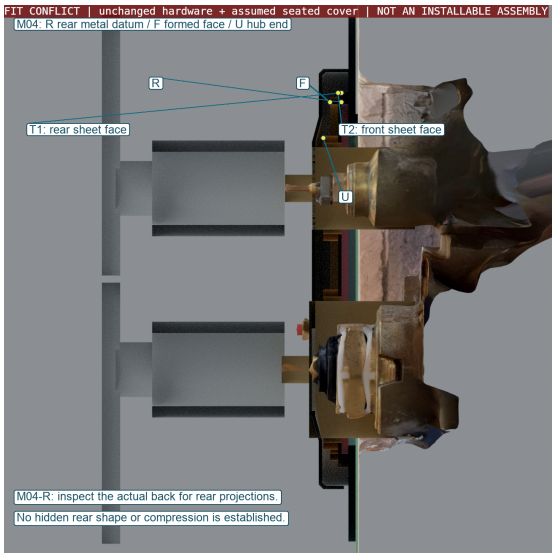

Support the metal rear contact lands on equal blocks without loading the foam. Measure sheet thickness at an accessible unbent edge. Bridge the rear metal datum with a straightedge and measure to the frontmost formed metal face. Separately measure anything projecting toward the wall beyond that metal datum, and the forward hub projection. Mark the exact contact lands in the back photo. Do not flatten or bend the plate to measure it.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M04-T Metal sheet thickness opposite metal faces at same accessible edge	1.5 Useful +/-0.1	_____	_____	_____
M04-D Rear metal datum to front formed face rear metal lands to forward formed face	5.0 Useful +/-0.2	_____	_____	_____
M04-R Largest rear metal projection rear land plane toward wall	unknown Useful +/-0.2	_____	_____	_____
M04-H Forward hub projection from rear datum rear metal datum to front hub end	unknown Useful +/-0.2	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

05 / Map the actual foam contact path

Measurement worksheet | R001 | First checks

Determines whether a plate aperture would remove gasket support.

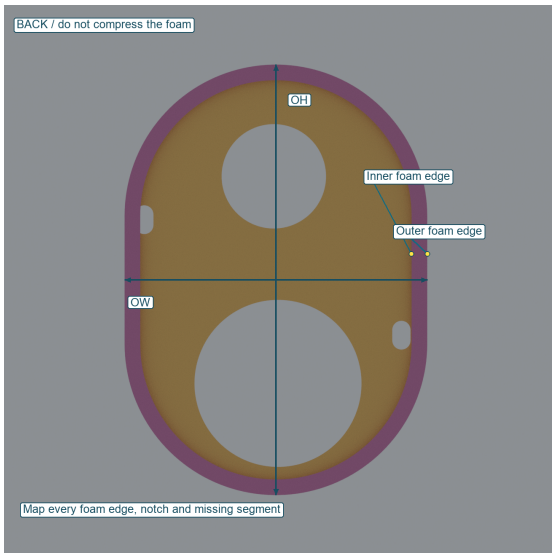

Photograph the BACK face straight on, with A/B labels and a ruler alongside it. Mark the inner and outer foam edges and every notch, joint, tear or missing segment. Measure overall contact-path width/height, band width at left/right/top/bottom, and free thickness without squeezing the foam. Record the smallest band width below and the other readings in notes. A single width does not confirm a continuous seal; the photo/trace remains necessary.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M05-OW Outer foam footprint width left to right outer foam edges	116.0 Useful +/-0.5	_____	_____	_____
M05-OH Outer foam footprint height bottom to top outer foam edges	165.0 Useful +/-0.5	_____	_____	_____
M05-W Smallest observed contact band width inner to outer foam edge at named location	6.0 Useful +/-0.5	_____	_____	_____
M05-T Uncompressed foam thickness rear foam surface to metal backing	3.0 Useful +/-0.5	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

06 / Place the real outer trim

Measurement worksheet | R001 | First checks

Separates trim center from valve axes and mounting midpoint; replaces nominal diameter.

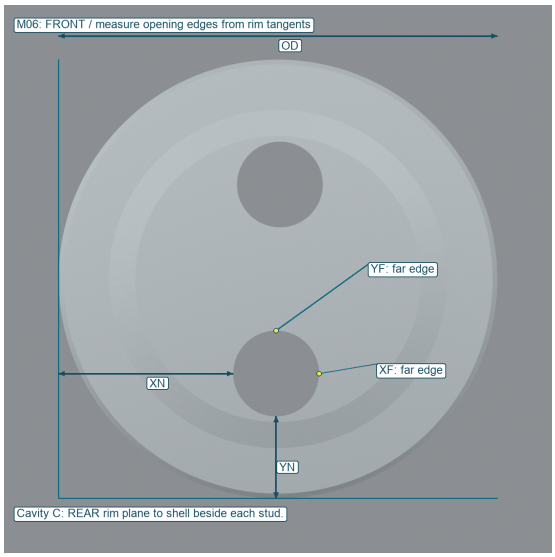

Protect the brushed finish. Measure the circular outer rim diameter in two directions and report any difference. Using left and bottom rim tangent blocks as datums, measure near/far edges of the LOWER control opening. Its center follows from the paired edges, so no center mark is needed. Measure the rear rim-contact plane to the inner cavity surface beside EACH stud location; report the smaller clearance and both locations in notes. Keep the drain notch at 6 oclock. Do not use the decorative front face as the rear contact datum.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M06-OD Outer rim diameter opposite rim tangents	184.2 Useful +/-0.5	_____	_____	_____
M06-XN Left rim tangent to lower opening near edge left tangent to left edge of lower bore	73.3 Useful +/-0.3	_____	_____	_____
M06-XF Left rim tangent to lower opening far edge left tangent to right edge of lower bore	109.3 Useful +/-0.3	_____	_____	_____
M06-YN Bottom rim tangent to lower opening near edge bottom tangent to bottom edge of lower bore	34.4 Useful +/-0.3	_____	_____	_____
M06-YF Bottom rim tangent to lower opening far edge bottom tangent to top edge of lower bore	70.4 Useful +/-0.3	_____	_____	_____
M06-C Minimum rear cavity depth at stud locations rear rim plane to inside shell next to each stud	unknown Useful +/-0.25	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

07 / Measure both stud projections

Measurement worksheet | R001 | First checks

Tests apparent seating interference without shortening studs or moving the valve.

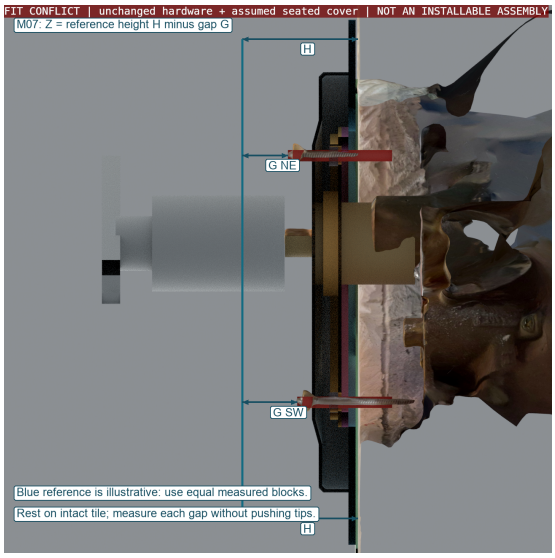

Have the installer establish a straightedge plane on two equal-height blocks resting on intact tile. Choose blocks taller than both studs. Measure block height H, then gap G from the straightedge underside to each stud tip. Tip projection is H - G. Record any local tile lippage and do not rest the reference on a cut or grout recess. The installer also records adjustment range, engaged threads, nuts and adapters; visible tips cannot establish these. Do not cut studs or force the outer trim.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M07-H Reference-block height H tile-contact face to straightedge-contact face	unknown Useful +/-0.25	_____	_____	_____
M07-GSW Gap G to lower-left stud tip straightedge underside to SW tip	unknown Useful +/-0.25	_____	_____	_____
M07-GNE Gap G to upper-right stud tip straightedge underside to NE tip	unknown Useful +/-0.25	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

08 / Check the worst cuts and current state

Measurement worksheet | R001 | First checks

Independently checks scale/coverage and identifies changes since capture.

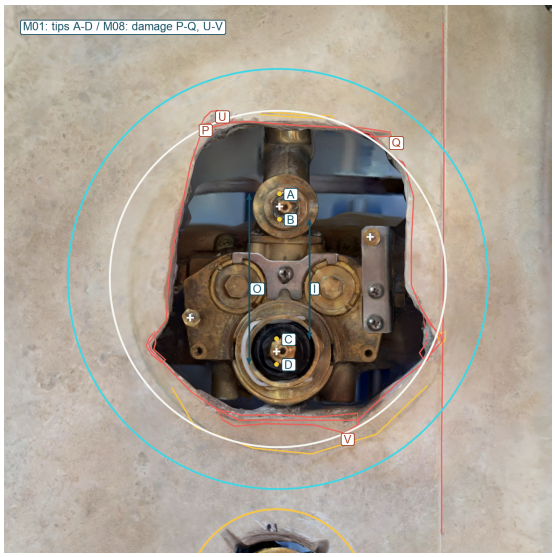

Measure the horizontal span P-Q from the leftmost upper cut end to the rightmost upper cut end, and the vertical span U-V from the highest upper damage to the lowest bottom chipped edge, using the labeled scan view. Do not add these as calibration inputs until their independent-check role is reviewed. Identify whether CUT-02/CUT-07 are real cuts or texture/shadow, and whether MARK-01 is only residue. At GROUT-01 record recess width/depth. No changes since capture were confirmed on 2026-10-14. Report only subsequent changes to piping, valve pose, studs or wall, with photographs of altered areas.

ID / contact	Estimate mm	Raw reading	Unit	Repeat readings
M08-X P-Q upper damage span leftmost CUT-01 end to farthest CUT-03 end	104.0 Useful +/-0.75	_____	_____	_____
M08-Y U-V damage height highest CUT-01 to lowest CUT-06	176.7 Useful +/-1	_____	_____	_____
M08-GW Adjacent grout recess width stone edge to stone edge at marked seam	unknown Useful +/-0.5	_____	_____	_____
M08-GD Adjacent grout recess depth intact stone plane to grout surface	unknown Useful +/-0.25	_____	_____	_____

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____


_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.

09 / Installer checks before selecting a repair

Measurement worksheet | R001 | Installer checks after first readings

Resolves inaccessible and hidden conditions without asking the homeowner to probe plumbing.

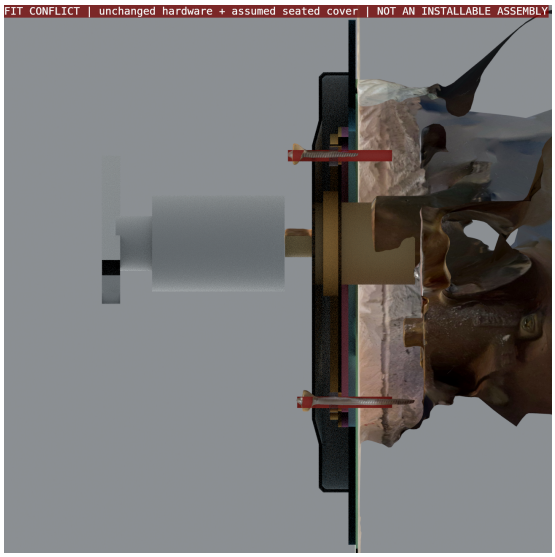

Record in notes: actual nut thickness and bearing-seat position, any washers or rear stops, foam compression when correctly seated, and adapter/stud thread engagement. Check access behind the opening, sound substrate, visible waterproofing and feasible local connection; cartridge/tool-removal paths and lower diverter clearance. The original guide limits stud tips to 7/16 inch from the finished wall; it does not approve this custom plate stack. Do not loosen pressure parts, cut studs or infer an unseen membrane from the scan. No valve relocation is approved.

Date: _____ Tool / method: _____

Photo / trace reference: _____

Notes, repeatability, condition and uncertainty: _____

_____

Amber model geometry is assumed. Do not use estimates as your readings. Return raw values and units; do not round to match the model.