1. Identify and inspect the parts

Use a copy during the expert visit or incoming inspection. Record actual readings in mm unless stated. Keep entries concise; attach extra notes/photos and check the saved form before printing.

Record ID / date


Observer / company

Vendor / order reference

Received part IDs / revision


Material / thickness / finish ordered

MAIN / UP

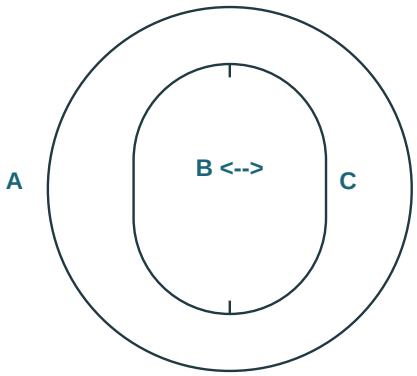

A = outside / B = opening width / C = height

DIVERTER

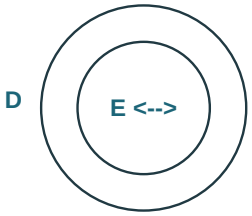

D = outside / E = opening

T = thickness
Measure at several places.
Compare flatness on a known-flat reference.

Design reference: A 220; B 116.35; C 151.10; D 124 (fallback 120); E 80. Stock T1524 (1.524 mm) or T3000 (3.000 mm). Diagrams are not full-size templates.

A: main outside diameter

B: opening width

C: opening height

D: diverter outside diameter

E: diverter opening

T: main / diverter min-max

P17 Flatness method/readings; sharp edges, burrs, distortion or finish defects; photo references

P15: identity/material result

NOT RECORDED

P16: dimensions result

NOT RECORDED

P17: condition result

NOT RECORDED

P01 If paper used: X / Y readings for each 100 mm bar, on each of the TWO A3 sheets; print result or N/A

Compare readings to the actual confirmed order and shop targets. Record the method/instrument and deviations; do not substitute design numbers for observations. The paper test checks layout only.

2. Establish factory attachment

The expert checks the original Kohler parts first, then repeats with the added stack on page 3. A factory-only mechanical fit does not prove a seal over the damaged opening.

Record ID / date / observer

Applicable guide revision / actual part identity

P09 / P10 Distinguish the attachment interfaces

U = upper volume stem; L = lower temperature stem; D = separate diverter stem. The main handle assemblies thread onto the inner plate hubs; the stem adapters must engage the valve. Seeing a stem through an opening is not proof of engagement.

U - upper volume: adapter / screw / hub

Factory-only fit result

NOT RECORDED

L - lower temperature: adapter / screw / hub

Factory-only fit result

NOT RECORDED

D - diverter: adapter / screw / hub

Factory-only fit result

NOT RECORDED

P10 Actual seating/engagement observations, method and photos; failed/hidden interfaces; required adapter correction

P09 Rod projection and the confirmed wood obstruction

NE = upper-right rod; SW = lower-left rod, viewed from the shower. Record from the ORIGINAL finished tile face. With a parallel straightedge whose outer face is H above tile, measure gap G back to the tip: projection = H - G. Keep H and G, sign and method; no U/L target is inferred.

Before: NE / SW projection + H / G

After: NE / SW projection + H / G

P09 Rear contact, chosen remedy, retained thread engagement, nut/cover clearance, method and photo refs.

P09: actual rod/nut fit

NOT RECORDED

Expert: isolation / operation / temperature checks

Wood relief is the owner's conditional preference if the other depths work. The expert establishes access, clearance and dimensions; preserve tile. The legacy main guide specifies 7/16 inch (11.1125 mm) maximum rod projection from the wall; confirm its applicability before using it.

Source: Kohler 1041504-2-F, pages 7-8 (main); 1190382-2-A, page 1 (diverter). Use the applicable original guide for adapter choice, screw lengths and handle assembly. Do not remove pressure-containing parts without the expert's isolation plan.

3. Trial the complete added stack

Use the real factory inner plates, foam, covers and handles with the measured custom parts. No force-fitting. PASS requires a stated observation; hidden or untested interfaces remain UNRESOLVED.

Record ID / date / observer

Actual parts / revision / stock / diverter size

Shower-side order: sound support -> custom backing -> factory foam / inner plate -> decorative cover -> handle. Added height = actual backing thickness t + effective bedding/support height b. Uncompressed 6 mm foam is not an allowable spacer height.

Main: t / b / total added height

Diverter: t / b / total added height

Smallest actual gap between backings

Main exposed border: top / right / bottom / left

Diverter border: top / right / bottom / left

	Result	Observation / photo ref.
P02 Both valve/hub openings register	NOT RECORDED	
P03 Centered and retained without sliding	NOT RECORDED	
P04 Every gouge / CUT-03 is covered	NOT RECORDED	
P05 Firm support at seal / clamp zones	NOT RECORDED	
P06 No rocking / unacceptable deflection	NOT RECORDED	
P07 ENTIRE foam/contact path, both valves	NOT RECORDED	
P08 Both covers seat; no rod/nut conflict	NOT RECORDED	
P10 U / L / D engage with added plate	NOT RECORDED	
P11 Factory bottom drain/notch stays clear	NOT RECORDED	
P12 Full handle travel and neighbor gap	NOT RECORDED	
P13/P14 Tool / removal / cartridge access	NOT RECORDED	

Conflicts / incomplete checks / photo index / exact revision changes needed (attach more pages if needed)

A dry fit is not a water test. Any support, retention, adapter, aperture or thickness change must be recorded and its affected checks repeated.

4. Record the repair and testing

Complete only as work actually happens. The qualified installer selects the support/seal detail and applicable product instructions. Unperformed tests stay NOT RECORDED.

Record ID / date / observer

Final part / repair drawing revision(s)

P05/P06 Selected support / load path / local rebuilding; detail/sketch/photo refs.; how removal remains possible

P07/P11 Actual seal-contact detail for BOTH valves, factory gasket condition, product/primer and preserved drain

P18 Product / TDS revision / lot; stone non-staining and substrate compatibility evidence; selected joint detail

Applied date/time + temperature / humidity

Required cure / earliest water exposure + source

P18: cure conditions met	P19: supply / valve leak test	P20: shower spray entry test
NOT RECORDED	NOT RECORDED	NOT RECORDED

P19 Date / observer / isolation or operating state / method / duration / accessible observation points / result / photos

P20 After verified cure: date / observer / spray method / duration / access points / moisture observations / photos

Expert assessment: remaining defects, stop conditions, remediation or further checks; accepted revision and rationale

Expert name / date (assessment attribution)

Owner received record / date / next action

Supply leakage and shower-water ingress are separate tests. Stop on new moisture and investigate. A local successful test does not certify the concealed shower system. Return this record with its referenced photos; changes require reconciliation before a permanent-installation manual can be finalized.