

01 / Slow detuned drone


Two close pitches, a dark filter, and a slow change in brightness.

Modules: 2 VCOs • mixer • low-pass VCF • VCA with bias • LFO • attenuator • output

—▶ AUDIO / sound path

- - -▶ CV / modulation

Arrows point from output to input.

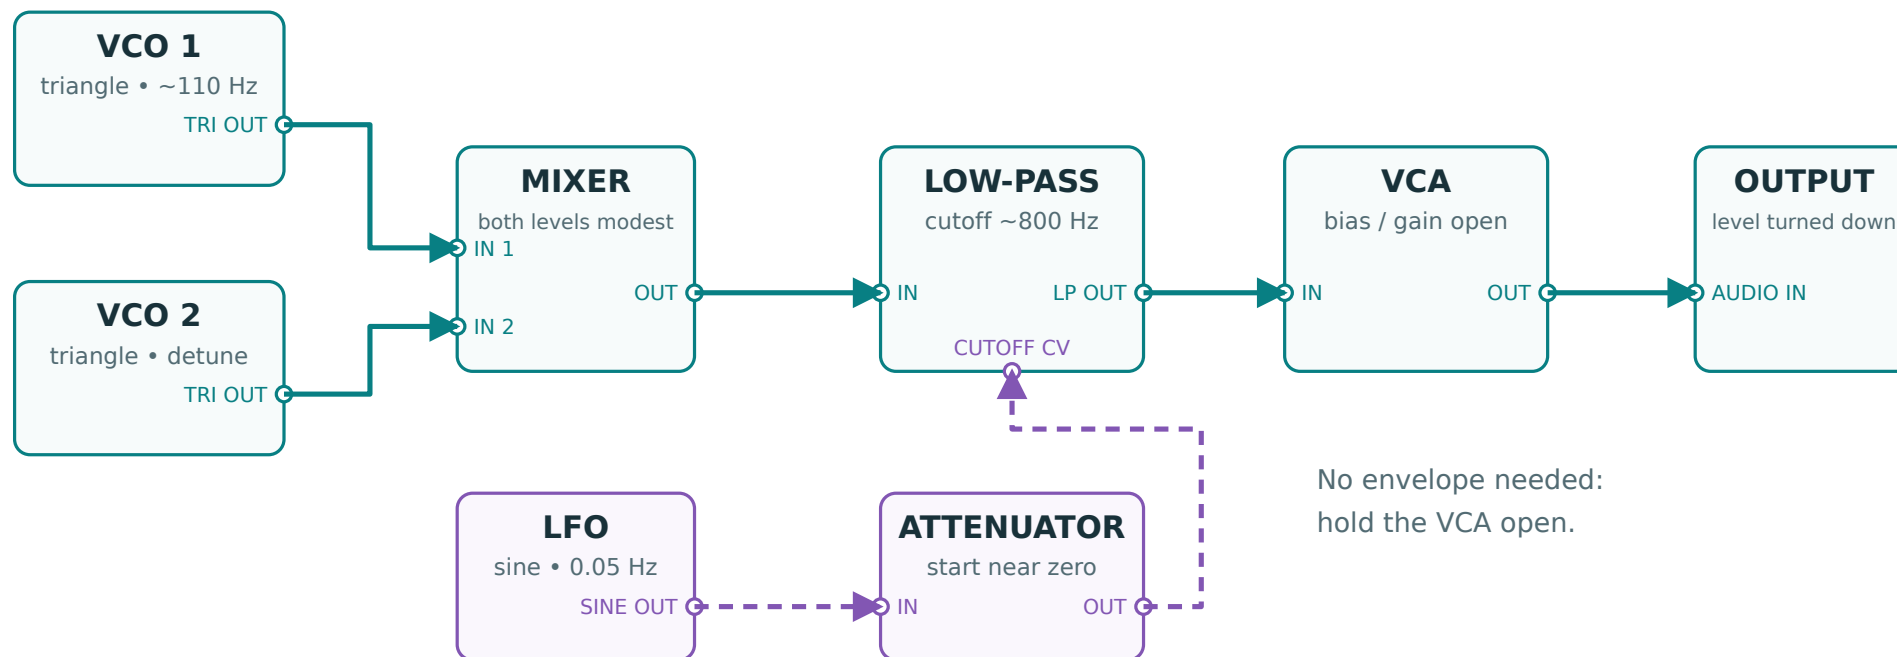

KNOBS TO PLAY



VCO 2 FINE

beat speed

Start a few cents from VCO 1.



FILTER CUTOFF

dark ↔ bright

Sweep slowly around the base pitch.



LFO DEPTH

amount of movement

Small sweeps keep it calm.



RESONANCE

soft ↔ focused

Begin low; add a little at a time.

START: Match pitches, detune slightly, open the VCA, then add a little filter modulation.

0.05 Hz means one modulation cycle every 20 seconds. Saw waves make a brighter variation.


Generic patch recipe • jack names and knob ranges vary by module • 2026-09-13 • see PATCH-GUIDE.md

02 / Breathing noise

Wind, surf, and airy swells from one noise source and one slow LFO.

Modules: noise • band-pass VCF • VCA with bias • LFO • 2 attenuators + mult • optional reverb • output

—▶ AUDIO / sound path - - - ▶ CV / modulation Arrows point from output to input.

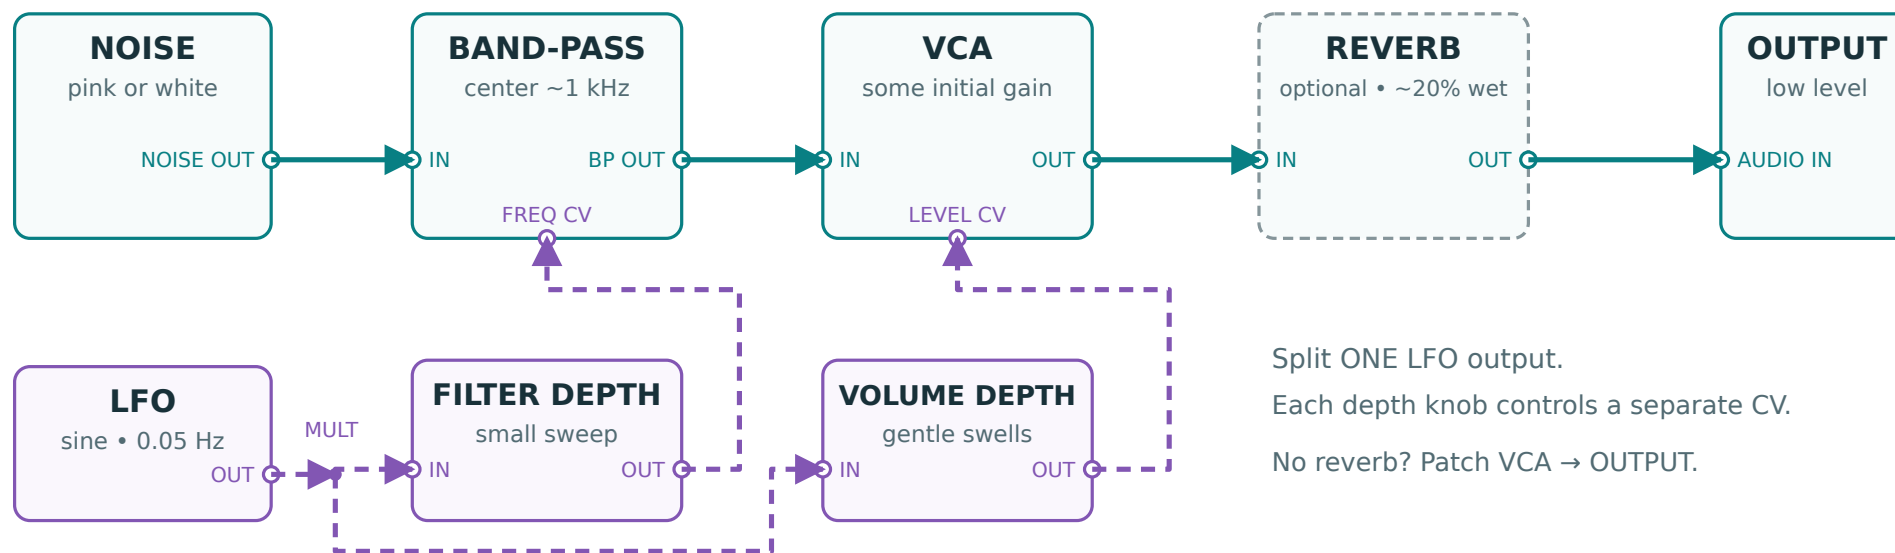

KNOBS TO PLAY



FILTER FREQ

size of the wind

Low = muffled; high = airy.



RESONANCE

whistling detail

Stay below self-oscillation at first.



LFO RATE

breathing speed

Try 10–40 seconds per cycle.



VOLUME DEPTH

soft swell ↔ silence

Keep some sound at the LFO trough.

START: Noise into filter; low resonance. Add quiet VCA gain, then both LFO depth controls.


A low-pass output also works. Increase VCA bias or reduce CV depth if the sound closes off too much.

Generic patch recipe • jack names and knob ranges vary by module • 2026-09-13 • see PATCH-GUIDE.md

03 / Slowly shifting metallic drone

A sine oscillator modulates a second oscillator at audio rate; a slow LFO adds drift.

Modules: 2 VCOs (carrier needs linear FM) • low-pass VCF • VCA with bias • LFO • 2 attenuators • output

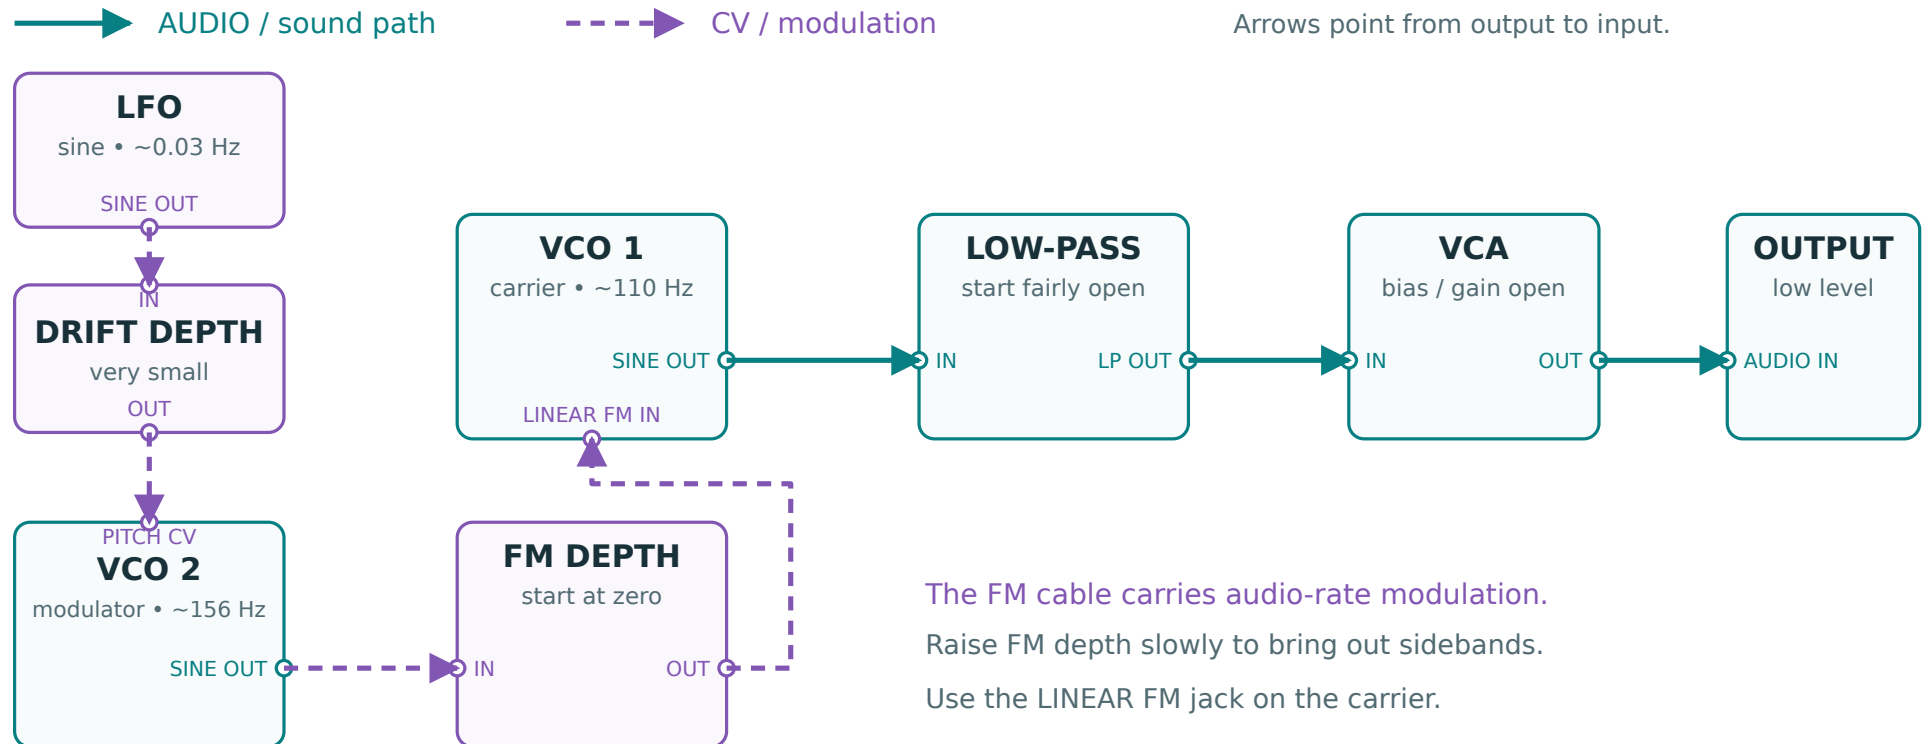

KNOBS TO PLAY



FM DEPTH

main timbre control

Pure tone → richer / metallic.



VCO 2 PITCH

change the frequency ratio

Move away from simple octaves.



FILTER CUTOFF

soften the edges

Lower it as the sound gets brighter.



DRIFT DEPTH

stable ↔ slowly moving

Use only slight pitch movement.

START: Sine waves; VCO 1 near 110 Hz, VCO 2 near 156 Hz. Start with FM and drift at zero.

These are starting points, not tuning requirements. Linear FM depth and pitch stability depend on the oscillator.

Generic patch recipe • jack names and knob ranges vary by module • 2026-09-13 • see PATCH-GUIDE.md