



Yes to sconces. Let the bedroom have more than one mood.

Owner update: bedroom wall sconces are planned; portable lamps are possible. Use those layers deliberately, with enough ambient capacity for dressing and cleaning.

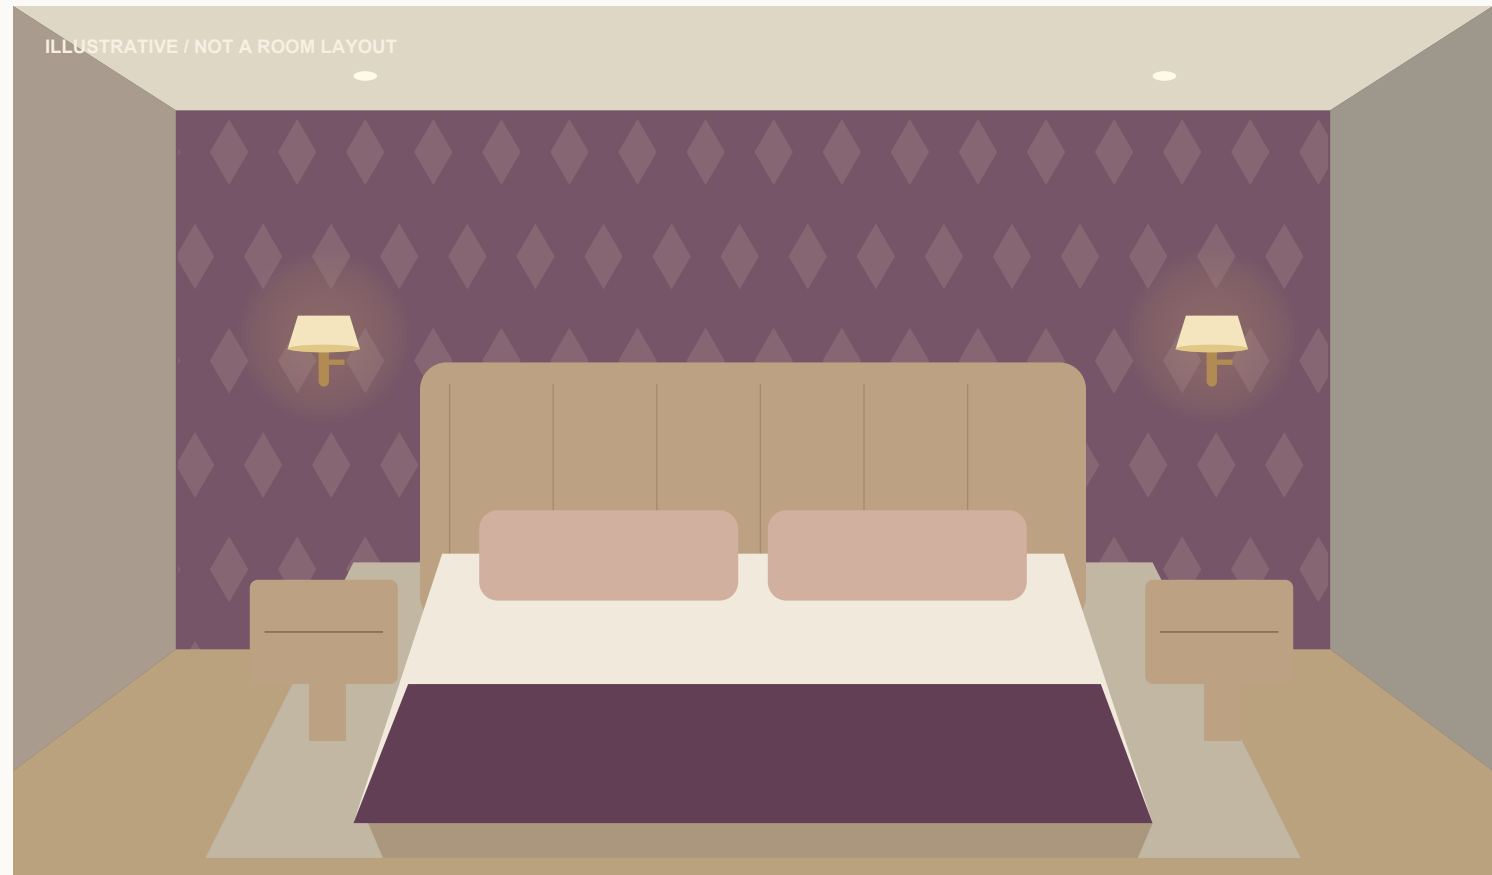

01 / BRIGHT + PRACTICAL

Ceiling ambient on; sconces balance the bed wall. This is the useful full-room setting for getting dressed, making the bed and finding things.

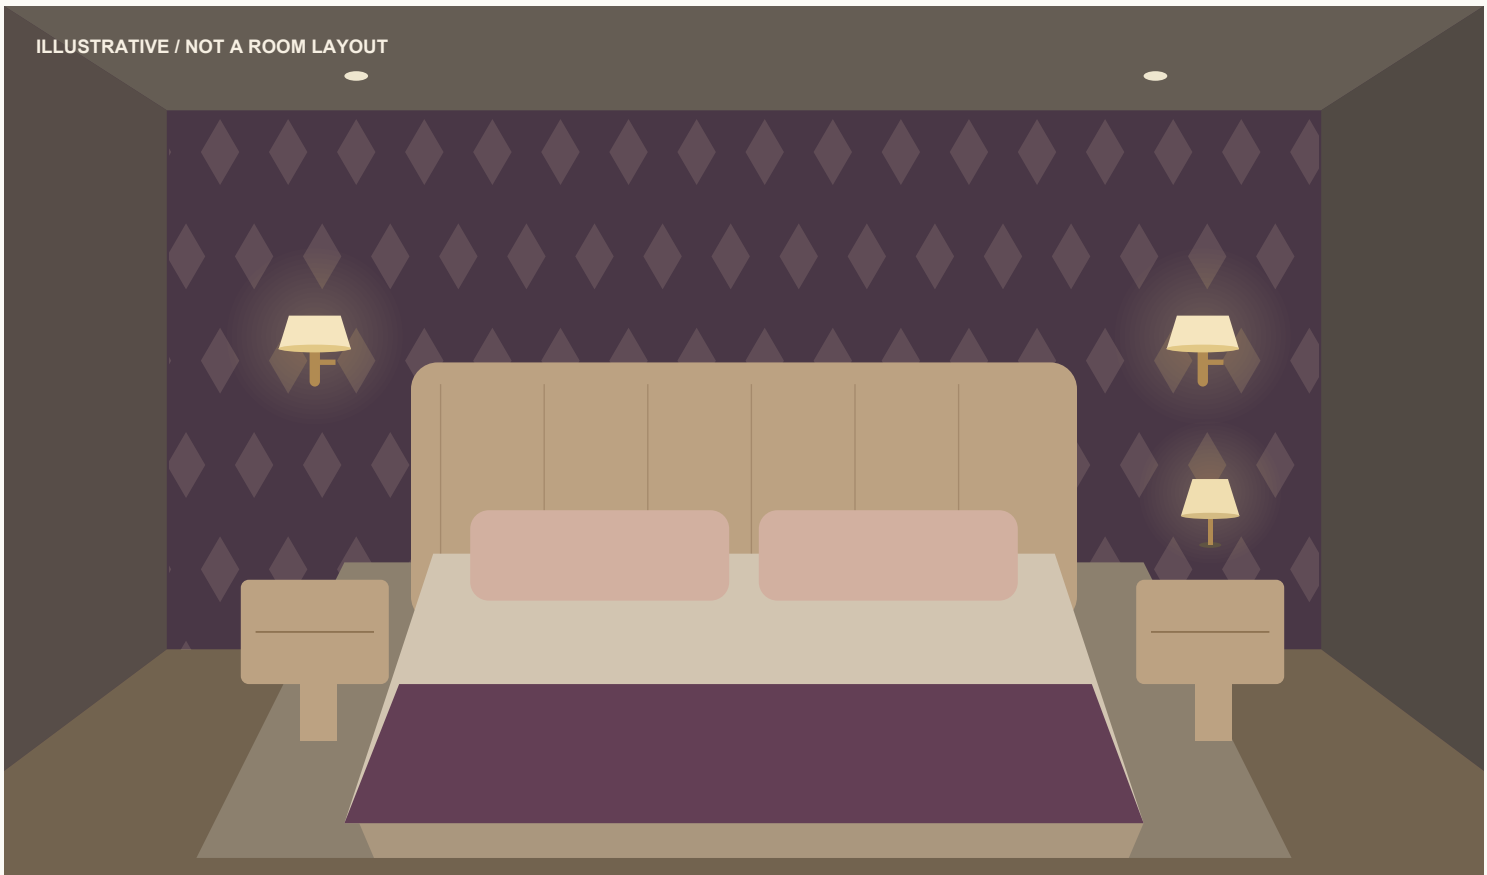


02 / EVENING + PERSONAL

Ceiling ambient low or off; warm shaded sconces carry the room. An optional lamp adds a second pool of light, ideally at a chair or desk rather than duplicating every bedside.

The numerical study still measures the ceiling layer only.
No additional lux has been assigned to these unselected sconces or lamps. They add atmosphere and task opportunities; selected fixture photometry and the actual furniture layout are needed to quantify that contribution.

Three directions for warm, personal bedrooms.

Keep the light warm and the controls consistent. Let the shade, metal and wall finish change the room’s character; these are original concepts, not product selections.

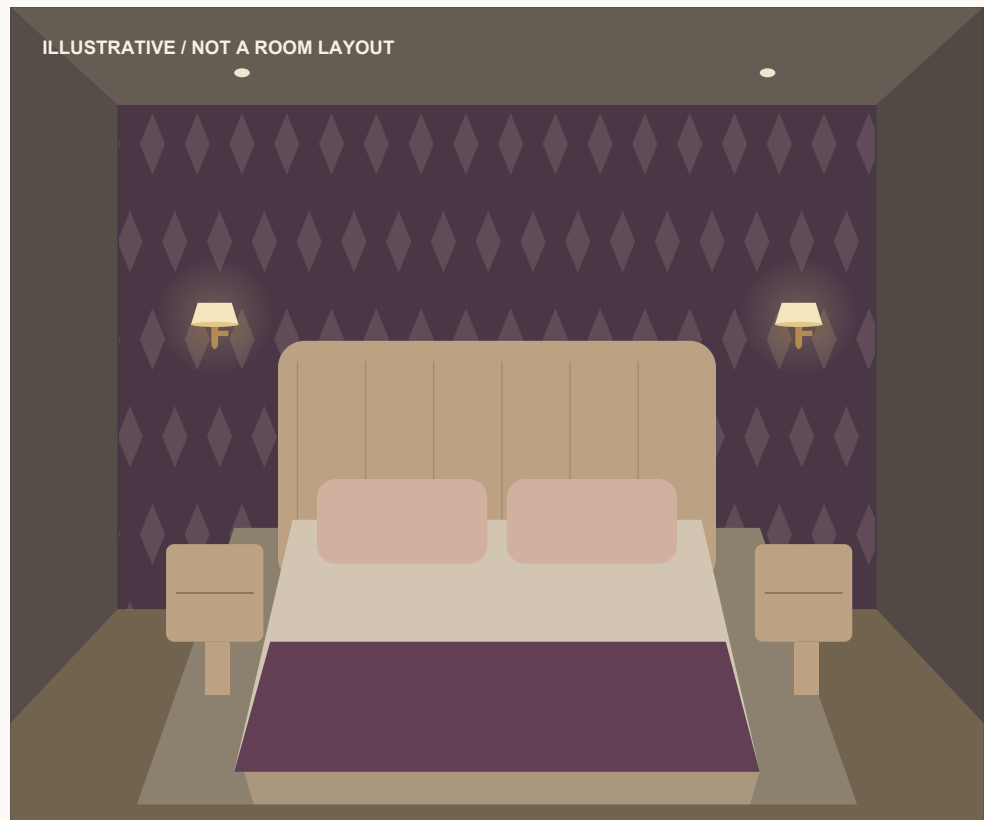

A / PLUM + LINEN

My favorite for the primary


Textured aubergine wall, warm oak headboard, pleated or linen shades and aged brass. Soft pools at eye level; add a reading light only if the chosen shade cannot reach the book.



B / OLIVE + BOTANICAL

A good reading / guest-room direction

Leaf-pattern wallpaper with a quieter bed. Adjustable, shielded sconces let each person aim toward a book. A small lamp at a chair makes another place to settle.

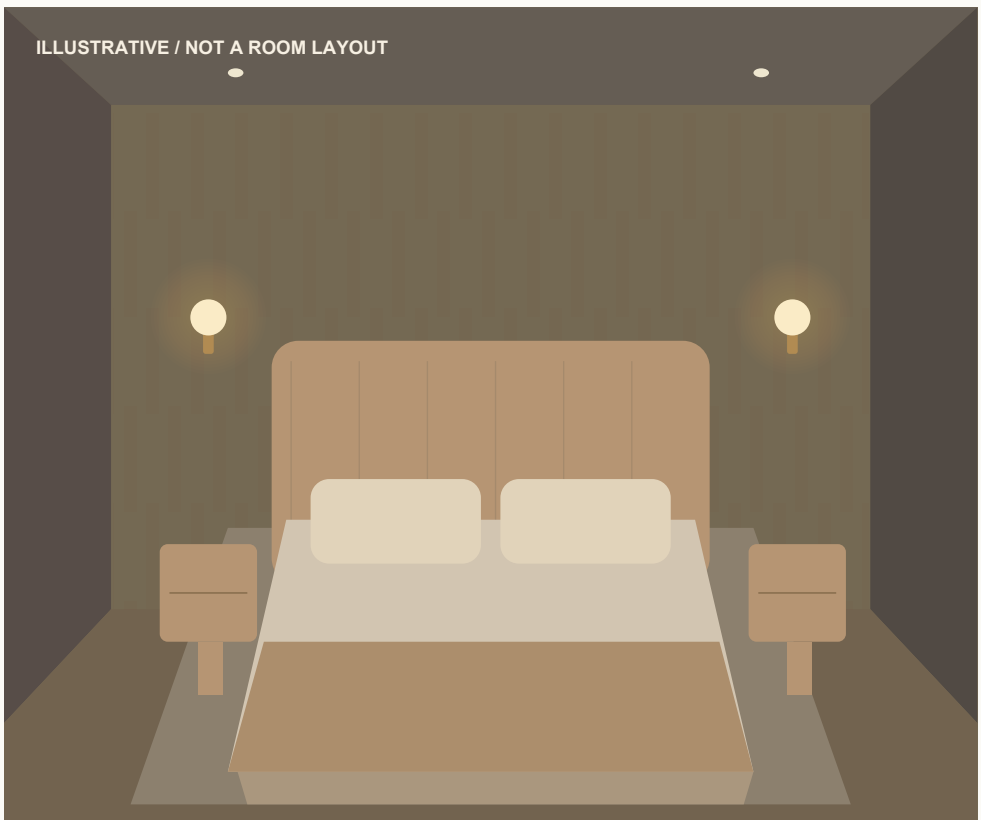

C / SAND + SCULPTURAL

A calmer smaller-bedroom direction

Subtle striped or woven wallpaper, sculptural opal or ceramic sconces and pale oak. Diffuse glow is atmospheric; verify reading performance or provide a task lamp.


A sconce can be beautiful and still be the wrong reading light.

Choose whether it is decorative glow, directed reading light, or a combination. Test it while sitting in the actual bed: is the page lit without a bright source in either person’s eyes? A dark wallpaper also changes the reflected-light contribution.

Set the bed first. Then place the light and the switch.

The useful detail is the relationship between pillow, eye, book and hand. Fixing every sconce at a generic mounting height would skip that coordination.

BED WALL / COORDINATION DIAGRAM

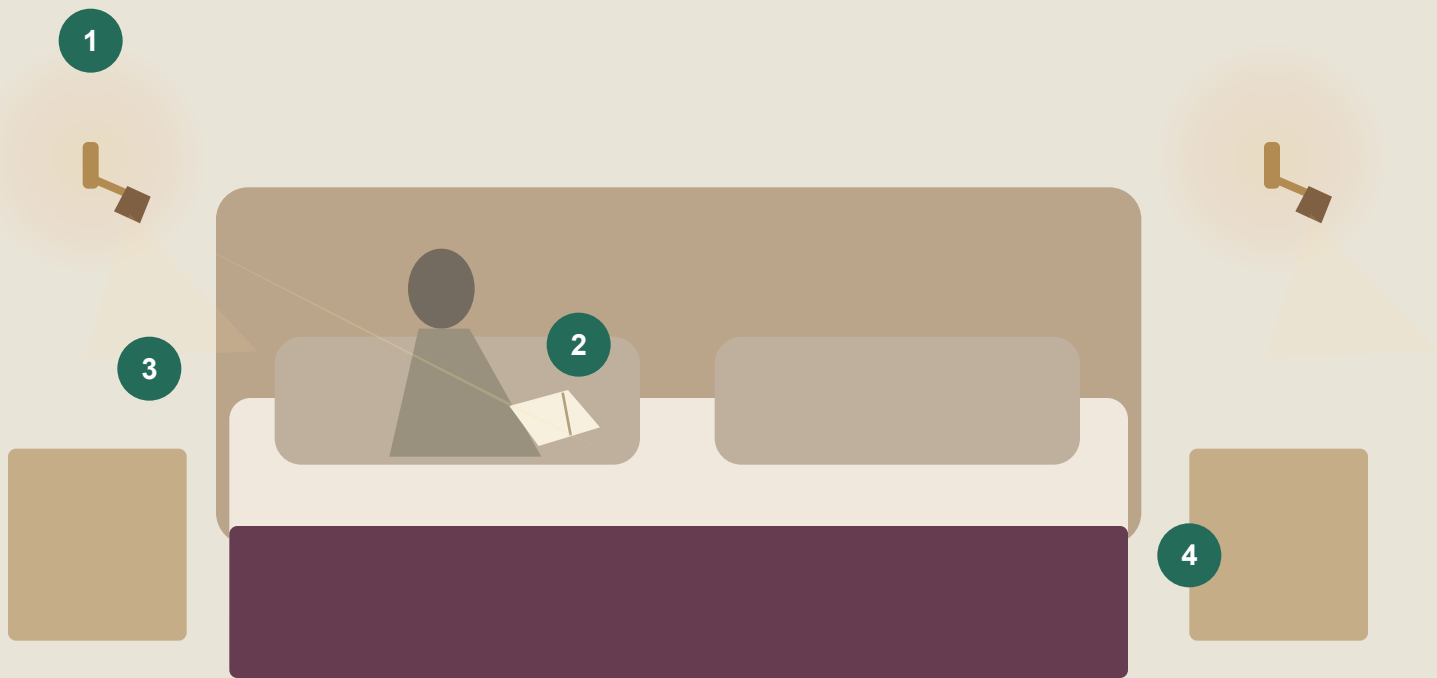

Final heights and offsets follow a full-size mockup with the chosen headboard.

1 Fixture position

Keep the shade clear of the headboard, artwork and curtains. Check projection and access as well as box center.

2 Reading beam

Aim at the book from a comfortable sitting position. Shield the lamp from both partners' eyes; test left and right separately.

3 Reach + independence

Each person should control their own bedside light without getting up. Keep a useful entry control for the room.

4 Optional lamp power

Provide a coordinated outlet at the intended table, chair or desk. An outlet is not an assumption that a wall dimmer can control any portable lamp.

Give each light layer independent control.

Ceiling ambient, left bedside, right bedside and optional desk / chair light should be usable separately. Local wall controls should work without Wi-Fi. Any added circuit, switch or box gets reconciled against the issued electrical scope before rough-in.

2700K is the proposed bedroom starting point. Confirm the actual lamp / fixture / dimmer combination and low-end behavior in the mockup; the coordination draft's checked 2700K statement specifically covers the Level 2 great room.

Apply the same logic to each bedroom—then personalize it.

The confirmed addition is wall sconces. The examples below translate that direction into usable layers without treating every lamp or fixture count as approved scope.

ROOM	WALL-LIGHT DIRECTION	OPTIONAL LAMP	COORDINATE / VERIFY
Primary 211	Pair of shaded sconces; consider separate reading heads if needed.	Chair / reading corner, if the furniture layout supports one.	Primary is outside the downstairs calculation; verify its own ceiling, headboard and controls.
Bedroom 1	Bedside pair or a bed-specific arrangement after bed size is set.	Table or chair lamp; avoid filling both nightstands by default.	Ceiling test: 163–181 lux.* Balance shade glow with useful reading light.
Bedroom 2	Compact sconces to preserve nightstand space.	Only if a chair / desk creates another use.	Ceiling test: 142–159 lux.* Keep door, closet and fixture projection clear.
Bedroom 3 / WFH	Bedside sconces when used as a bedroom; treat the desk separately.	Adjustable desk lamp for the actual work surface.	Ceiling test: 150–166 lux.* Check screen reflections from seated eye position.
Bedroom 4 / office	Choose the bed / desk arrangement before locking wall boxes.	Task lamp on desk or a shaded guest-room lamp.	Ceiling test: 155–176 lux.* Do not strand a bedside box behind a future cabinet.

*Candidate ceiling-only finish-sensitivity averages, not total room illumination with sconces. No lamp output is credited.

MY RECOMMENDATION

Make sconces part of the architecture, and use portable lamps where they create a useful second place to read, work or unwind. Keep sufficient ceiling capacity for practical tasks; reduce it with dimming when the wall lights take over.

Next drawing to request

One bed-wall elevation per room, with the actual headboard, fixture, switches and outlets dimensioned together.