


tb_mpdda_op: operating point of d2s_mpdda at vd = 0: device currents and saturation margin

DUT and bias from the schematics in this directory; code block = the deck's .lib/.param/.save lines and its .control section

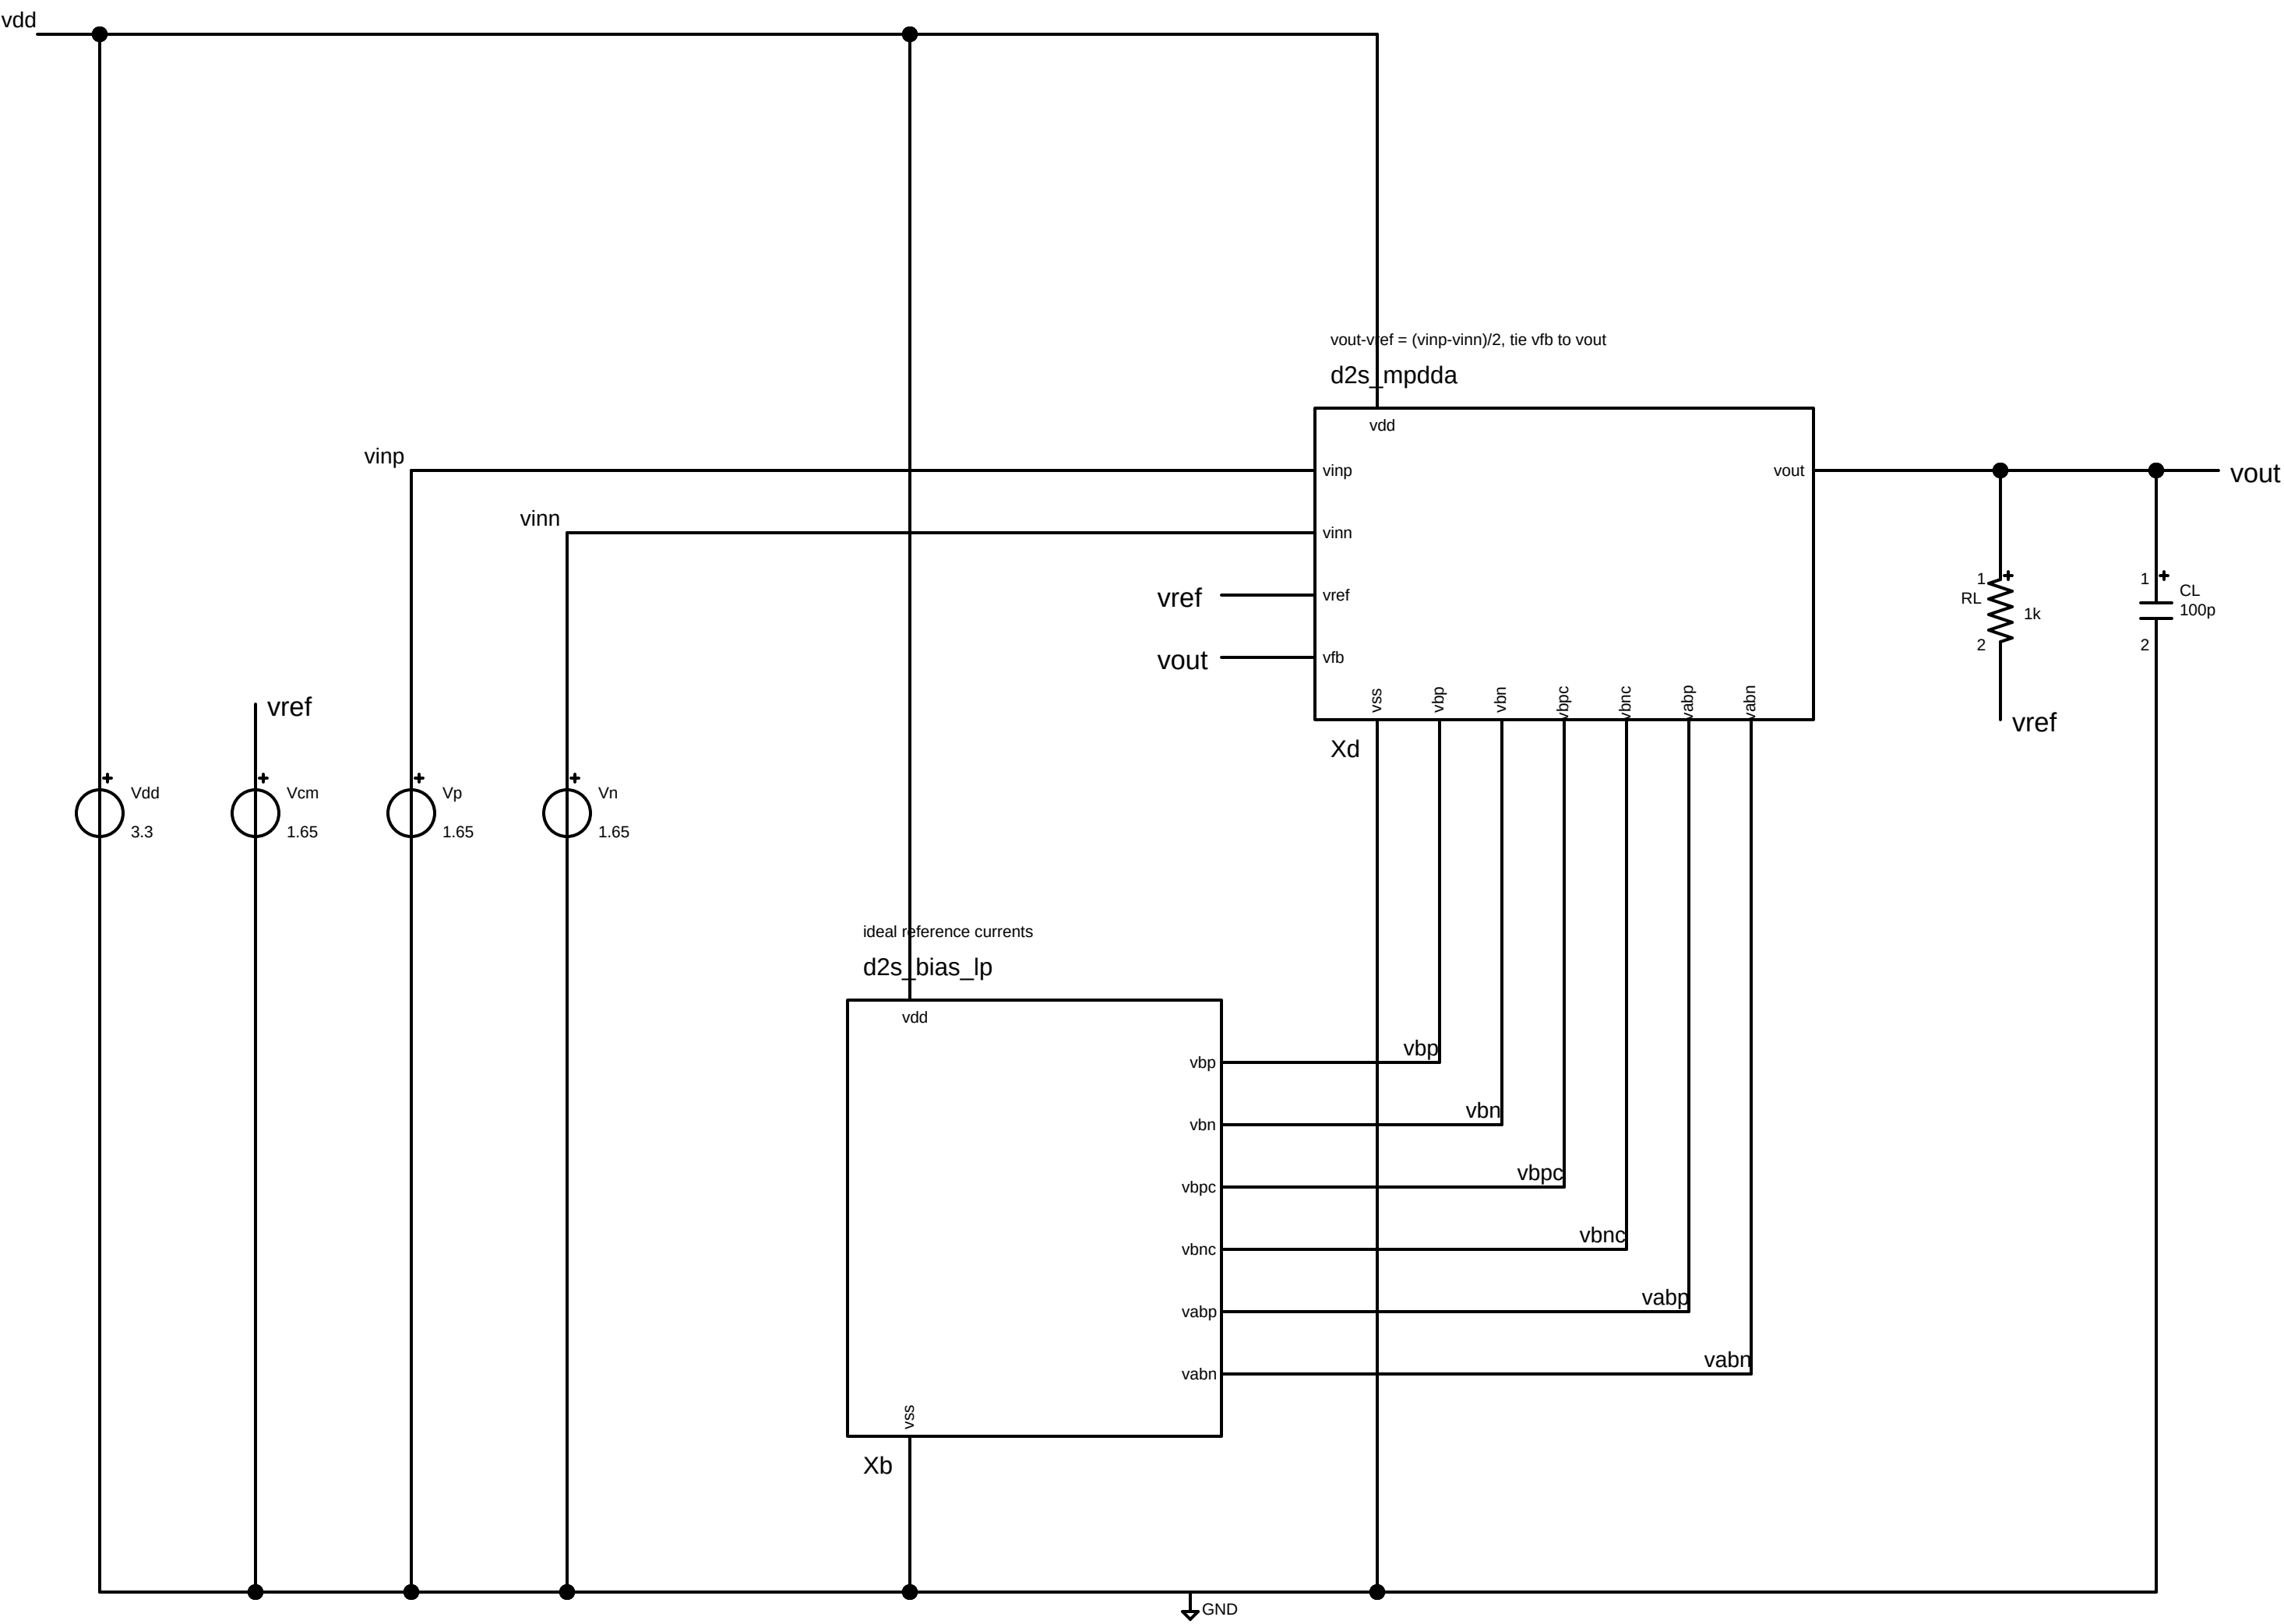

```
s1
.lib cornerM0Shv.lib mos_tt
.lib cornerRES.lib res_typ
.lib cornerCAP.lib cap_typ
.control
op
print v(xd.x) v(xd.y) v(xd.a) v(xd.b) v(xd.l1) v(xd.l2) v(xd.pl) v(xd.pr) i(vdd)
print @n.xd.xsx.nsg13_hv_nmos[ids] @n.xd.xsx.nsg13_hv_nmos[vds] @n.xd.xsx.nsg13_hv_nmos[vdss]
print @n.xd.xsy.nsg13_hv_nmos[ids] @n.xd.xsy.nsg13_hv_nmos[vds] @n.xd.xsy.nsg13_hv_nmos[vdss]
print @n.xd.xcx.nsg13_hv_nmos[ids] @n.xd.xcx.nsg13_hv_nmos[vds] @n.xd.xcx.nsg13_hv_nmos[vdss]
print @n.xd.xcy.nsg13_hv_nmos[ids] @n.xd.xcy.nsg13_hv_nmos[vds] @n.xd.xcy.nsg13_hv_nmos[vdss]
print @n.xd.xfnl.nsg13_hv_nmos[ids] @n.xd.xfnl.nsg13_hv_nmos[vds] @n.xd.xfnl.nsg13_hv_nmos[vdss]
print @n.xd.xabn.nsg13_hv_nmos[ids] @n.xd.xabn.nsg13_hv_nmos[vds] @n.xd.xabn.nsg13_hv_nmos[vdss]
print @n.xd.xon.nsg13_hv_nmos[ids] @n.xd.xon.nsg13_hv_nmos[vds] @n.xd.xon.nsg13_hv_nmos[vdss]
print @n.xd.xpl.nsg13_hv_pmos[ids] @n.xd.xpl.nsg13_hv_pmos[vds] @n.xd.xpl.nsg13_hv_pmos[vdss]
print @n.xd.xpr.nsg13_hv_pmos[ids] @n.xd.xpr.nsg13_hv_pmos[vds] @n.xd.xpr.nsg13_hv_pmos[vdss]
print @n.xd.xpcl.nsg13_hv_pmos[ids] @n.xd.xpcl.nsg13_hv_pmos[vds] @n.xd.xpcl.nsg13_hv_pmos[vdss]
print @n.xd.xpcr.nsg13_hv_pmos[ids] @n.xd.xpcr.nsg13_hv_pmos[vds] @n.xd.xpcr.nsg13_hv_pmos[vdss]
print @n.xd.xfpl.nsg13_hv_pmos[ids] @n.xd.xfpl.nsg13_hv_pmos[vds] @n.xd.xfpl.nsg13_hv_pmos[vdss]
print @n.xd.xabp.nsg13_hv_pmos[ids] @n.xd.xabp.nsg13_hv_pmos[vds] @n.xd.xabp.nsg13_hv_pmos[vdss]
print @n.xd.xop.nsg13_hv_pmos[ids] @n.xd.xop.nsg13_hv_pmos[vds] @n.xd.xop.nsg13_hv_pmos[vdss]
.endc
```