Elsy and Sam Sandora

Home Improvement Jobs

Review Draft — Not for Distribution

April 2026

Gazebo Installation Proposal

Site Photos:

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Install a client-purchased 12x10 gazebo kit on the existing 12x12 brick paver patio. The gazebo will be anchored using four short 4x4 pressure-treated posts set in concrete. The gazebo legs are designed to fit over the 4x4 posts. The gazebo does not need to be centered on the patio.

Scope of Work

1. Positioning the Gazebo

- Determine final placement of the 12x10 gazebo on the 12x12 patio
- Mark the four anchor post locations to match the gazebo leg positions
- Verify layout is square and properly aligned
- Identify any patio blocks that need to be removed for post placement (up to 4 pavers may need to come up for one post location)

2. Digging Post Holes

- Remove patio pavers as needed at each post location
- Excavate four post holes beneath the paver surface to proper depth for anchoring
- Clear any gravel base material or sub-base as needed for clean holes

3. Setting and Leveling Posts with Concrete

- Set four short 4x4 pressure-treated posts into the holes
- Pour concrete around each post
- Level and square all four posts to ensure the gazebo sits true and plumb
- Allow concrete to cure before proceeding with assembly
- Reinstall or patch any displaced pavers around the posts

4. Gazebo Assembly

- Unpack and inventory all kit components
- Assemble the 12x10 gazebo per manufacturer instructions
- Fit gazebo legs over the four 4x4 anchor posts for a secure connection

- Verify structure is level, square, and stable
- Clean up all packaging and job site debris

Materials

Item	Notes
12x10 Gazebo kit	On site, purchased by client
4x4 pressure-treated posts (x4)	Cut short for anchoring
Concrete mix	For setting posts
Hardware/fasteners	As needed for assembly and anchoring

Site Conditions

- Existing 12x12 brick paver patio in fair condition
- Gravel border along patio edges with landscape edging
- Ground cover and ivy may need trimming back for clearance
- Gazebo kit materials currently stored against house wall on site

Fence with Gate Replacement Proposal

Site Photos:

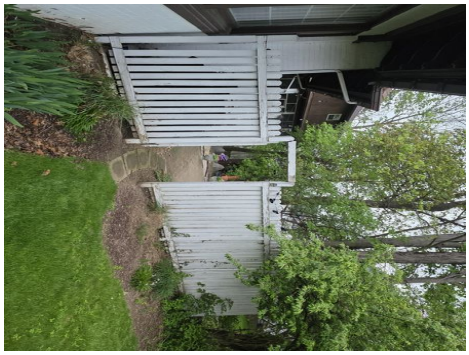

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Remove the existing worn white-painted wood fence and gate. Replace with new posts and prefab vinyl-clad fence sections at approximately the same height, including a matching vinyl-clad gate.

Existing Conditions

- Current fence is built from 2x4s, white painted, with horizontal slat sections and a vertical picket gate
- Paint is badly peeling and wood is very worn throughout
- Posts are deteriorating at the base
- Gate connects the side yard to the backyard patio area
- Stepping stones run through the gate opening

Scope of Work

1. Demolition and Removal

- Take down all existing fence sections and gate
- Remove old posts from the ground
- Haul away and dispose of all old fence materials

2. Post Setting (6 Posts)

- Lay out and mark 6 post locations in a straight line
- Dig post holes to proper depth
- Set 6 posts in concrete
- Level and plumb each post
- String-line all posts to confirm they are aligned in a straight line
- Allow concrete to cure before attaching fence sections

3. Fence Section Installation

- Measure and confirm prefab vinyl-clad fence sections fit between posts
- Install fence sections at approximately the same height as the existing fence
- Secure sections to posts with appropriate brackets and fasteners

- Ensure all sections are level and aligned

4. Gate Installation

- Install a matching vinyl-clad gate in the existing gate opening
- Mount gate hinges and latch hardware
- Adjust gate for proper swing, clearance, and secure closure

Materials

Item	Qty	Notes
Fence posts	6	Set in concrete
Concrete mix	As needed	For all 6 post holes
Prefab vinyl-clad fence sections	As needed	Matched to existing fence height
Vinyl-clad gate	1	Matching style
Gate hardware	1 set	Hinges, latch
Brackets/fasteners	As needed	For securing sections to posts

Site Conditions

- Stepping stones run through the gate area and will be preserved
- Adjacent structures (house wall, carport) will need clearance for post placement
- Old post holes may be reusable depending on condition and alignment

Walkway with Stone Blocks Proposal

Site Photos:

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Replace the existing single-wide stepping stone walkway with a double-wide 15" block walkway. Blocks will be laid tightly together with minimal gaps from the bottom of the walk all the way up to the front door. The three existing makeshift steps in the middle of the slope will be rebuilt properly in the same stacked-block style, and a fourth step with a longer landing will be added above them. All steps will have proper footing to remain stable.

Existing Conditions

- Long curving walkway running from the street/sidewalk up to the covered front porch
- Currently single-wide (~15" square pavers) laid single file with large gaps between blocks
- The yard slopes upward toward the house — grade change is handled by three makeshift steps built from stacked stone blocks in the middle section
- Solar path lights installed along the garden bed side
- Established plantings on both sides: hostas, phlox, ground cover, and other perennials
- Mulch bed on the garden side, lawn on the opposite side

Scope of Work

1. Removal of Existing Walkway

- Carefully remove all existing single-wide pavers along the full walkway length
- Set aside any reusable blocks
- Note: Elsy will remove all plantings lining both sides of the walkway prior to work

2. Base Preparation

- Excavate and widen the walkway bed to accommodate double-wide blocks (approximately 30" wide)
- Grade the base to follow the natural curve and slope of the walkway
- Compact sub-base and add gravel/crushed stone layer for a stable, level foundation
- Ensure proper drainage so water does not pool on the walkway

3. Double-Wide Block Walkway Installation

- Lay two 15" blocks side by side along the full length of the walkway

- Fit all blocks tightly together with minimal gaps from bottom to front door
- Follow the existing curve of the walkway path
- Fill joints with polymeric sand or appropriate joint material for a tight, finished look

4. Step Section — Rebuild and Expand

The existing three makeshift steps handle the grade change in the middle of the walkway. Elsy wants to keep this stacked-block concept but done right, and add one more step.

Footing:

- Excavate beneath the step section to install proper footing
- Pour concrete footing or lay a compacted gravel foundation to keep all four steps stable on the slope
- Footing must support the full width of the double-wide walkway

Steps (4 total):

- Rebuild the three existing steps using stacked 15" blocks, properly leveled and aligned
- Add a fourth step above the existing three
- The fourth (top) step will have a longer landing — providing a wider, more stable transition before the walkway continues to the front door
- All steps double-wide to match the walkway width
- Each step rise should be consistent for safe, even footing

5. Finishing

- Reinstall solar path lights along the walkway
- Fill all joints and step edges with polymeric sand
- Clean up site debris
- Final inspection for level, alignment, and stability

Materials

Item	Notes
15" stone/concrete blocks	Quantity TBD based on walkway length — double-wide plus steps and landing
Gravel/crushed stone	Sub-base for walkway and step footing
Concrete or compacted footing material	Foundation beneath all four steps
Polymeric sand	Joint filler for tight block-to-block fit
Landscape fabric (if needed)	Weed prevention under base

Site Considerations

- Elsy will remove all plantings lining both sides of the walkway before work begins
- Solar path lights will be temporarily removed and reinstalled
- The walkway curve should be preserved to match the existing landscape design
- Step footing depth and material will depend on soil conditions at the slope

Tudor Style Trim Proposal

Site Photos:

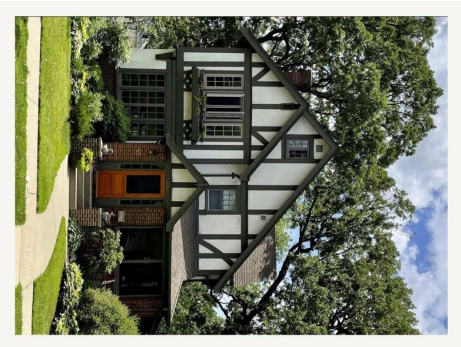

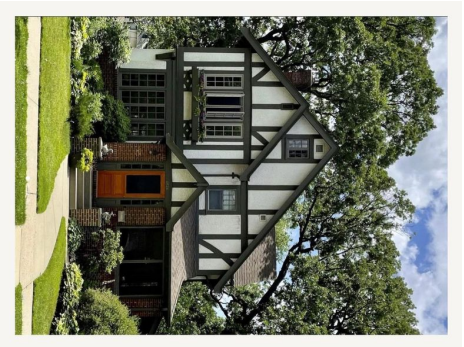

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Apply decorative Tudor-style trim to the white taller section of the house that wraps around to the front. The goal is to give the plain white upper walls a classic Tudor half-timber appearance using trim boards that are glued, nailed, sealed, and painted brown. A mock-up layout will be created first for Elsy's approval before permanent installation.

Reference photos of real estate Tudor homes have been provided for style guidance only — the actual layout will be customized to fit Elsy's house.

Existing Conditions

- The upper story has a tall, plain white wall section that rises above the lower roofline
- This white section wraps from the side of the house around to the front
- Currently no decorative trim — flat white surface
- Brown vertical siding/panels on adjacent sections of the upper story

Scope of Work

1. Design and Mock-Up

- Study the reference Tudor home photos for style direction (diagonal braces, horizontal beams, vertical timbers)
- Assess the white wall sections — measure dimensions on all sides that wrap to the front
- Create a mock-up layout of the Tudor trim pattern directly on the wall for Elsy to see
- Adjust the design based on Elsy's feedback until she approves the final layout

2. Measure and Cut Trim

- Once the layout is approved, measure and cut all trim boards to size
- Pre-paint and seal trim pieces before installation where possible
- Dry-fit pieces against the wall to confirm fit before permanent attachment

3. Installation — Glue and Nail

- Apply construction adhesive to the back of each trim board
- Nail each piece securely to the wall

- Ensure all joints are tight and aligned per the approved layout
- Work around any existing features (windows, gutters, roofline transitions)

4. Seal and Paint

- Seal all trim with exterior-grade sealer to protect against moisture and weather
- Paint all trim boards brown to match the Tudor half-timber style
- Caulk edges where trim meets the white wall for a clean, weather-tight finish

Materials

Item	Notes
Trim boards	Dimensional lumber or composite, sized to mimic Tudor half-timber beams
Construction adhesive	For gluing trim to wall surface
Nails/fasteners	For securing trim
Exterior wood sealer	Weather protection for all trim
Brown exterior paint	Tudor-style dark brown finish
Caulk	Seal edges where trim meets wall

Site Considerations

- Ladder or scaffolding access needed for upper wall sections
- Reference photos are for style guidance only — layout will be custom to Elsy's house
- Mock-up must be approved by Elsy before any permanent installation
- Existing brown siding on adjacent sections can guide the shade of brown for the trim paint

Gutter with French Drain Proposal

Site Photos:

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Replace the gutter and downspout in one area of the house, repair the trim/fascia in that same area, and connect the downspout into the existing french drain. The exposed french drain line needs to be buried better for a cleaner look and more effective drainage.

Existing Conditions

- Gutter and downspout run along the lower roofline where the one-story section meets the taller upper story
- Downspout comes down the white painted brick wall near the screened porch and back steps
- French drain line (black corrugated tubing) runs along the ground near the raised garden beds — currently sitting exposed on the surface
- Trim/fascia board in the gutter area is damaged and needs replacement
- Area is accessible from the backyard near the screened porch

Scope of Work

1. Remove Old Gutter, Downspout, and Damaged Trim

- Take down the existing gutter and downspout in the affected area
- Remove damaged fascia/trim board behind the gutter
- Inspect the underlying structure for any rot or damage

2. Repair and Replace Trim/Fascia

- Replace damaged fascia board with new material
- Repair any rot or damage found behind the old trim
- Prime and paint the new trim to match the existing house finish

3. Install New Gutter and Downspout

- Mount new gutter along the repaired fascia with proper hangers
- Ensure correct slope for drainage toward the downspout location
- Install new downspout down the wall, secured with brackets
- Install end caps and seal all gutter joints

4. Tap into French Drain

- Connect the bottom of the downspout to the existing french drain line
- Use appropriate fittings/adapters to tie the downspout into the corrugated drain tubing
- Ensure a secure, watertight connection

5. Bury the French Drain Line

- Trench along the path of the exposed french drain line
- Set the drain line into the trench at proper depth and grade for drainage
- Backfill and cover the trench
- Restore the ground surface — clean up disturbed soil and gravel areas
- Test the full system: run water through the gutter and confirm it flows through the downspout, into the french drain, and out to the drainage exit

Materials

Item	Notes
Gutter section	Sized to match the affected area — purchased by Elsy
Downspout	With brackets — purchased by Elsy
Gutter hangers, end caps, sealant	For mounting and sealing
Fascia/trim board	Replacement for damaged section
Primer and paint	To match existing trim color
French drain fittings/connectors	To tap downspout into existing drain line
Gravel (if needed)	For trench bedding around buried drain line

All materials purchased by Elsy.

Site Considerations

- Work area is near the screened porch and back steps — access from the backyard
- Raised garden beds are adjacent to the french drain line — care needed when trenching
- Ladder access needed for gutter and fascia work at the roofline
- Existing french drain line exit point should be verified before burying to confirm the system drains properly

Front Door Replacement Proposal

Site Photos:

Client: Elsy Sandora
Date: April 16, 2026

Project Overview

Remove the existing front door and storm door, strip back to the rough opening, and install a new fancy colonial/Victorian-style front door with sidelight. Elsy will purchase the door — we will pick it up and transport it in the F-350 (8-foot bed). Elsy has sample photos of doors she likes (not yet on file). The style will be similar to a colonial door with sidelight — decorative glass panels, traditional detailing.

Existing Conditions

- Current front door is a standard 6-panel door, painted dark red/maroon
- Storm/screen door mounted in front of the main door
- One sidelight panel to the right of the door
- Door frame and surrounding trim showing wear
- Covered front porch with potted plants flanking the entry
- White painted brick exterior around the door opening

Scope of Work

1. Material Pickup

- Pick up the new door unit from the supplier in the F-350 (8-foot bed)
- Transport carefully to the job site

2. Removal of Existing Door

- Remove the storm/screen door
- Remove the existing 6-panel front door
- Remove existing trim, casing, and any damaged framing
- Strip back to the rough opening
- Inspect rough opening for any rot, damage, or structural issues and repair as needed

3. Rough Opening Preparation

- Clean and square up the rough opening
- Verify the opening is sized correctly for the new door with sidelight unit

- Widen or adjust the rough opening if necessary to accommodate the sidelight
- Ensure the sill/threshold area is level and solid

4. Door Installation

- Set the new front door with sidelight unit into the rough opening
- Shim the frame for level and plumb
- Secure the frame with screws into the framing
- Insulate gaps between the frame and rough opening with low-expansion foam
- Confirm the door operates smoothly — opens, closes, and latches properly

5. Trim and Finish

- Install exterior trim/casing — brick mold or appropriate trim to match the house style
- Install interior trim/casing
- Install new hardware — lockset, deadbolt, hinges
- Apply weatherstripping
- Caulk and seal all exterior joints

Materials

Item	Notes
Front door with sidelight unit	Colonial/Victorian style — purchased by Elsy
Shims	Cedar shims for leveling and plumbing
Low-expansion foam insulation	Seal gaps around frame
Interior and exterior trim/casing	To finish the opening
Hardware	Lockset, deadbolt, hinges
Weatherstripping	Seal around door for draft prevention
Caulk and sealant	Exterior weather seal
Screws/fasteners	For securing frame and trim

All materials purchased by Elsy. Picked up and transported in the F-350.

Site Considerations

- Elsy has sample photos of preferred door styles (not yet on file) — final door selection TBD
- Style reference: colonial door with sidelight — decorative glass, traditional paneling
- The rough opening may need to be widened to accommodate a door-with-sidelight unit if the current opening is sized for a single door only
- The existing sidelight on the right side suggests the opening may already be sized for a door + sidelight configuration