


1 FRONT PORT, grey cover on

frame: FDRTt68Vfo 51:00

Stand facing the front of the chamber (the aus500 label). Gloves on: the grey cover soaks up skin oil.

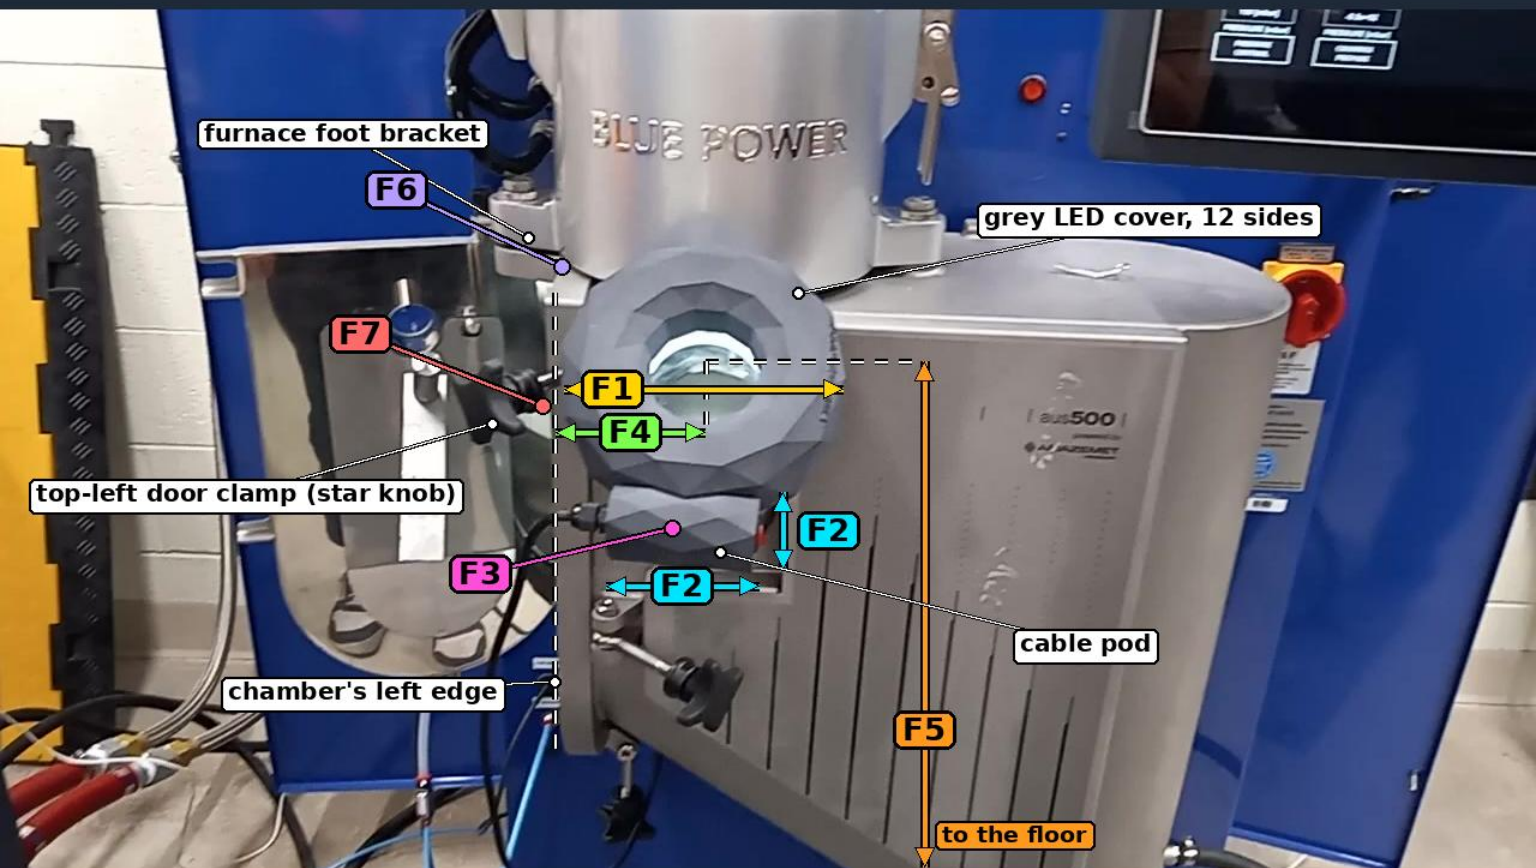

F1 Cover width, flat to flat

FIRST

Outside of the grey 12-sided cover, from one flat side to the flat directly opposite (not corner to corner). Calipers, or press two books against opposite flats and measure between them.

now in the model: 162 mm

measured: _____

F2 Cable pod: width, height, depth

FIRST

The small faceted box on the cover with the black cable. Width along the cover's edge; how far it sticks out past the cover's edge; front to back.

now in the model: 90 x 45 x 55 mm

measured: _____

F3 Pod position

FIRST

Clock position of the pod seen from the front (6 o'clock since 30 Sep), and how far its front face sits behind the cover's front face.

now in the model: 6 o'clock, 5 mm

measured: _____

F4 Glass centre to left side

IF TIME

Hold a ruler flat on the chamber's left side (the door side) so it sticks forward. Measure across to the centre of the glass.

now in the model: 100 mm

measured: _____

F5 Glass centre height

IF TIME

Tape from the floor straight up to the centre of the glass.

now in the model: 1035 mm

measured: _____

F6 Room above the cover

FIRST

Straight up from the top of the cover to the first thing above it (the furnace's foot bracket), and how far back from the cover's front face that bracket starts.

now in the model: about 20 mm

measured: _____

F7 Room to the left: door clamp

NEXT

From the cover's left edge to the nearest point of the top-left star knob, knob tightened. Then loosen it and swing the bolt out: does it pass the cover, and by how much?

now in the model: about 50 mm

measured: _____


FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

2 FRONT PORT, looking into the grey cover

frame: 58wJ_Khwgk 25:11

Cover still on. Gloves. Don't press on the glass or scratch it.

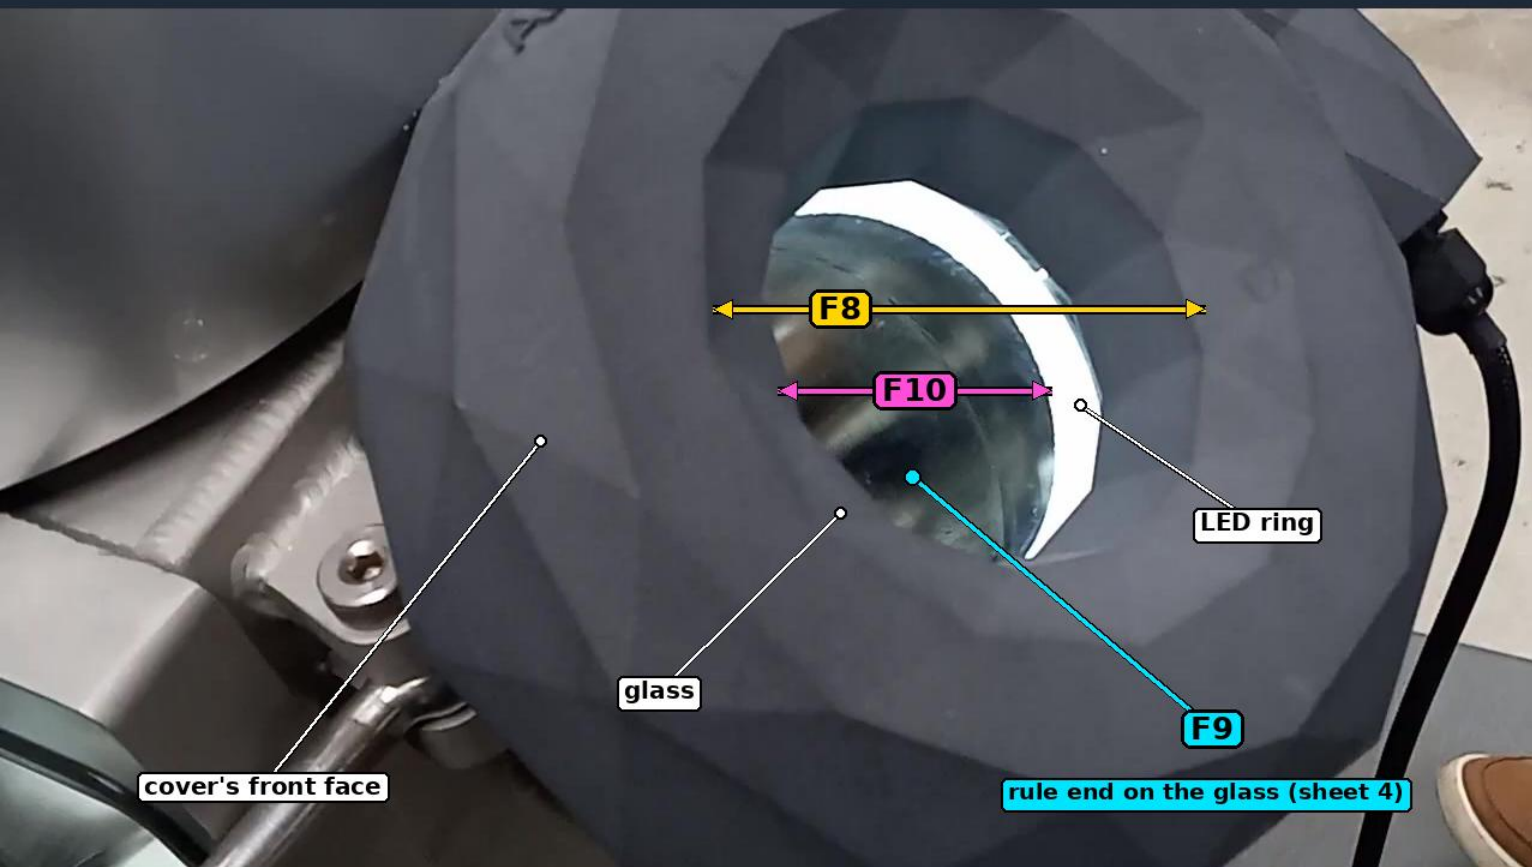

F8 Front opening

Across the hole in the cover's front face, at its front edge (the first edge you meet, not the glass), flat to flat.

now in the model: 75 mm

measured: _____

FIRST

F9 Depth to the glass

Push the end of a steel rule (or the calipers' depth rod) straight in through the opening until it just touches the glass. Read it where it passes the cover's front face.

now in the model: 30 mm

measured: _____

FIRST

F10 Visible glass diameter

The clear glass you can see, edge to edge, across the middle.

now in the model: 63 mm

measured: _____

NEXT


FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

3 FRONT PORT, grey cover off

frame: 1F9_4ccwhss 7:58

Pull the cover straight off by hand and let it hang on its cable (don't unplug it). Don't turn the shiny nut: it holds the glass in.

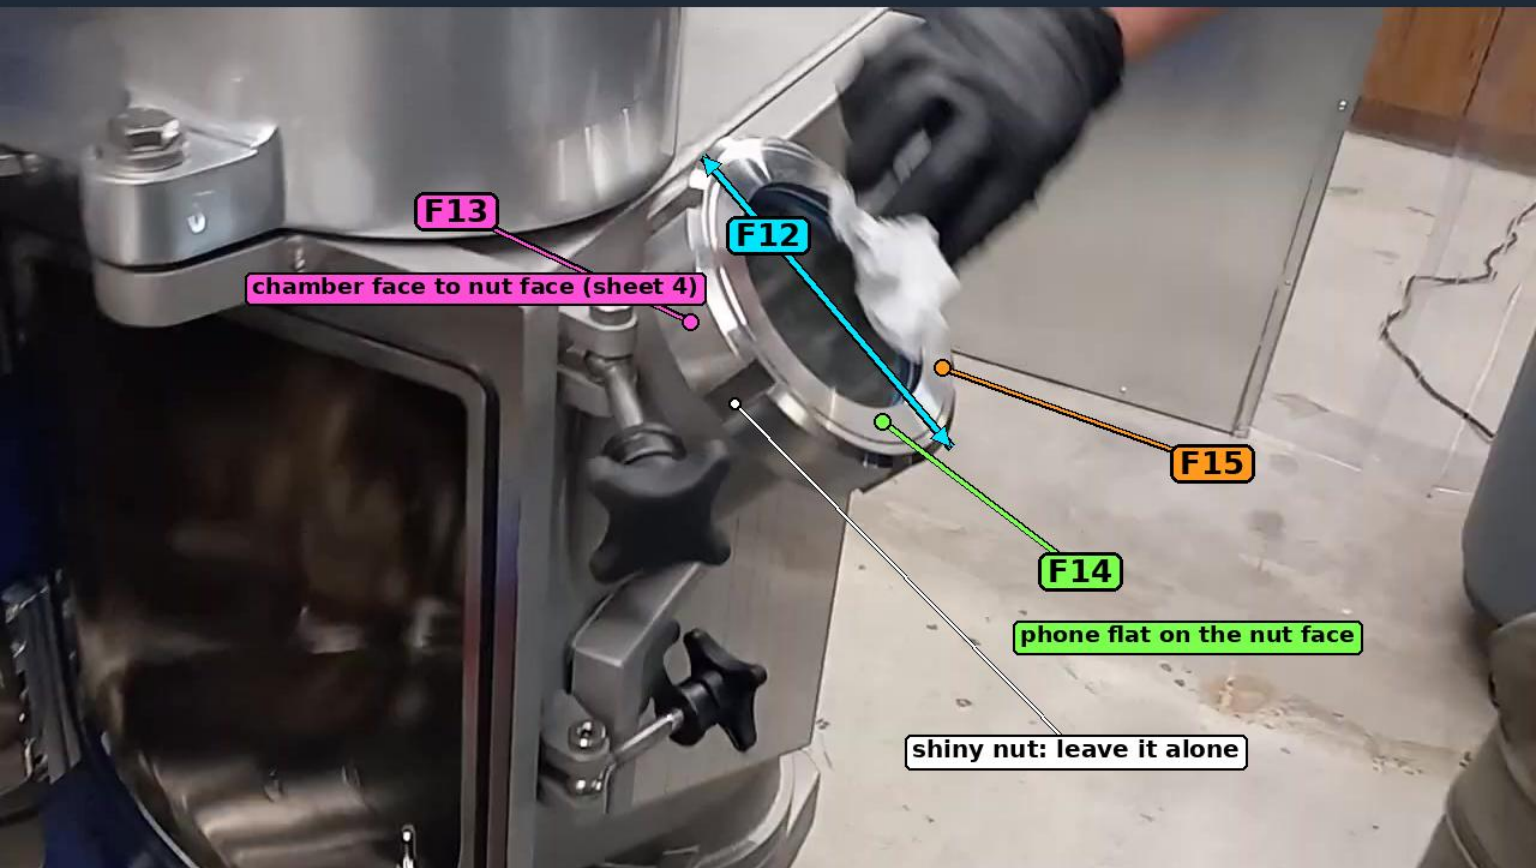

F11 Cover depth and back bore

FIRST

Cover off: stand it face down on a table. Height from the table to its back edge. Then the inside diameter of the opening at its back (the part that slides over the nut) and how deep that goes.

now in the model: 45 mm

measured: _____

F12 Nut outside diameter

NEXT

The shiny round nut that holds the glass, across its outside.

now in the model: 95 mm

measured: _____

F13 Nut face, out from the chamber

NEXT

From the flat steel front of the chamber out to the front face of the nut, square to the nut face. Measure at the nut's top and at its bottom (they differ if the port is tilted).

now in the model: 45 mm

measured: _____

F14 Port tilt

FIRST

Hold your phone flat on the nut's front face with a level app (iPhone: Measure > Level). Write the degrees it leans back from vertical. Then do the same on the flat chamber face beside it.

now in the model: 20 deg

measured: _____

F15 Port turned left or right?

IF TIME

Lay a rule horizontally across the nut's face. Measure from the chamber face to the rule at the nut's left and right edges. Same = it points straight out.

now in the model: same (0 deg)

measured: _____

F16 Cover face, out from the chamber

NEXT

Cover back on: from the chamber face out to the cover's front face, at its top and at its bottom.

now in the model: 75 mm

measured: _____

FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

frame: sketch, not to scale

a) cover off




The diagram illustrates the assembly sequence for a furnace foot bracket. The components shown are the furnace foot bracket, grey cover, glass, and pod. The sequence of actions is as follows:

- F16:** furnace foot bracket is placed on the table.
- F6:** grey cover is placed on the furnace foot bracket.
- F9:** rule end through the opening to the glass.
- F11:** cover off, face down on a table.

5 LEFT SIDE: small window on the door

frame: 58wJ_Khwgyk 77:25, inset 9kn-HhXCr1o 25:06

The round window near the top of the chamber's left door, above the ultrasonic stack. Door closed.

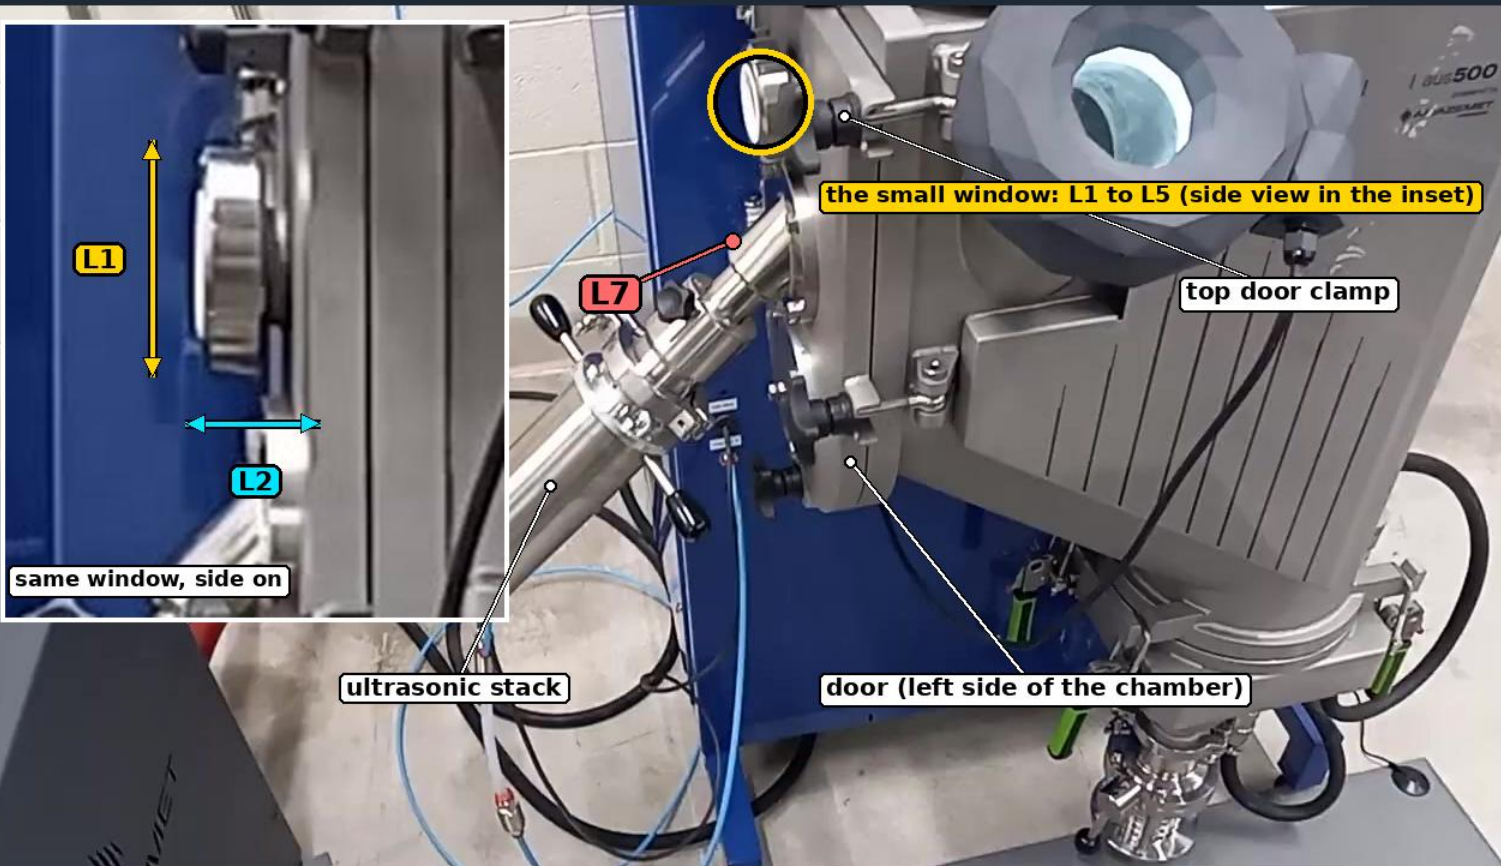

L1 Ring outside diameter

The shiny ring round the little window: across its outside, at the widest point. Calipers.

now in the model: 65 mm

measured: _____

FIRST

L2 How far the ring sticks out

From the door's flat outer face to the ring's outer face.

now in the model: 30 mm

measured: _____

FIRST

L3 What kind of fitting? (photo)

Threaded nut with notches for a hook wrench, like the front port? Or a band clamp with a wing nut (KF)? Take one photo straight on and one from the side.

now in the model: threaded?

measured: _____

FIRST

L4 Visible glass diameter

The clear glass, edge to edge.

now in the model: 45 mm

measured: _____

NEXT

L5 Centre height

Floor to the centre of the glass.

now in the model: 1015 mm

measured: _____

NEXT

L6 Centre to door's edges

Horizontally to the door's back edge (the hinge side, nearer the blue cabinet), and up to the door's top edge.

now in the model: 108 mm, 100 mm

measured: _____

NEXT

L7 Down to the stack

From the bottom of the ring straight down to the top of the ultrasonic stack where it leaves the door.

now in the model: about 60 mm

measured: _____

IF TIME

L8 Door swing

Open the door fully: about how many degrees? Does anything on its outside come near the blue cabinet? Gap from the closed door's back edge to the blue panel.

now in the model: 100 deg

measured: _____

NEXT


FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

6 FURNACE LID WINDOW, face on

frame: 58wJ_Khwgyk 58:06

Furnace cold and lid closed. This is the window on the sloped front face of the lid.

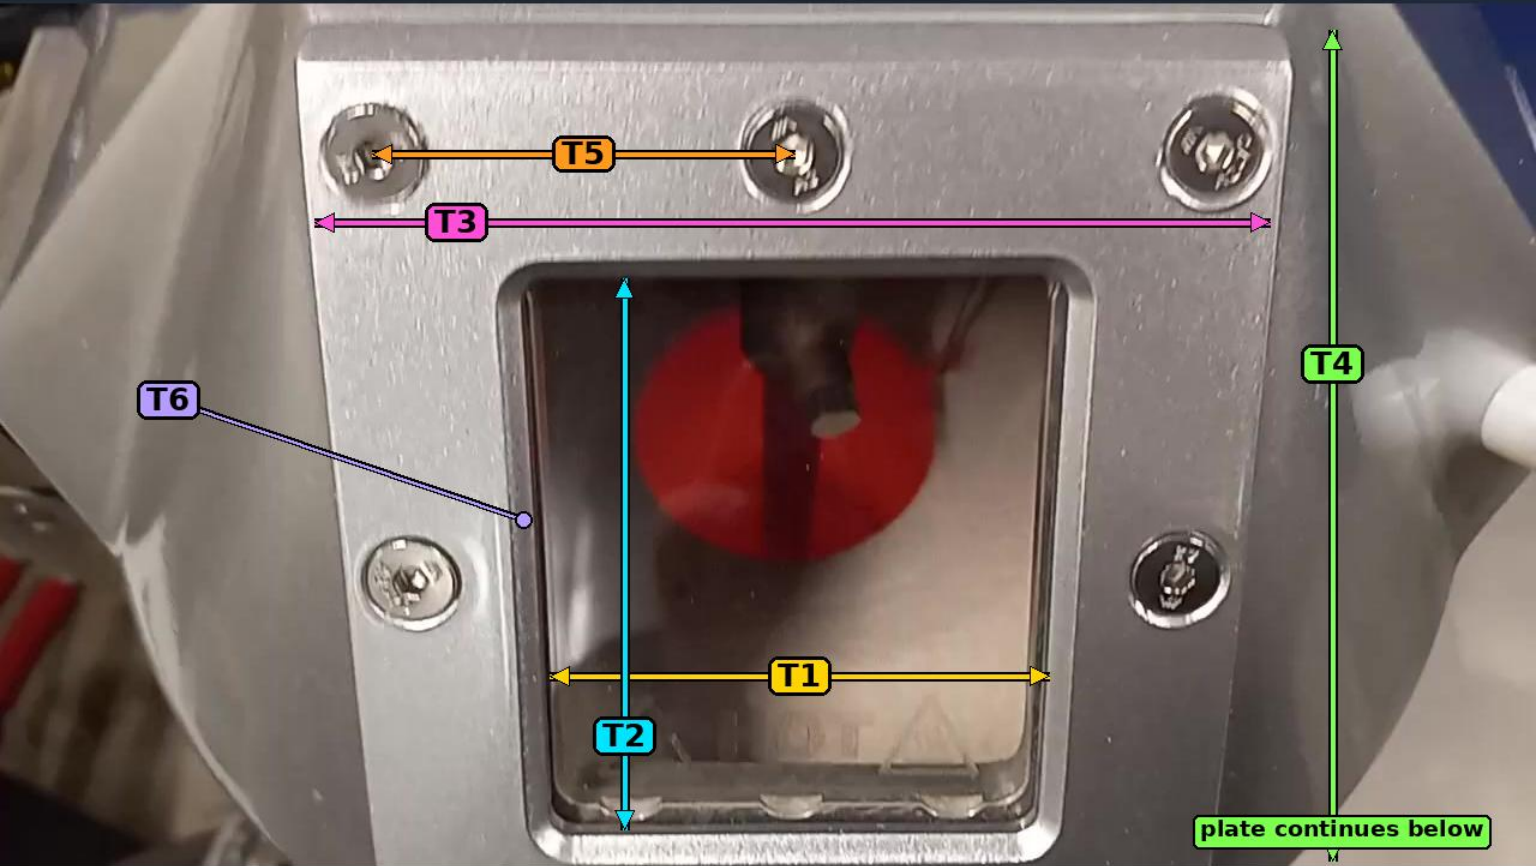

T1 Window opening width

FIRST

Across the clear opening in the steel plate, left to right, inside edge to inside edge.

now in the model: 60 mm

measured: _____

T2 Window opening height

FIRST

The same, top to bottom (along the slope).

now in the model: 64 mm

measured: _____

T3 Plate width

NEXT

The polished plate round the window: outside width at the top screw row.

now in the model: 112 mm

measured: _____

T4 Plate length

NEXT

Top edge to bottom edge of the plate, along the slope, through the middle.

now in the model: 105 mm

measured: _____

T5 Screw spacing

IF TIME

Centre to centre of the top three screws, and the hex key size that fits them.

now in the model: 48 mm, M5?

measured: _____

T6 Glass recess

IF TIME

How far the glass sits below the plate's surface: rule end on the glass, read at the plate face.

now in the model: 4 mm

measured: _____


FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

7 FURNACE LID, from the front

frame: DWH1CEygsTI 25:40

Lid closed. The window's position and angle decide where the top camera's arm puts it.

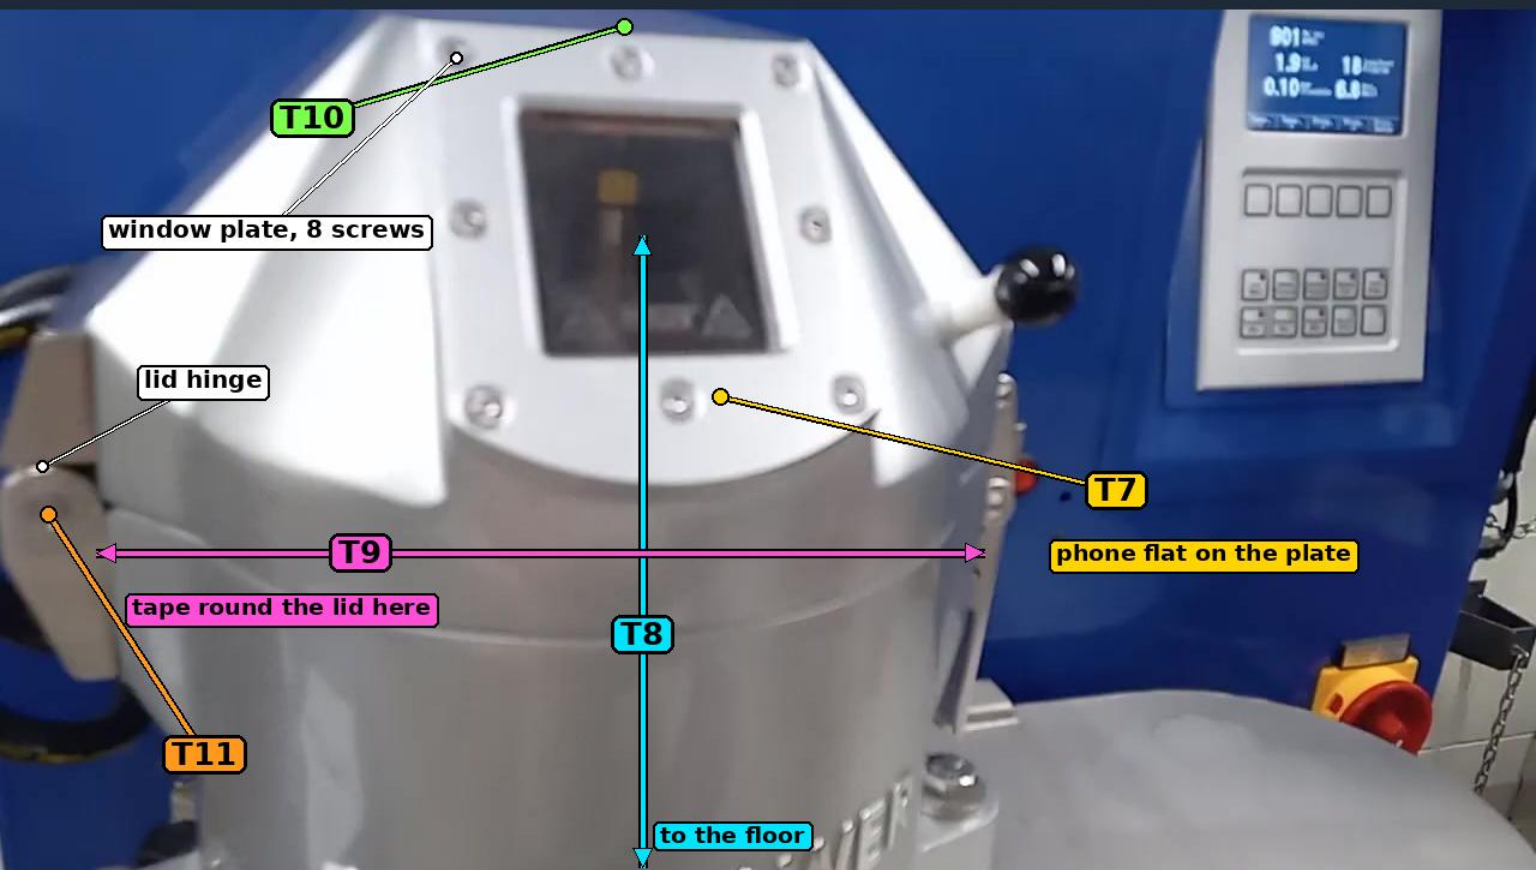

T7 Window slope

FIRST

Lay your phone flat on the window plate with a level app.
Degrees from horizontal.

now in the model: 50 deg

measured: _____

T8 Window centre height

FIRST

Floor to the centre of the window glass.

now in the model: 1455 mm

measured: _____

T9 Lid diameter

NEXT

Wrap a tape round the round lower part of the lid. Write the circumference (we divide by 3.14).

now in the model: 864 mm round (275 dia)

measured: _____

T10 Lid top height

NEXT

Floor to the highest point of the closed lid.

now in the model: 1500 mm

measured: _____

T11 Hinge pin

NEXT

The hinge on the lid's left: the pin's height above the floor, and how far left of the window's centre it is.

now in the model: 1345 mm, 160 mm

measured: _____


FIRST needed before the fit-test prints **NEXT** aims and places the units **IF TIME** if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.

8 WHOLE MACHINE: scale, heights, the lid's swing

frame: 2wMgel-E7zw 10:00

Every guess above was scaled from M1 and M2, so these two matter most here.

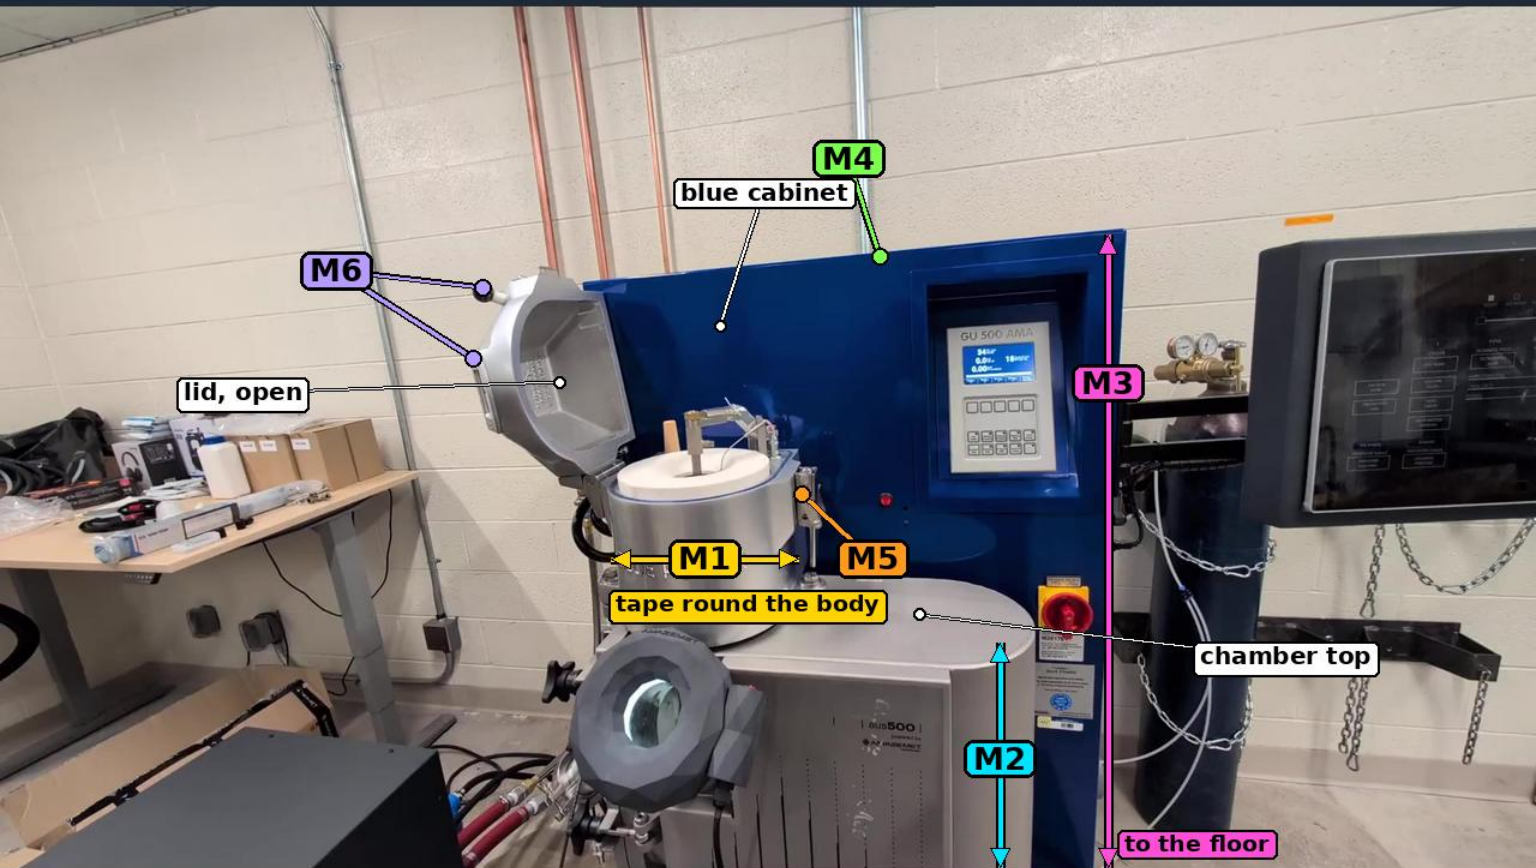

M1 Furnace body, round

Tape round the silver furnace body (BLUE POWER lettering). Write the circumference.

now in the model: 848 mm round (270 dia)

measured: _____

FIRST

M4 Blue cabinet top: steel?

Does a magnet stick to its top? Front-to-back depth of the top, and what is up there. The top camera's magnetic base would stand on it.

now in the model: steel?

measured: _____

NEXT

M2 Chamber top height

Floor to the chamber's flat top, the deck the furnace stands on.

now in the model: 1130 mm

measured: _____

FIRST

M5 Furnace to the blue panel

The smallest gap from the back of the furnace body to the blue panel behind it.

now in the model: 30 mm

measured: _____

IF TIME

M3 Blue cabinet top height

Floor to the top of the blue cabinet behind the furnace.

now in the model: 1600 mm

measured: _____

NEXT

M6 Lid fully open

Open the lid all the way. Floor to its highest point; how far left of the window's closed position its far edge reaches; and the angle it opened through.

now in the model: 1610 mm, 310 mm, 105 deg

measured: _____

NEXT

FIRST needed before the fit-test prints

NEXT aims and places the units

IF TIME if there is time

Millimetres and degrees. A phone photo of the tape in place, for each one, lets us check it.