

**CODE:**

```
#include<Servo.h>
const int pingPin = 7;
int servoPin = 8;

Servo servo1;

void setup() {
  // initialize serial communication:
  Serial.begin(9600);
  servo1.attach(servoPin);
  pinMode(2,INPUT);
  pinMode(4,OUTPUT);
  pinMode(11,OUTPUT);
  pinMode(12,OUTPUT);
  pinMode(13,OUTPUT);
  pinMode(A0,INPUT);
  digitalWrite(2,LOW);
  digitalWrite(11,HIGH);
}

void loop() {

  long duration, inches, cm;

  pinMode(pingPin, OUTPUT);
  digitalWrite(pingPin, LOW);
  delayMicroseconds(2);
  digitalWrite(pingPin, HIGH);
  delayMicroseconds(5);
  digitalWrite(pingPin, LOW);

  pinMode(pingPin, INPUT);
  duration = pulseIn(pingPin, HIGH);

  // convert the time into a distance
  inches = microsecondsToInches(duration);
  cm = microsecondsToCentimeters(duration);
```

```
Serial.print(inches);
Serial.print("in, ");
Serial.print(cm);
Serial.print("cm");
Serial.println();
delay(100);

servo1.write(0);

if(cm < 40)
{
    servo1.write(90);
    delay(2000);
}
else
{
    servo1.write(0);
}

int pir = digitalRead(2);

if(pir == HIGH)
{
    digitalWrite(4,HIGH);
    delay(1000);
}
else if(pir == LOW)
{
    digitalWrite(4,LOW);
}

float value=analogRead(A0);
float temperature=value*0.48;

Serial.println("temperature");
Serial.println(temperature);
```


```
if(temperature > 20)
{
    digitalWrite(12,HIGH);
    digitalWrite(13,LOW);
}
else
{
    digitalWrite(12,LOW);
    digitalWrite(13,LOW);
}
}

long microsecondsToInches(long microseconds) {
    return microseconds / 74 / 2;
}

long microsecondsToCentimeters(long microseconds) {
    return microseconds / 29 / 2;
}
```




Dazzling Inari

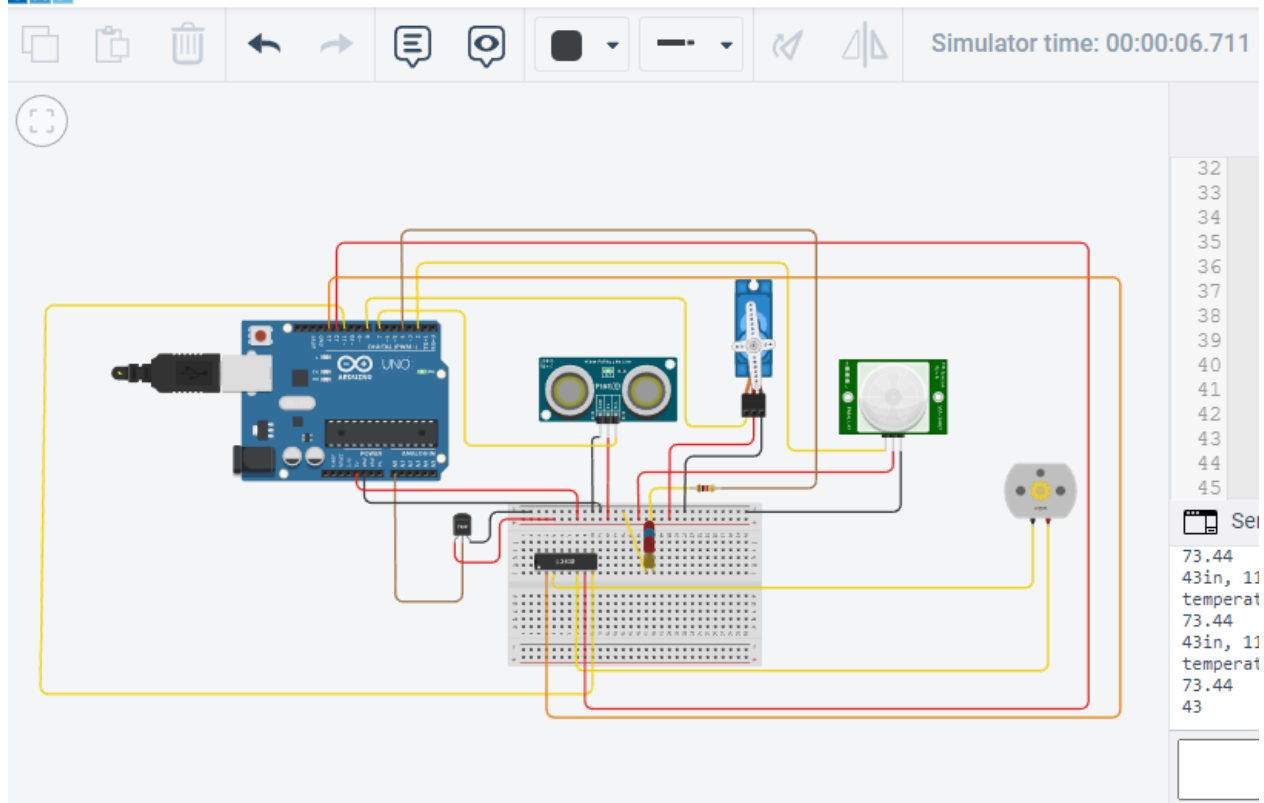


Dazzling Inari

All changes saved

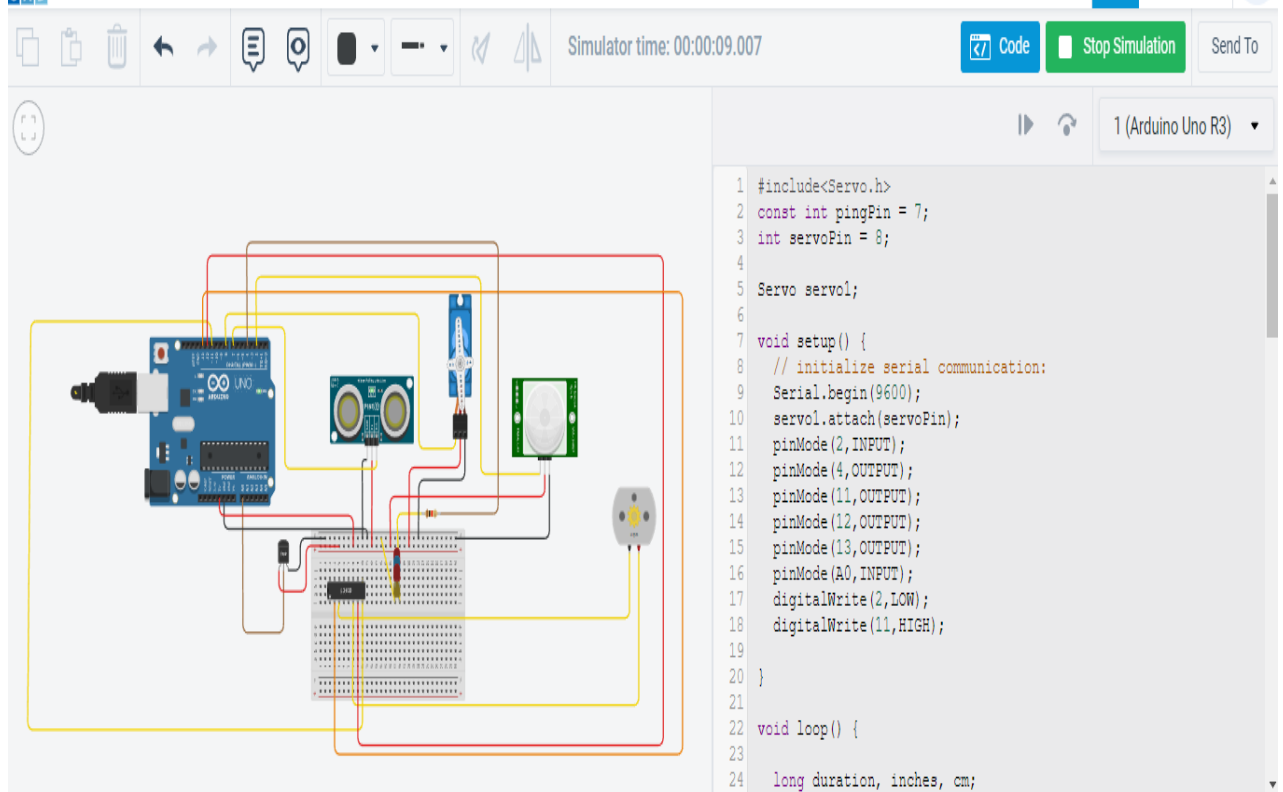

**ROLL NO: CITC2004208**  
**NAME: SOORYA R**

[illegible]

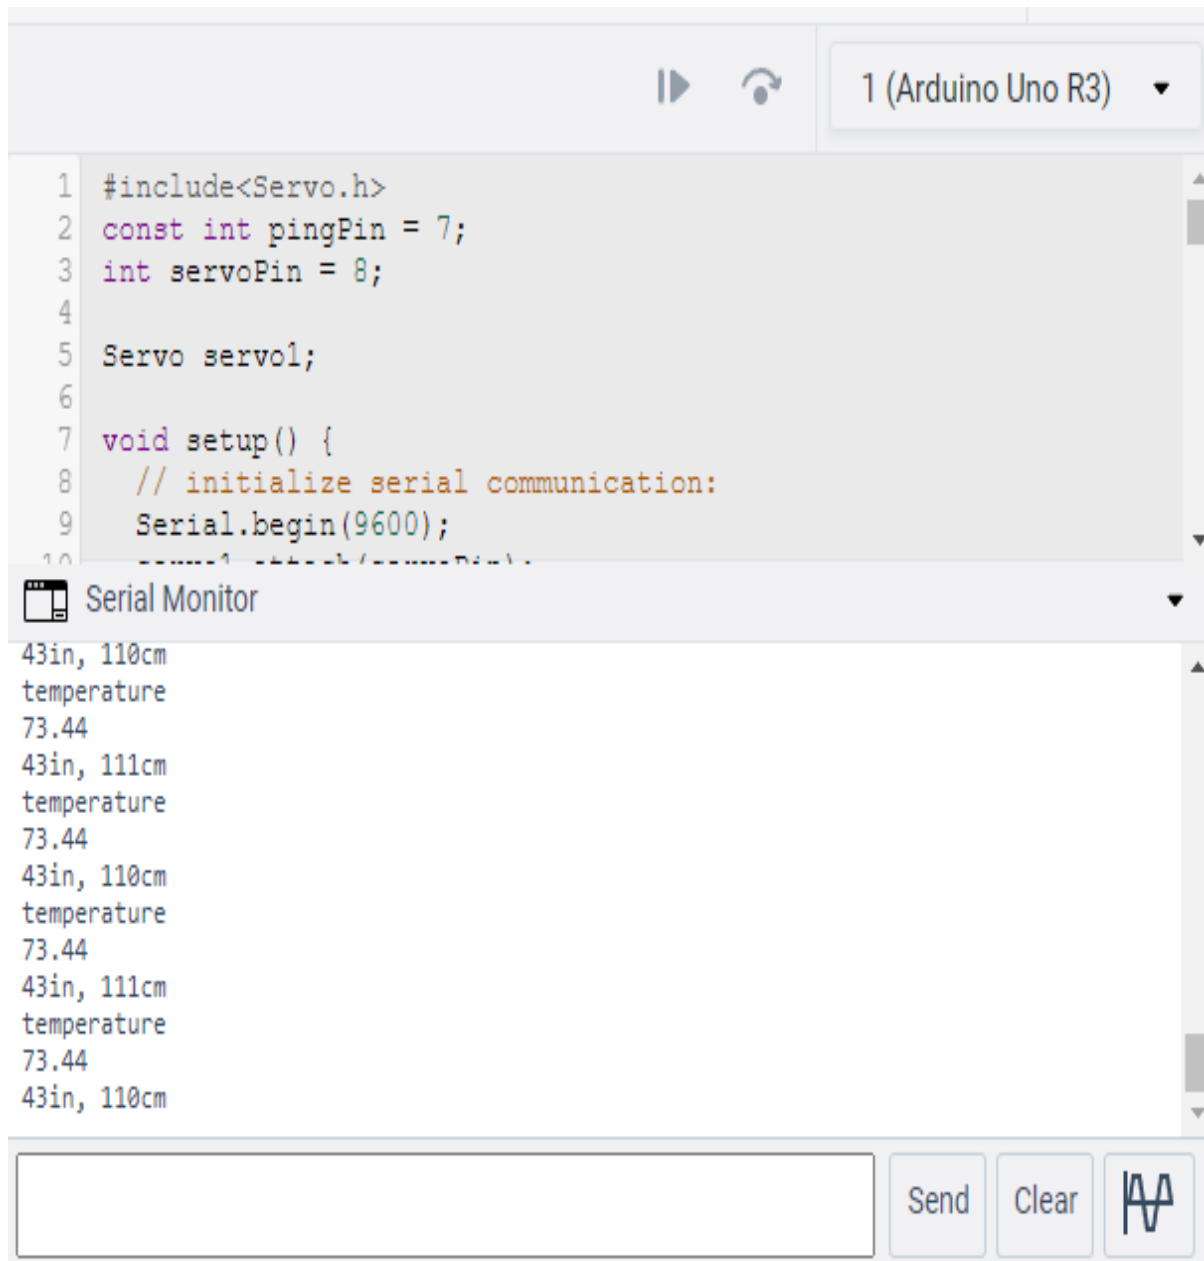

The screenshot displays the Arduino IDE interface. At the top, the board is set to "1 (Arduino Uno R3)". The code editor contains the following C++ code:

```
1 #include<Servo.h>
2 const int pingPin = 7;
3 int servoPin = 8;
4
5 Servo servo1;
6
7 void setup() {
8   // initialize serial communication:
9   Serial.begin(9600);
10  servo1.attach(servoPin);
11 }
```

Below the code editor, the "Serial Monitor" window is open, showing the following output:

```
43in, 110cm
temperature
73.44
43in, 111cm
temperature
73.44
43in, 110cm
temperature
73.44
43in, 111cm
temperature
73.44
43in, 110cm
```

At the bottom of the Serial Monitor window, there is an input field for sending data, and buttons for "Send", "Clear", and a waveform icon.