


Background

When exporting files from the Anytone CPS for AT-D878UV the Optional settings are not saved as a Comma Separated File.

In this document you'll find my settings.

Images

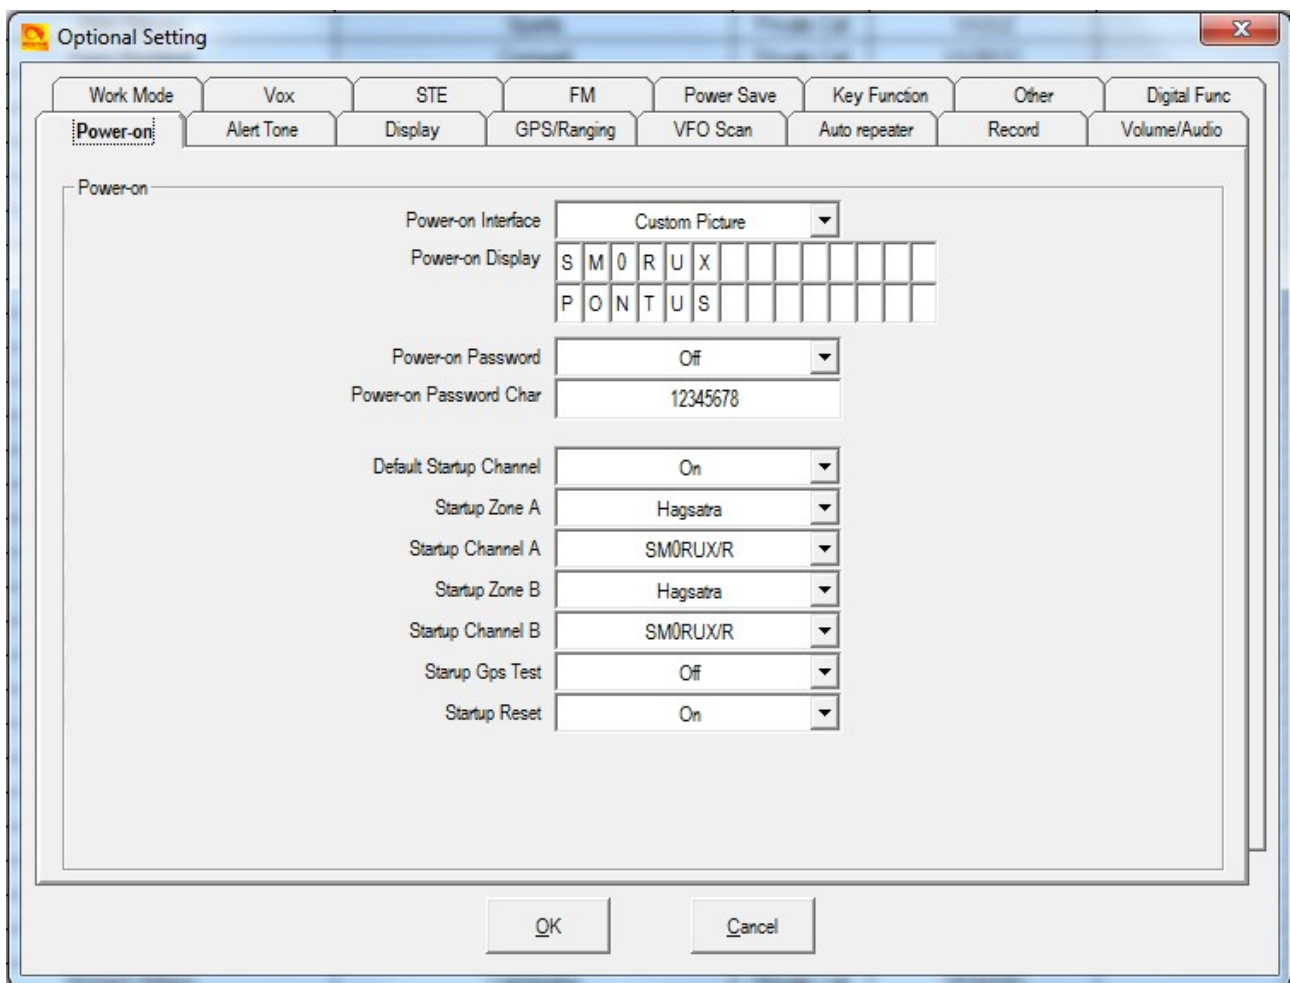

I have a custom power-on image.

Optional Setting

Work Mode Vox STE FM Power Save Key Function Other Digital Func

Power-on **Alert Tone** Display GPS/Ranging VFO Scan Auto repeater Record Volume/Audio

Alert Tone

SMS Alert Ring

Call Alert Ring

Digi Call ResetTone Off

Call Tone Off

Key Tone Off

Idle Channel Tone Off

Startup Sound On

Volume Change Prompt On

Key Sound Adjustable Adjustable

Idle Channel Tone

	Frequency[Hz]	Period[ms]	Play
First Tone	1500	100	
Second Tone	600	100	
Third Tone	0	0	
Fourth Tone	0	0	
Fifth Tone	0	0	

Call Tone


	Frequency[Hz]	Period[ms]	Play
First Tone	700	150	
Second Tone	0	0	
Third Tone	0	0	
Fourth Tone	0	0	
Fifth Tone	0	0	

Call Reset Tone


	Frequency[Hz]	Period[ms]	Play
First Tone	1900	100	
Second Tone	800	100	
Third Tone	0	0	
Fourth Tone	0	0	
Fifth Tone	0	0	

OK Cancel

No comments.

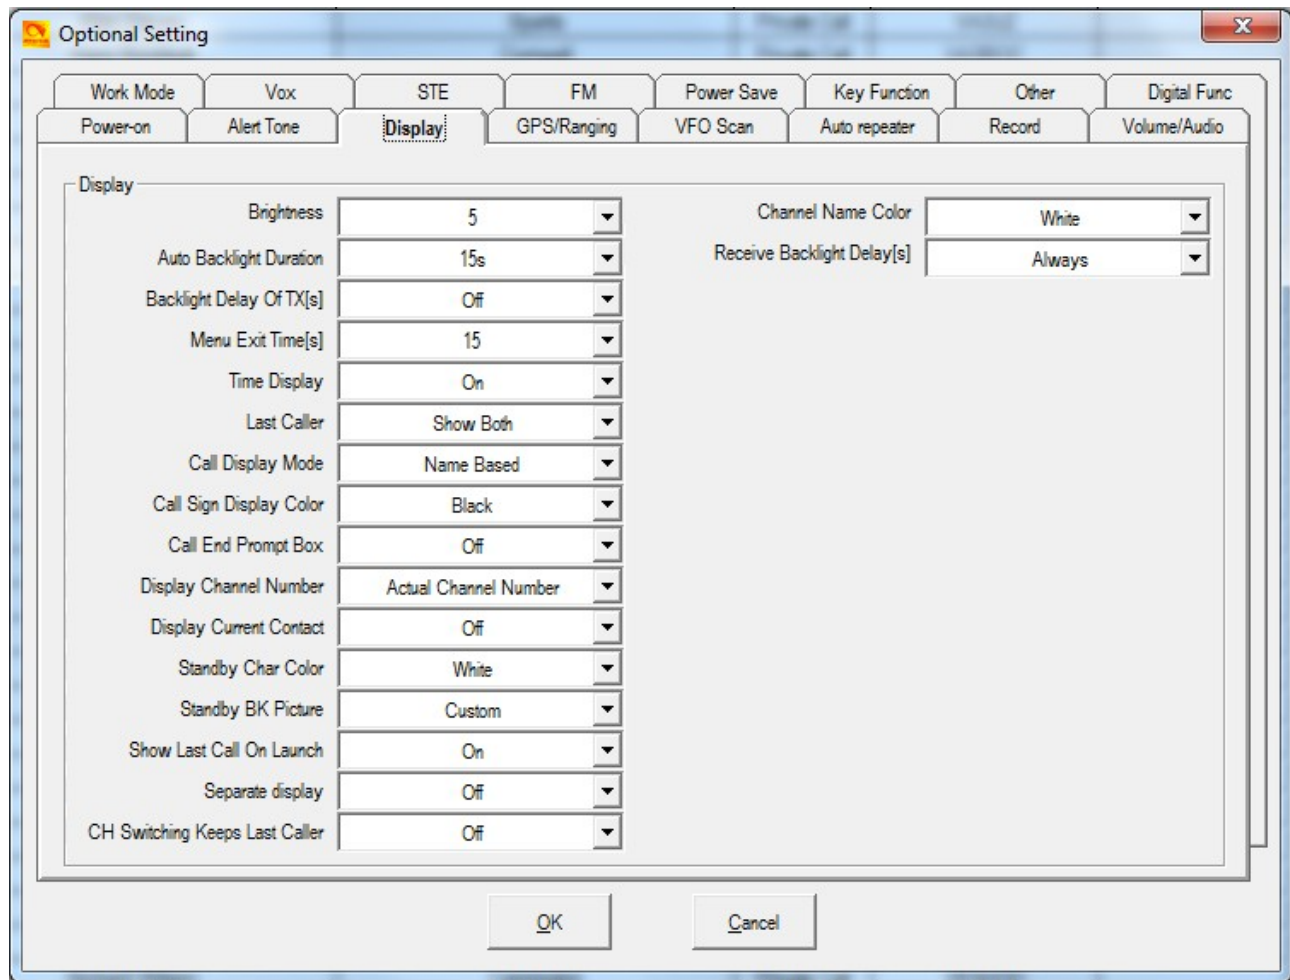

My settings for Talker Alias among other things.

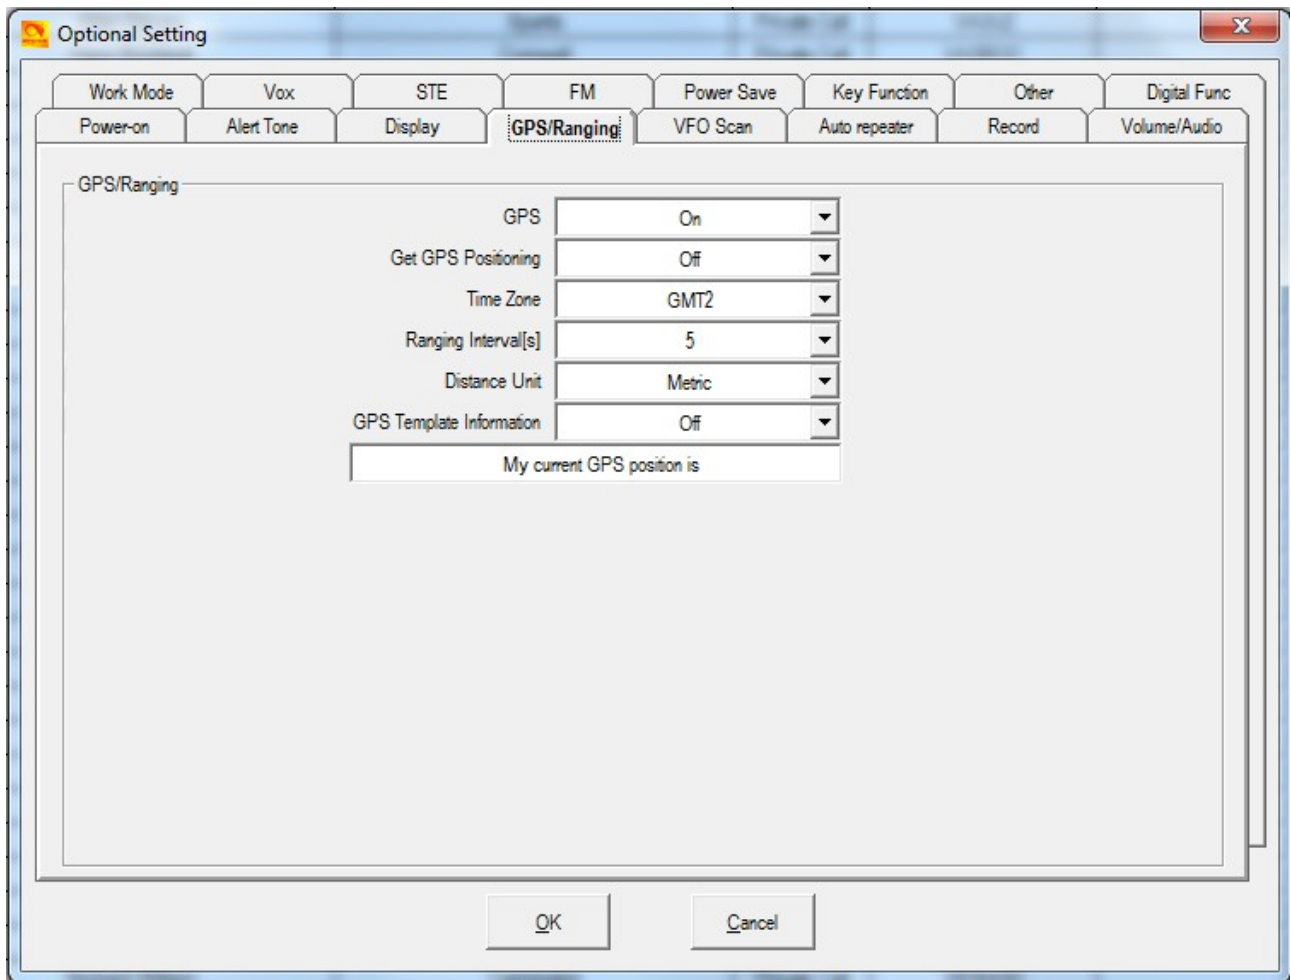

The GPS is started by default.

Optional Setting

Work Mode Vox STE FM Power Save Key Function Other Digital Func

Power-on Alert Tone Display GPS/Ranging **VFO Scan** Auto repeater Record Volume/Audio

VFO Scan

Scan Type	CO
VFO Scan Start Freq(UHF)	400.00000
VFO Scan End Freq(UHF)	480.00000
VFO Scan Start Freq(VHF)	136.00000
VFO Scan End Freq(VHF)	174.00000


OK Cancel

No comments.


Auto repeater	
Auto Repeater A	Off
Auto Repeater B	Off
Auto Repeater(UHF)	Off
Auto Repeater(VHF)	Off
Repeater Check	Off
Repeater Check Interval[s]	30
Repeater Check Reconnections	3
Alert Out Of Repeat Range	Off
Repeater out of range reminder(times)	3
Auto Roaming	On
Timed Roaming Start Condition	Out Of Range
Auto Roaming Interval[m]	1
Roaming Effect Wait Time[s]	None
Roaming Zone	Roaming SM0
Roaming Return Channel	Roaming channel
Min Freq Of Auto Repeater(VHF)	136.00000
Max Freq Of Auto Repeater(VHF)	174.00000
Min Freq Of Auto Repeater(UHF)	400.00000
Max Freq Of Auto Repeater(UHF)	480.00000

Roaming is started in Roaming SM0 roaming zone by default.


- In case you don't want roaming to be started automatically, set Auto Roaming to OFF.

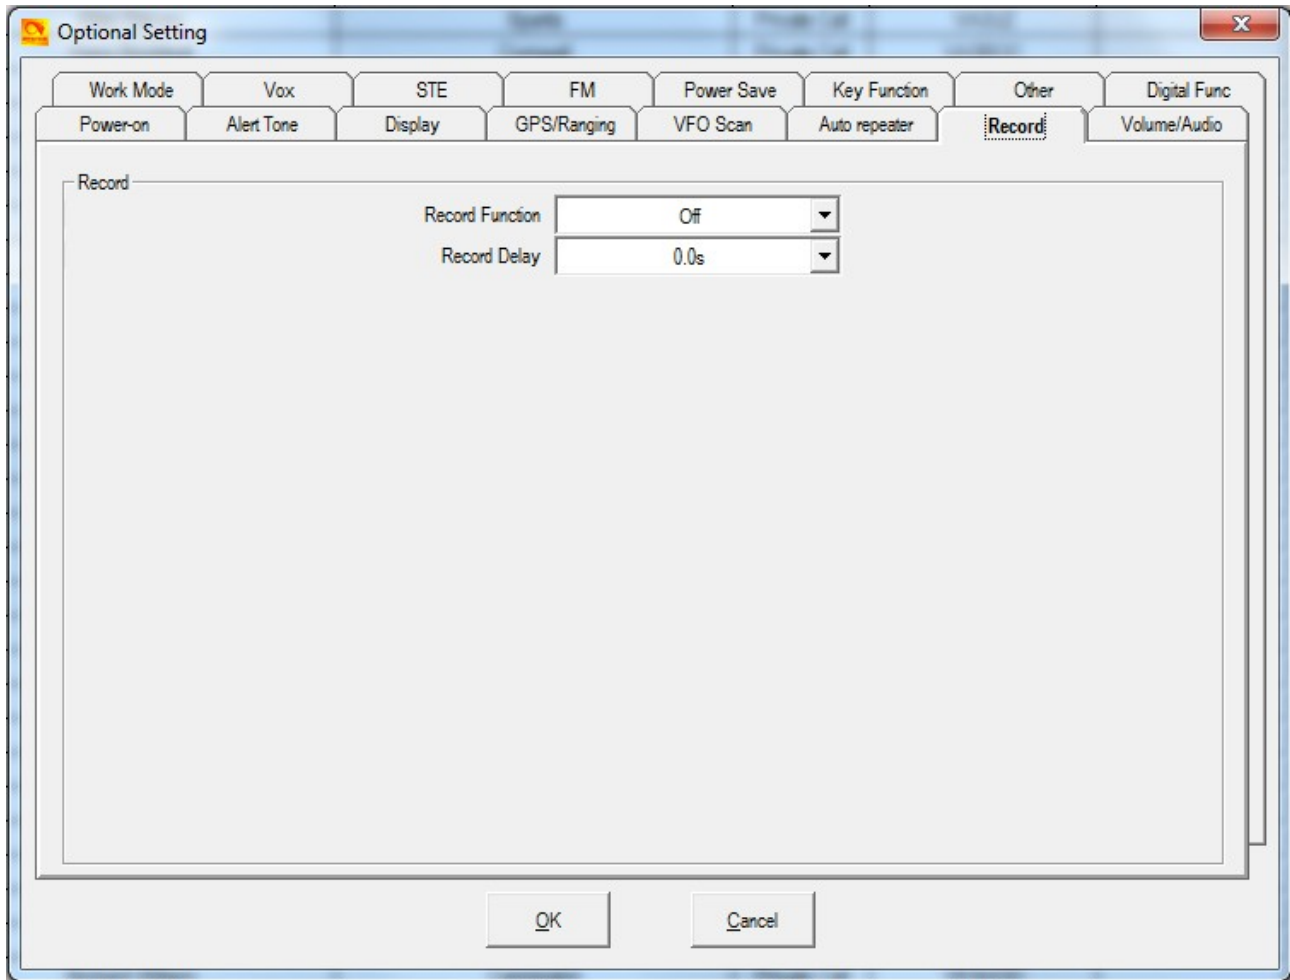


No comments.

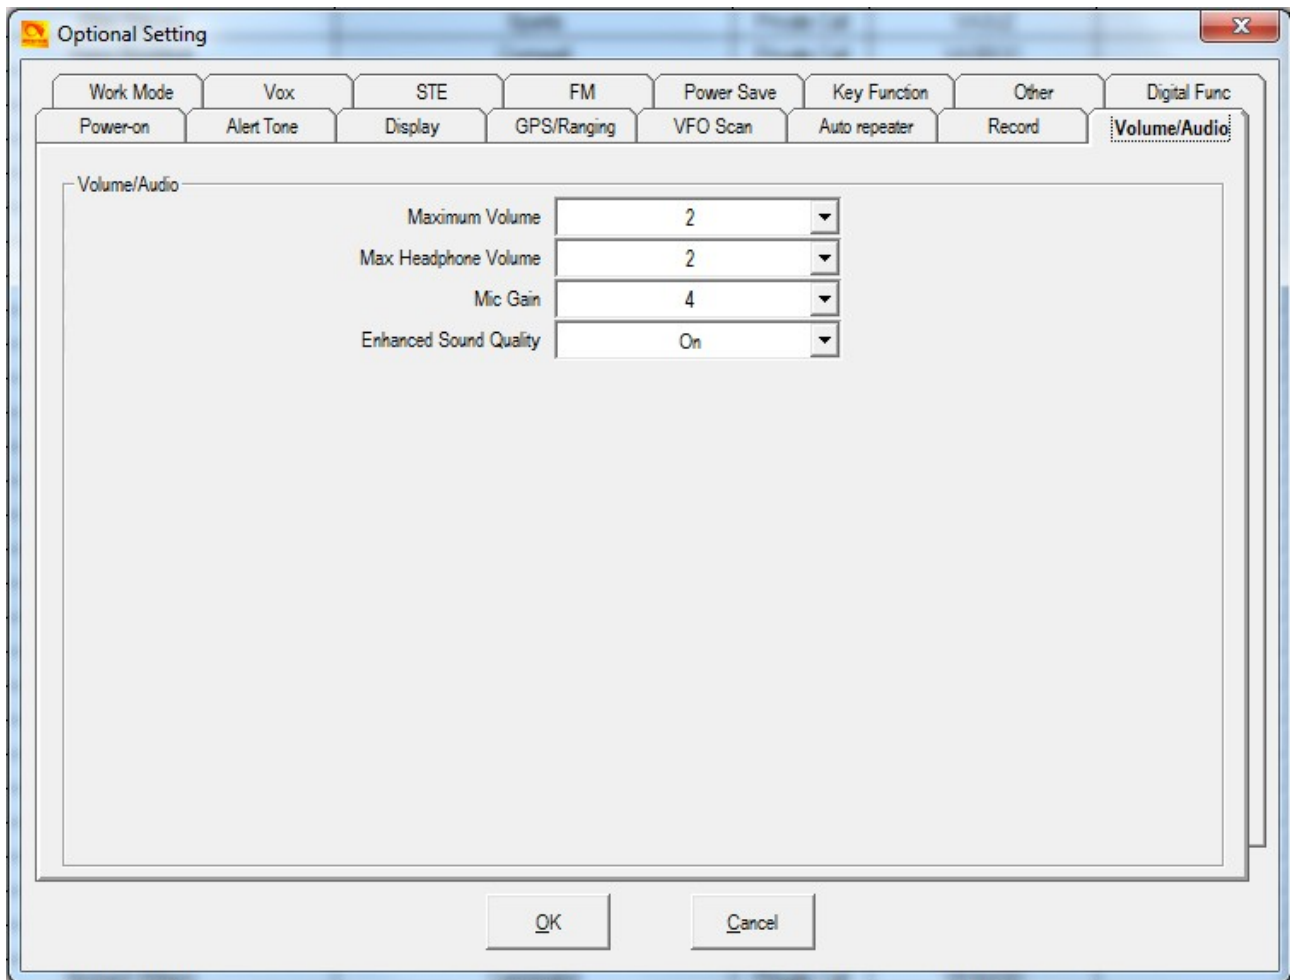


The default volume is way to high according me. The Mic Gain is way to low.

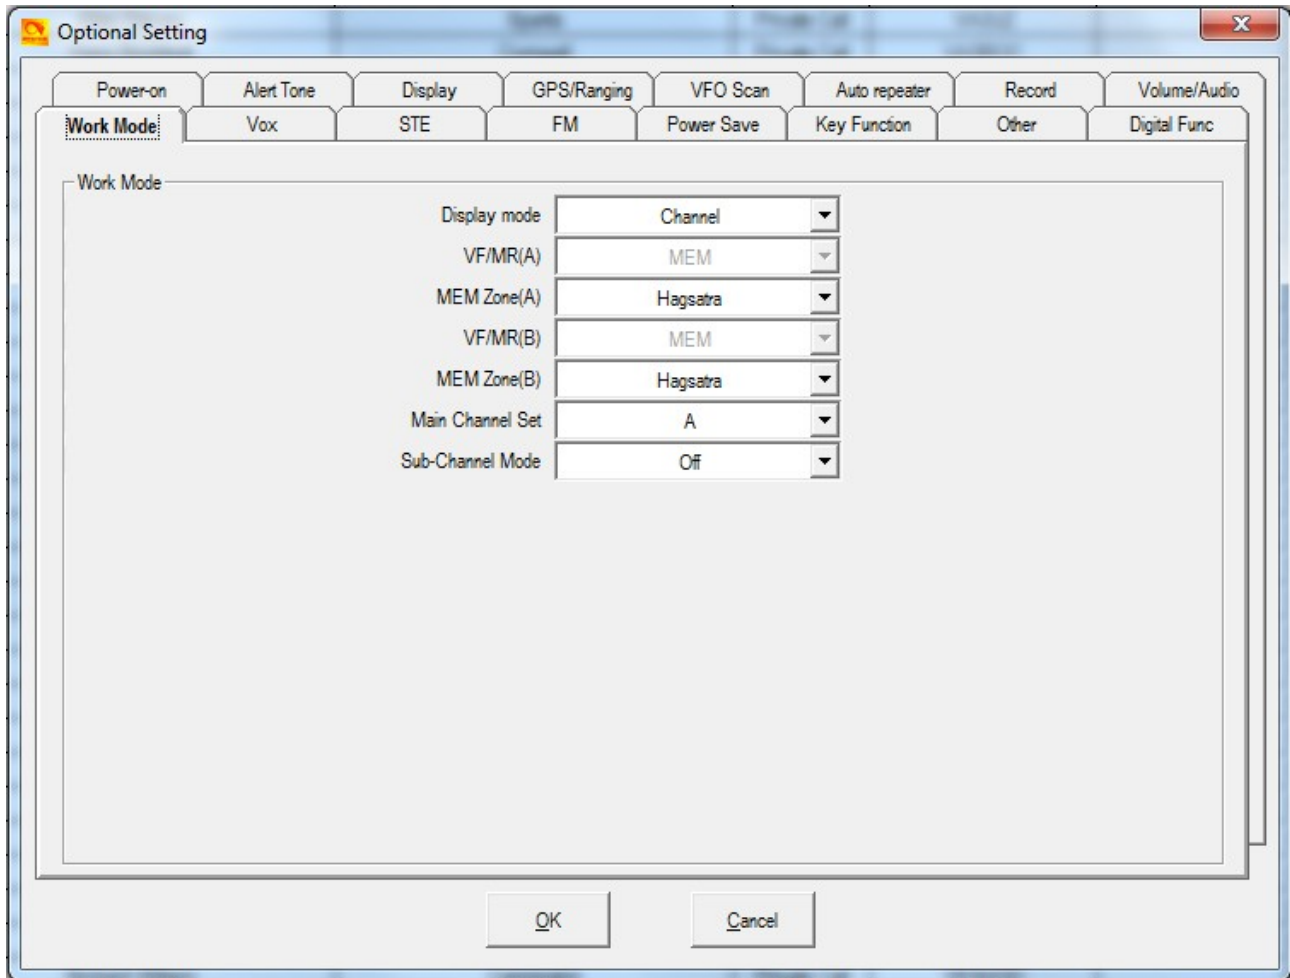


No comments.

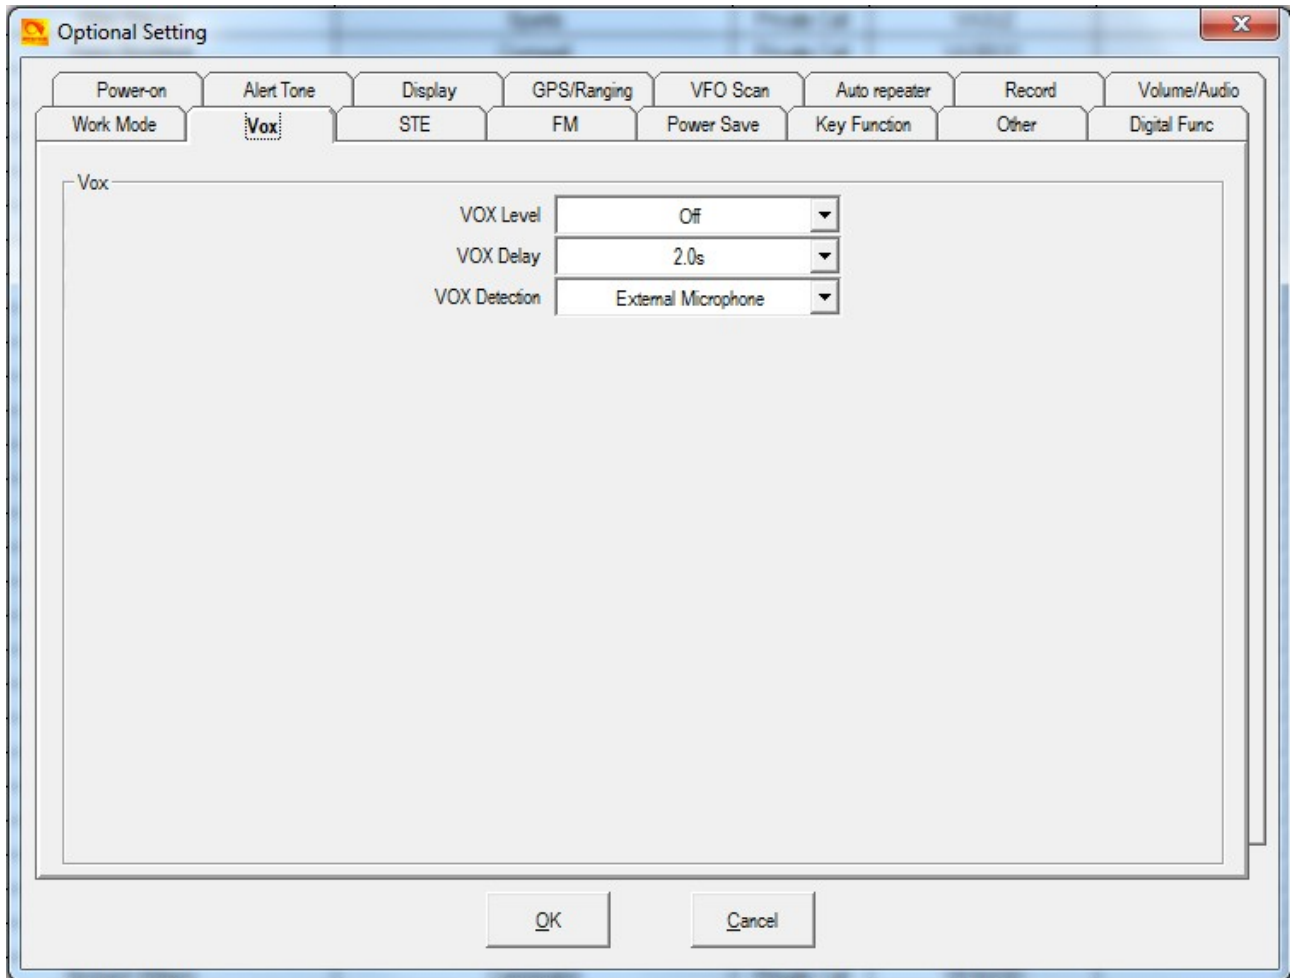


No comments.

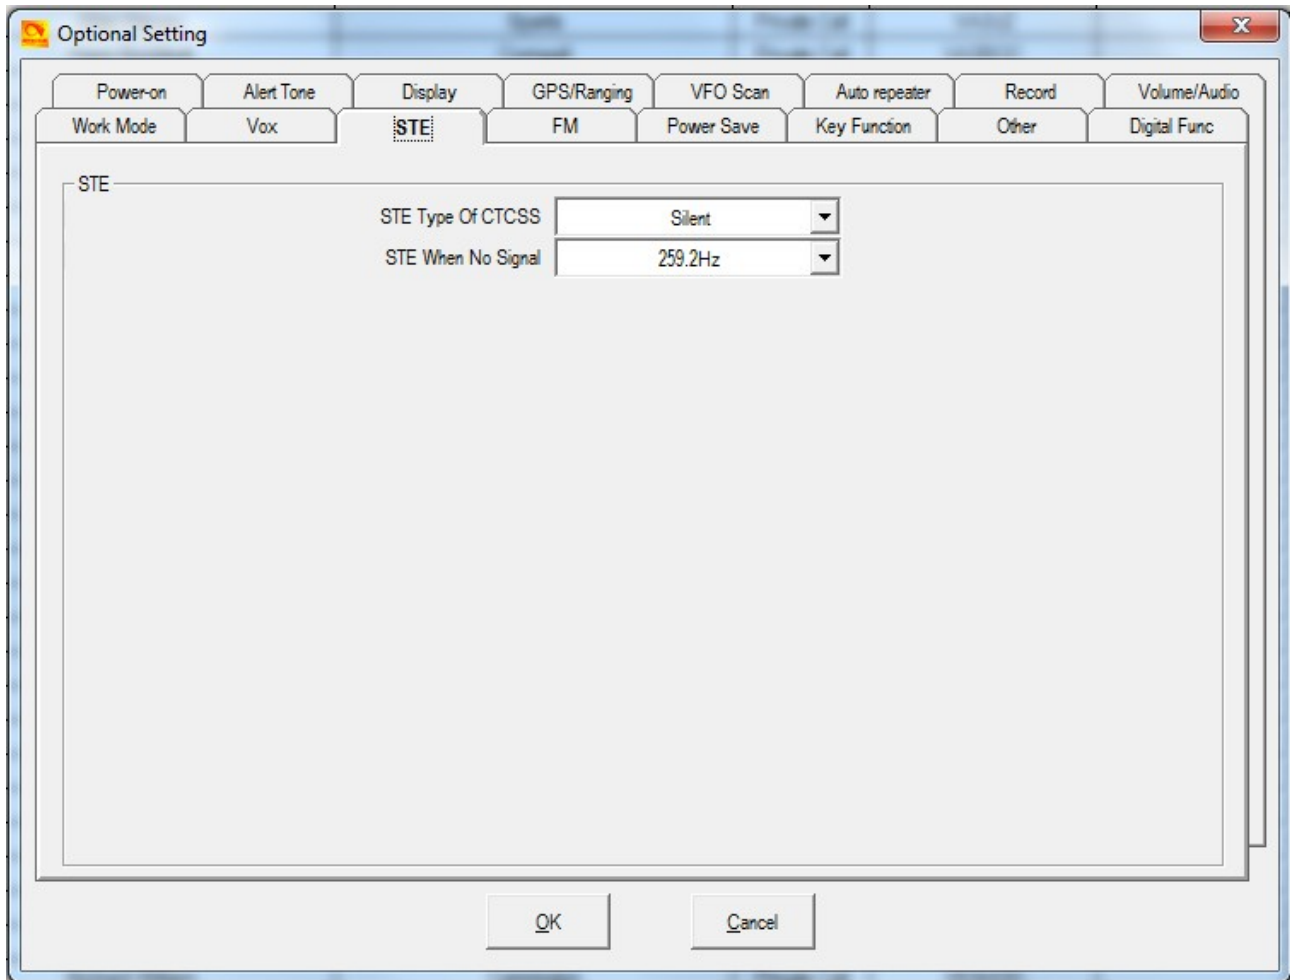


No comments.

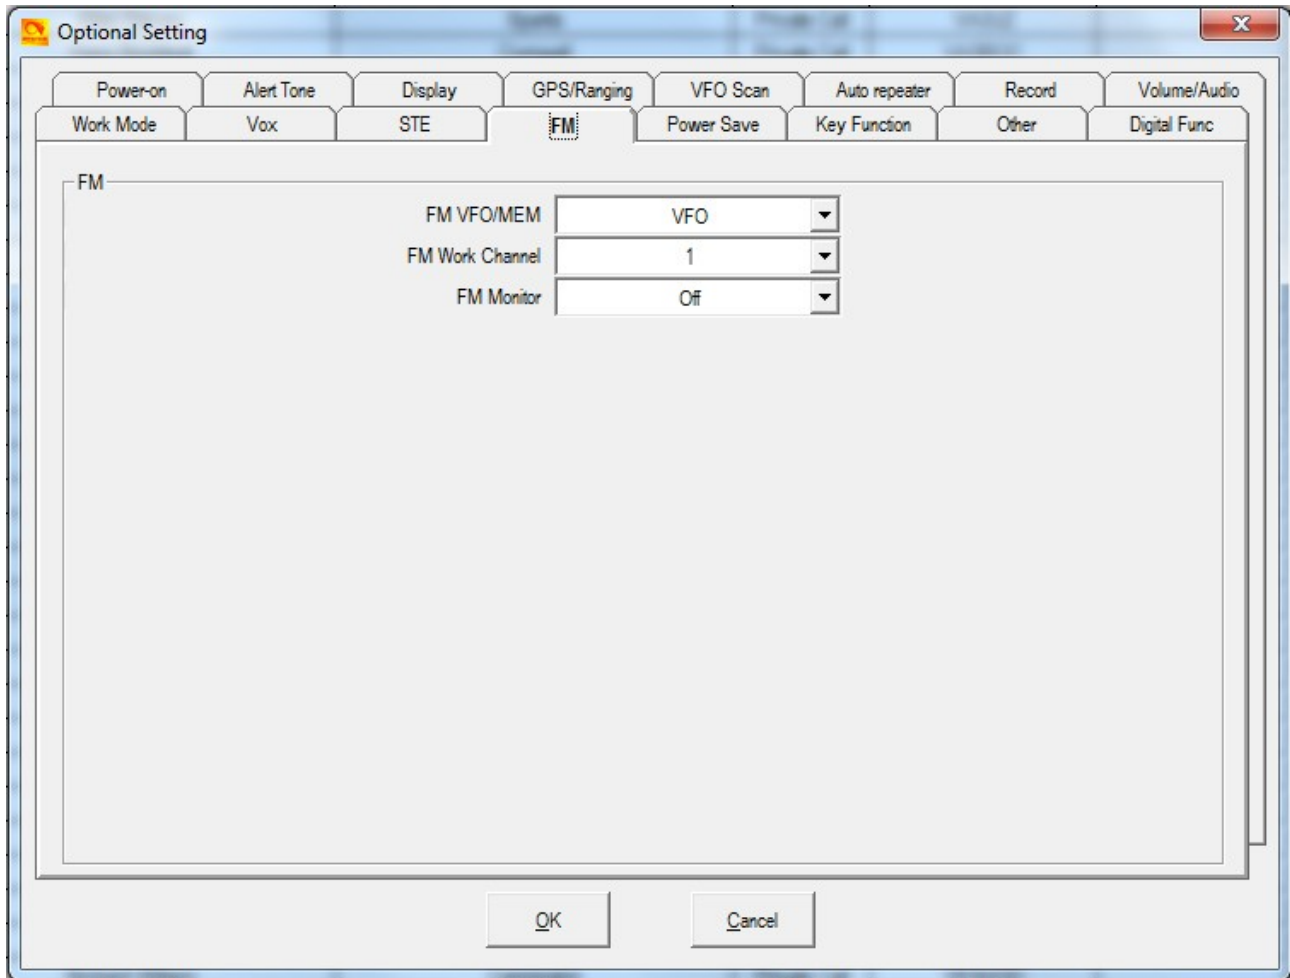


No comments.

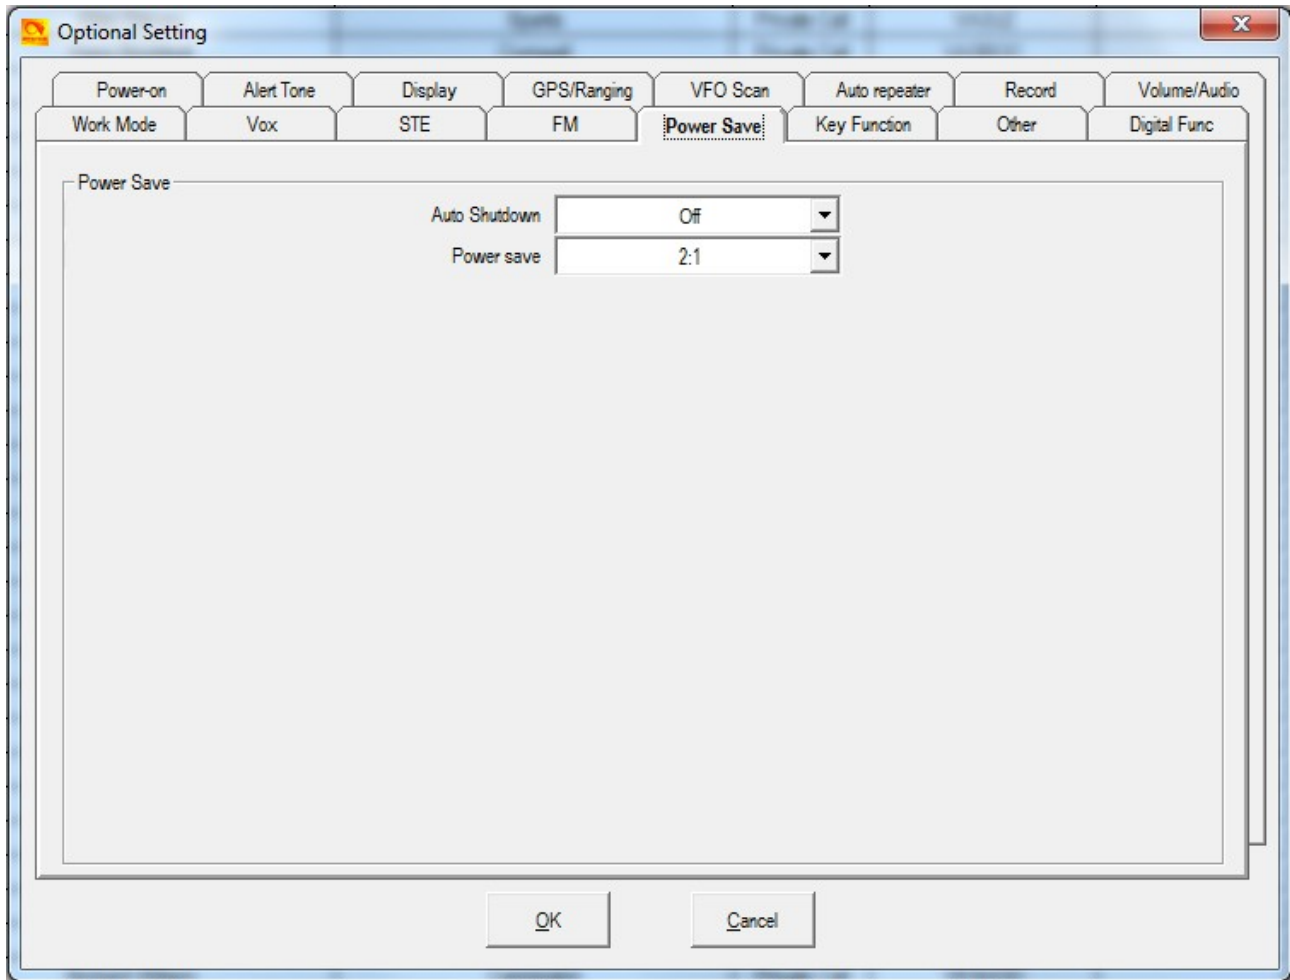


I use Power Save 2:1.

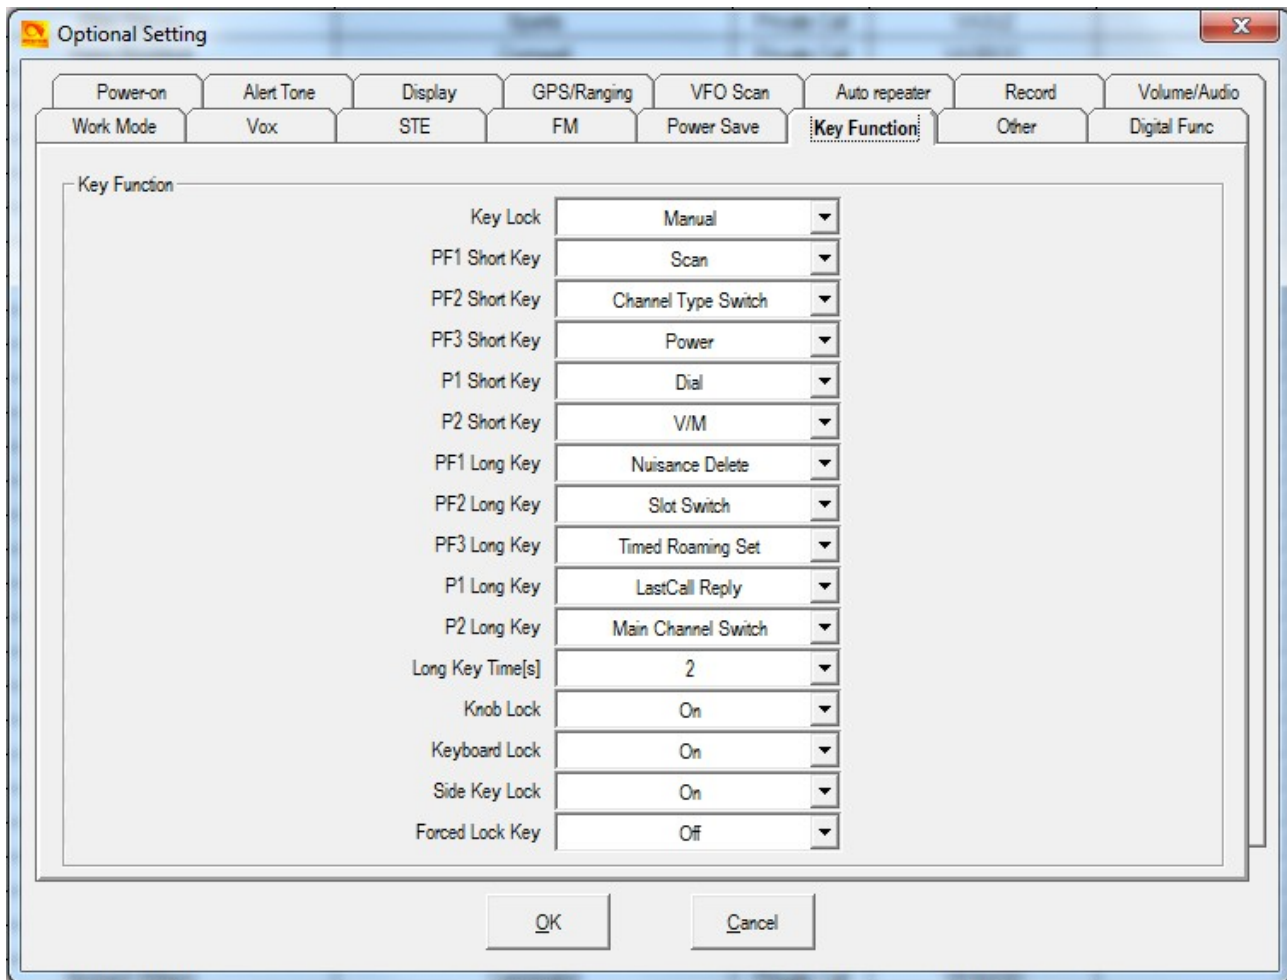

My PF1/PF2/PF3/P1/P2, both short and long, settings.

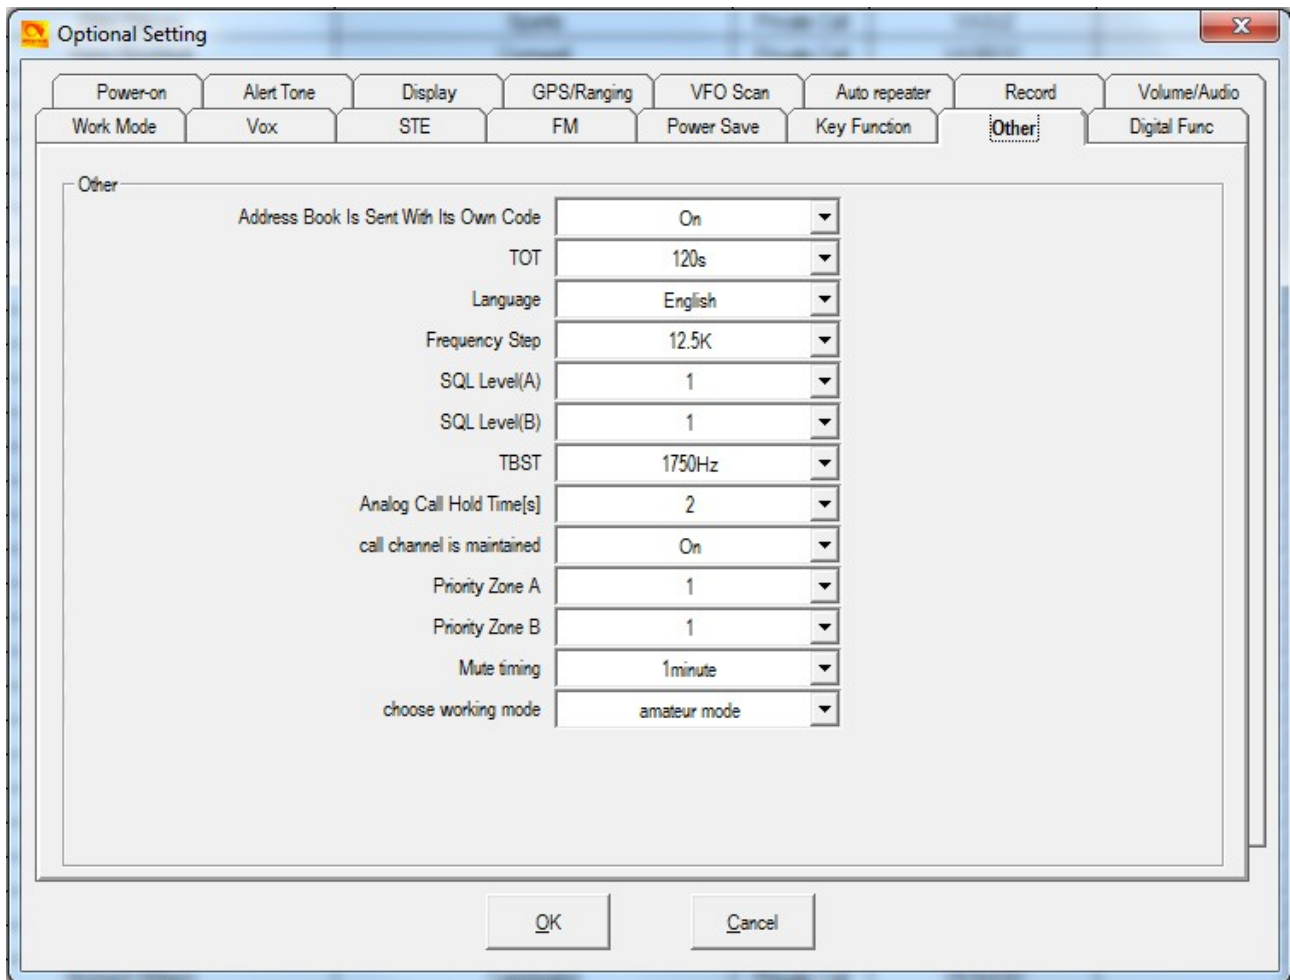

No comments.

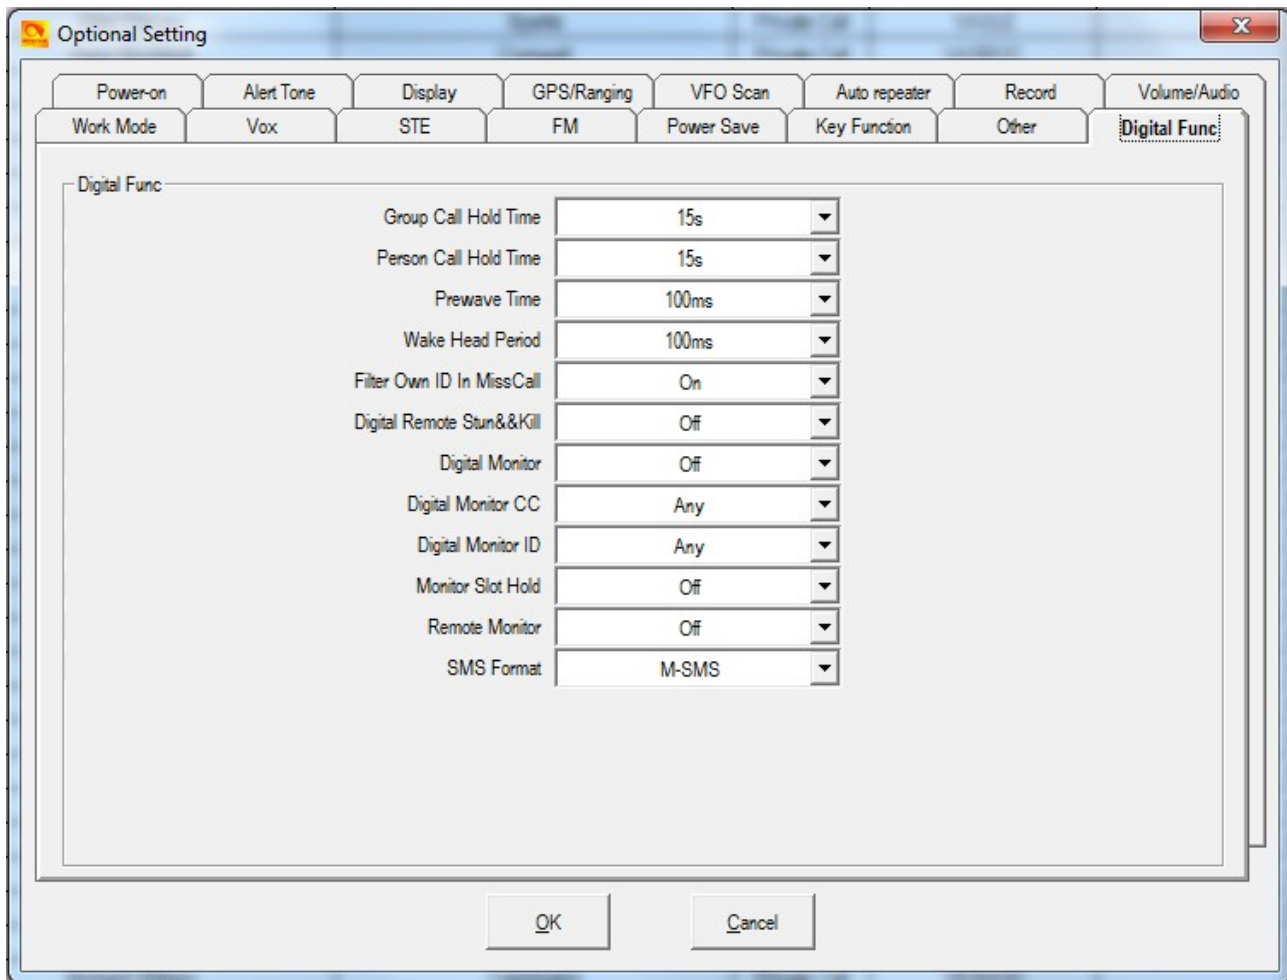

Group Call Hold Time and Person Call Hold Time is way to short. When setting both values to 15 seconds I have time to grab my radio and answer to the correct Talk Group or Private Call. Makes Private Call working very harmful.