


SMART MULTIMETER

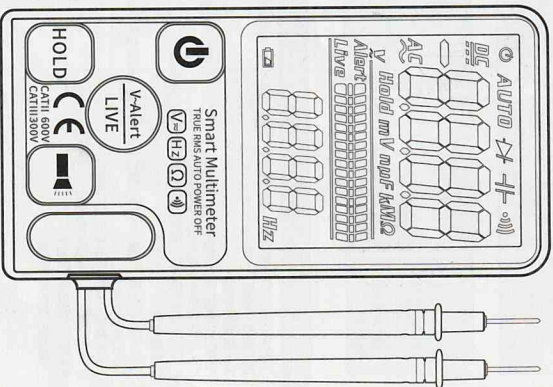

Security Information

⚠ Warning
People who use this meter should pay special attention to it, because the improper use might cause electric shock or damage to the meter. Please follow the actual safety rules and safety measures as specified in the manual. To fully use the function of this meter and ensure its safety operation, please read and follow its usage methods in the specification carefully.

This meter matched the technical requirement of digital multimeter GB/T 13978-92 and the safety requirement of electrical measuring instrument GB/T 13979-92, CAT II 600V. It belongs to secondary pollution and its over-voltage standard is CAT II 600V.

Please follow the safe operation guide and ensure safe use for this meter. Proper use and maintenance for meter will give you a satisfied service.

1.1 Preparation

- Need some universal protection to avoid electric shock.
- To avoid misuse the meter.
- Avoid any damage on the meter or not in the process of transportation when received it.
- 3. Check if there is any damage on this meter or not when preserved loaded and delivered it in poor condition.
- 4. The test lead must be in a good condition. Check whether there is any damage on its insulation or not and if meter's metal wire is exposed or not before using it.

1.2 Usage

1. The correct function and measuring range must be guaranteed when using it.
2. Don't overtake the indicating value of protection extent of every measuring range when testing.
3. Don't touch the top of test lead (the metal part) when linked meter with measuring circuit.
4. When testing, the voltage tested is over 60V DC or 30V AC (RMS), please keep your hands away from the test lead protector.
5. When the measuring terminal voltage is over 600V DC or 600V AC, please stop testing voltage.
6. Before turning the switch to change the testing function, the test lead should be removed from the measuring circuit.
7. Do not measure resistance, capacitance, diodes and lines when the line is connected to the power source.
8. When use current, resistance, capacitor, diode and circuit breaker, user should avoid to link meter with voltage source.
9. Don't test capacitance before the capacitor is fully discharged.
10. Don't test capacitor under the explosive gas, steam or dust environment.
11. If there is any abnormality or malfunction in the meter, user should stop using it. Please take the meter back to the manufacturer for repair. The battery cover are completely clipped in place.
12. Please avoid the meter in the condition of direct sunlight, high temperature, high humidity.
13. Don't preserve or use meter in the condition of direct sunlight, high temperature, high humidity.

Marks

- Double insulation protection. (II Level)
- CAT II In accordance with the IEC-61010-1 standard over-voltage (installation) level I pollution level 2, CAT II means the level of pulse withstand voltage protection provided.


CE Matched EC(CE) standard.

Electrical grounding.

Product Description

1. Part Name

No.	Description
1	V-Alert sensor area
2	LCD Screen
3	Power switch
4	V-Alert or Live Wire Check
5	Data hold
6	Flashlight switch
7	Test leads

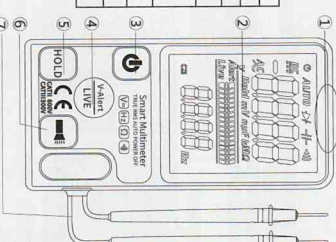

2. Key Description


V-Alert/Live: Automatic recognition mode, non-contact voltage sensing mode. Live wire check mode switching.

Flashlight: Back light switch.

HOLD: In Auto mode, when the test value appears on the screen, press to lock the screen, press the HOLD or V-Alert/LIVE button again to unlock the screen.

Power switch.

3. LCD full display symbol

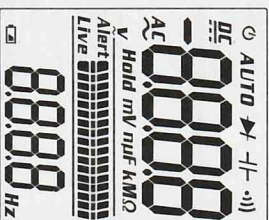

Symbol	Elaborate on
	AC voltage
	DC voltage
	Battery is low and should be changed
	Continuity
AUTO	Automatic range measurement mode
	Auto power off function indication
HOLD	Data hold
VmV	Voltage unit: volt/millivolt
Ω, MΩ	Resistance unit: Ohm, Megohm
V-Alert	Non-contact voltage detection/NCV
LIVE	Live wire check mode

3 Specification

Automatic measuring range.
Full measuring range overload protection.
Maximum voltage allowed at the measuring end : 600V DC or 600AC(RMS).
Work height: maximum 2000m
Display : LCD.
Maximum display value: 5999 digits.
Polarity indication : Self-indicating, '-' means Negative polarity.
Over-range display : 'OL' or '-OL'.
Sampling time : The meter figures show about 0.4 seconds
Unit display : Function and battery unit display.
Automatic Power off time : 3 minutes
Operational power : CR2032 x 2 battery.
Battery low voltage indication: LCD display symbol.
Temperature coefficient : less than 0.1 % Accuracy / °C
Operational temperature and humidity : 0 ~ 40 °C / 32 ~ 104 °F, 45% ~ 80%RH
Storage temperature and humidity : -10 ~ 60 °C / 4 ~ 140 °F, 45% ~ 80%RH
Boundary dimension : 136x67x12mm
Weight : ~110g
Backlight: IN screen version without backlight / VA screen version with automatic wake-up, 15 seconds automatic standby mode.

Technical index

Accuracy
Accuracy applies within one year of calibration.
Reference conditions: environmental temperature 18 °C to 28 °C, relative humidity is not greater than 80.

1. Voltage DC

Range	Resolution	Accuracy
600V	0.1V	±(0.8%+3counts)

Sensitivity: minimum 0.5V DC voltage
Input impedance: 1MΩ
Maximum input voltage : 600V DC&AC (RMS)

2. Voltage AC

Range	Resolution	Accuracy
600V	0.1V	±(1.2%+5counts)

Sensitivity: minimum 0.5V DC voltage
Input impedance: 1MΩ
Maximum input voltage : 600V DC&AC (RMS)
Frequency range: 50Hz~60Hz, true RMS response.

3. Resistance

Range	Resolution	Accuracy
6000Ω	1Ω	±(1.2%+3counts)

Overload protection : 600V DC or AC (RMS)

4. Frequency

Range	Resolution	Accuracy
1000Hz	1Hz	±(1.0%+5counts)

Frequency range: 40Hz~1000Hz.

5. Measure Continuity

Function	Accuracy
• • If the resistance is <30Ω, the continuity beeper sounds.	

Overload protection : : 6000V DC or AC (RMS)

6. V-Alert

Range	Explanation
Low range	The screen displays 1/3 analog bar, the buzzer sounds a slow alarm.
Mid-range	The screen displays 2/3 analog bar, the buzzer sounds a quick alarm.
High-range	The screen displays full analog bar, the buzzer sounds a very loud alarm.

4 Operation Instructions


1. Voltage DC or AC/Frequency/Resistance/Measure Continuity

- 1.1 Press the power button, the default mode is AUTO mode.
- 1.2 Connect the test leads in parallel to the circuit, power supply, or tested resistor. The meter automatically identify whether it is AC voltage, DC voltage or resistance, and shows the frequency on the screen.
- 1.3 The built-in buzzer sounds if the tested resistance less than 300.
- 1.4 Read the test results from the screen and view the dynamic changes of the values through the analog bar.


Warning:

- Do not input voltages higher than 600V and currents greater than 200mA, showing higher voltage and current values are possible, but it may destroy the meter.
- When measuring high voltage, be careful to avoid electric shock.
- Disconnect the test leads from the circuit when completed measurement.

Voltage DC

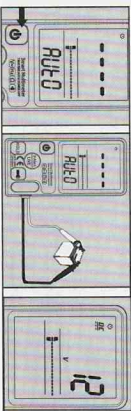


Voltage AC Frequency

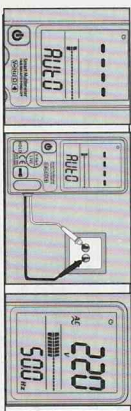


14

Resistance

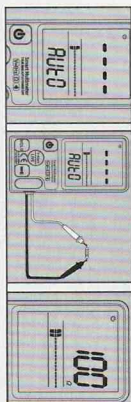

Measure Continuity

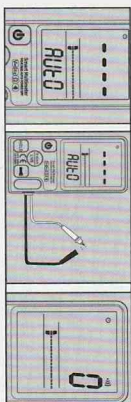

2. V-Alert or Live wire check

2.1 Press the power button.

2.2 Press V-Alert/LIVE button, switching to voltage detection mode.

2.3 Let the non-contact voltage sensor of the meter close to the live wire with

the AC voltage less than 100V. The bar graph indicator will light up. The closer the sensor is to the AC voltage, the higher the bar value, the higher the alarm sound of the buzzer.

2.4 Press the V-Alert/LIVE button, switching to the Live Check mode and the screen displays Live.



2.5 Insert any test probe into the socket jack. The screen will display LIVE, and the buzzer will sound an alarm indicating that the line is a live wire.

Warning:

- Non-contact AC voltage and live wire detection operations may be influenced by the socket design, insulation thickness and class. Even without indication, the voltage may still exist. Do not use non-contact voltage detector to determine whether the voltage existence.
- When input voltage, the non-contact voltage sensing indicator may light on because of the existence of induced voltage.
- Outside environment (such as flash, motor, etc.) may influence the non-contact voltage detection.

15

V-Alert or Live wire check

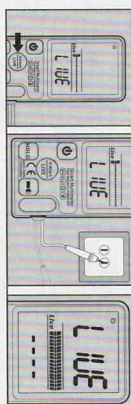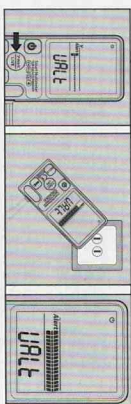


5 Maintenance

Δ Warning

To avoid shock hazard, users should remove pen from the testing circuit before opening the battery cover of the meter.

1. Replace Battery

- 1) If  symbol appears, it means the battery shall be replaced.
- 2) Turn off the instrument power
- 3) Use a screwdriver to remove the screw.
- 4) Replace the batteries with new batteries.
- 5) Mount the case.

Note:

Do not violate the battery polarity.

16