



## Circuit Diagrams Trident

This document is protected by copyright and may not, in whole or part be stored in a retrieval system, or transmitted in any form or by any means, copied, photocopied, translated or reduced to any machine-readable form without prior consent in writing from Triumph Motorcycles Limited.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Triumph Motorcycles Limited reserves the right to make changes and alter specifications without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your authorised Triumph dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations in this publication are intended for reference use only and may not depict actual model component parts.

© Triumph Motorcycles Ltd. 10.2020 Issue 1


---

This page intentionally left blank


Circuit Diagrams	Page
1 - Power Distribution Circuit	4
2 - Starter Motor Circuit	5
3 - Ignition Circuit	6
4 - ABS Circuit	7
5 - Brake Circuit	8
6 - Engine Management Circuit - ECM Power and Ground	9
7 - Engine Management Circuit - Pressure Sensors	10
8 - Engine Management Circuit - Temperature Sensors	11
9 - Engine Management Circuit - Switches	12
10 - Engine Management Circuit - Position Sensors	13
11 - Engine Management Circuit - Level Sensor	14
12 - Engine Management Circuit - Fuel Injection Components	15
13 - Engine Management Circuit - Throttle Control	16
14 - Engine Management Circuit - Cooling Fan	17
15 - Engine Management Circuit - Fuel Pump	18
16 - Instrument Circuit	19
17 - Lighting Circuit - Front	20
18 - Lighting Circuit - Rear	21
19 - Lighting Circuit - Indicators	22
20 - Communication Network Circuit	23
21 - Horn Circuit	24
22 - Immobiliser Circuit	25
23 - Diagnostic Connector Circuit	26
24 - Accessories Circuit	27
25 - Heated Accessories Circuit	28
26 - Alarm Circuit	29
27 - Rider Information Circuit	30
28 - Ground Circuit - Front	31
29 - Ground Circuit - Middle	32
30 - Ground Circuit - Rear	33

ELECTRICAL CIRCUIT

01 POWER DISTRIBUTION CIRCUIT

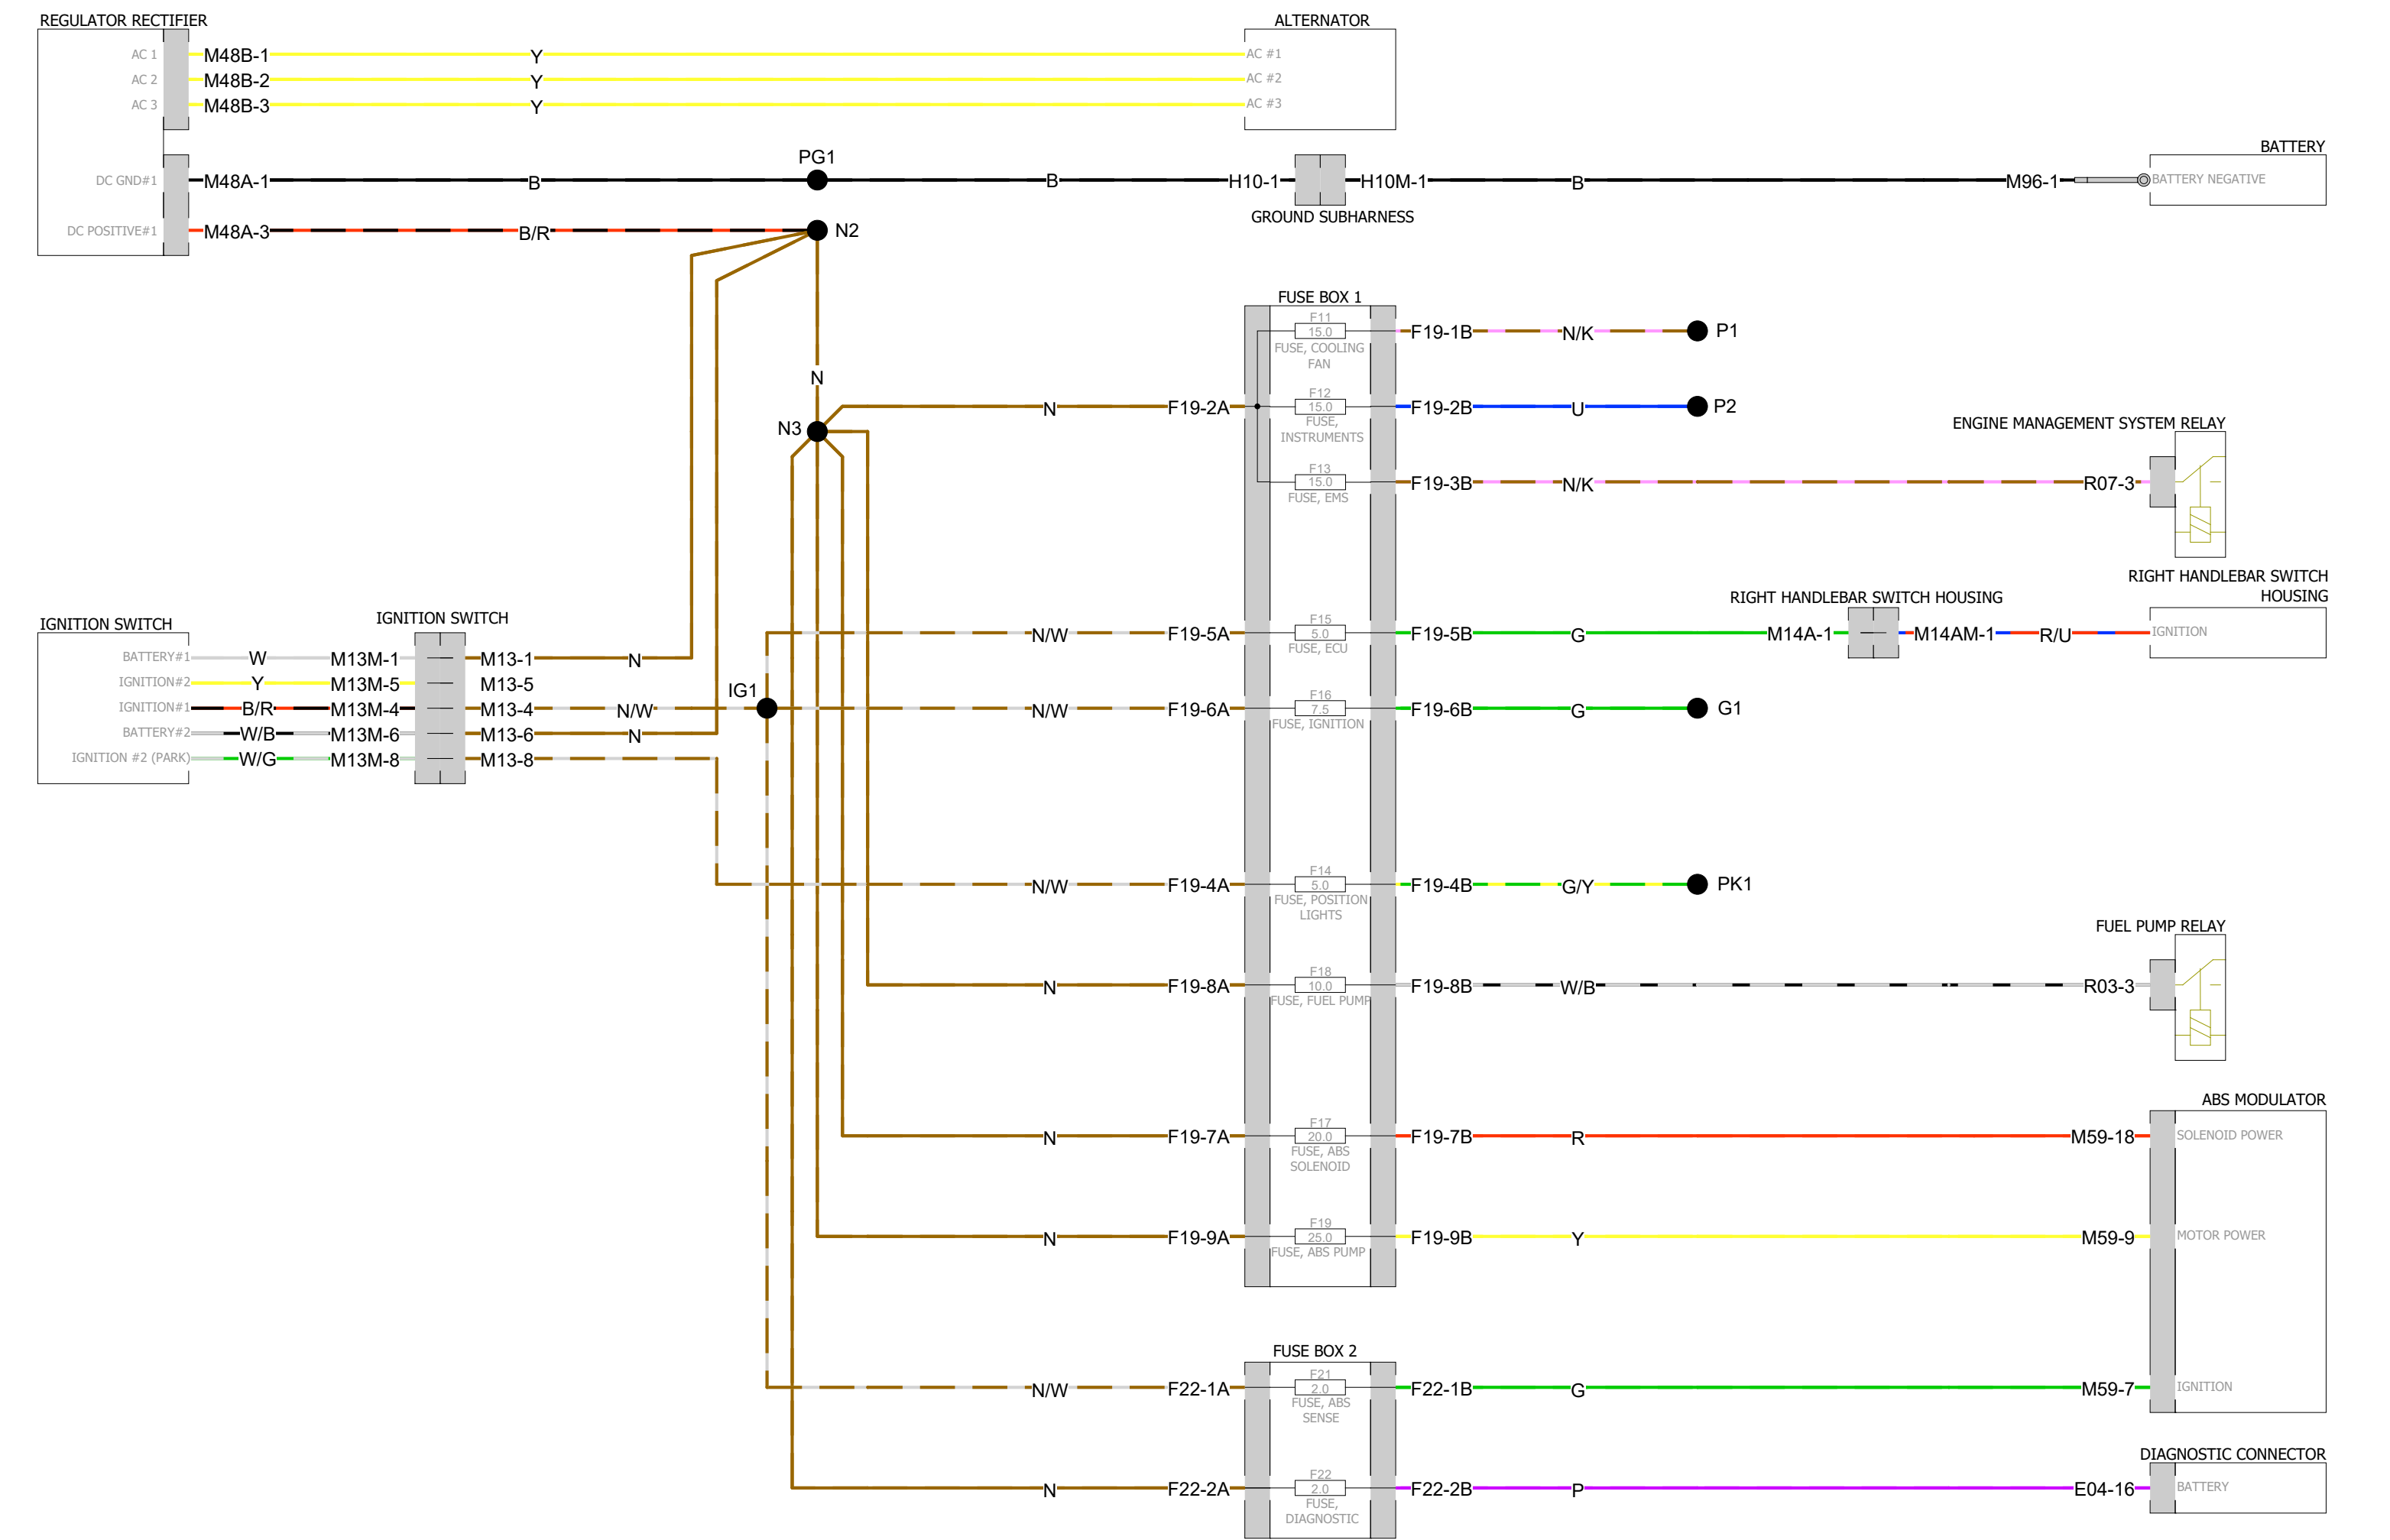


02 STARTER MOTOR CIRCUIT

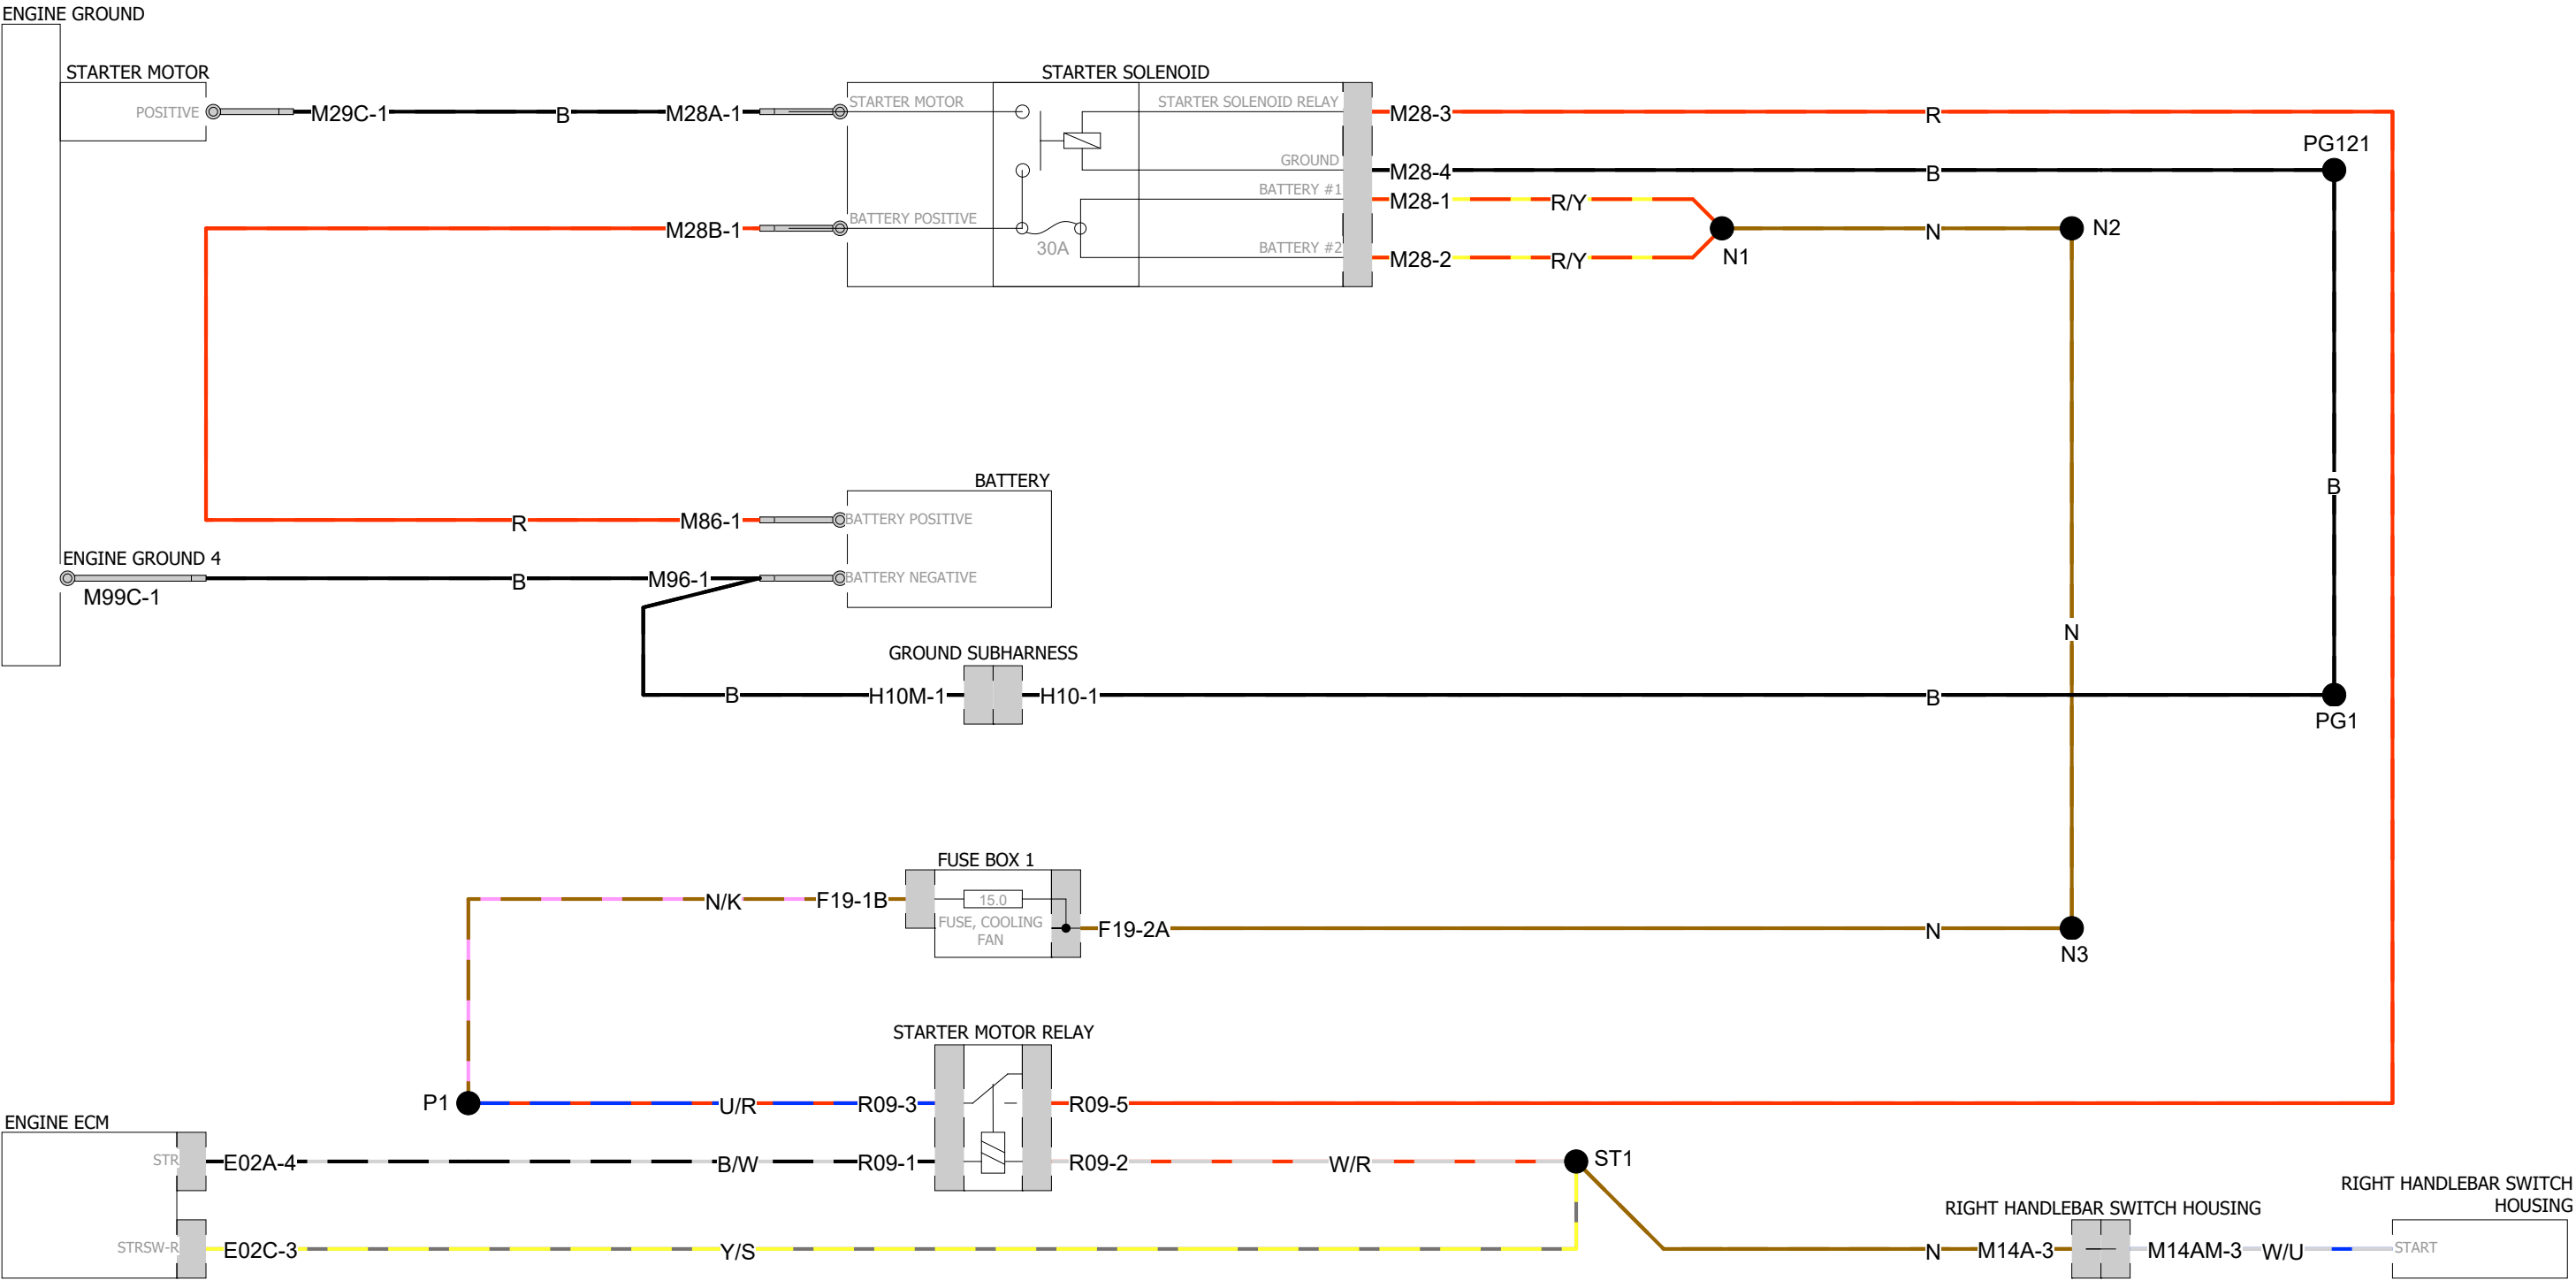


### 03 IGNITION CIRCUIT




04 ABS CIRCUIT

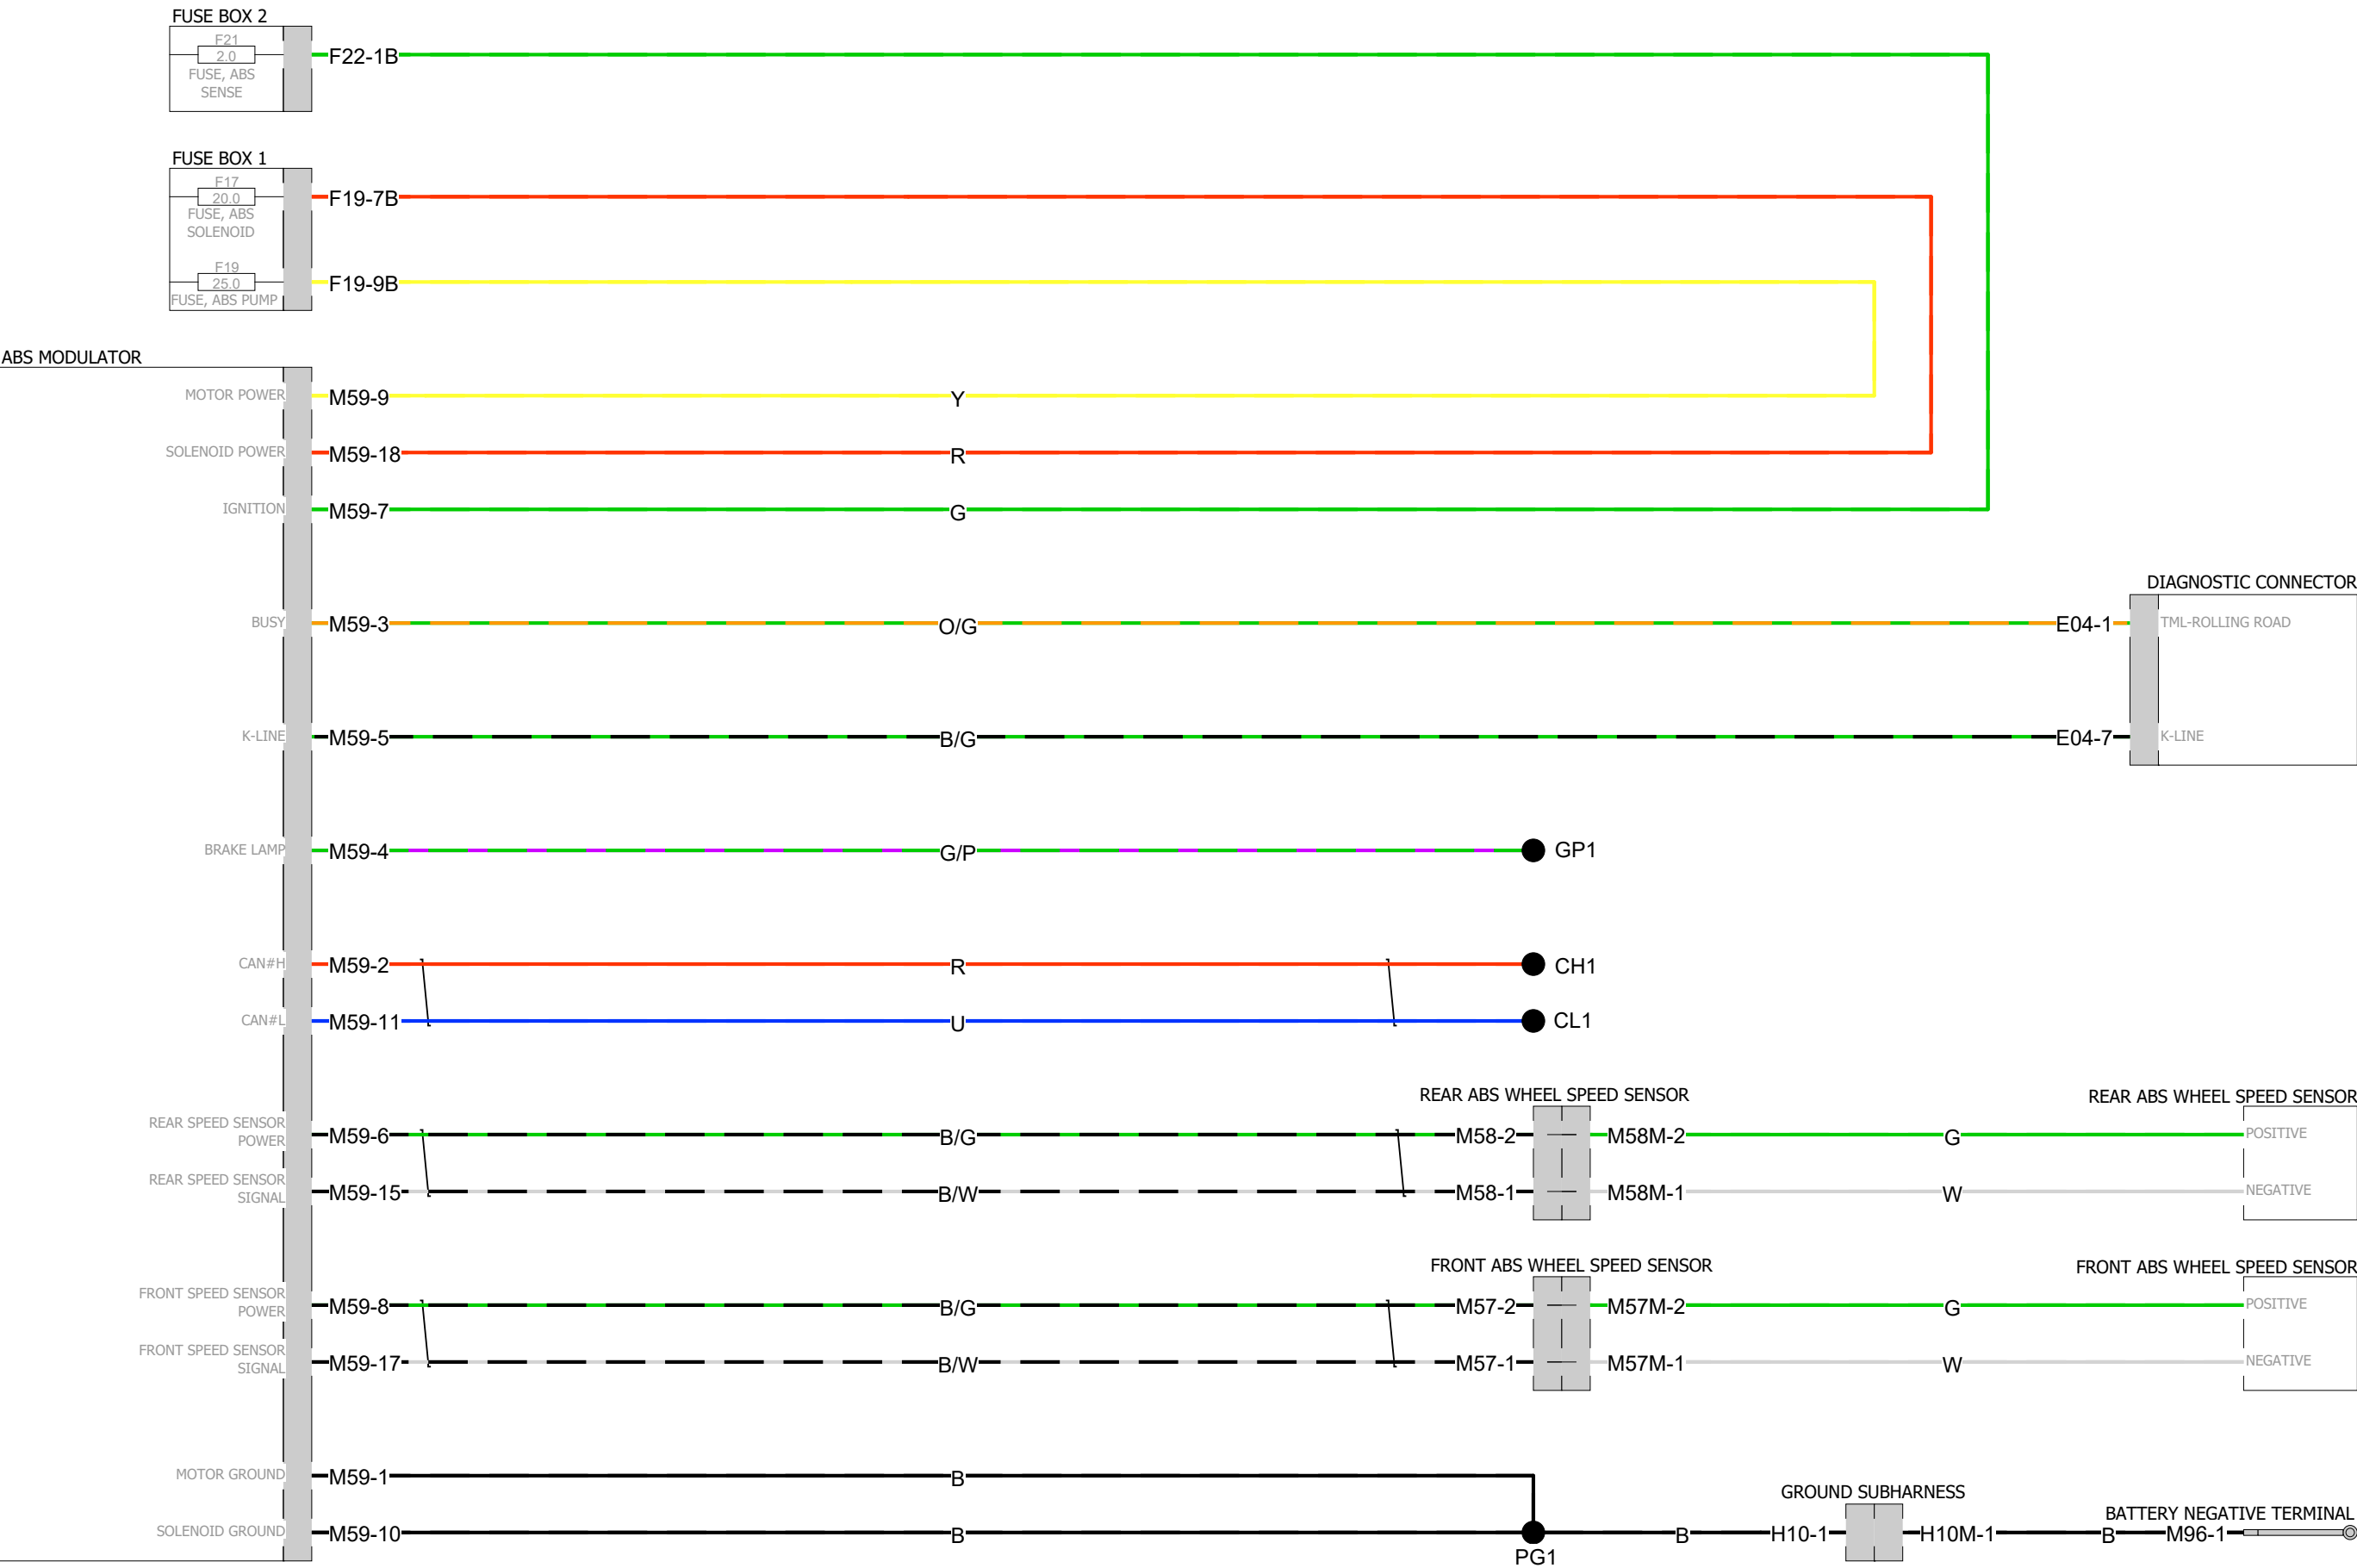

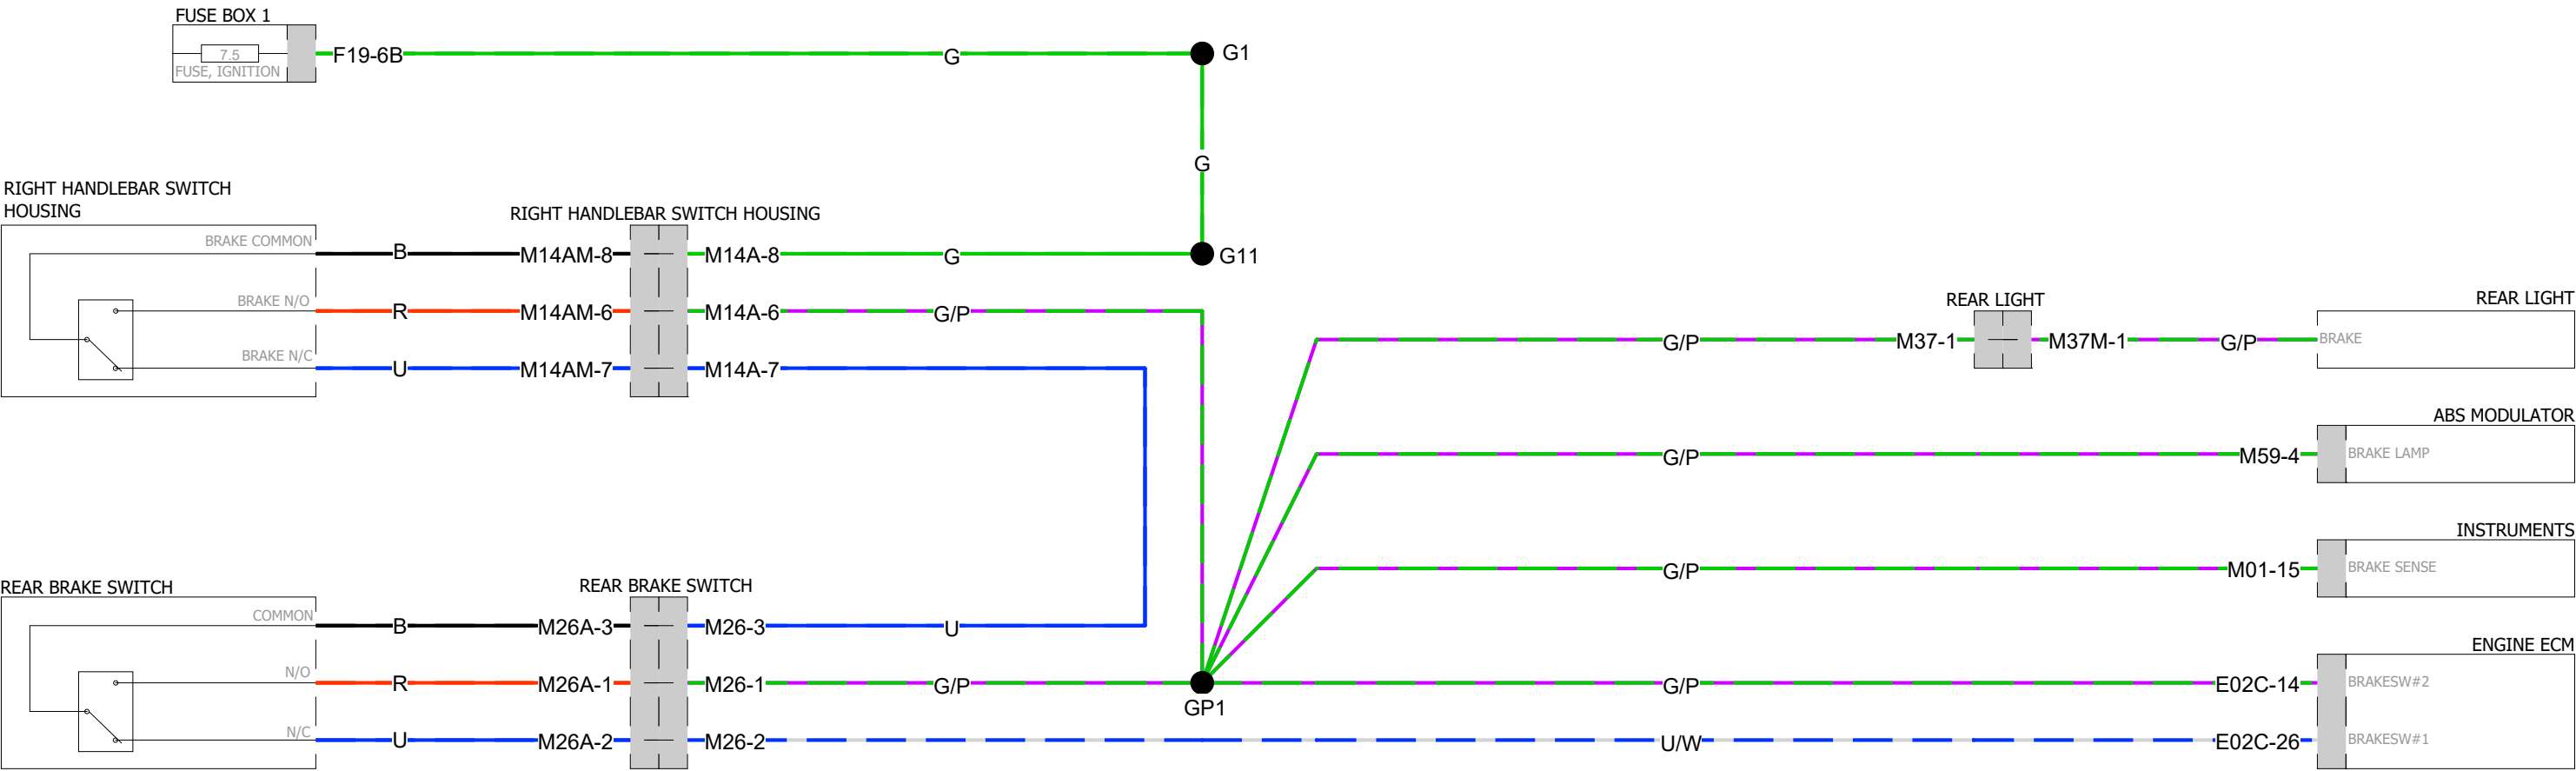




06 ENGINE MANAGEMENT CIRCUIT – ECM POWER AND GROUND

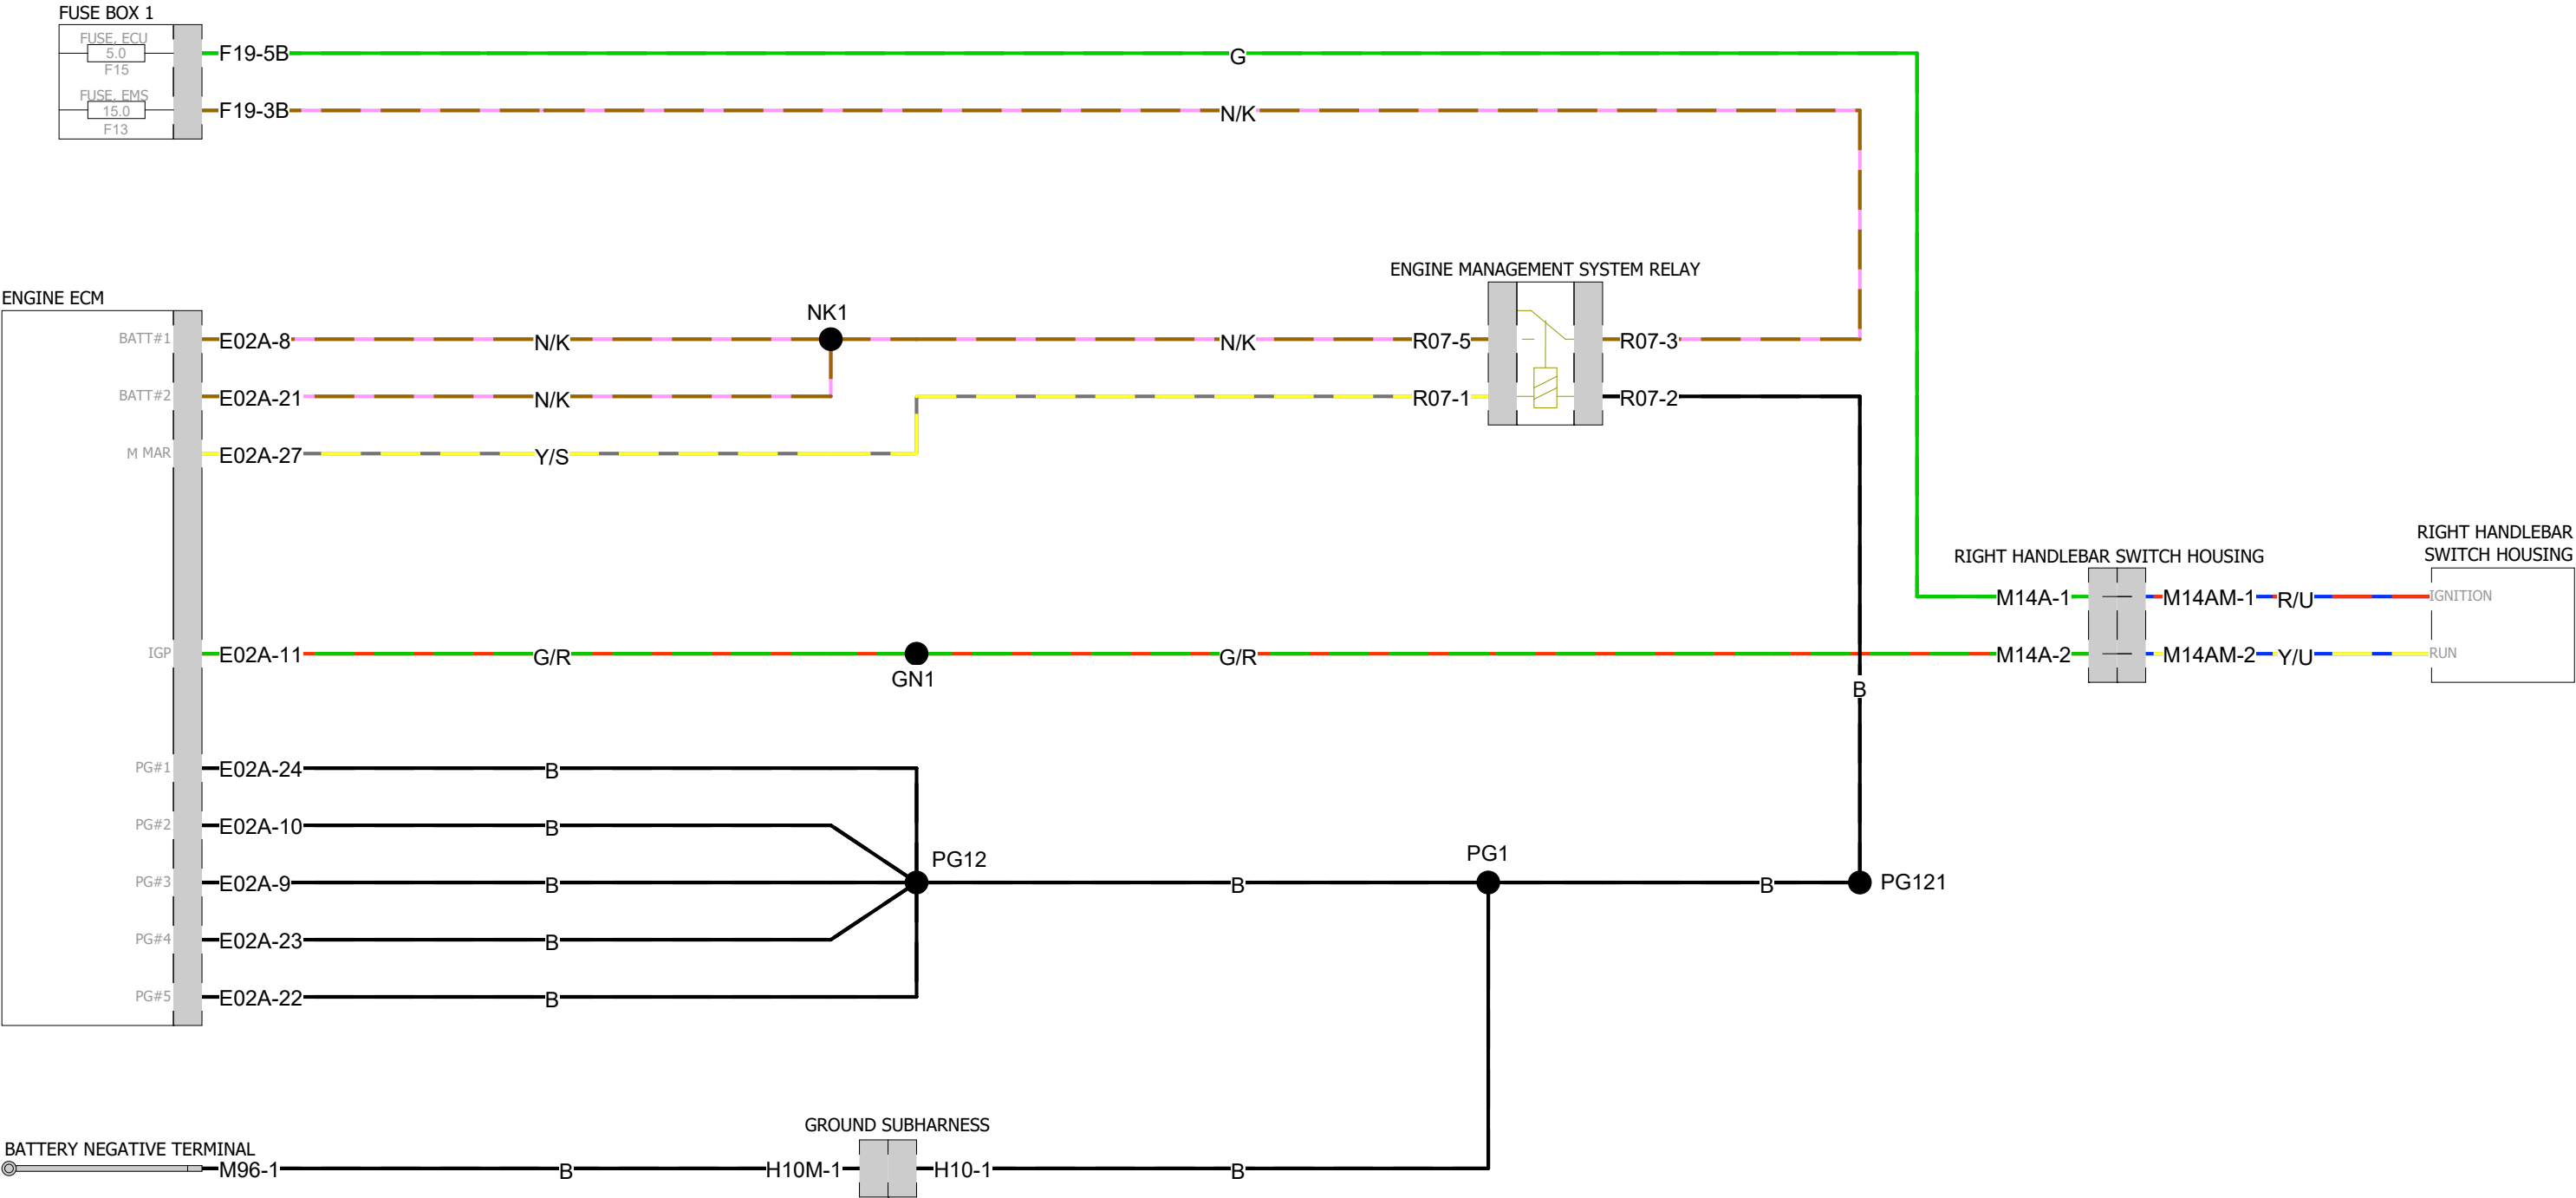


ELECTRICAL CIRCUIT

07 ENGINE MANAGEMENT CIRCUIT – PRESSURE SENSORS

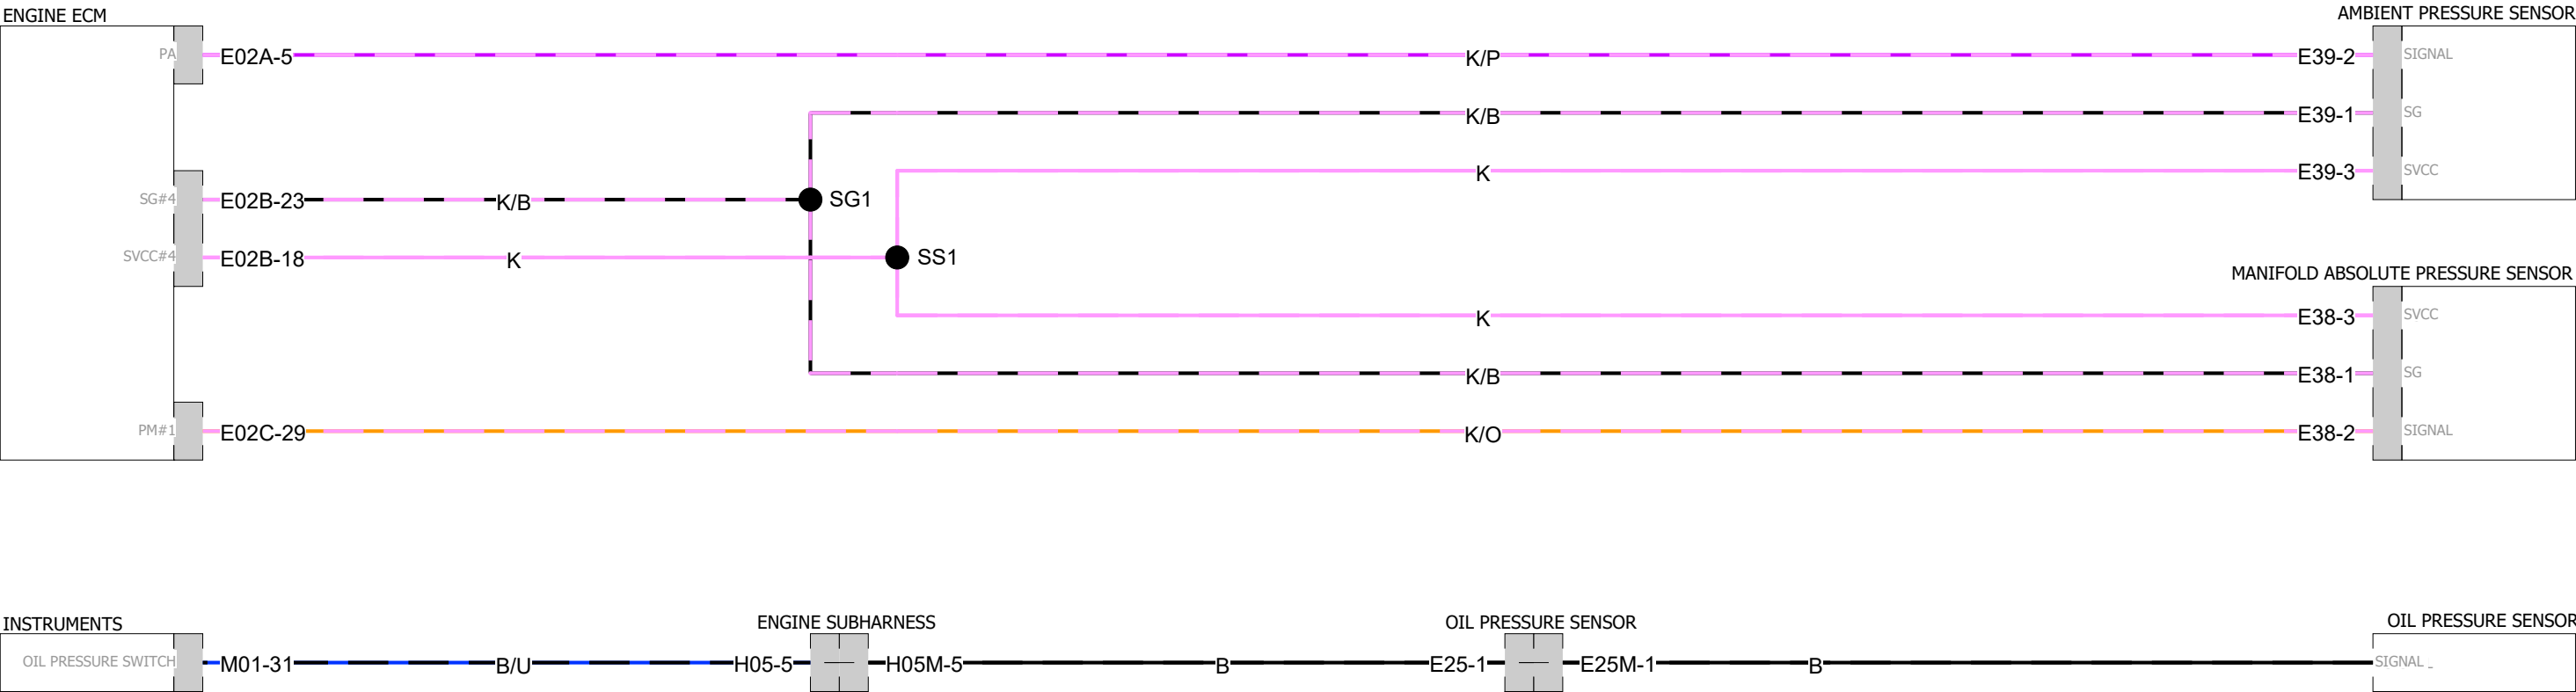


08 ENGINE MANAGEMENT CIRCUIT – TEMPERATURE SENSORS

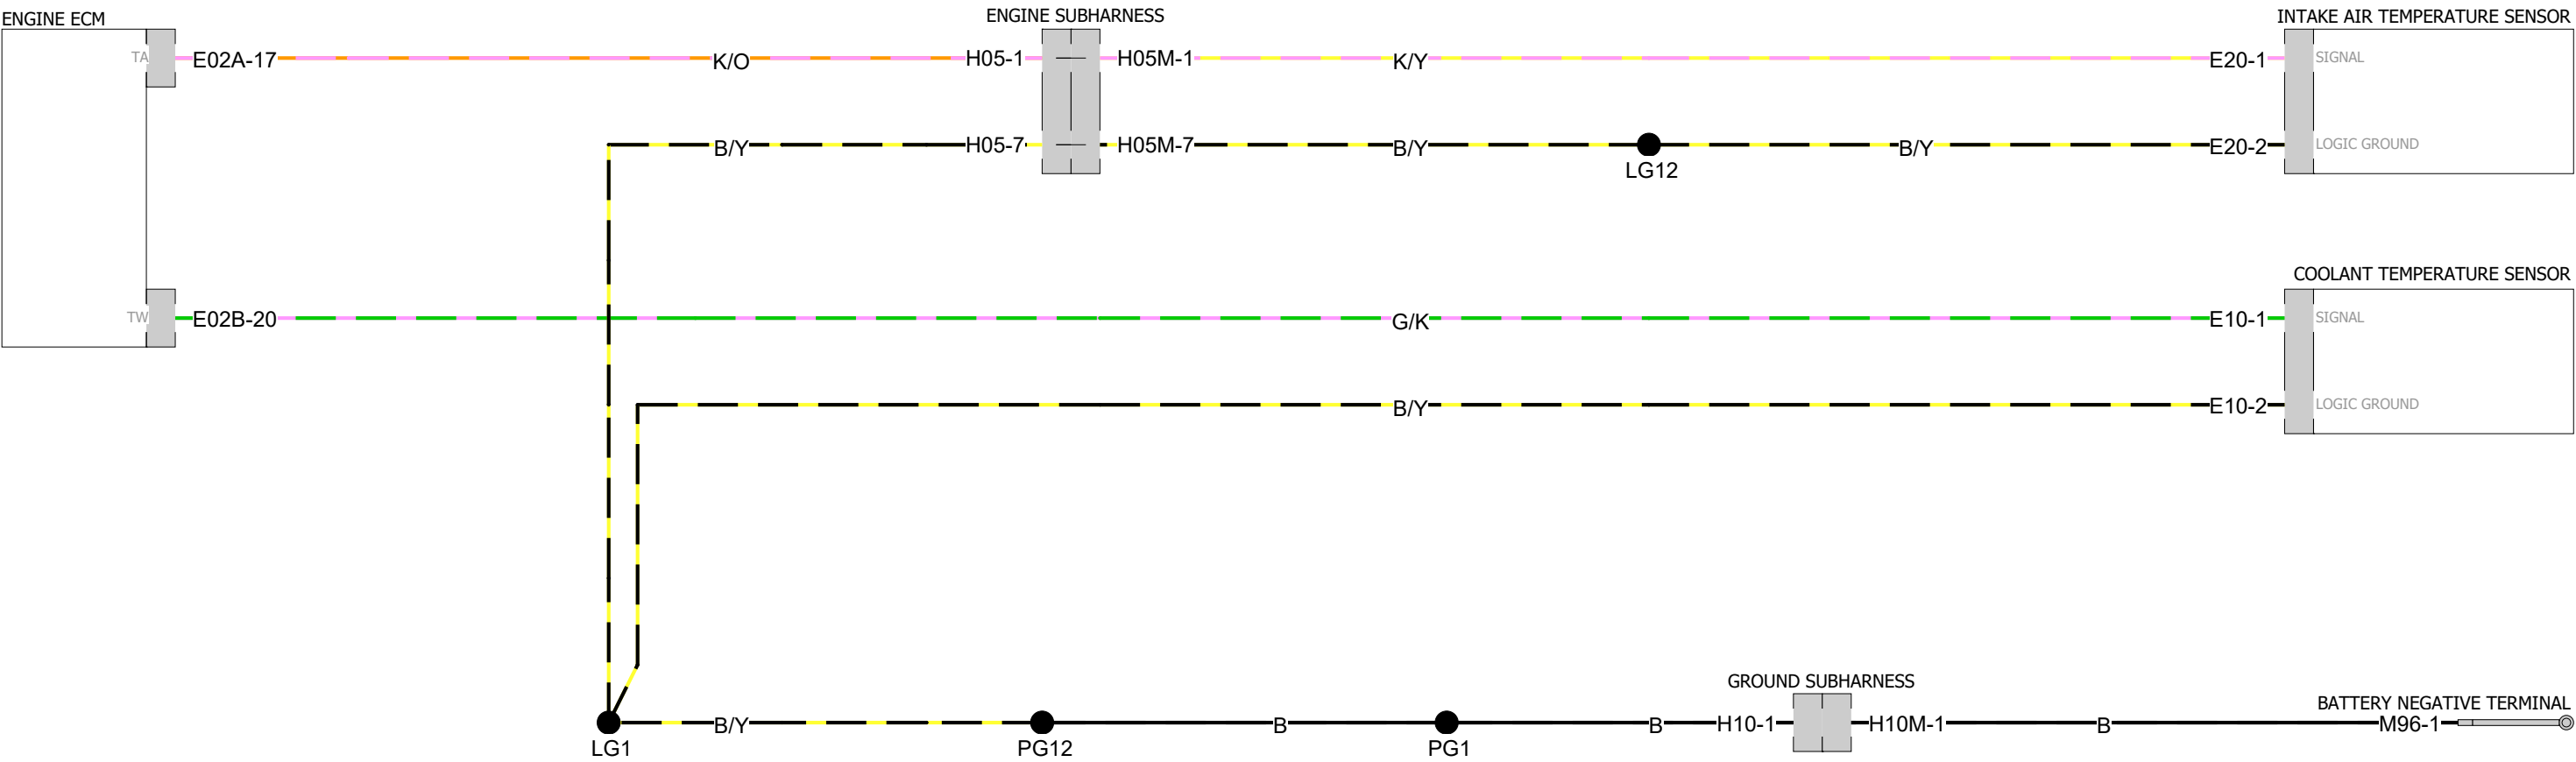


ELECTRICAL CIRCUIT

09 ENGINE MANAGEMENT CIRCUIT – SWITCHES

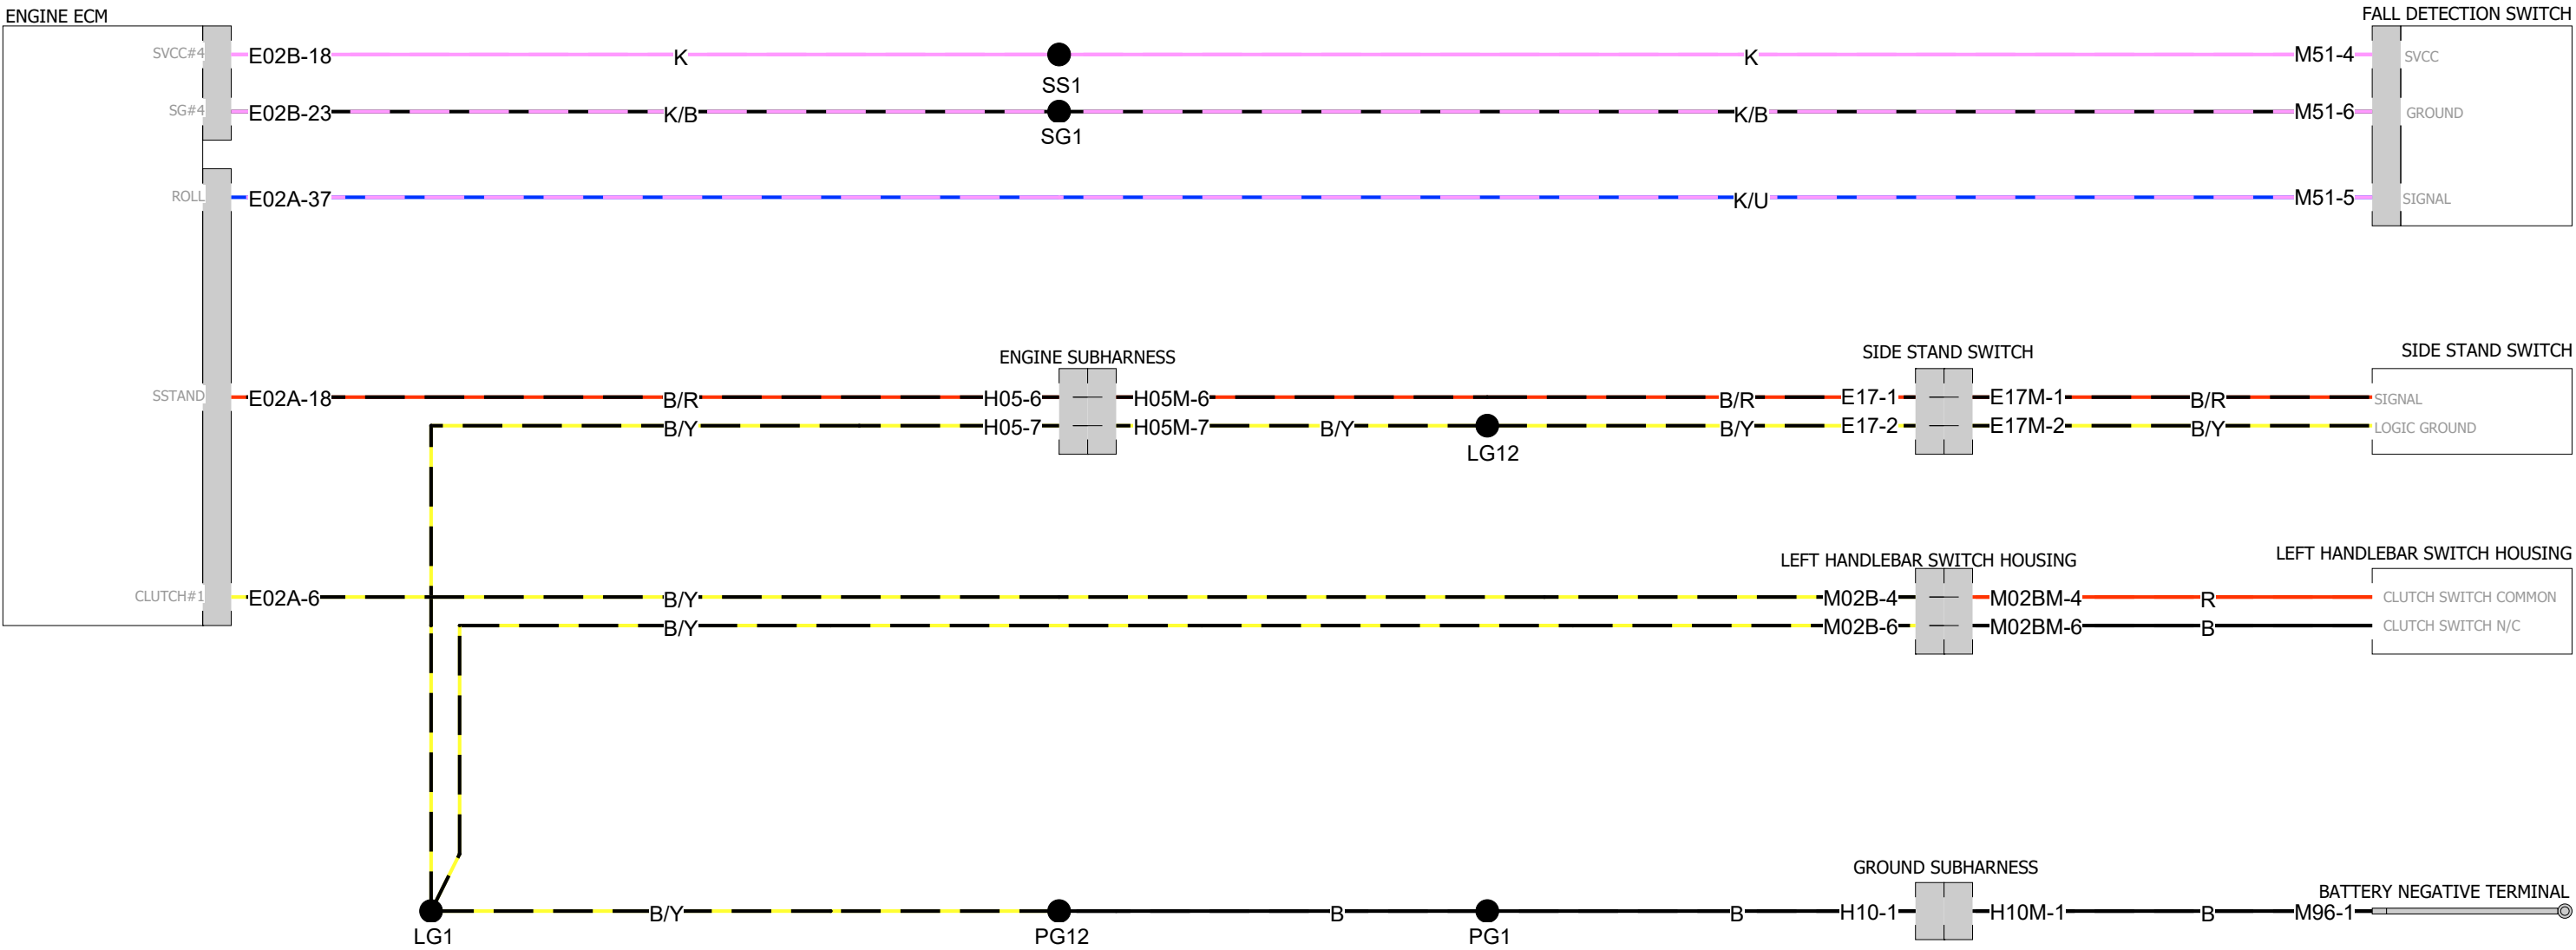


10 ENGINE MANAGEMENT CIRCUIT – POSITION SENSORS

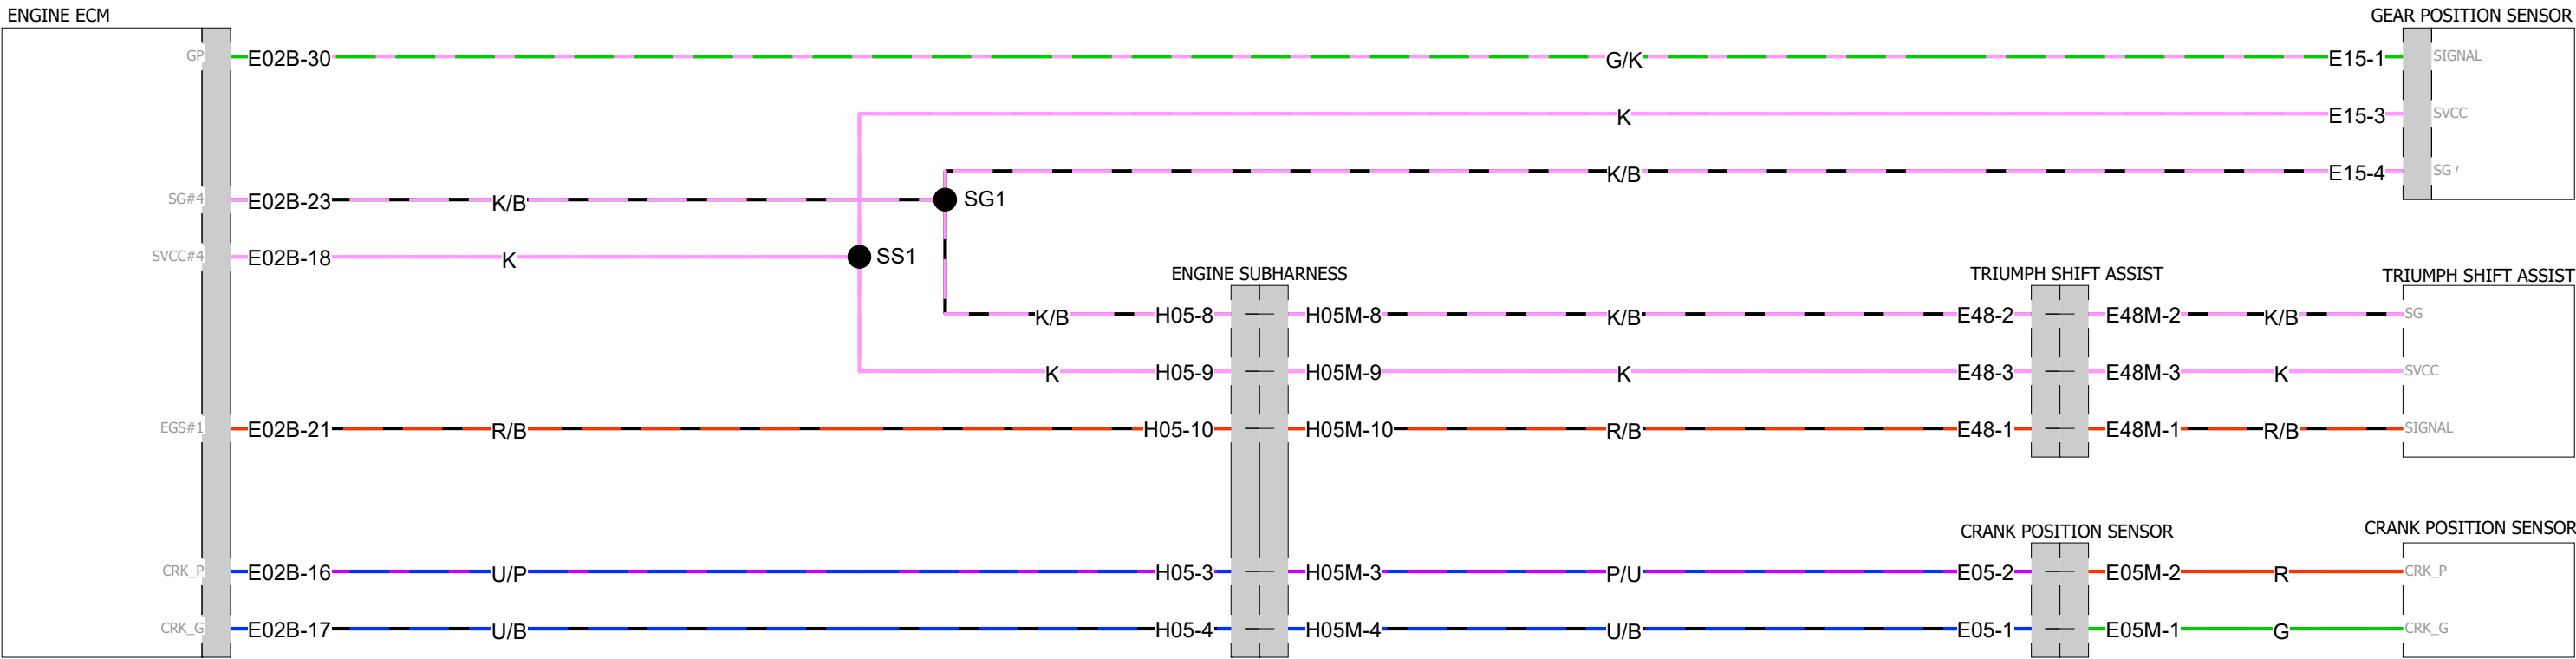


ELECTRICAL CIRCUIT

11 ENGINE MANAGEMENT CIRCUIT – LEVEL SENSOR

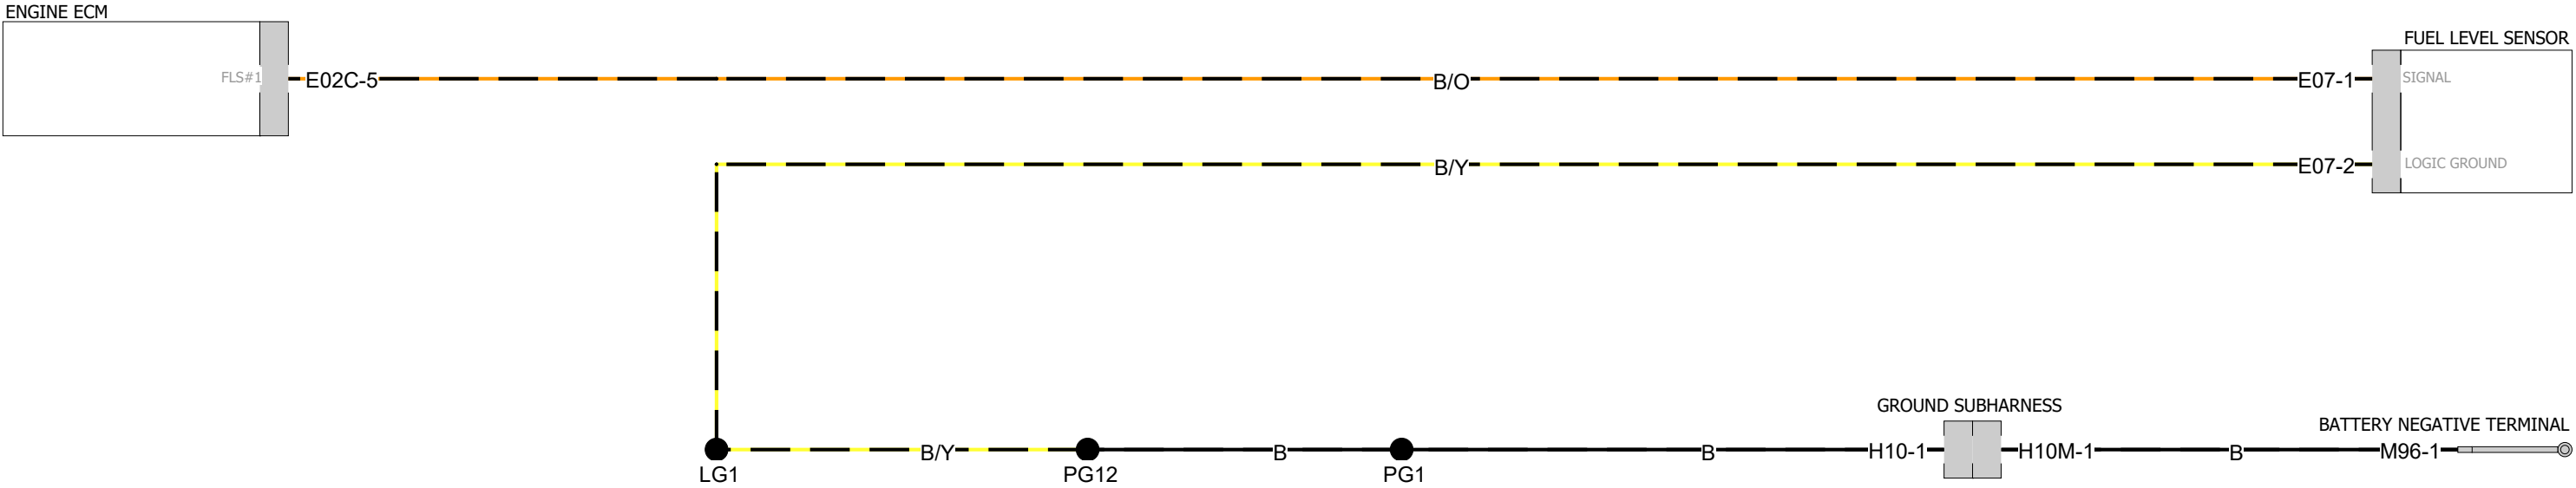


12 ENGINE MANAGEMENT CIRCUIT – FUEL INJECTION COMPONENTS

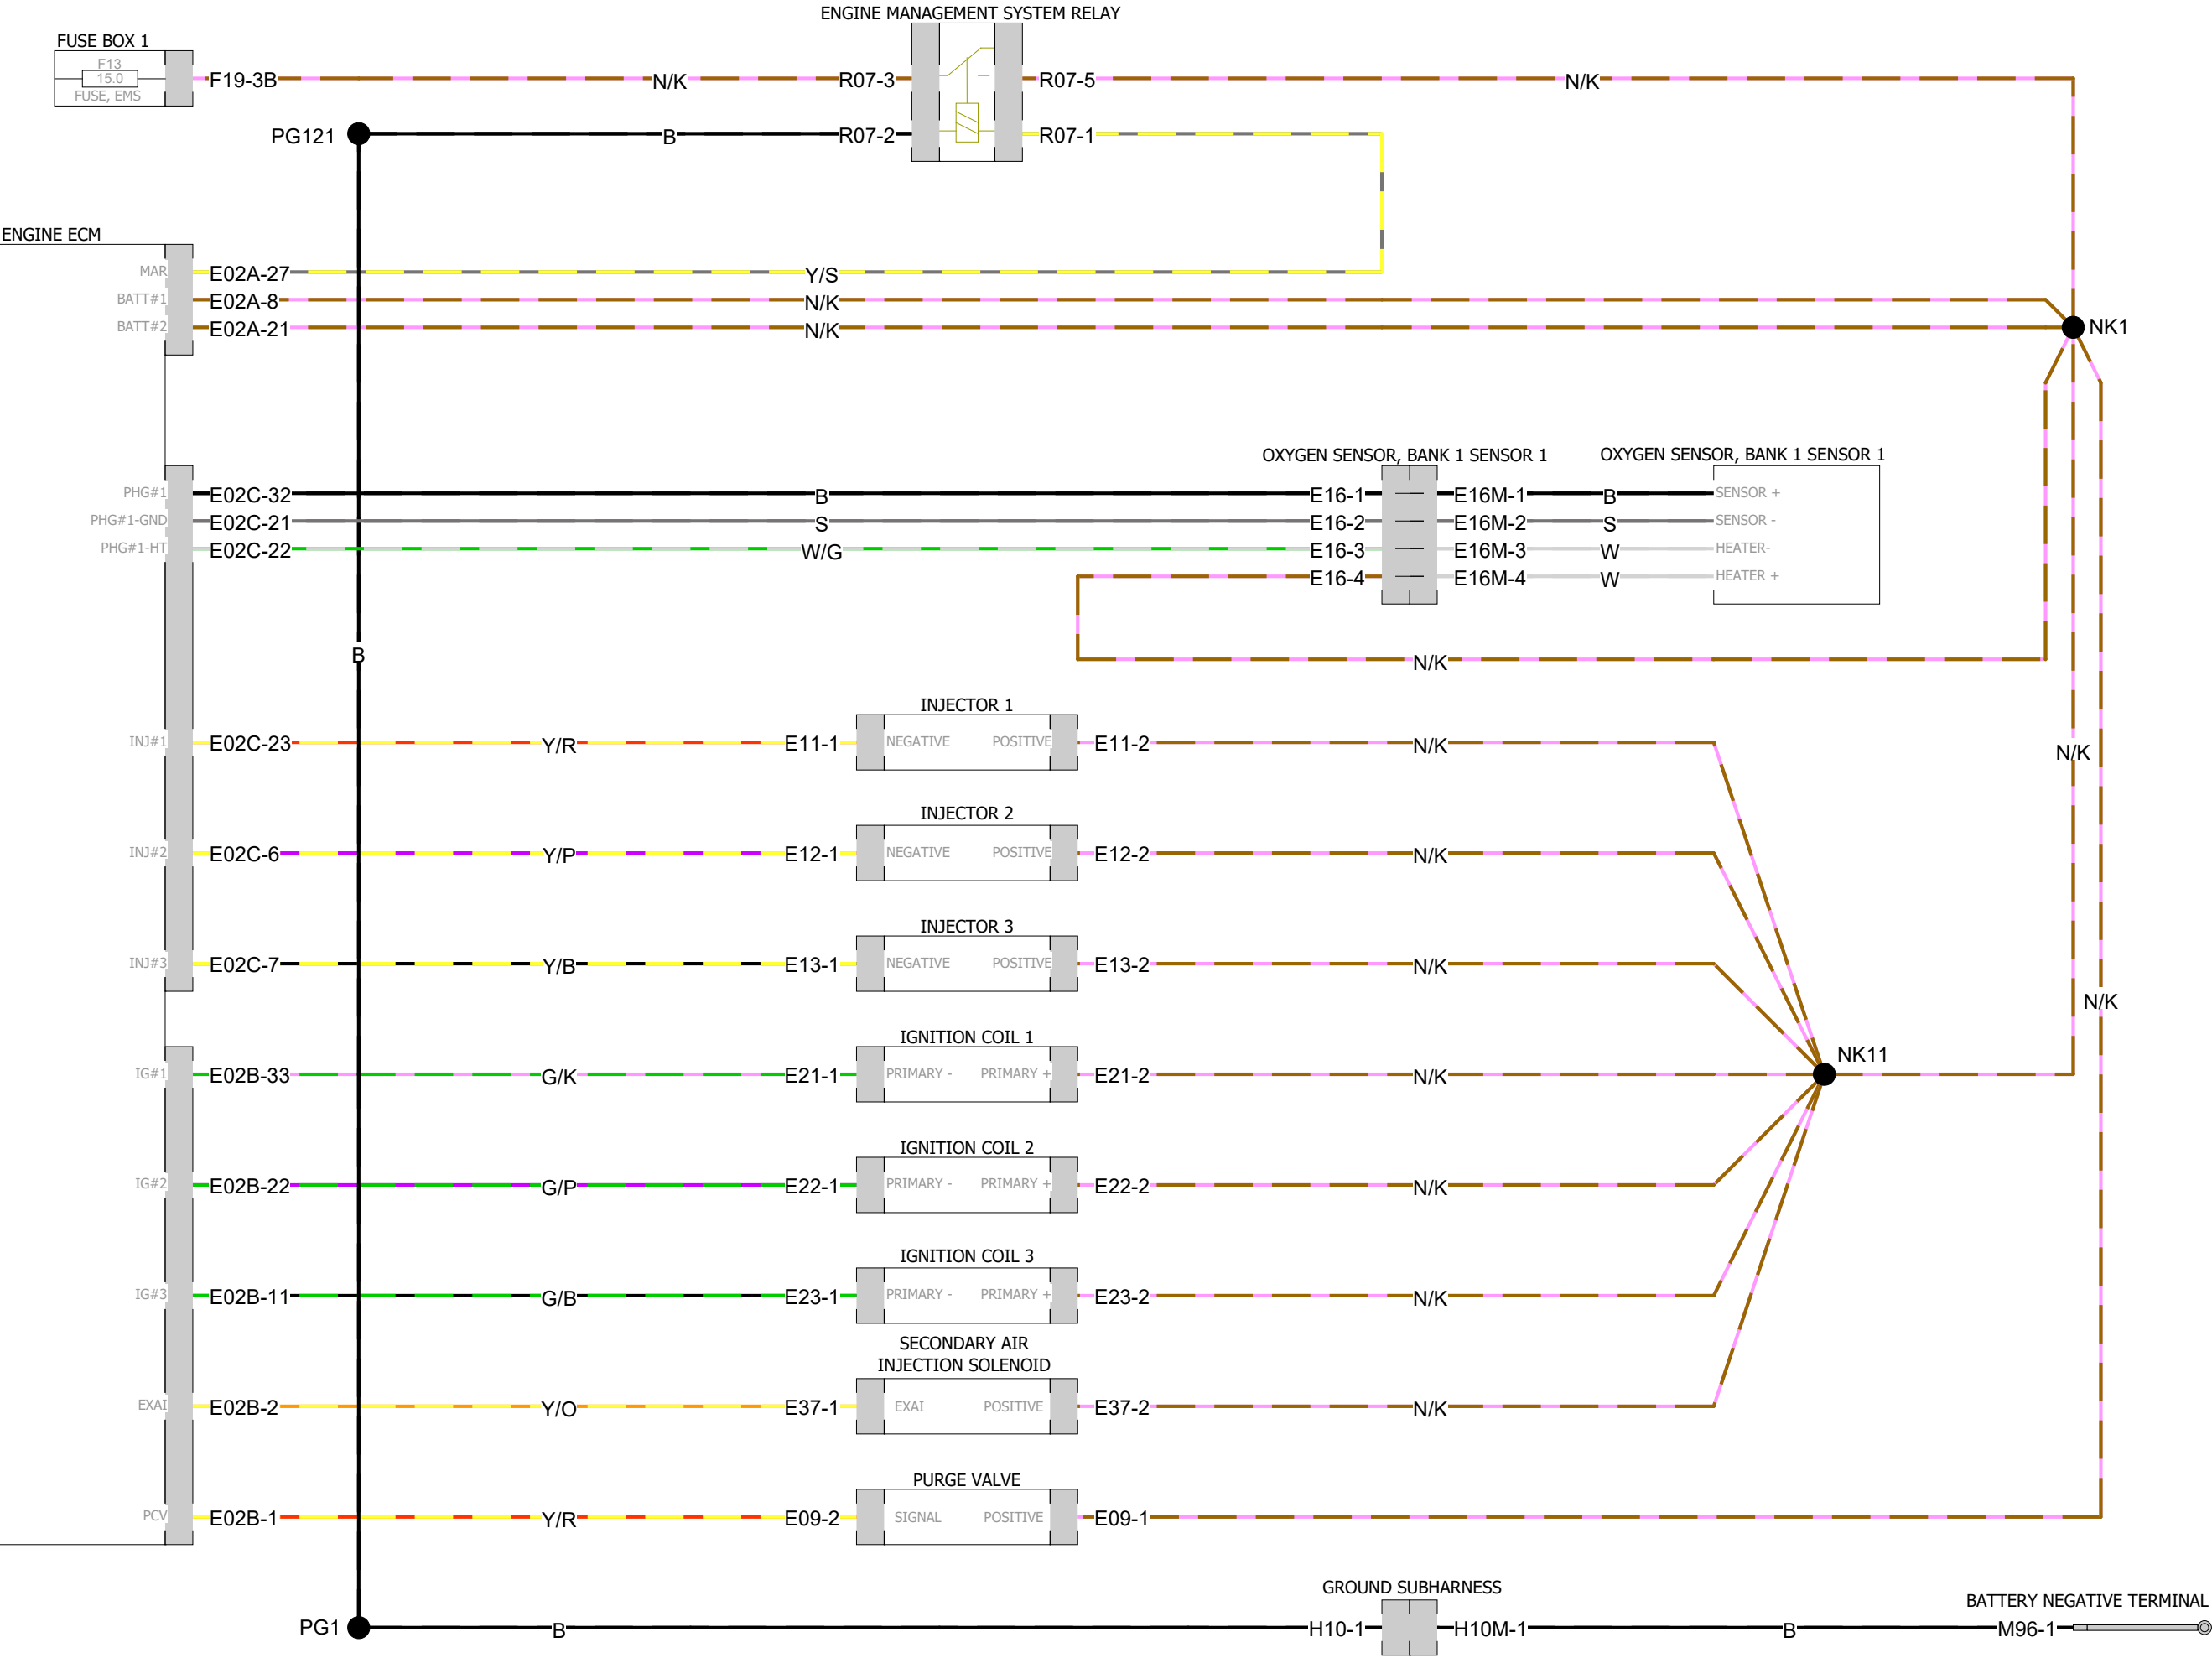


ELECTRICAL CIRCUIT


13 ENGINE MANAGEMENT CIRCUIT – THROTTLE CONTROL

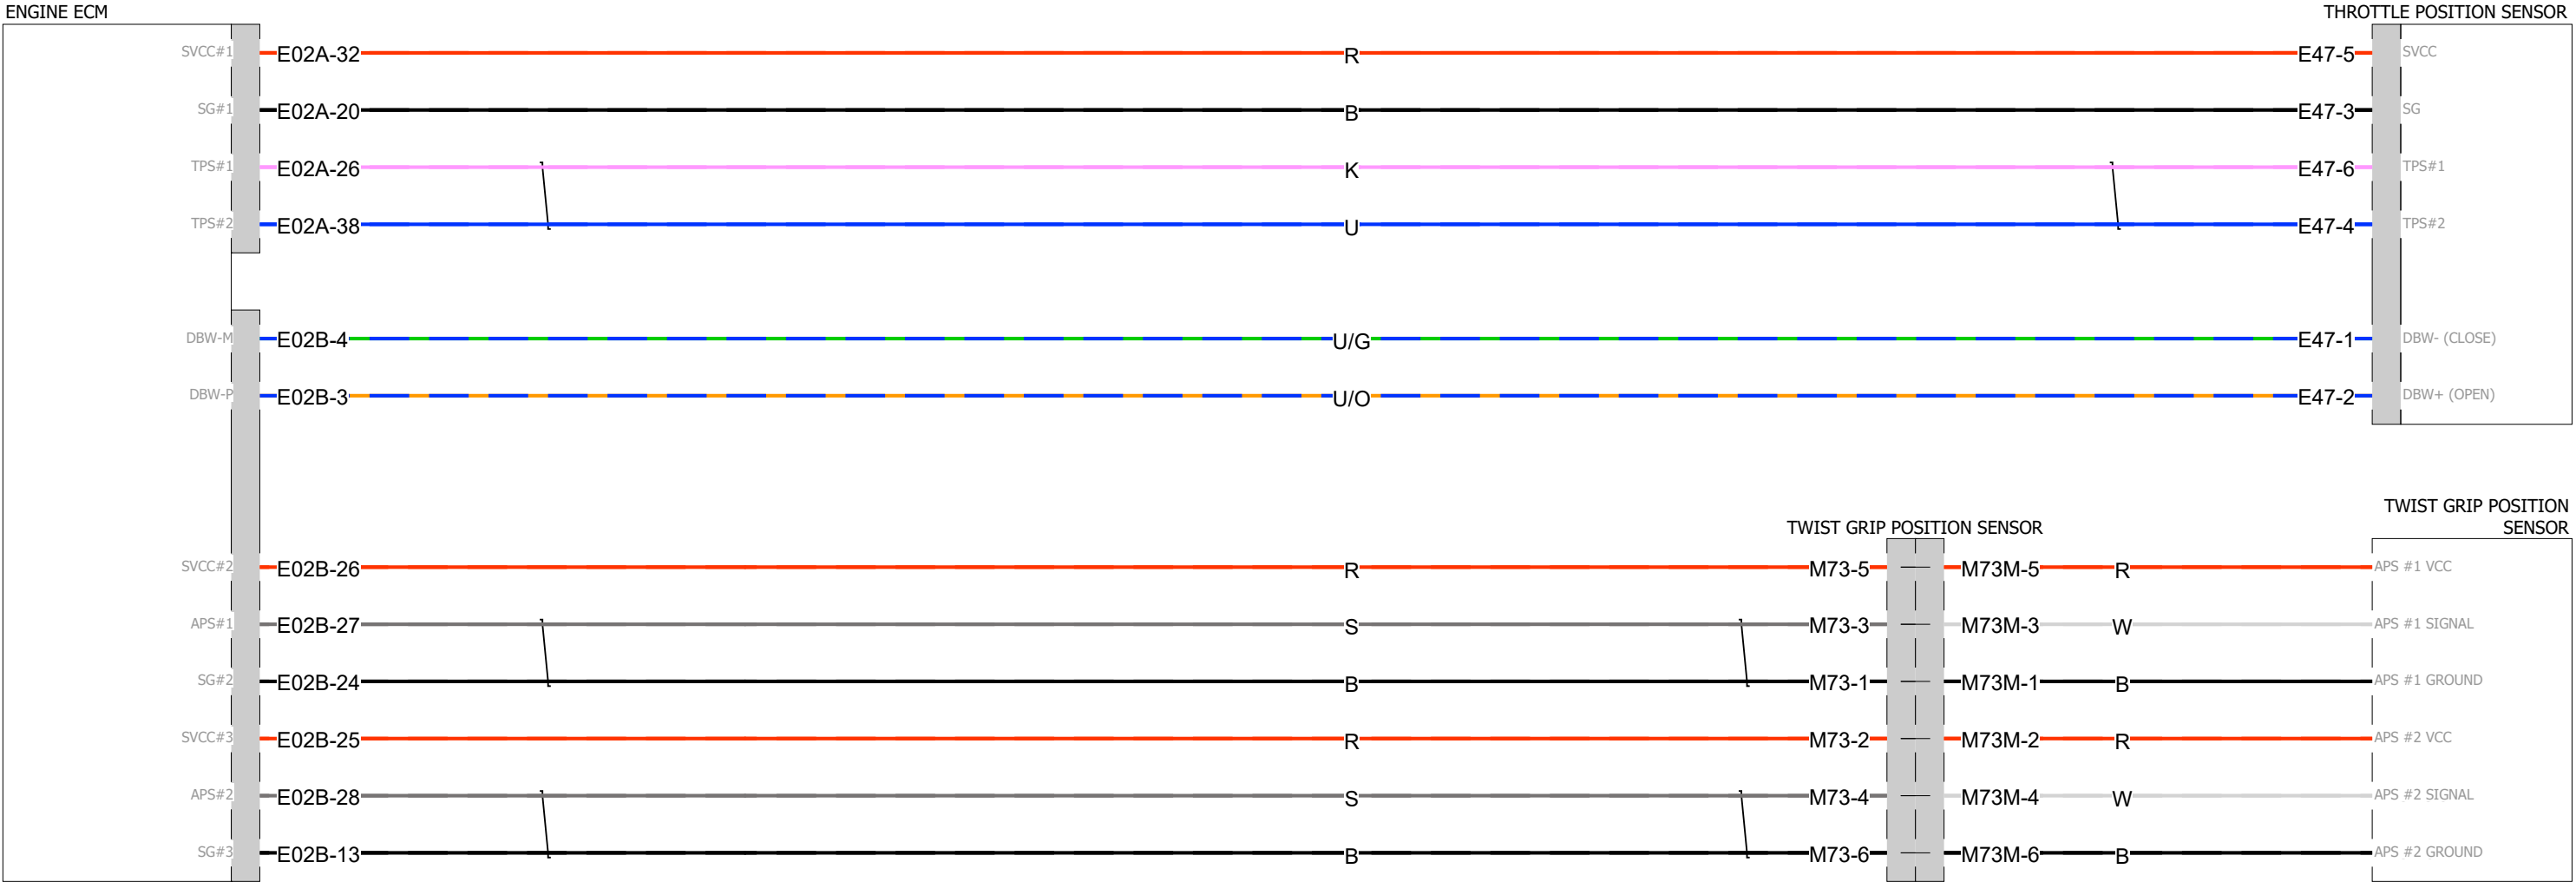




14 ENGINE MANAGEMENT CIRCUIT – COOLING FAN

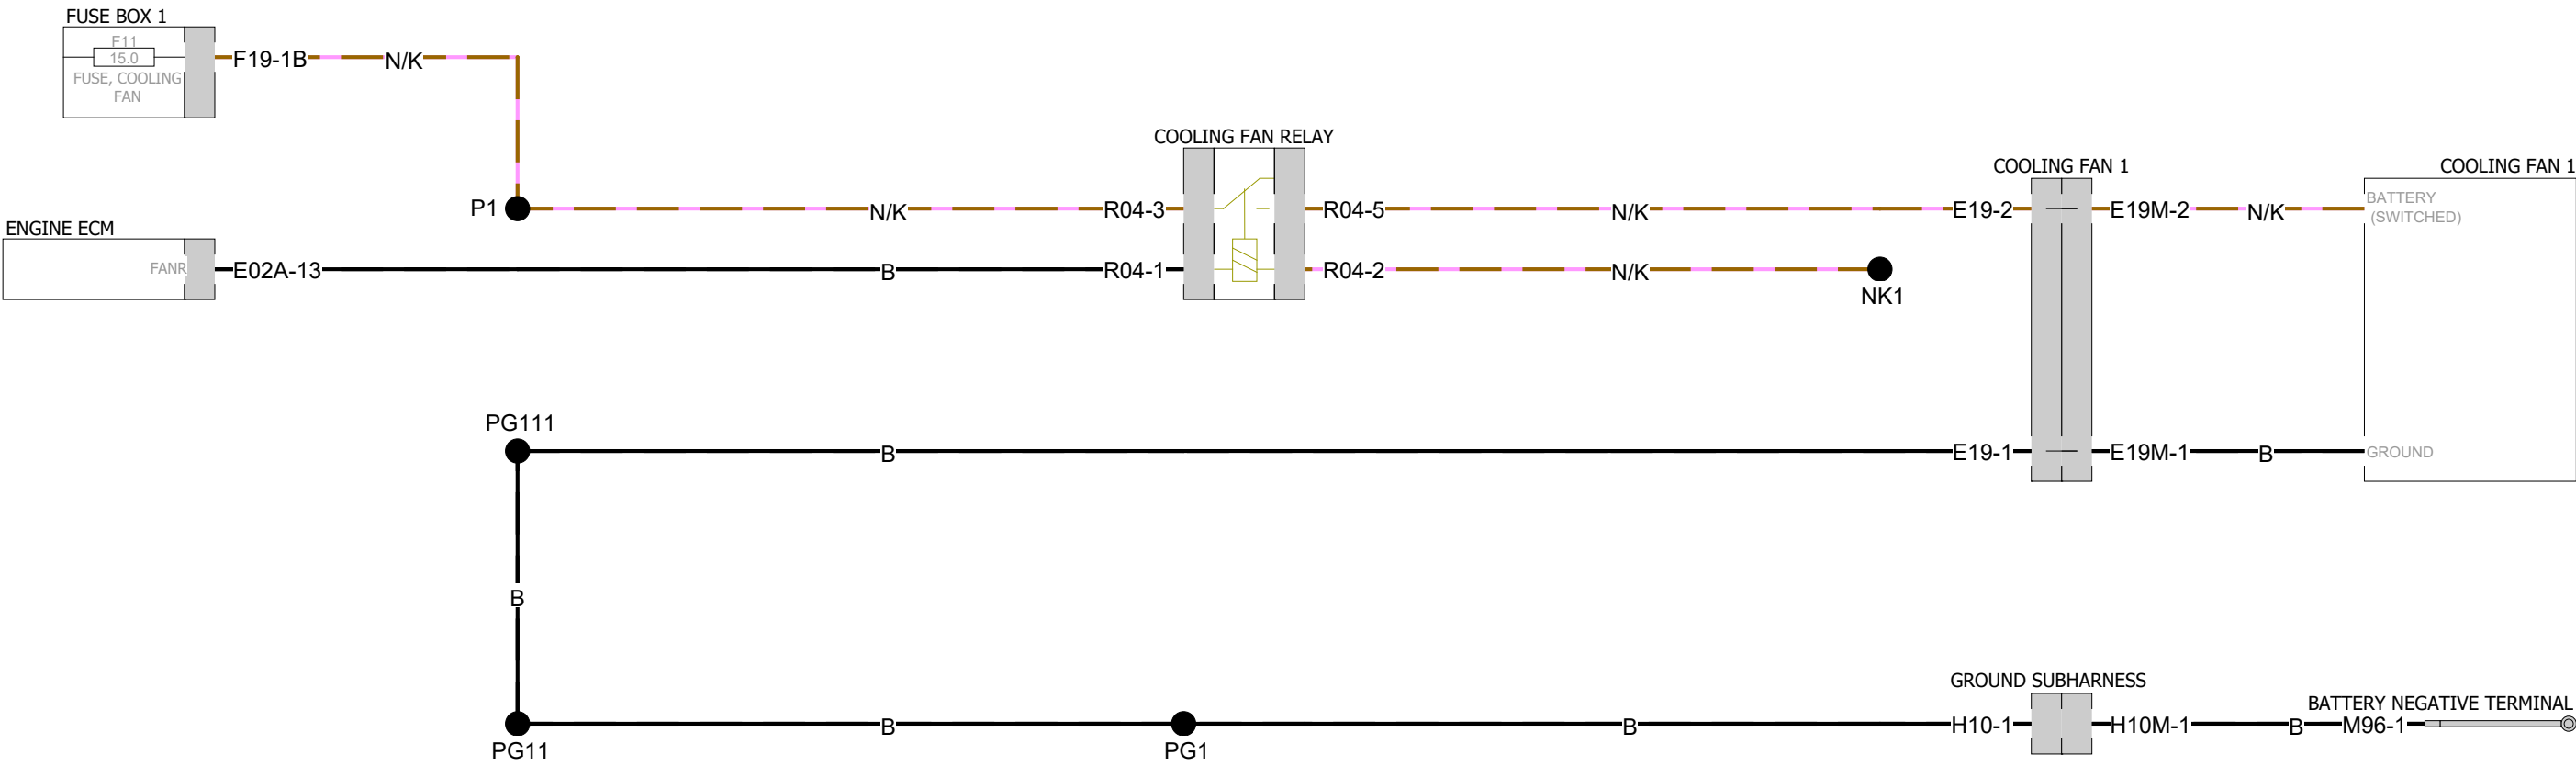

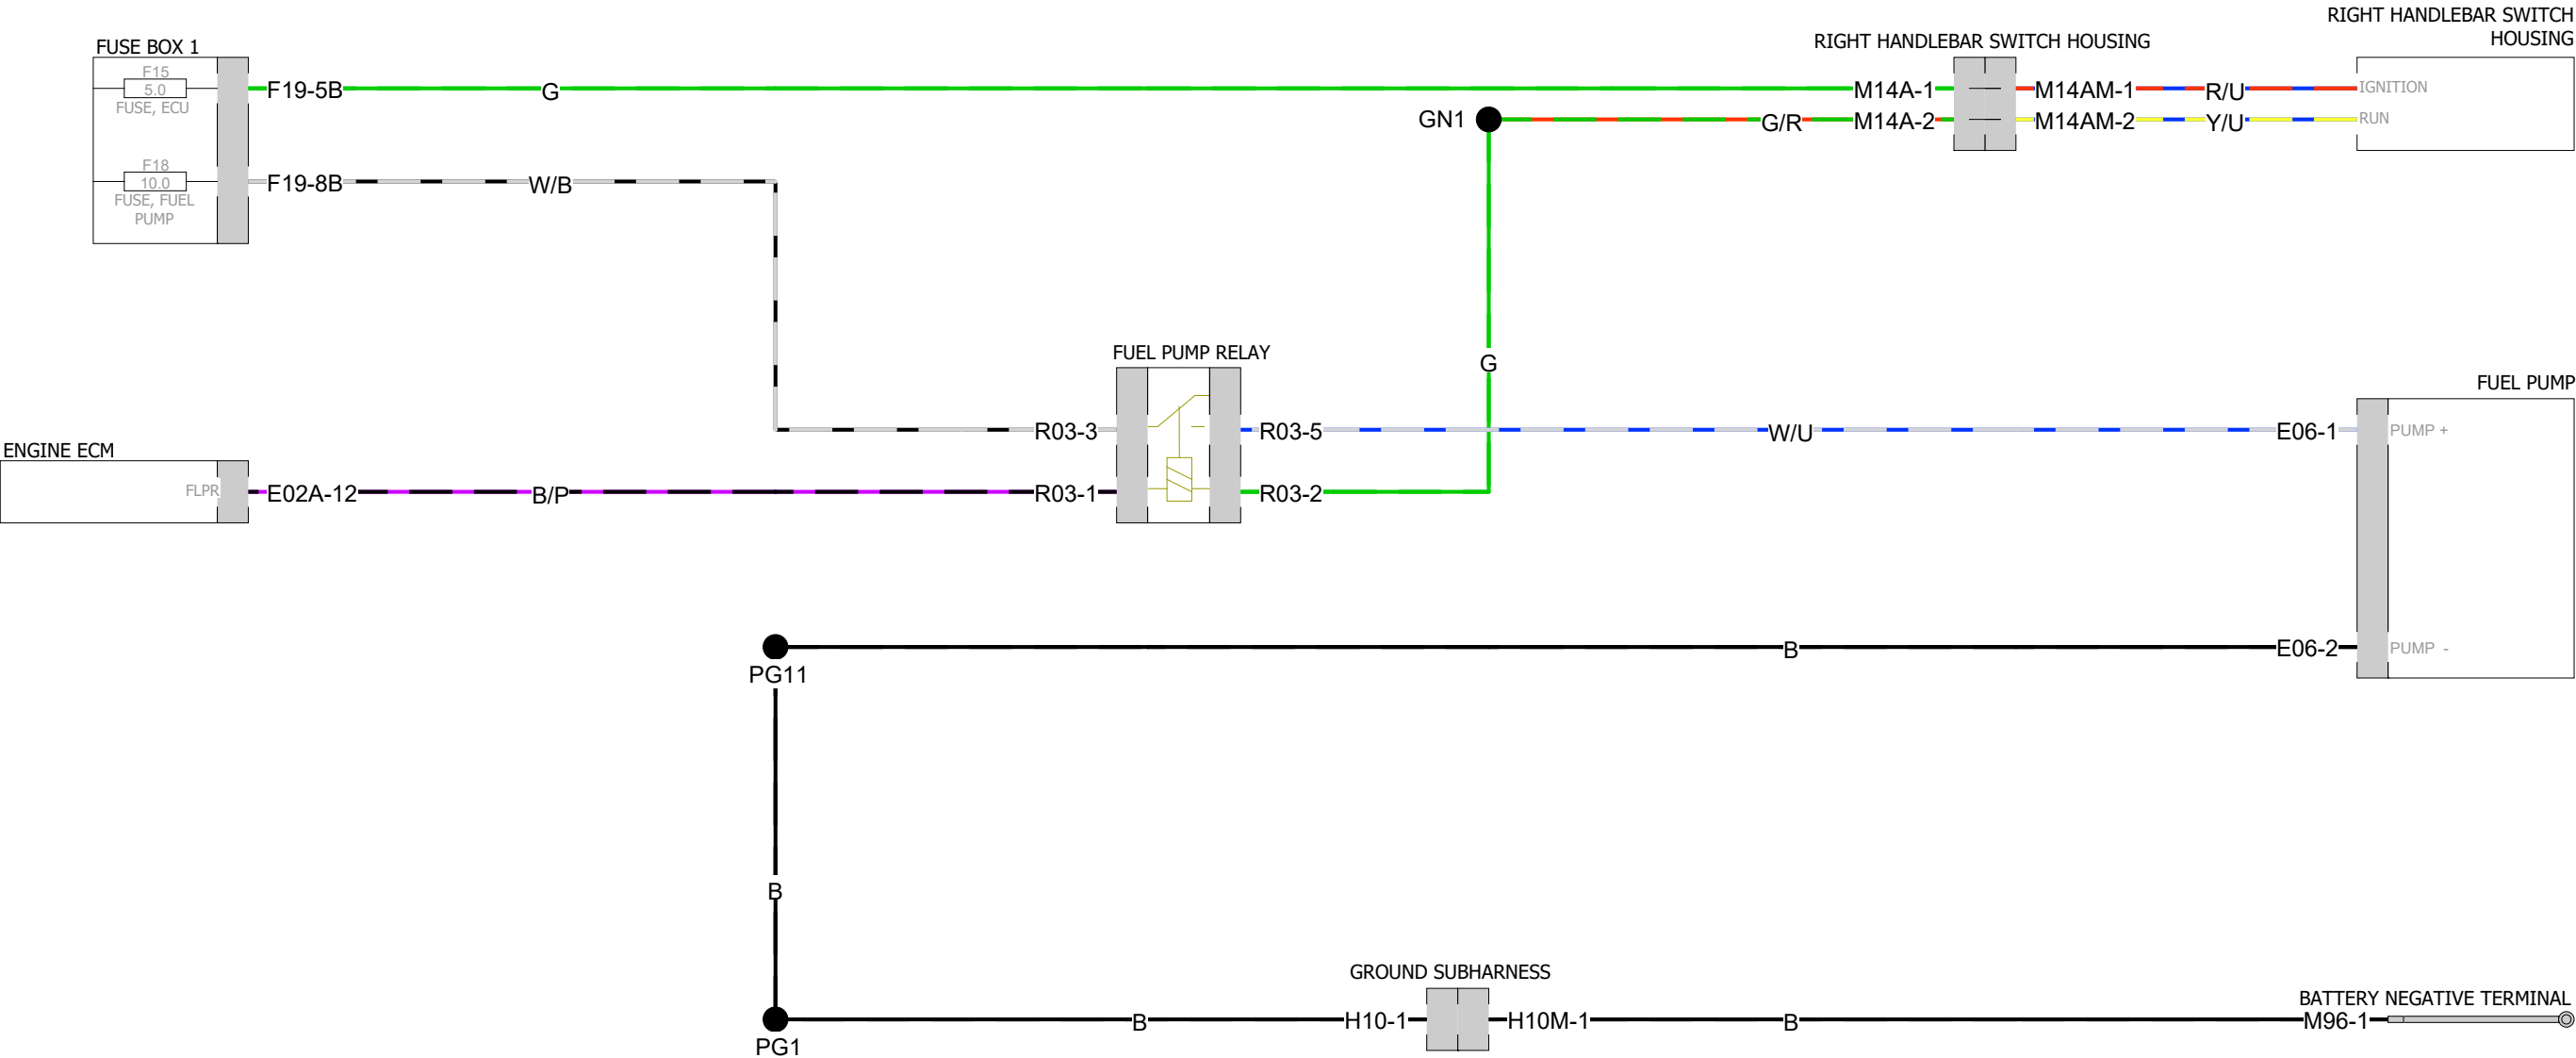


16 INSTRUMENTS CIRCUIT

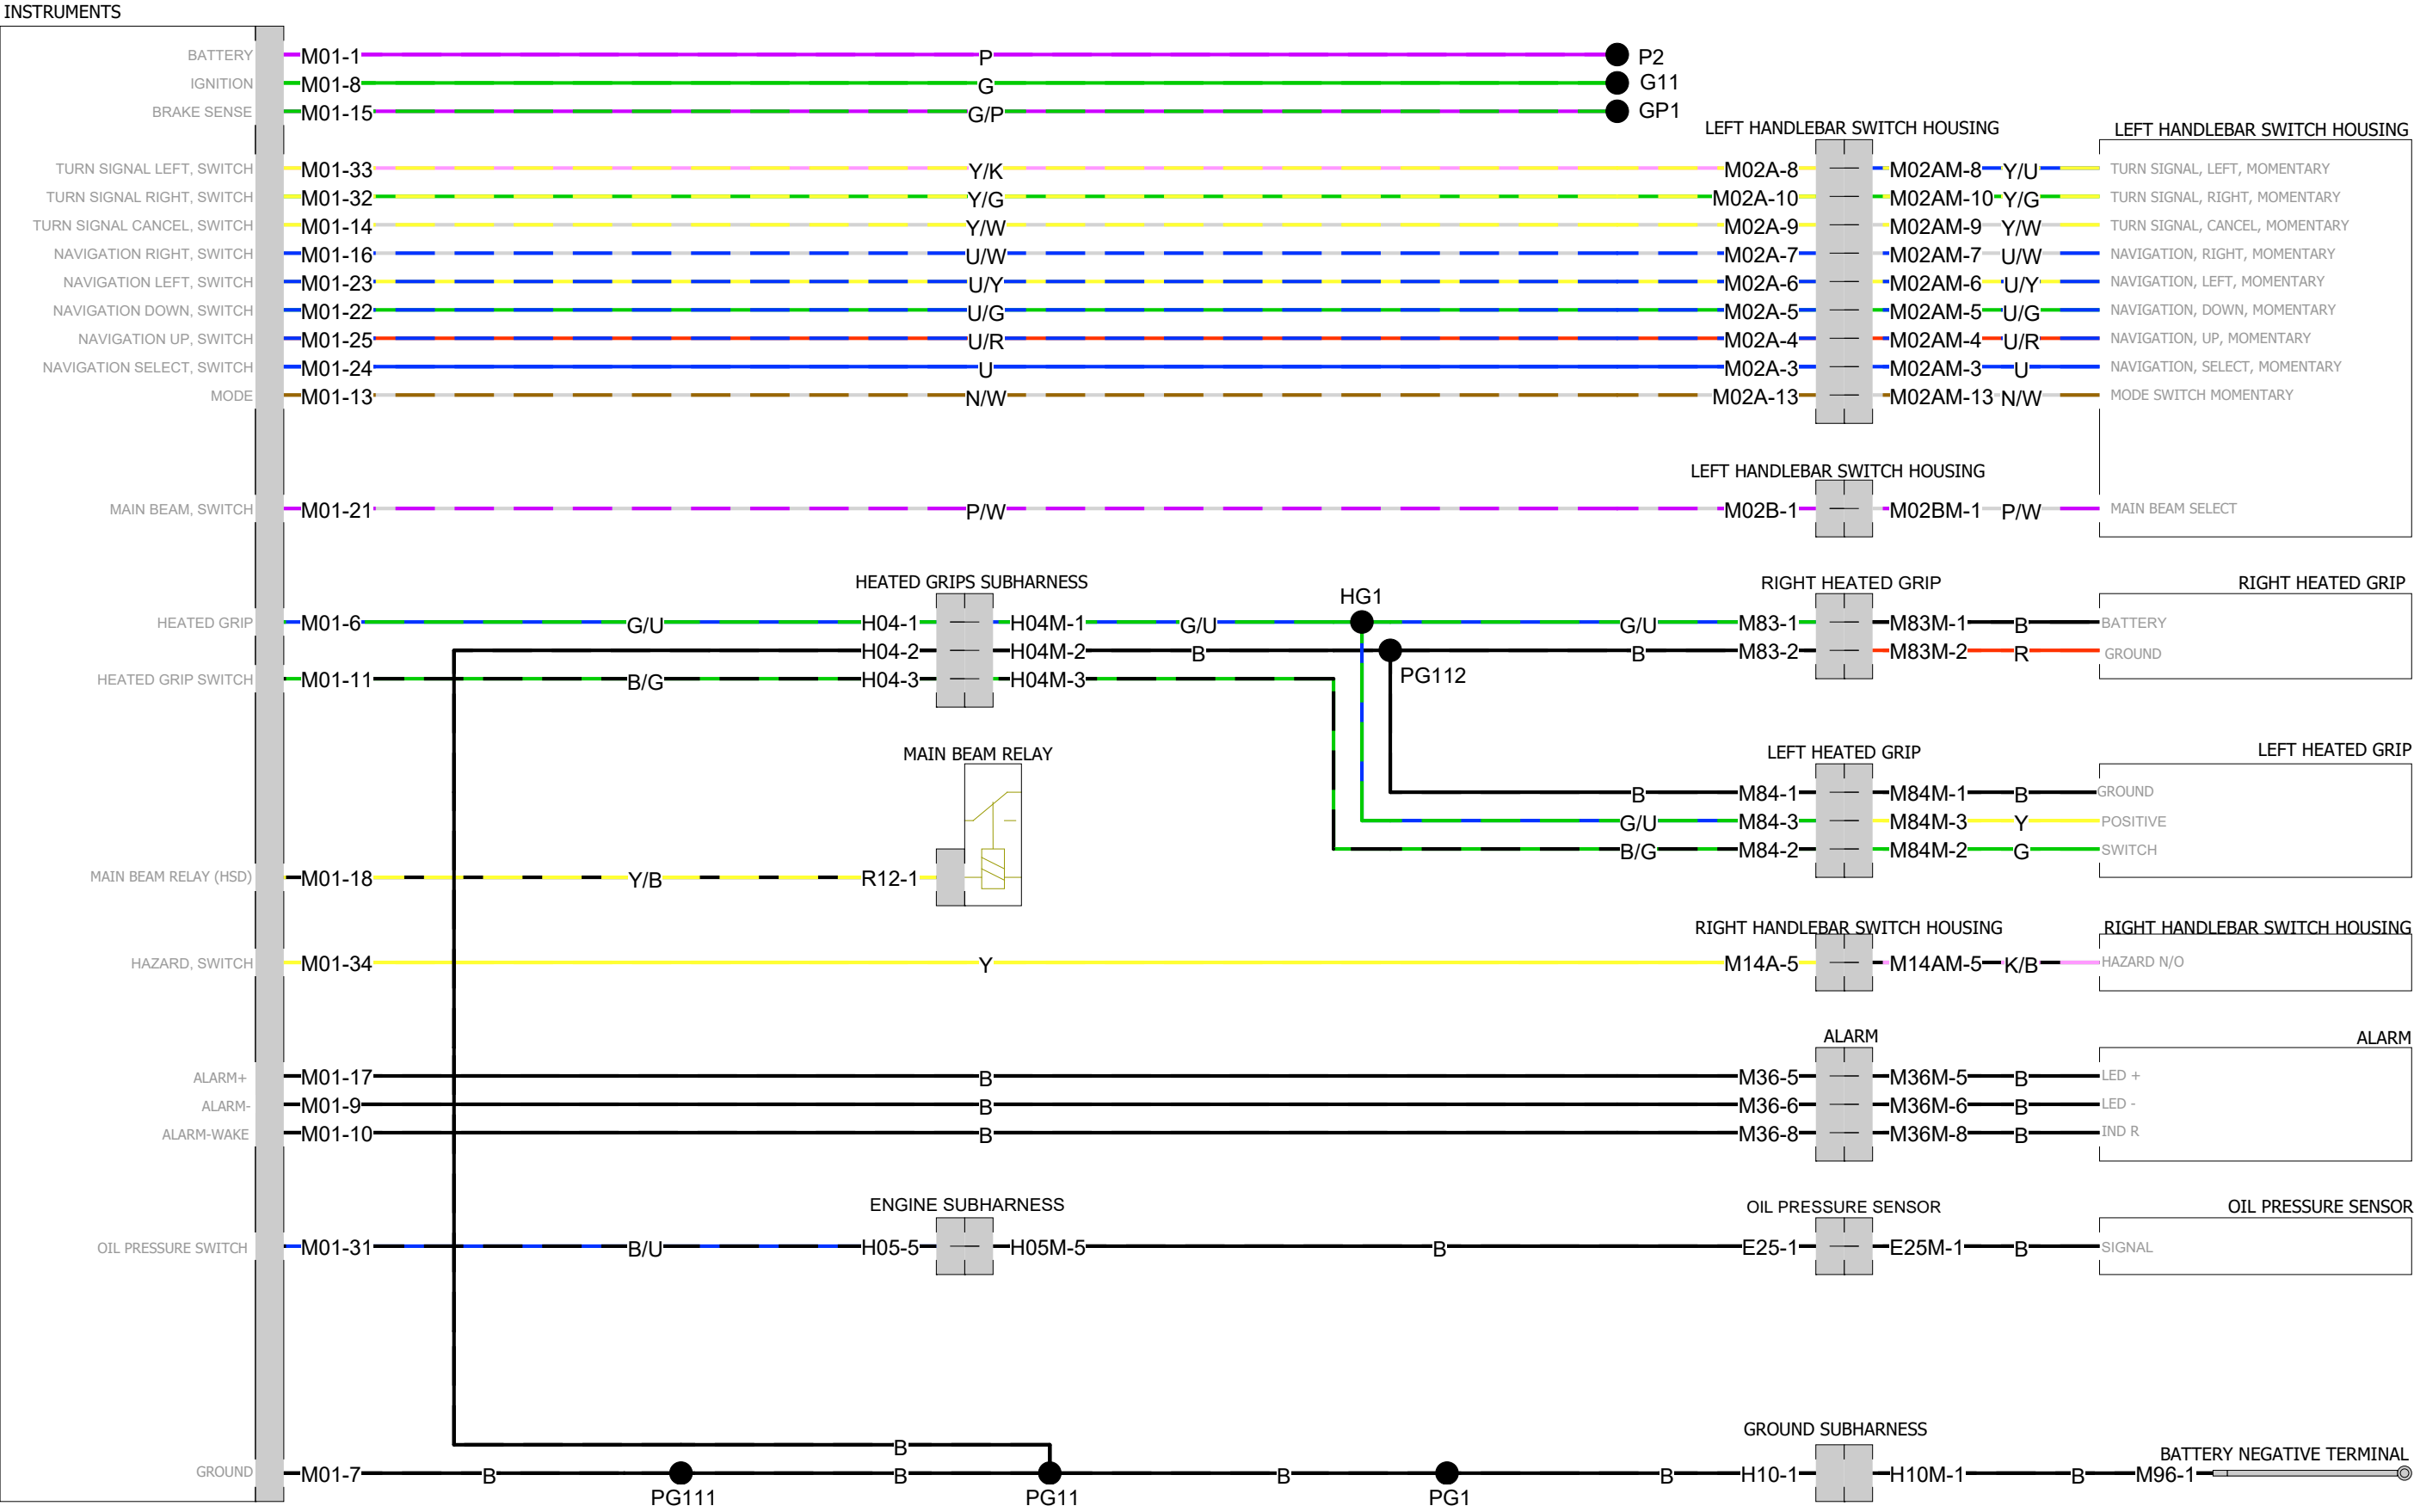



ELECTRICAL CIRCUIT


17 LIGHTING CIRCUIT - FRONT

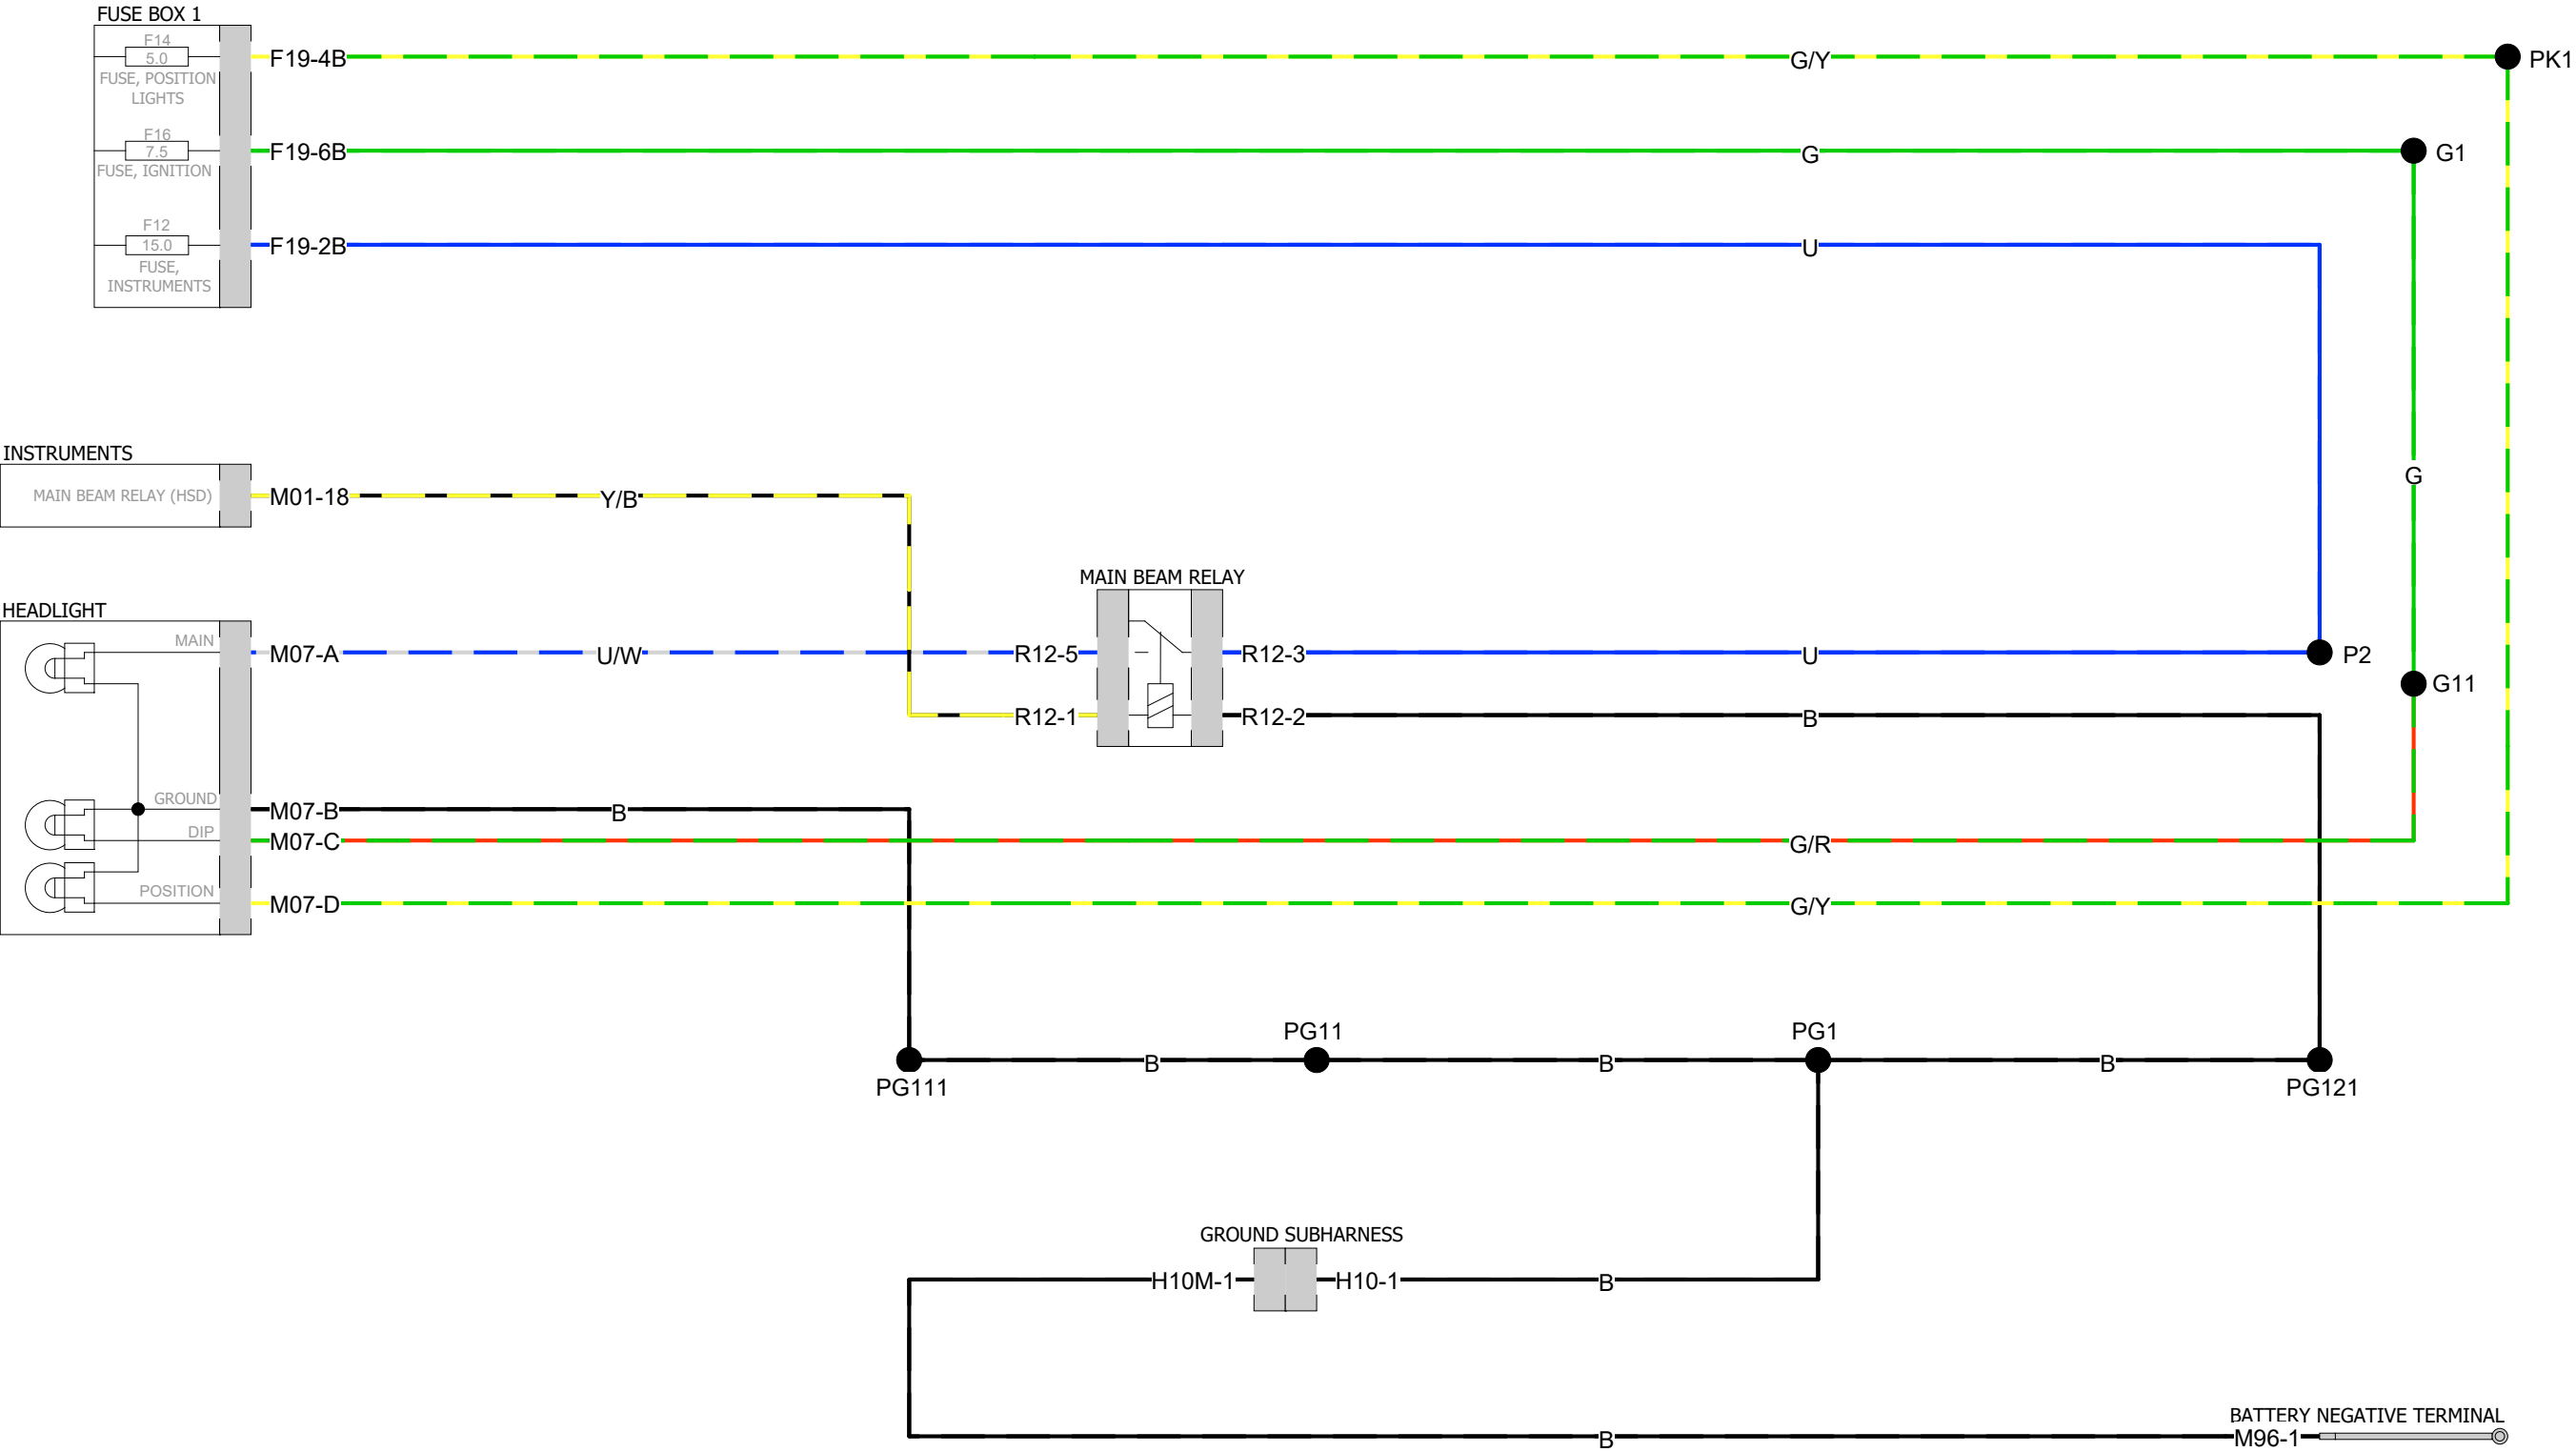


18 LIGHTING CIRCUIT - REAR

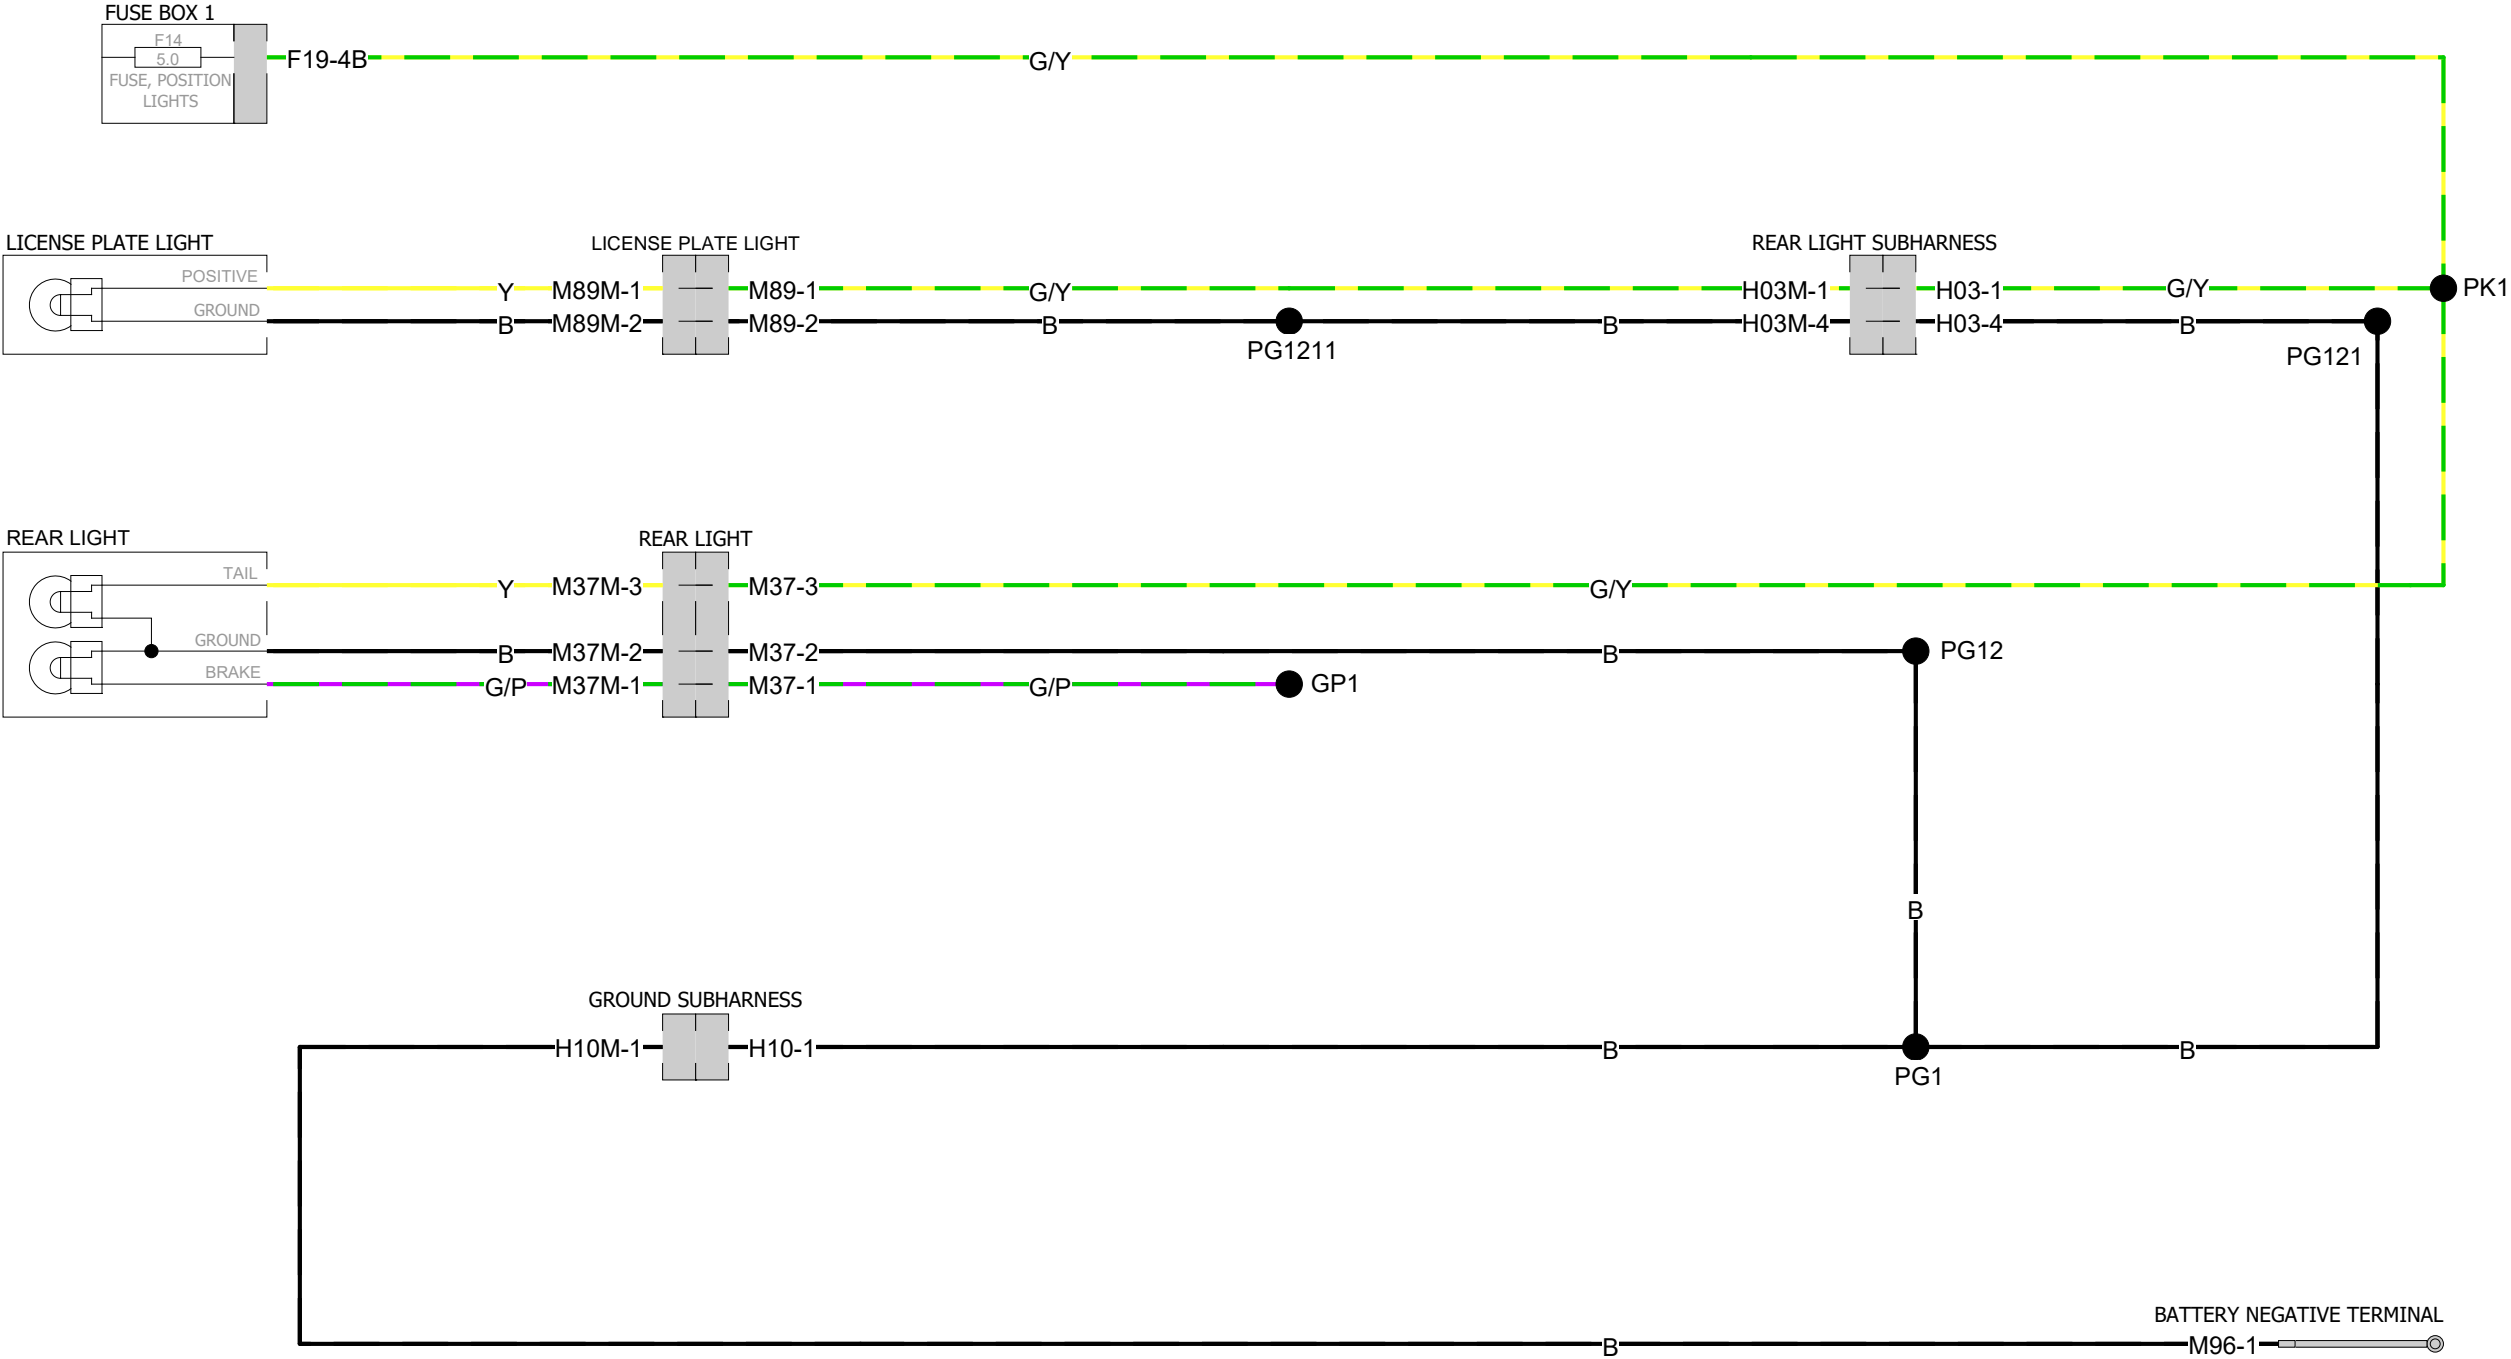

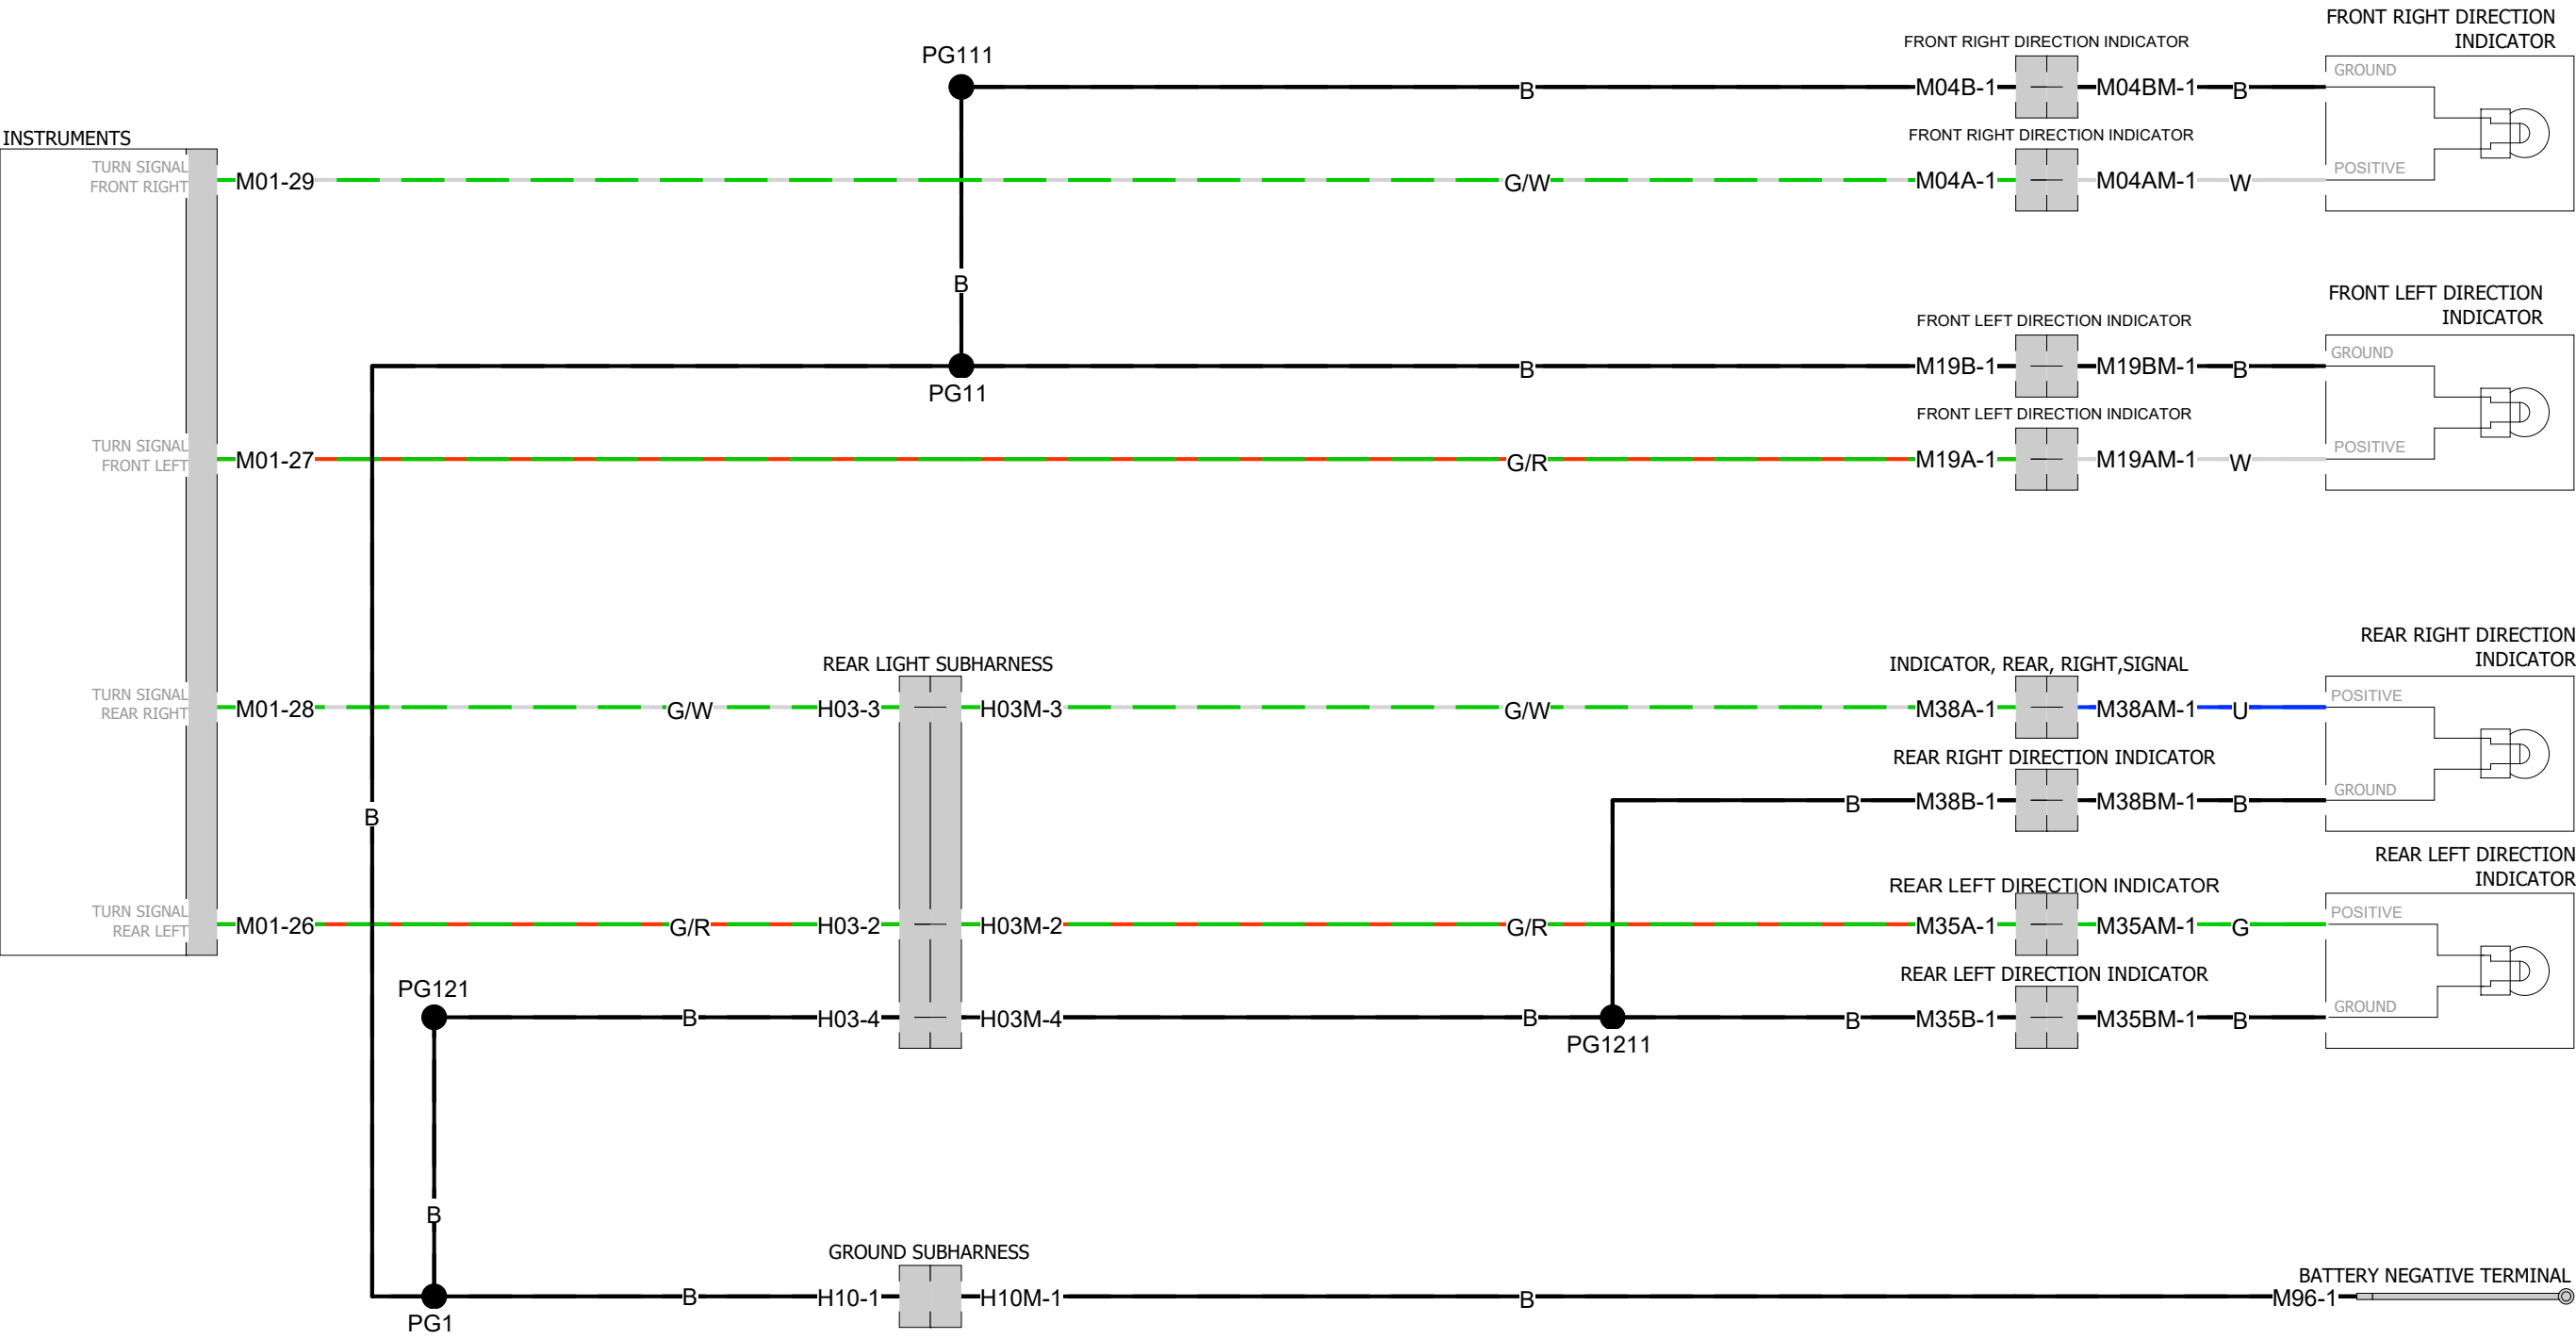


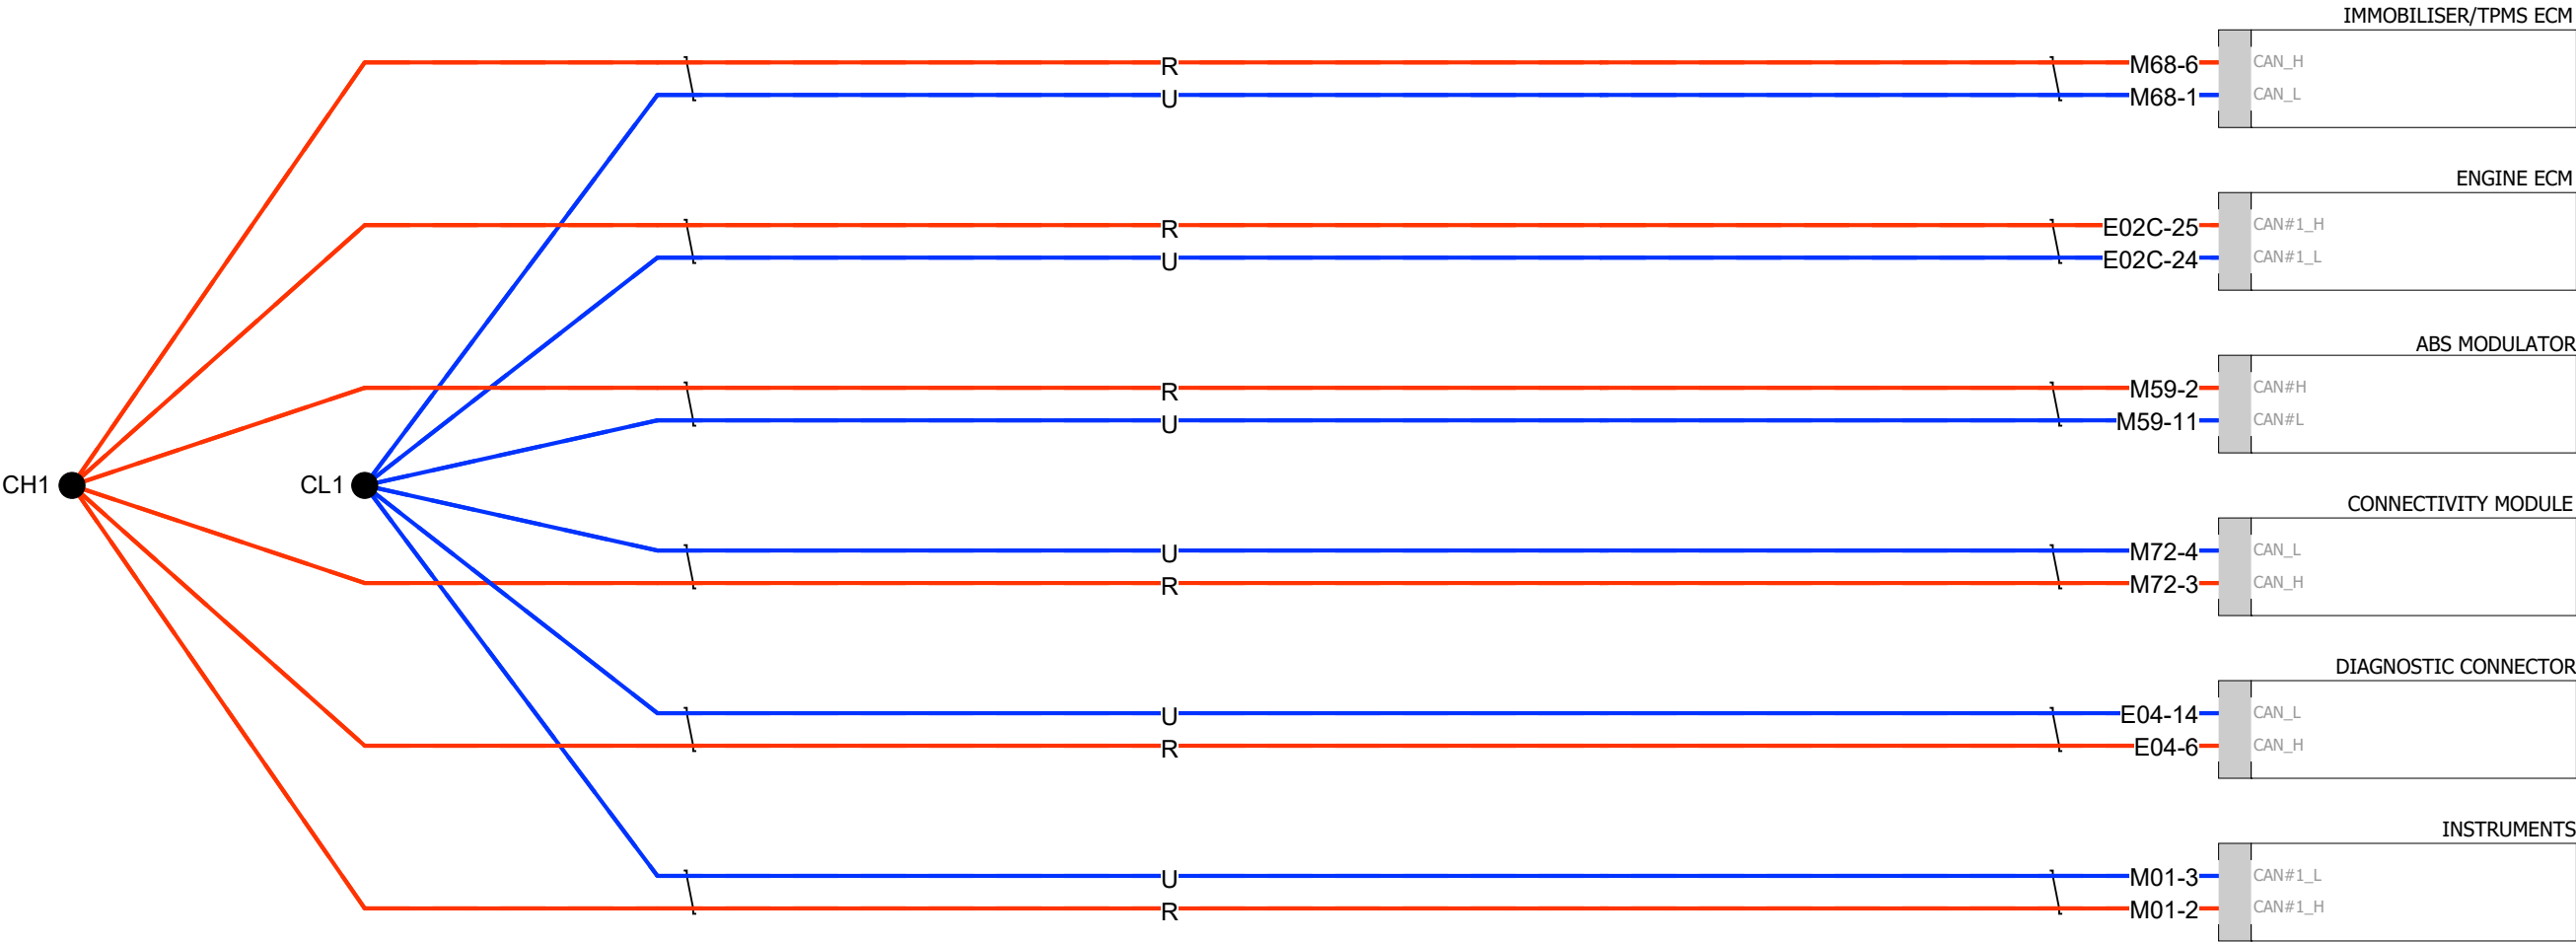

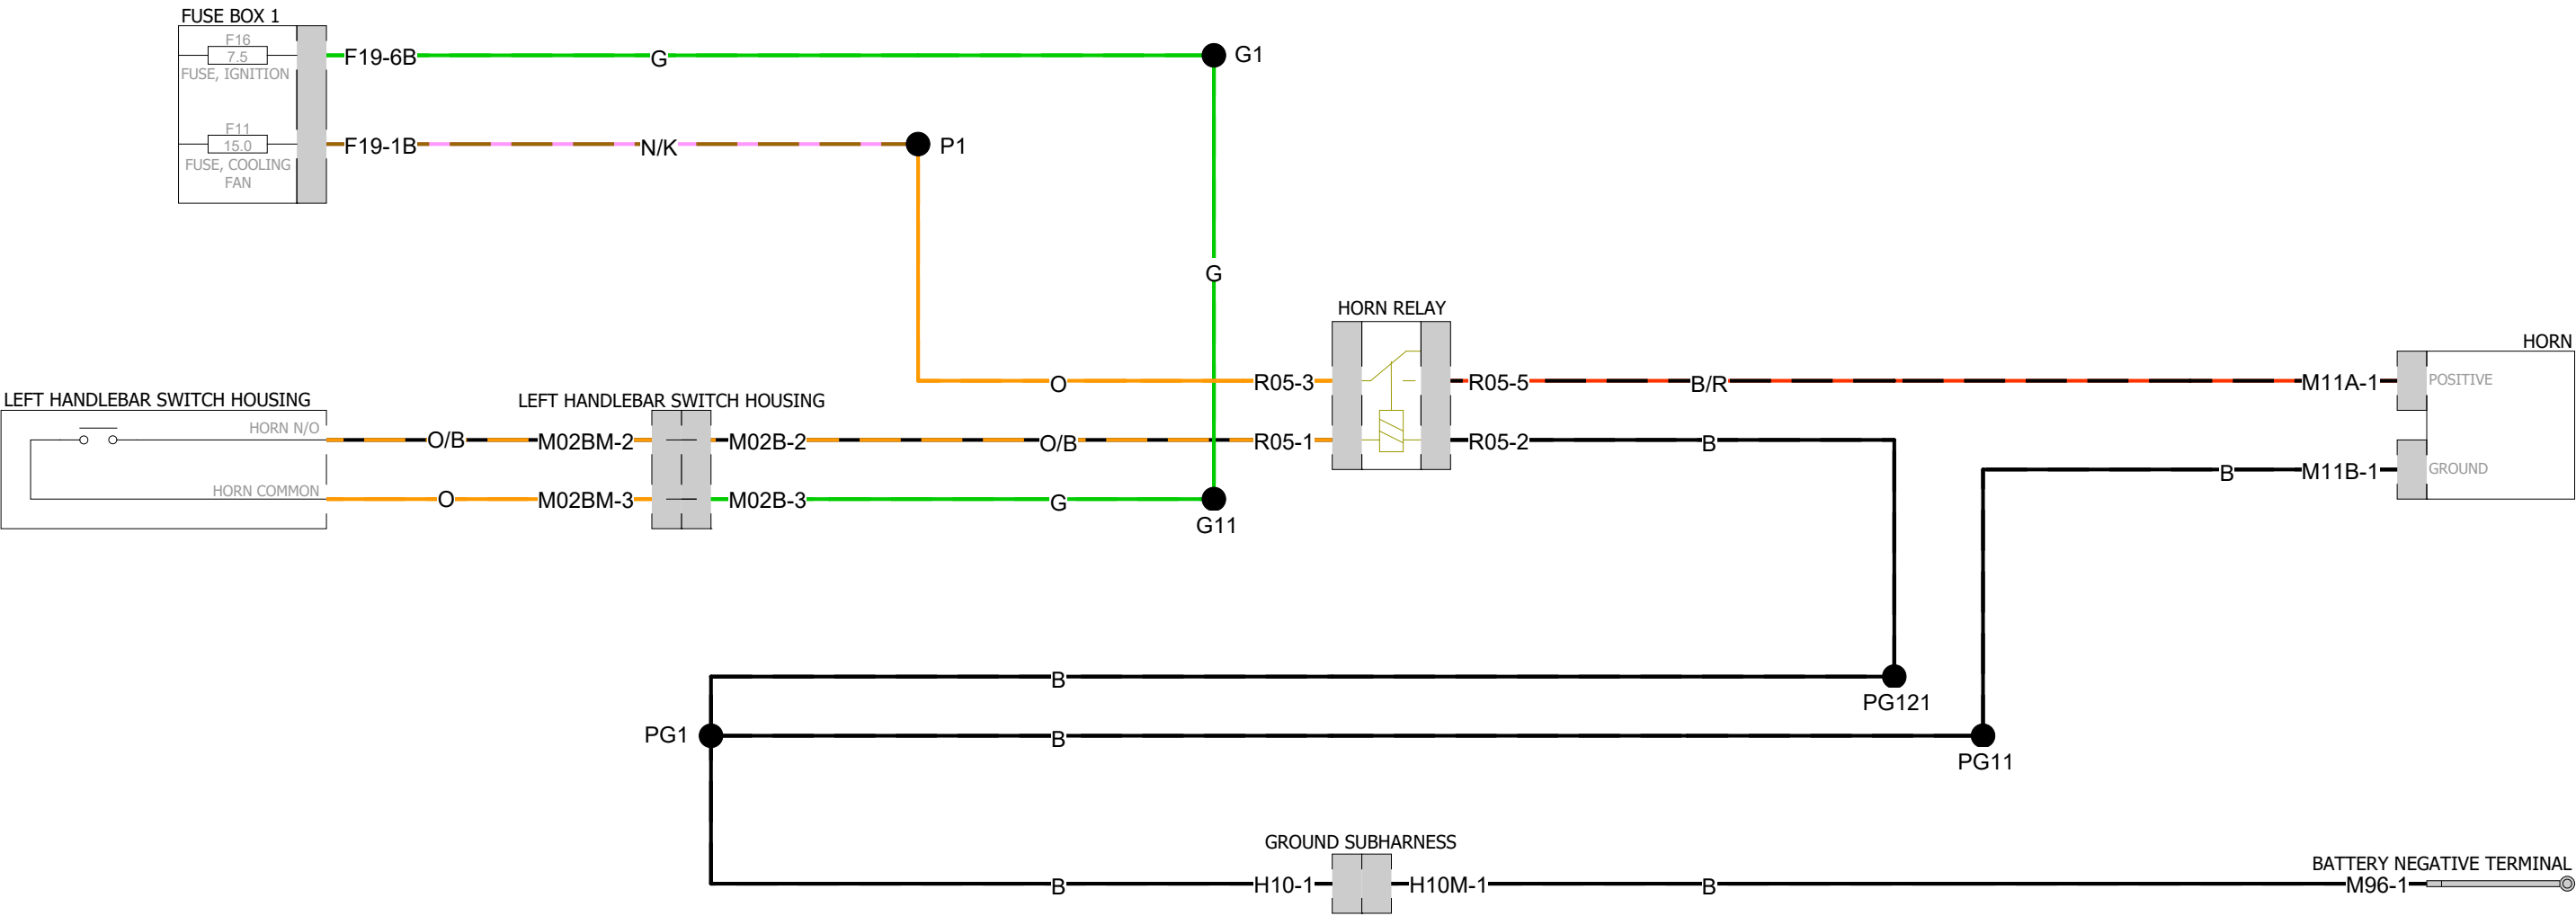




22 IMMOBILISER CIRCUIT

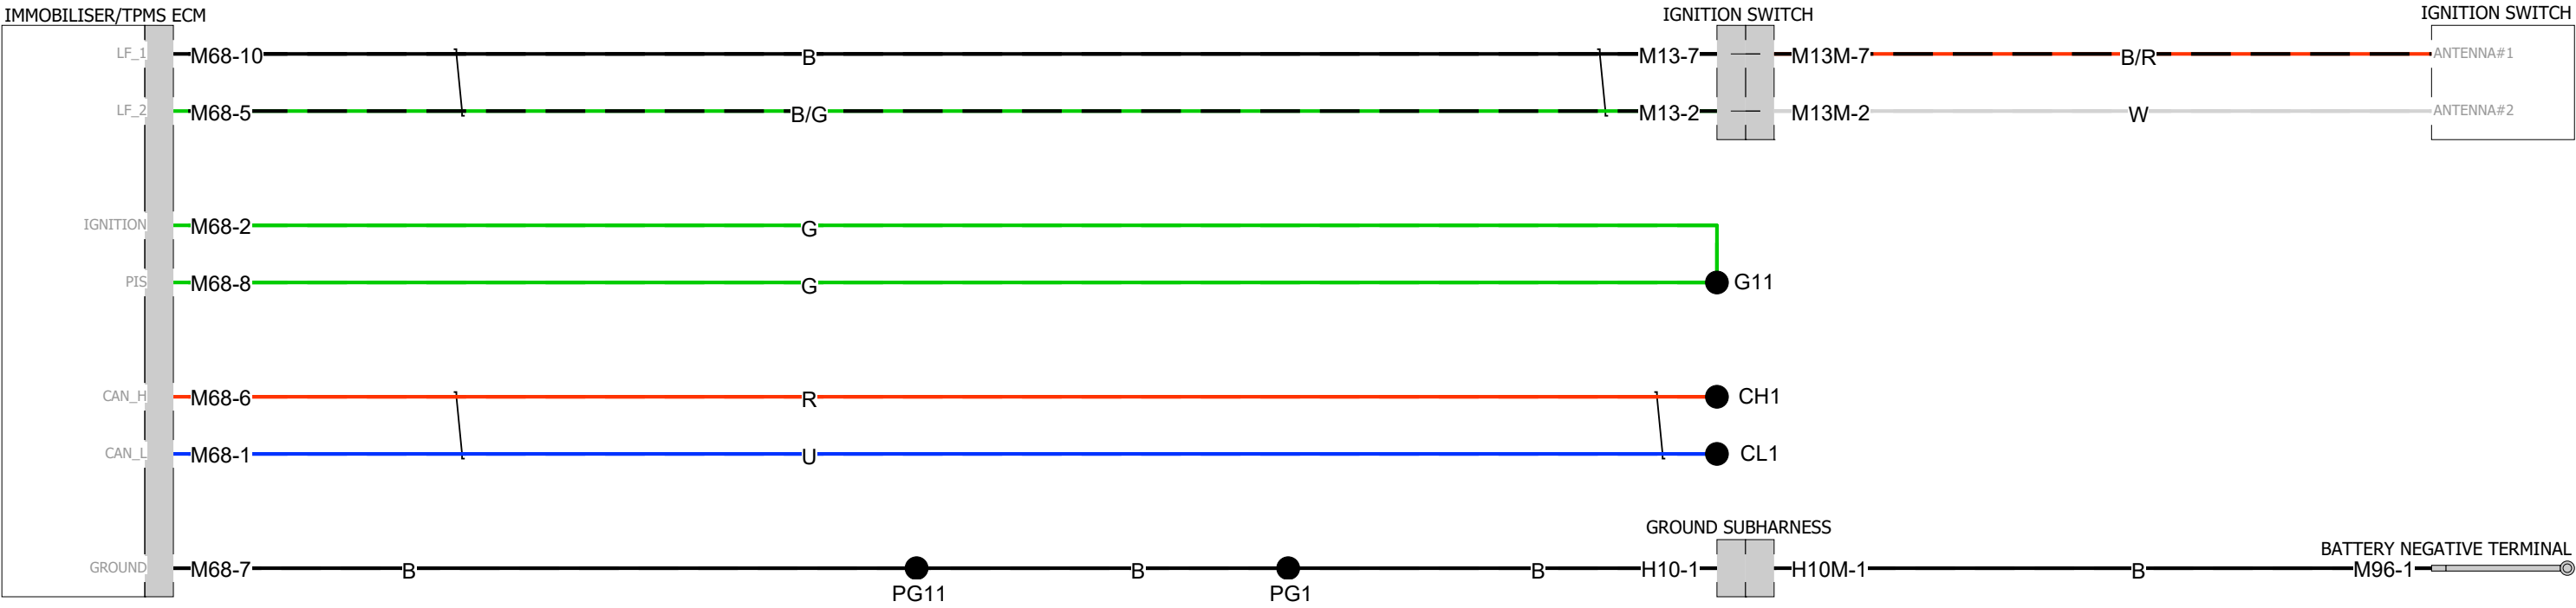


ELECTRICAL CIRCUIT


23 DIAGNOSTIC CONNECTOR CIRCUIT

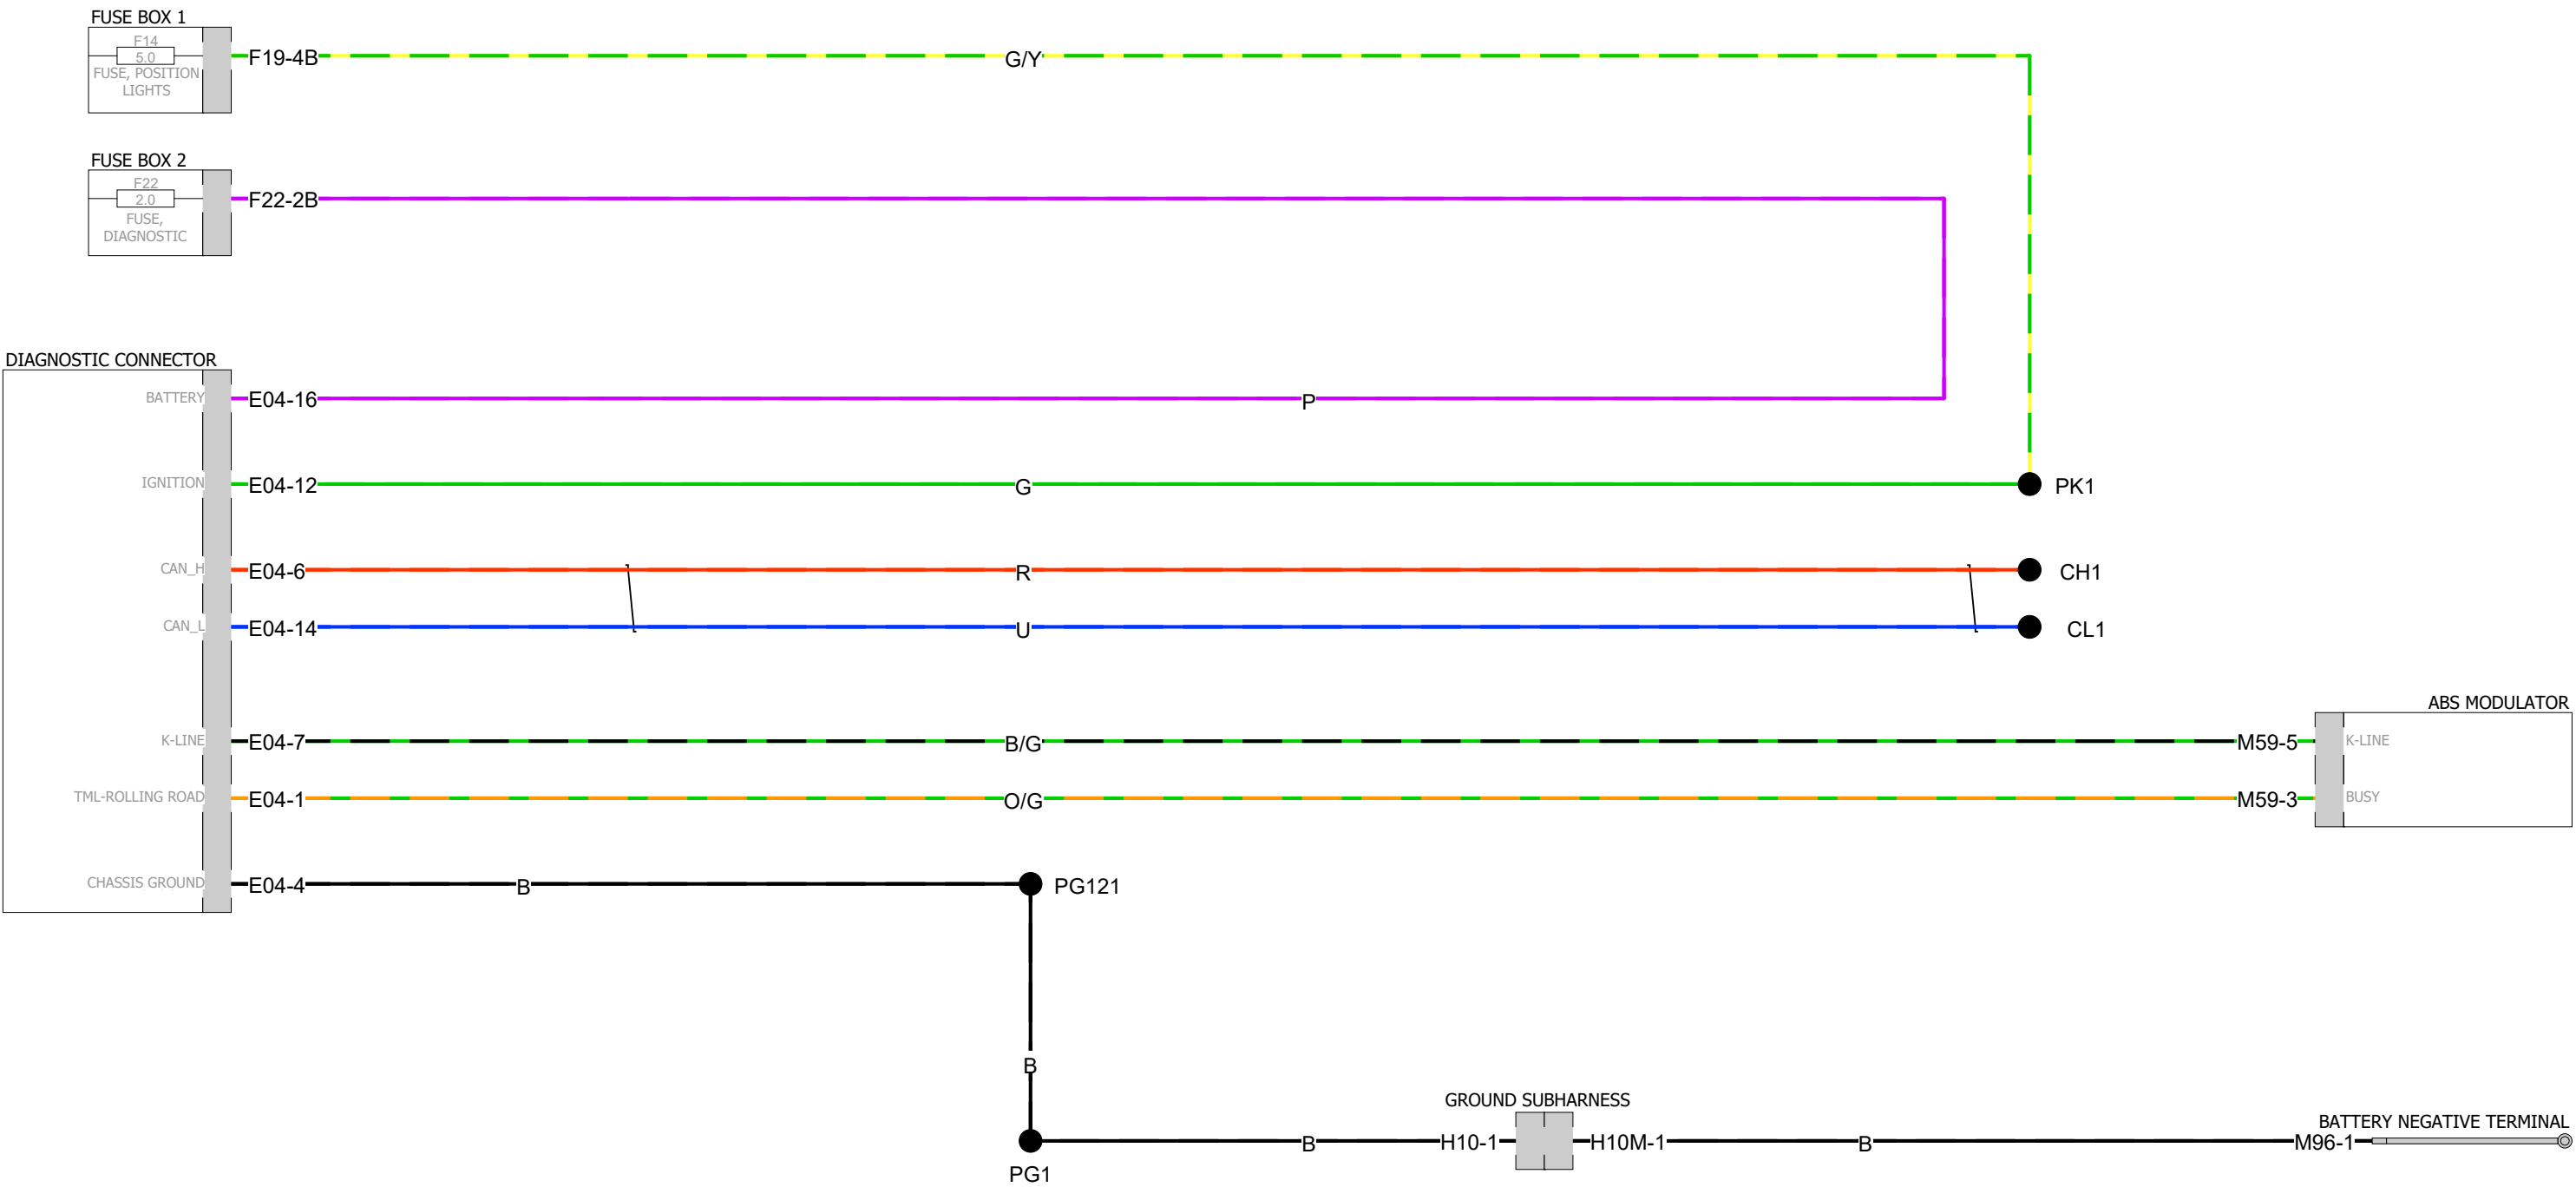


## 24 ACCESSORIES CIRCUIT

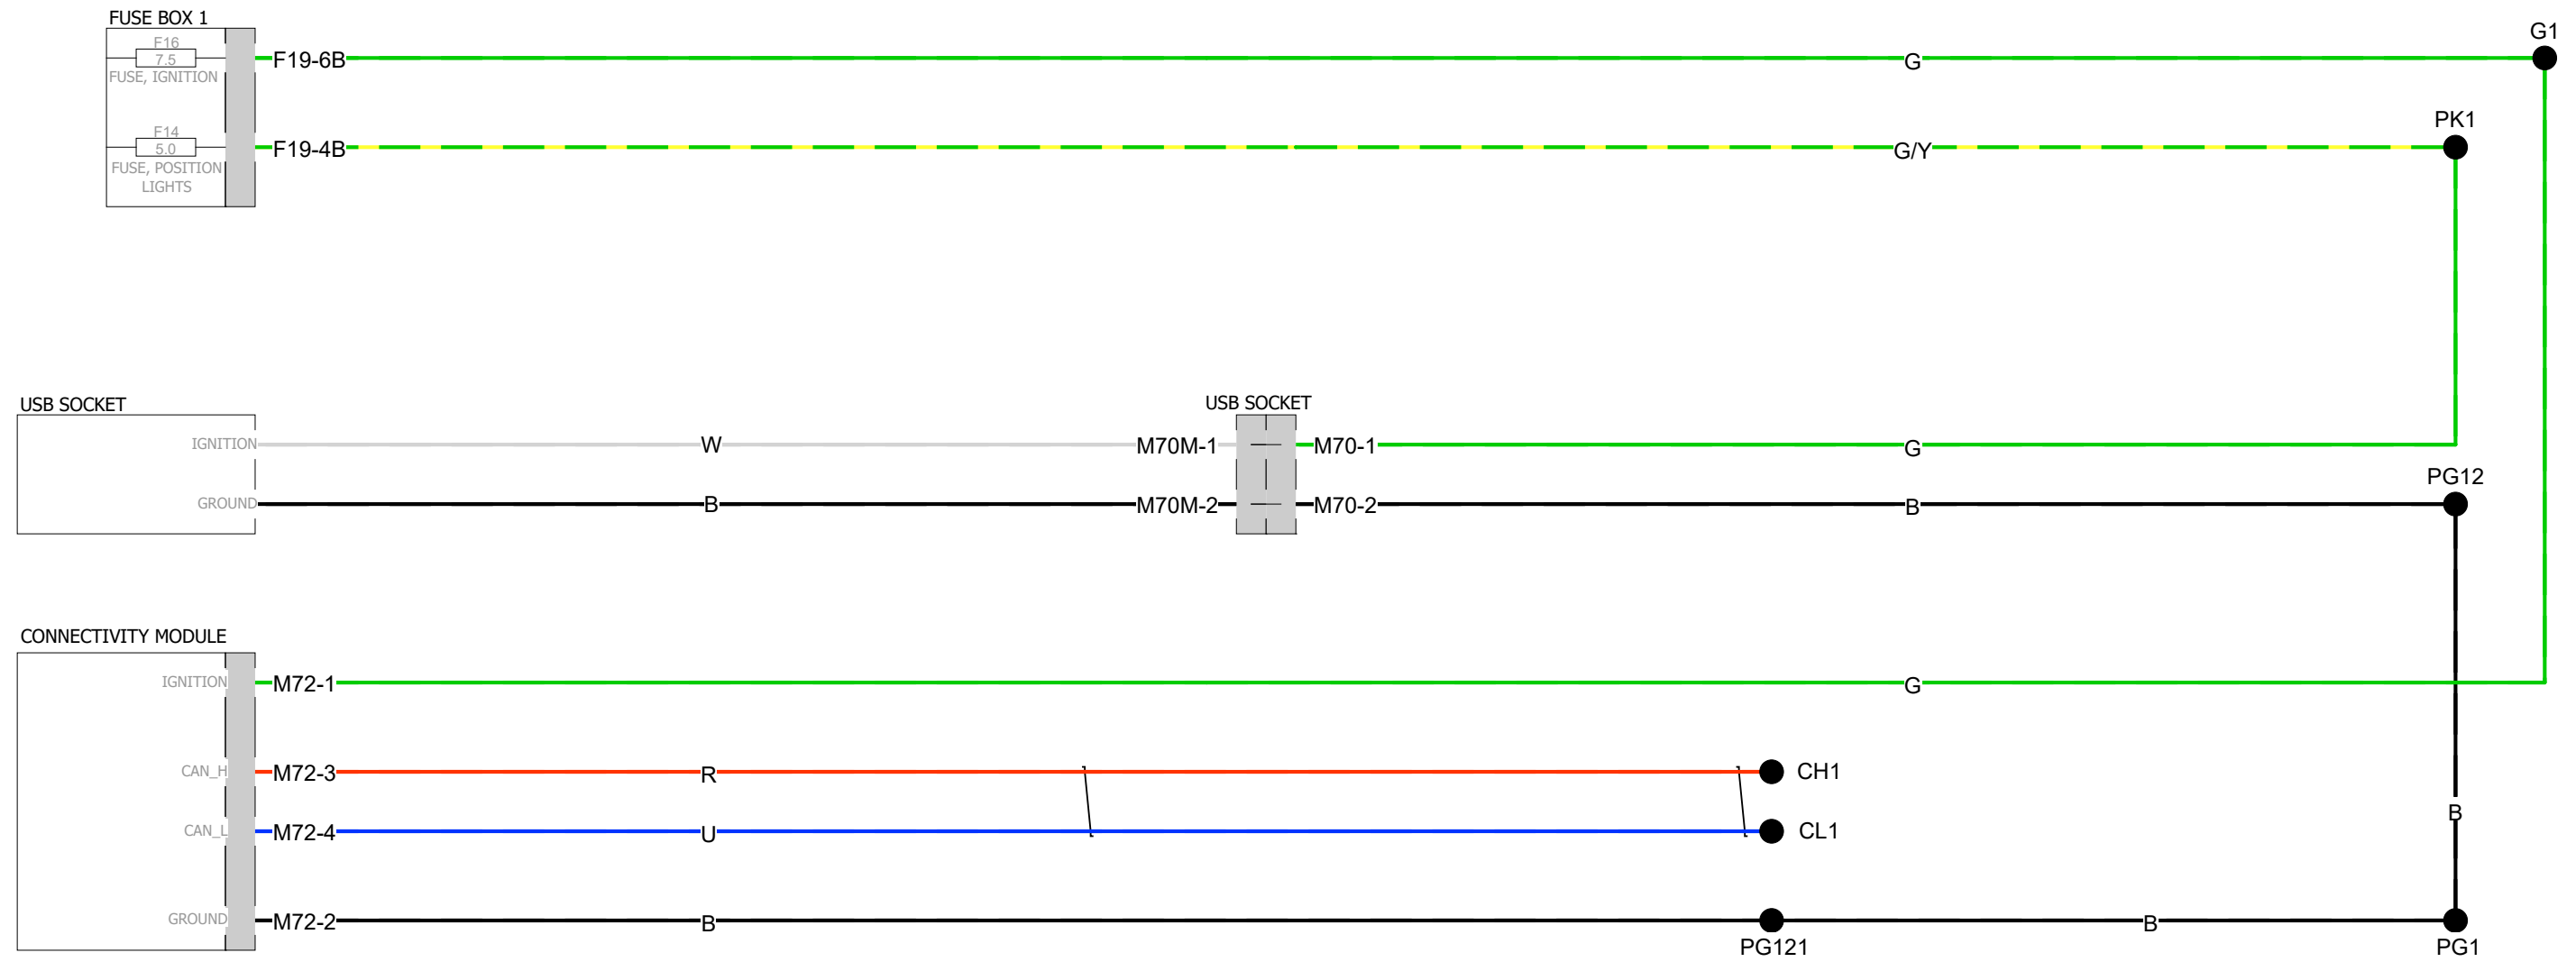

## 25 HEATED ACCESSORIES CIRCUIT

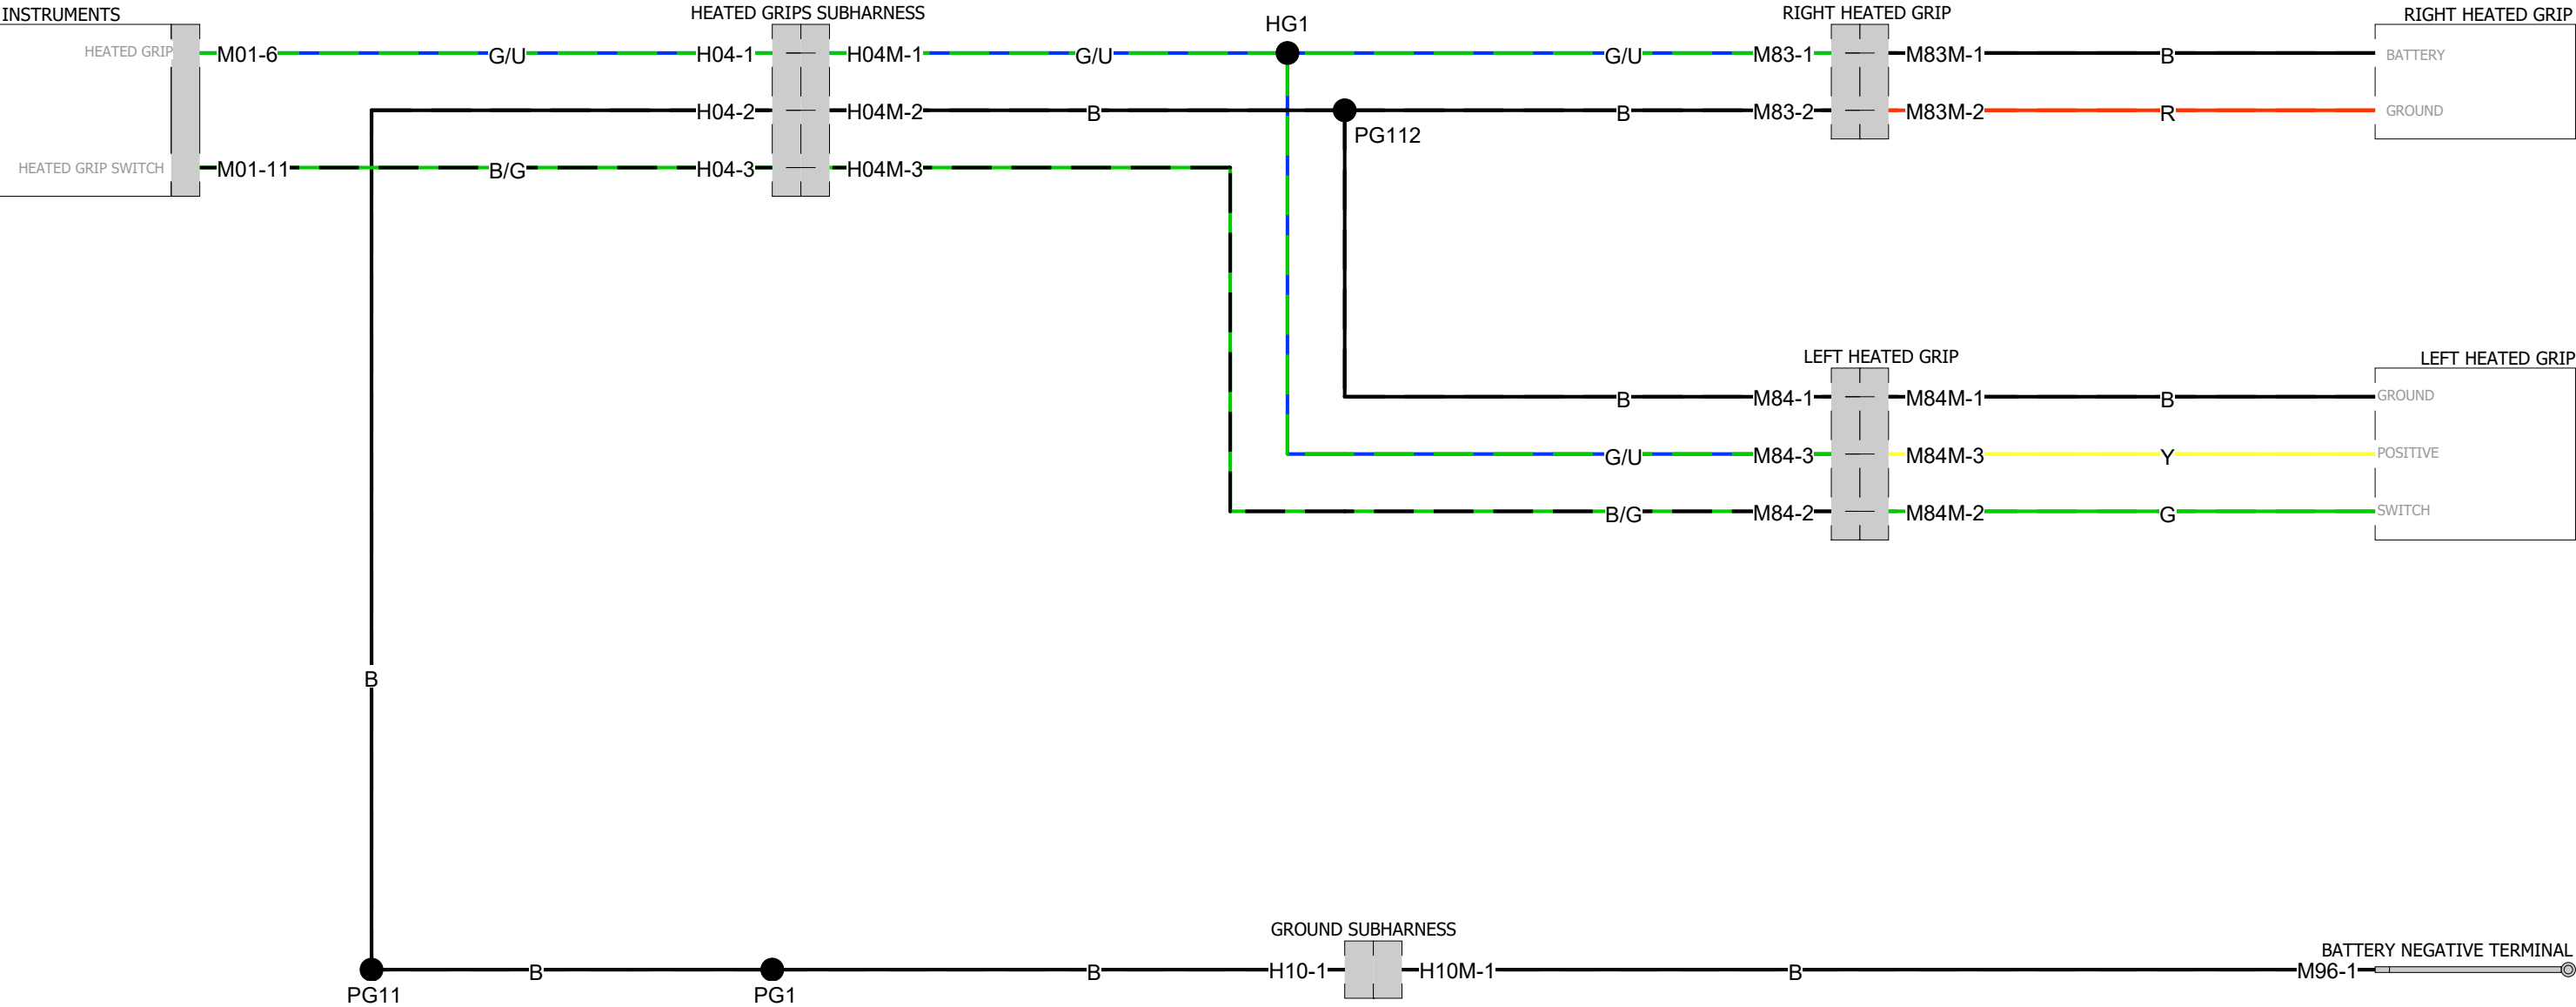


26 ALARM CIRCUIT

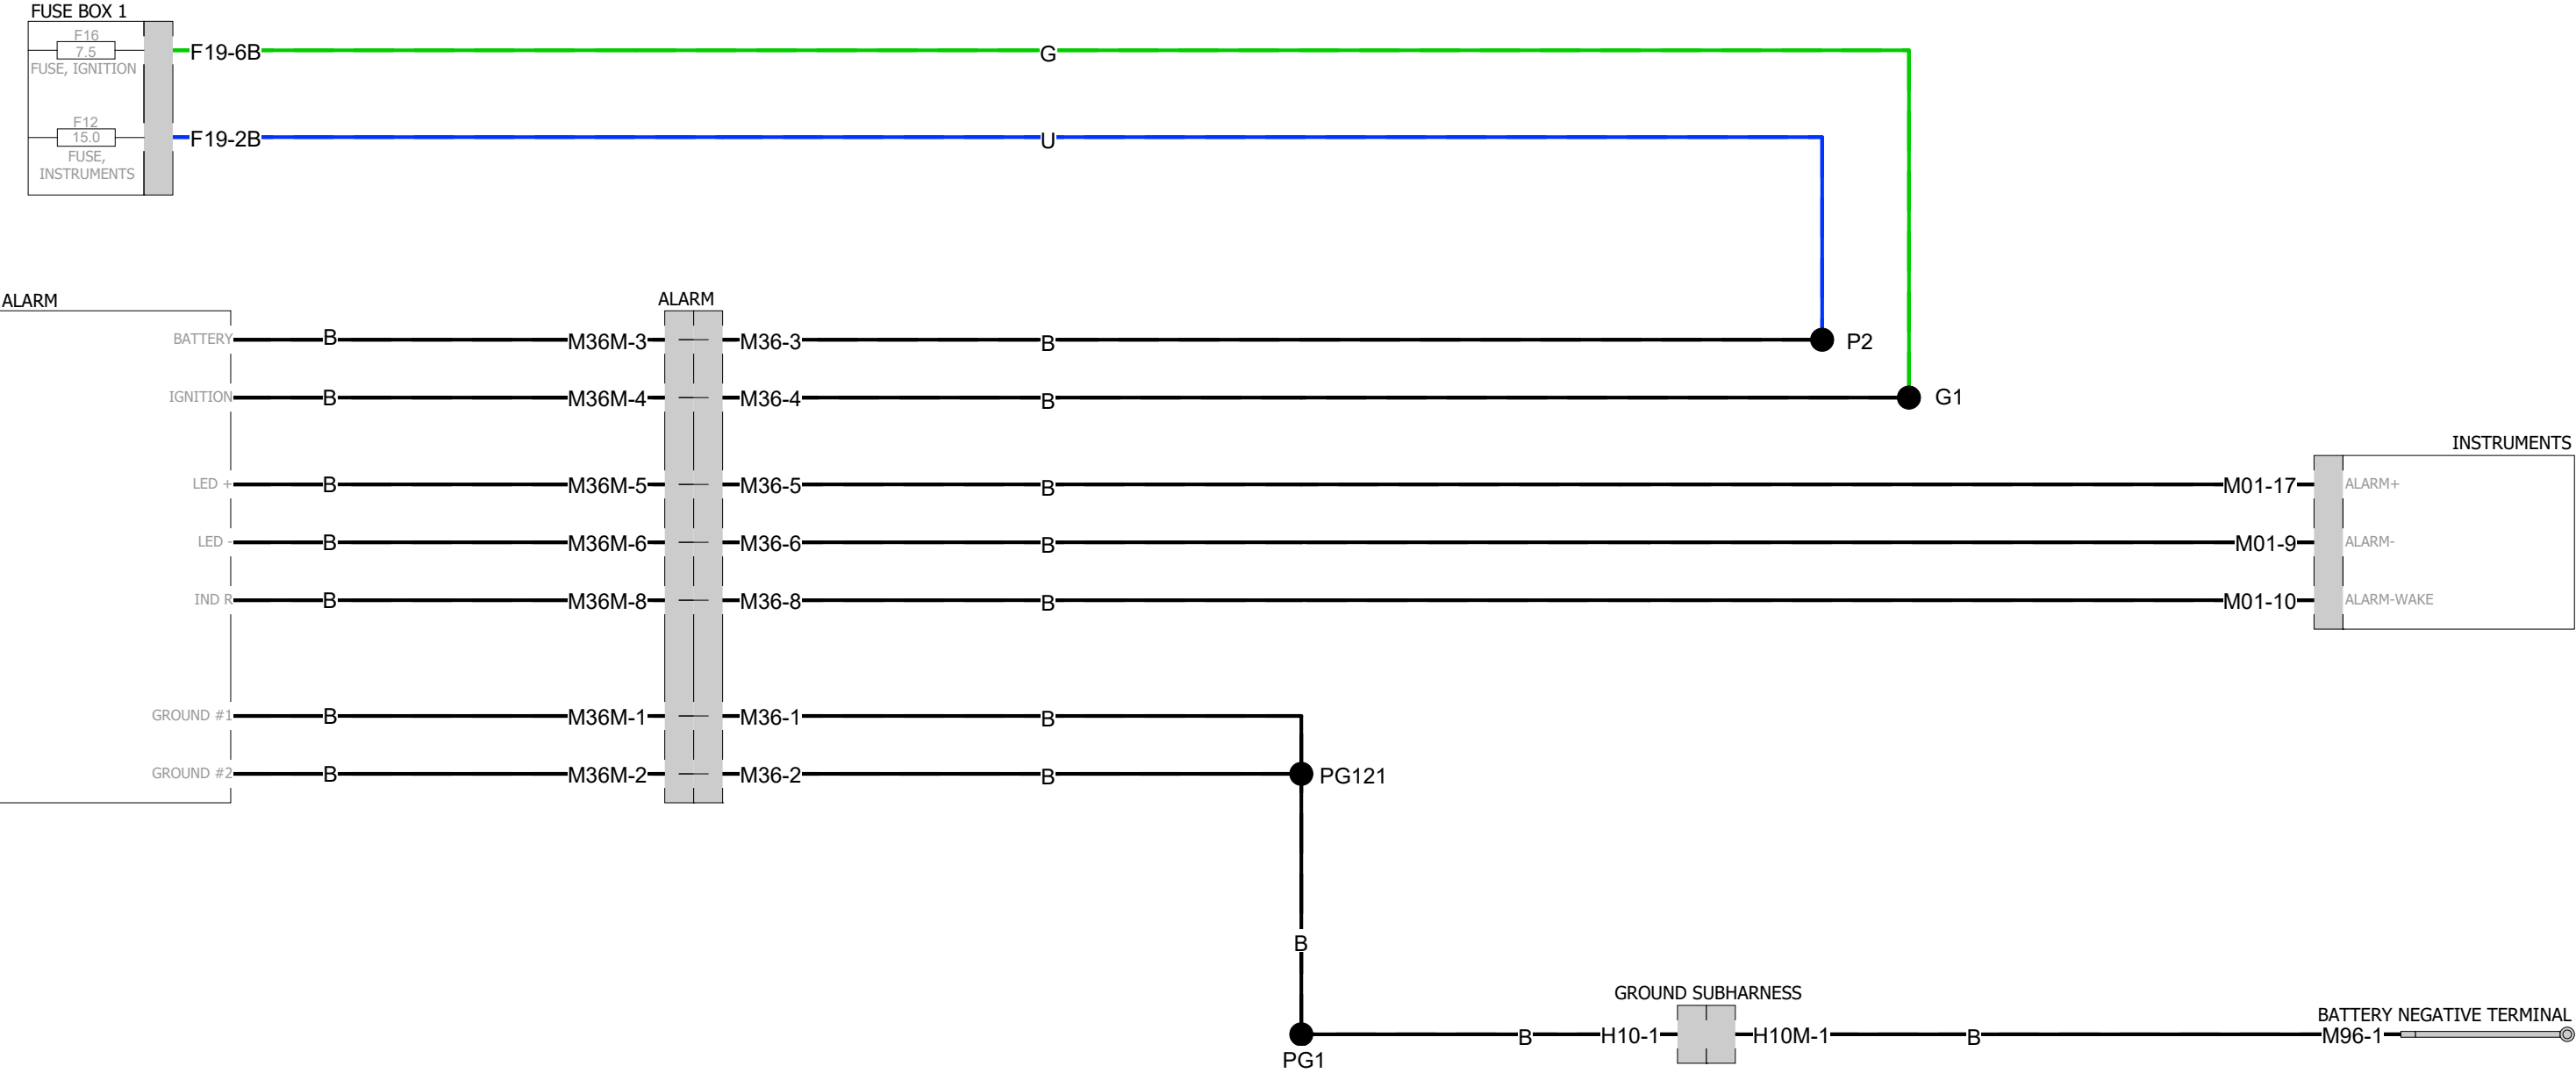



ELECTRICAL CIRCUIT

27 RIDER INFORMATION CIRCUIT

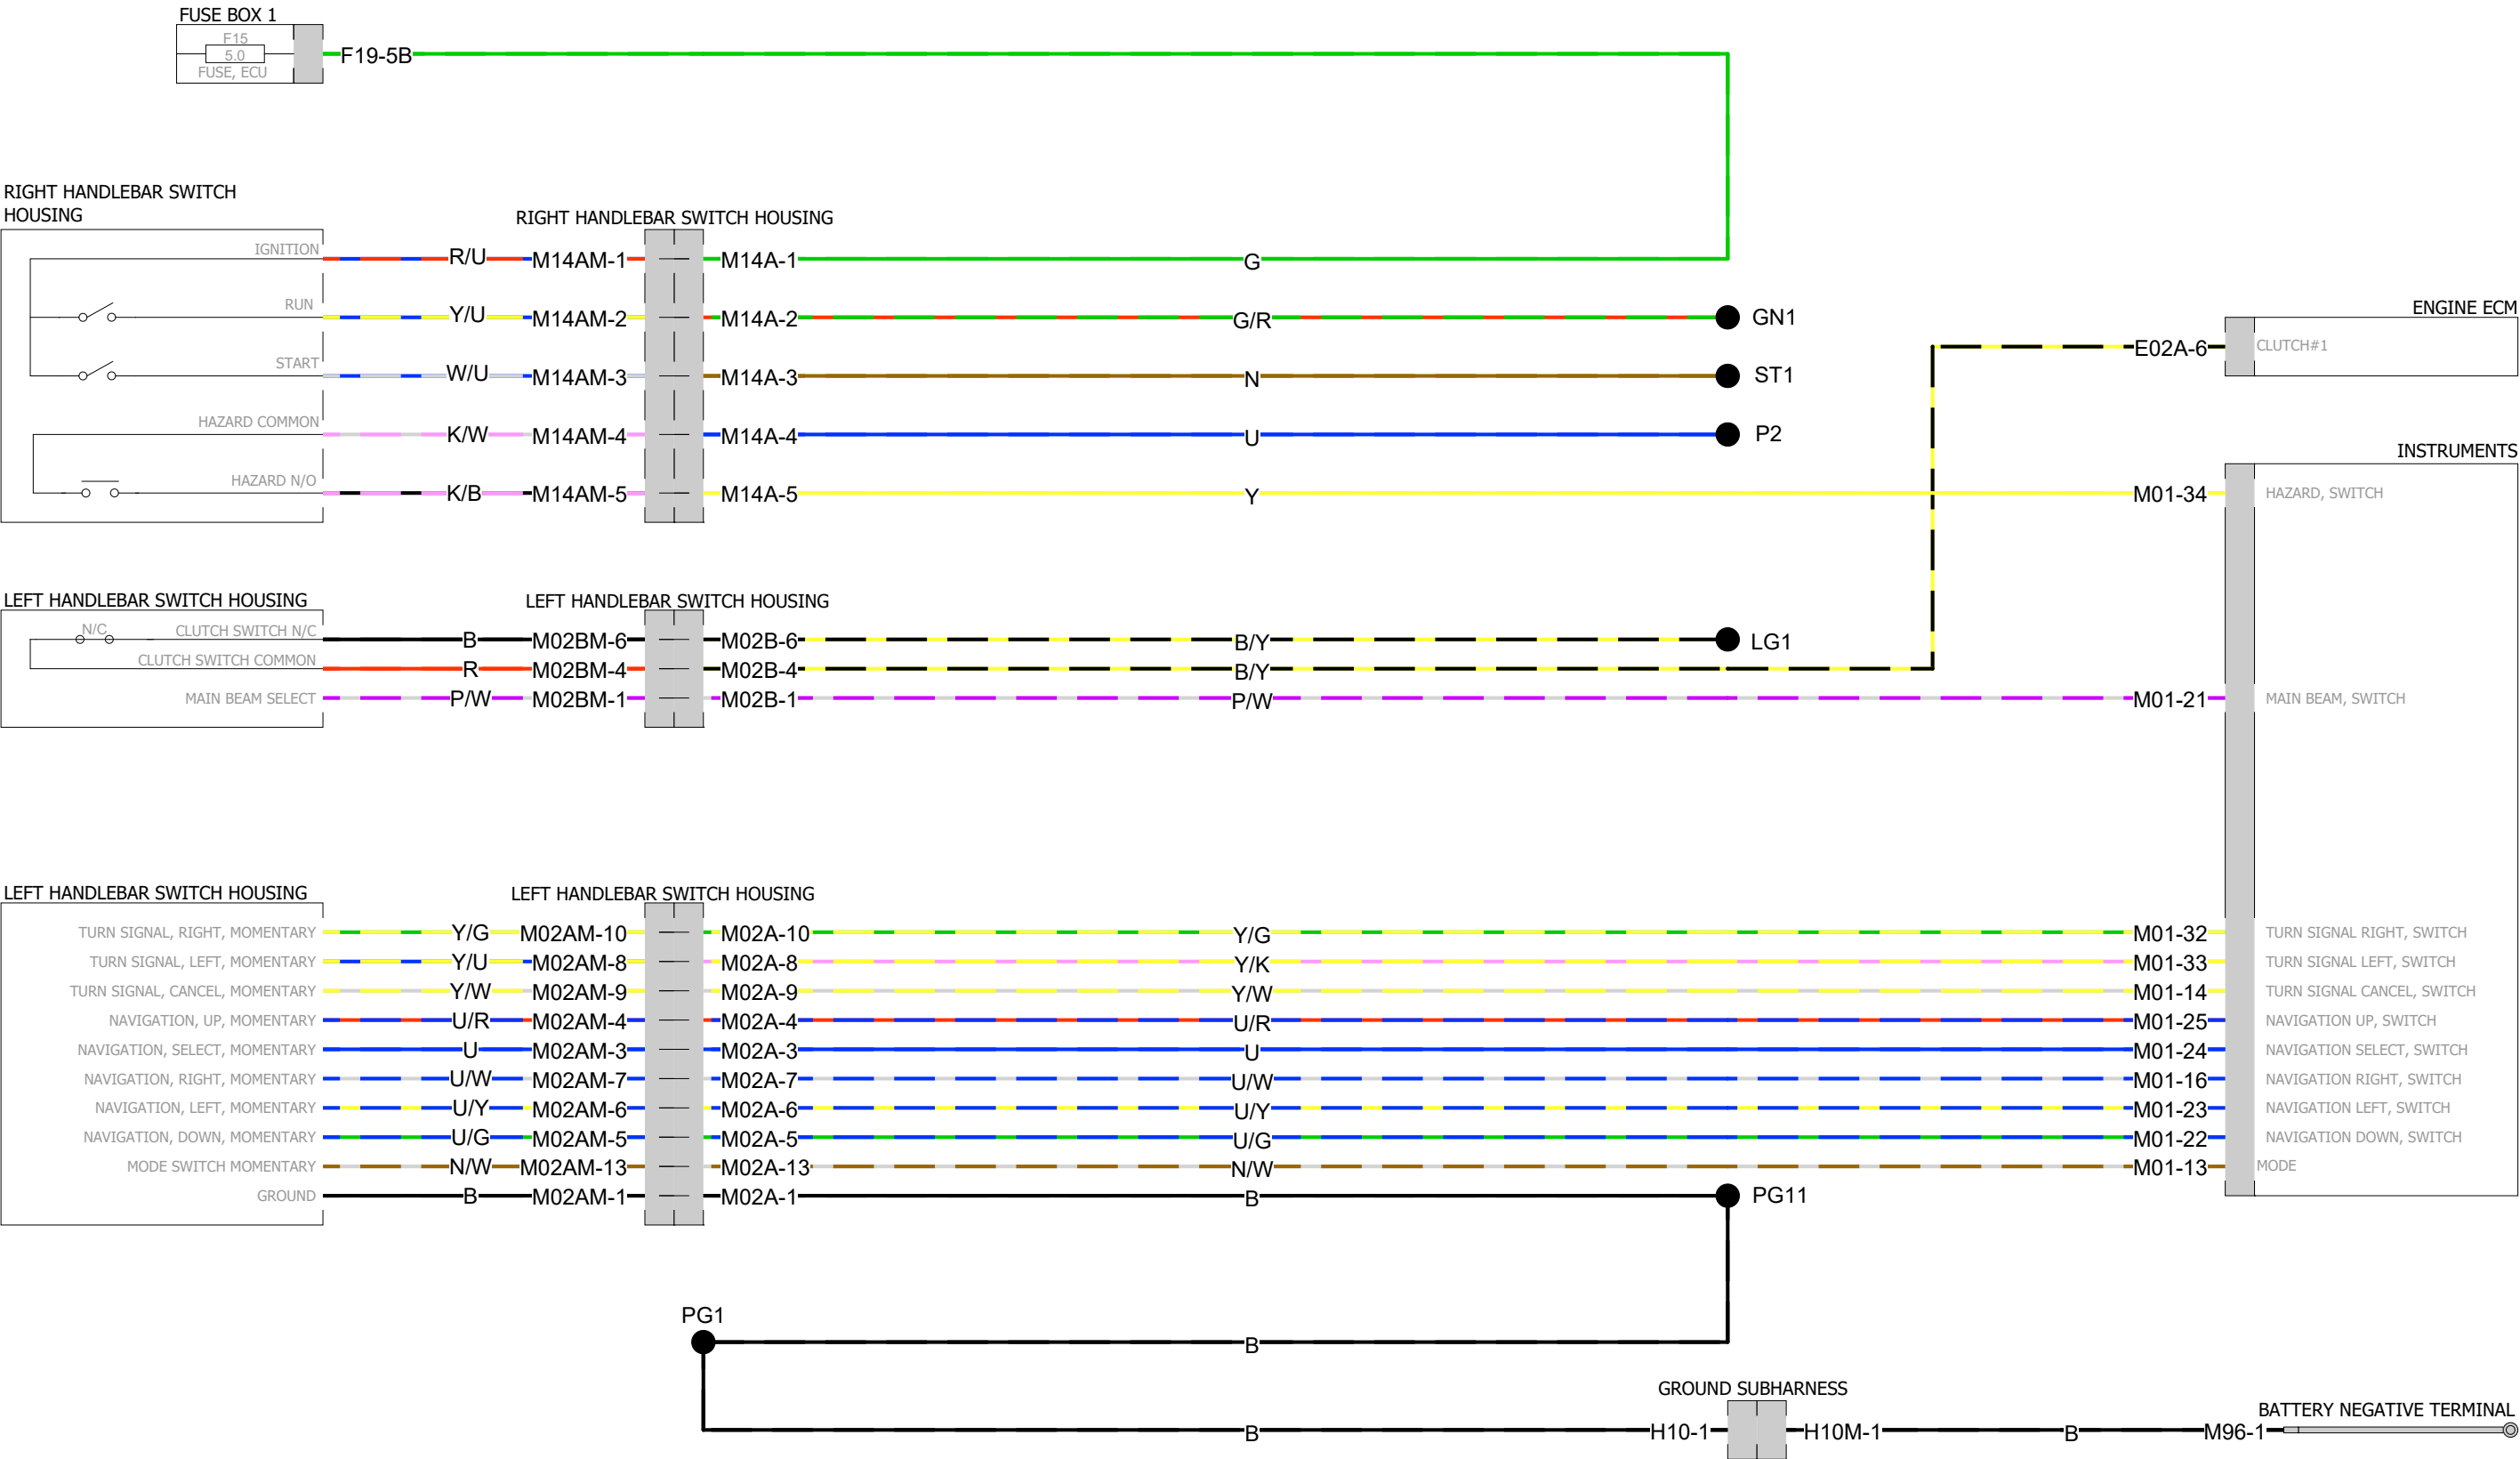

28 GROUND CIRCUIT – FRONT

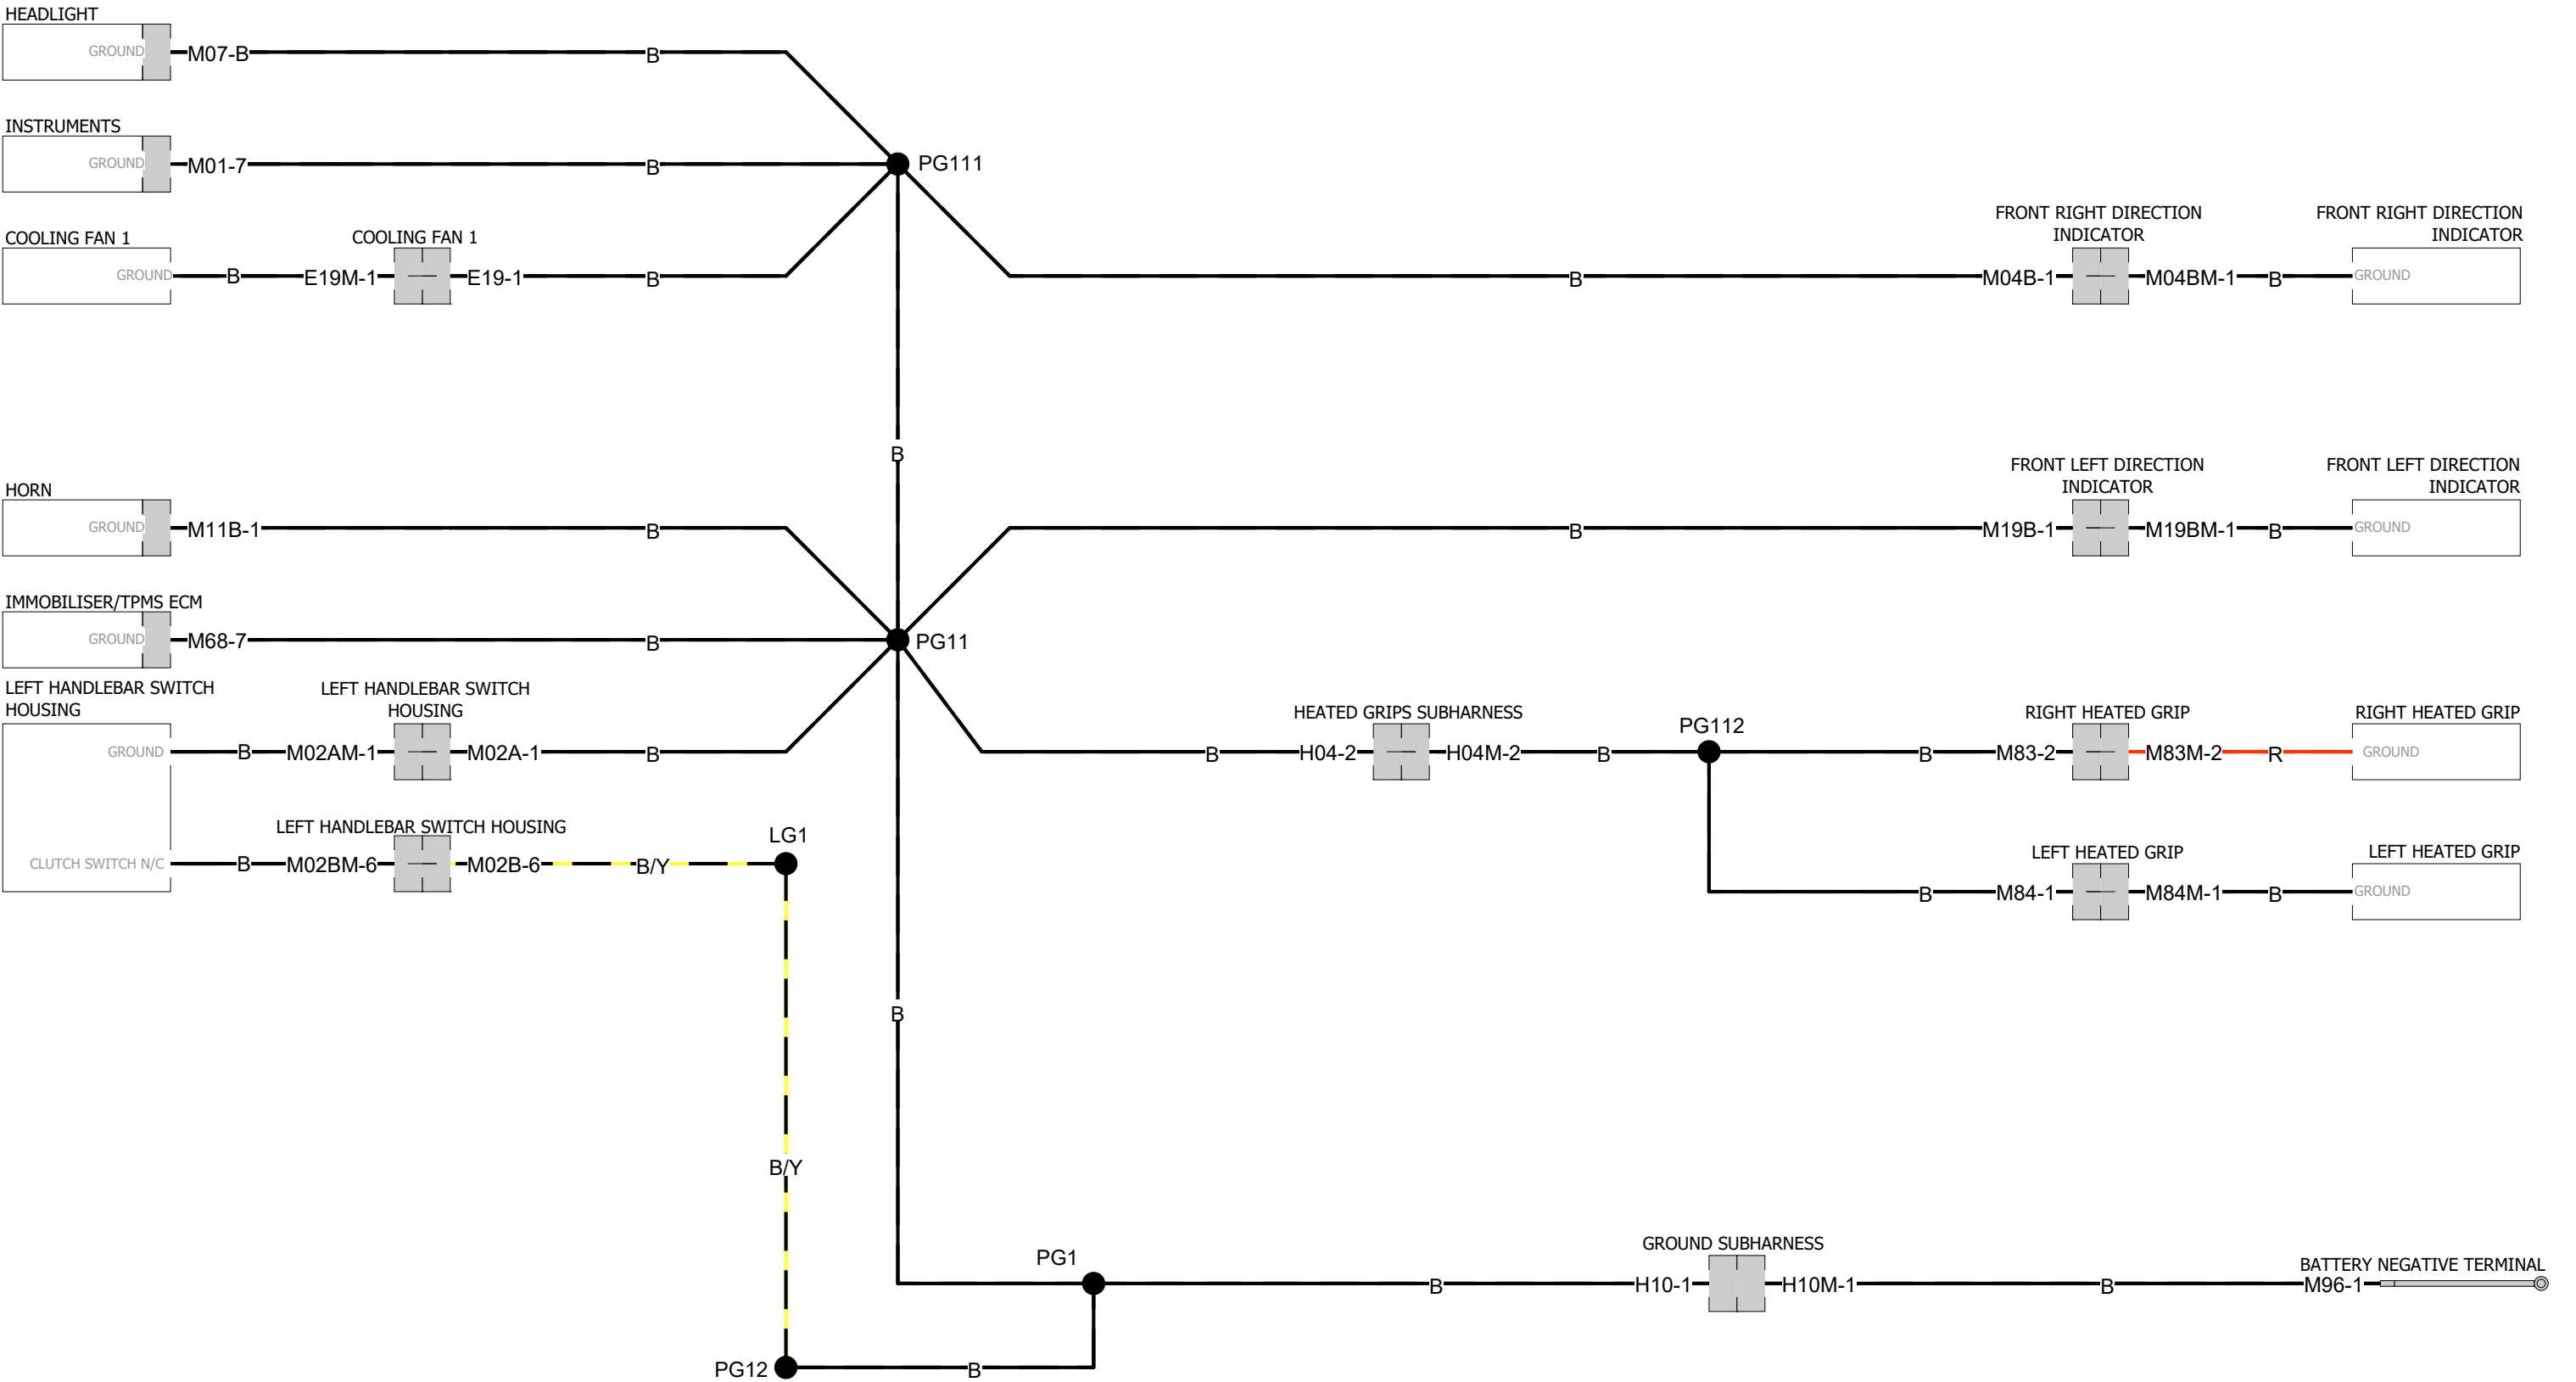

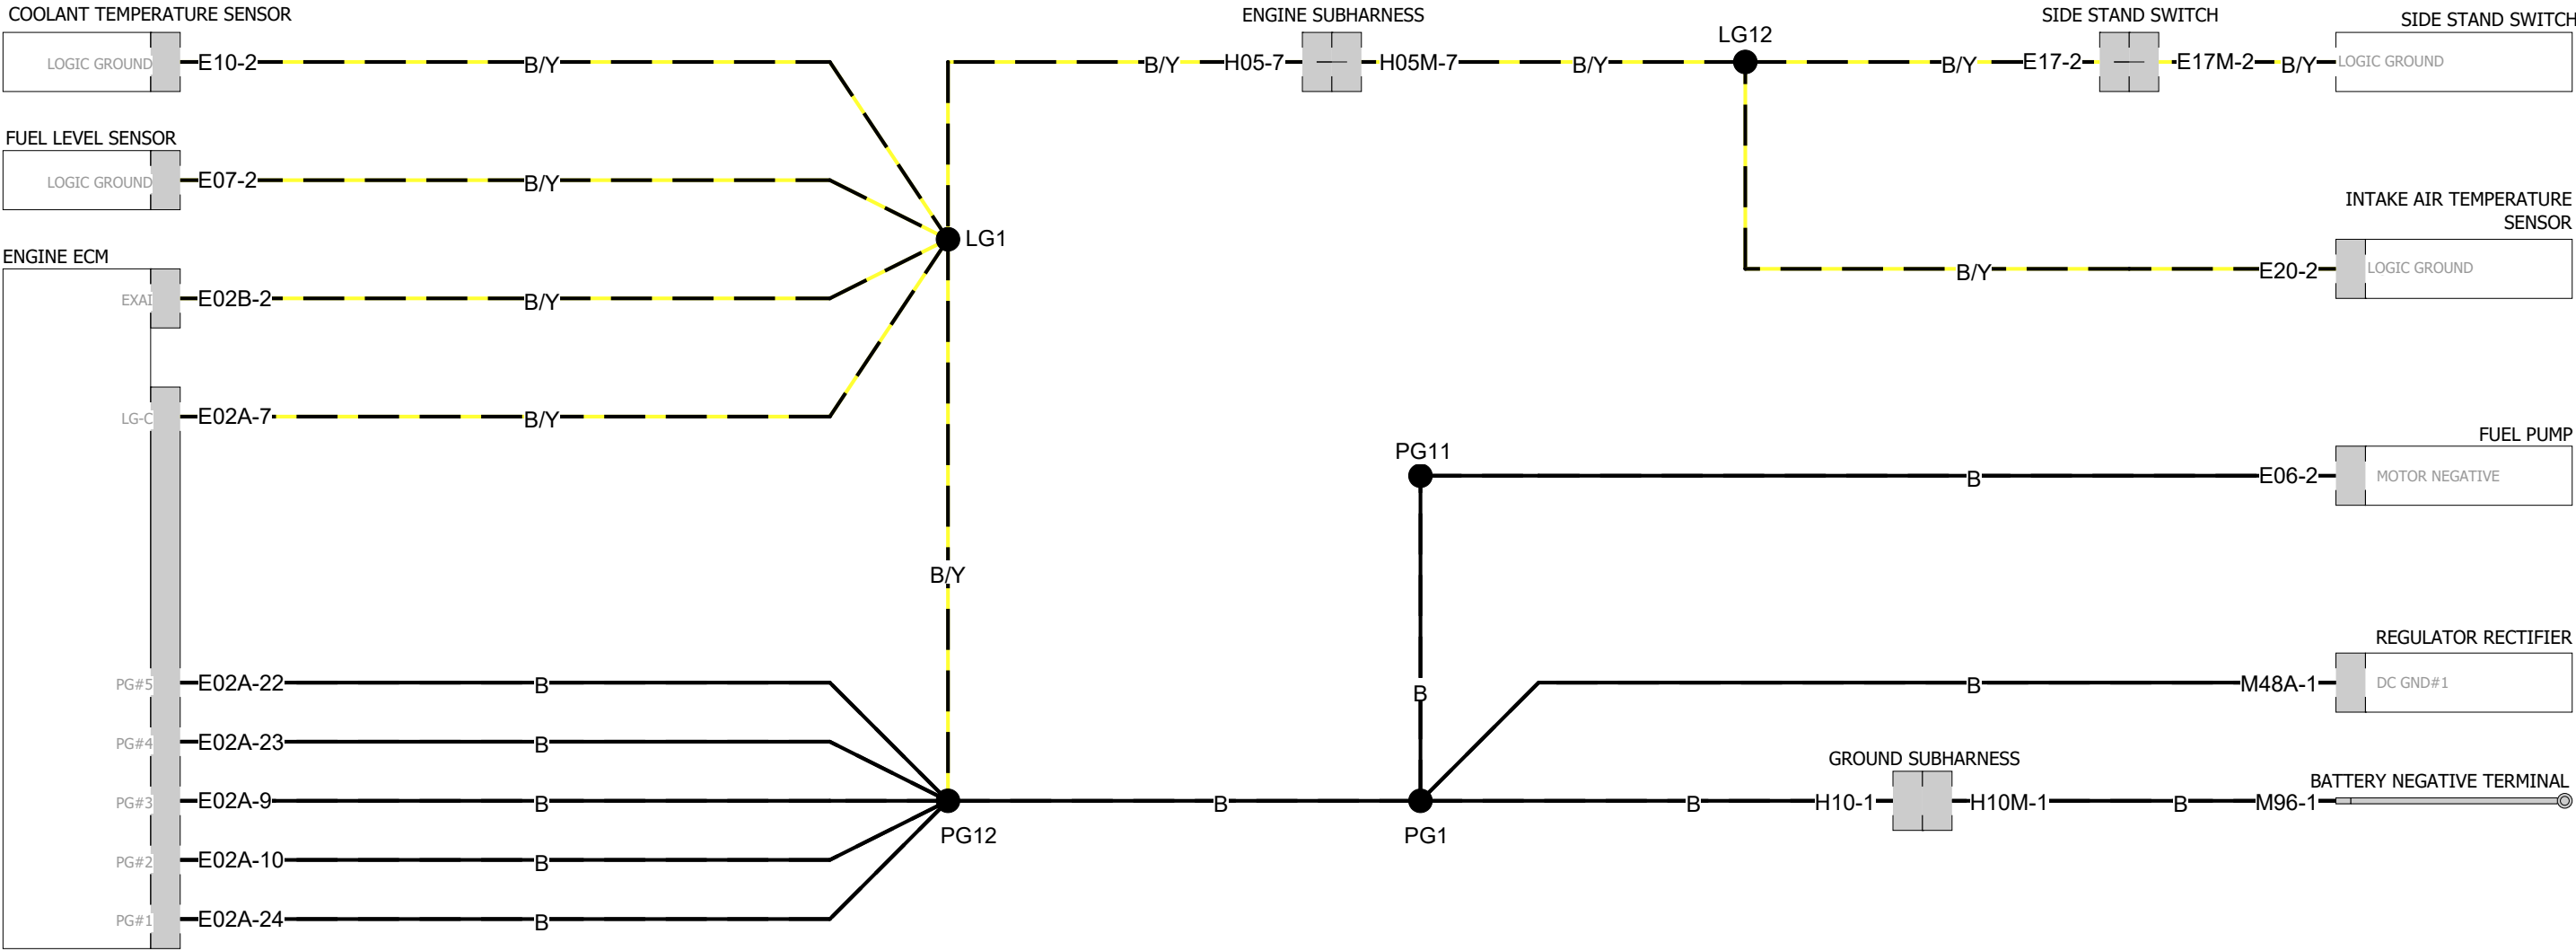



30 GROUND CIRCUIT - REAR

