

ENG

Tasha® FRIDGE & FREEZERS

Tasha ® Blenders is an investment that will prove its worth every time you use it. Exclusively designed aluminum encapsulated base provides superior heat conductivity and even heat distribution to meet the demands of gourmet chefs everywhere. When properly cared for, your Tasha ® Blenders will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the cookware's original beauty.

Some tips to enhance and maintain the qualities of the product:




27 cu. ft. Smart Counter-Depth MAX™
French Door Refrigerator



295L Solid Door Hybrid Chest Freezer

PART - 7. PARTS OF THE APPLIANCE AND THE COMPARTMENTS

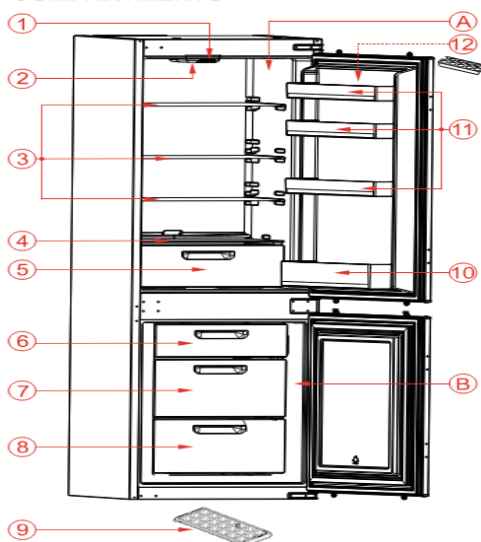

This presentation is only for information about the parts of the appliance.
Parts may vary according to the appliance model.

- | | |
|------------------------------|--------------------------------|
| A) Refrigerator compartment | 6) Freezer room cover |
| B) Freezer compartment | 7) Freezer comp. drawer |
| 1) Thermostat knob | 8) Freezer comp. bottom drawer |
| 2) Refrigerator lamp & cover | 9) Ice box |
| 3) Refrigerator shelves | 10) Bottle shelf |
| 4) Crisper shelf | 11) Door shelves |
| 5) Crisper | 12) Egg holder |

PRODUCT SAFETY**IMPORTANT SAFEGUARDS****▪ UNPACKING YOUR FRIDGE**

Unpack your cellar and carefully check the interior and exterior. Should any damage be evident, do not plug the appliance in. Contact the store from which you purchased it. This unit must always be kept upright – before, during and after unpacking.

▪ SETTING UP YOUR FRIDGE**ALWAYS REMOVE ALL GOODS BEFORE MOVING THE FRIDGE****Select the Right Location**

NOTE: The fridge is designed for freestanding operation. It is not made to be recessed or built-in (fully recessed). The fridge must be positioned on a flat surface that is strong enough to support it when fully loaded.

Choose a location where there is no risk of extreme temperatures, either hot or cold, such as a garage that is not properly insulated or heated.

Do not place the unit in a moist area or in an area where it is exposed to direct sunlight. Do not place the unit next to any appliance that emits large amounts of heat, such as a dishwasher, microwave, toaster oven, oven or barbecue, etc., or near radiators, baseboard heaters or other heat sources.

NOTE: Allow enough space in the front of the unit to open the door 120°.

Proper Air Circulation

To assure that your fridge works at the maximum efficiency for which it was designed, you should install it in a location where there is proper air circulation and electrical connections.

The fridge is designed to be freestanding and should not be recessed or built-in. Allow 2 inches of space on both sides and back of the wine cellar to allow proper ventilation. 2 4 1 1

To ensure proper internal air circulation, do not overfill your fridge.

Electrical Requirements

Your fridge requires a power outlet (120V, 15amps) with proper grounding. Avoid placing the unit where there may be electrical interference.

Do not plug unit into the same outlet as a refrigerator or microwave.

Avoid the use of three-prong plug adapters. Do not cut off the grounding prong to accommodate a two-plug outlet; that could result in a shock hazard.

NOTE: Do not place heavy objects on top of the fridge.

To minimize the risk of rusting, leakage, and insulation damage, avoid placing the unit where heavy moisture is present. Under no circumstances apply or let water spill onto or into the unit.

Leveling Your Fridge

Your Fridge has 4 leveling legs. After properly placing your cellar in its final position, adjust the legs by turning them clockwise to raise the wine cellar or counterclockwise to lower it. We recommend tightening the back feet to the maximum and using the front feet to level the fridge.

Using Your Fridge Important:

- Before connecting the fridge to a power source, let it stand upright for approximately 24 hours. This will reduce the risk of any malfunction to the cooling system that might have occurred during handling and/or transporting, and will allow the refrigerant to flow back into the compressor.
- When using the fridge for the first time, allow at least 24 hours for the internal temperature to adjust properly. Make sure there are at least 3 to 5 bottles in the unit.

Your Fridge should now be on a flat surface that is strong enough to support it when fully loaded.

Gently place/slide the racks into the fridge.

Plug the power cord into a 3-prong electrical outlet and the unit will turn on automatically to the default setting.


Place goods inside the cellar.

Determine the best setting to use: Refer to the temperature guide for appropriate serving temperatures (see page 8).

The unit's cooling system operates most efficiently with an ambient temperature of less than 70°F.

NOTE: Remember, if using your wine cellar for the first time, allow at least 24 hours for temperature to adjust properly and make sure there are at least 3 to 5 bottles in the unit.

■ CONTROL PANEL

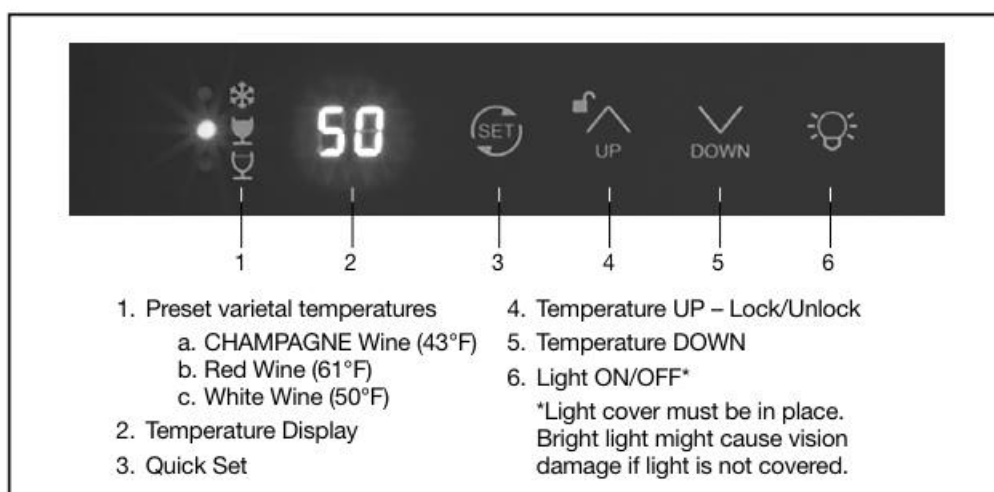

▪ OPERATING INSTRUCTIONS

1. Unlock the temperature control lock by pressing the UP arrow for two seconds.
2. To select one of the preset temperatures for CHAMPAGNE, RED or WHITE wine, press the SET button until the desired preset is illuminated.
3. To Program Your Own Temperature: Unlock the temp control by pressing the UP key for 2 seconds, then simply press the UP or DOWN arrow until desired temperature appears in the display.

After the desired temperature is set, you may stop pressing the button. The temperature display will continue to flash for around 5 seconds, then the display will stop flashing, and will exit that mode automatically. The display will show the real-time cavity temperature. During the temperature setting, flashing on the display may be (or may not be) observed, it depends on the speed when pressing the button, either way is normal.

To Turn Light On or Off

Press the LIGHT icon to select ON or OFF. Please note the light will stay on until turned off.

▪ CLEANING AND CARE

Warning: To avoid electric shock, always unplug your wine cellar before cleaning. Ignoring this warning may result in death or injury.

Caution: Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

General Cleaning

Unplug the unit and remove all wine bottles and shelves.

Interior

Wipe down walls with a solution of 2 tablespoons of baking soda dissolved in 1 quart of water. Rinse with clean, warm water. Dry with soft cloth. Vacuum any dust or particles blocking the vent, compressor, or evaporator (blockage could hinder cooling efficiency of your cellar).

Exterior

Clean with mild detergent and damp cloth. Rinse with warm water and dry with soft cloth.

Be sure the door gasket is kept clean to ensure proper seal.

Automatic Defrost

A thin layer of ice may accumulate on the rear interior wall; this is normal. The ice will be automatically defrosted once the compressor cycles off. Water will drain through an outlet in the inner rear wall into a drain pan located next to the compressor. It will evaporate; there is no need to empty the pan.

Power Interruptions

If power is interrupted due to a storm or other cause, the unit will power off and automatically restart after 3 to 5 minutes. You cannot restart the unit before this time delay.

If the unit is unplugged, once it is plugged back in, it will take 3 to 5 minutes to restart.

NOTE: Once power is recovered, it will reset to the default temperature of 50°F.

Vacation and Moving Care

For extended periods of time away from home, you may want to unplug and empty your wine cellar, then clean it following the directions under GENERAL CLEANING. If time away is very long, prop the doors open to allow air to circulate inside.

Moving Your Fridge

Before moving, unplug the unit, remove all bottles and shelves, and clean the cellar following the directions under CLEANING.

Replace shelves and tie or tape the door to secure it in the closed position before moving the unit.

BE SURE THE FRIDGE REMAINS UPRIGHT AT ALL TIMES.

Cleaning and Maintenance

Any other servicing should be performed by an authorized service representative. Don't try to repair the appliance yourself. It is dangerous to alter or modify this product in any way. The component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

Dealer will not be responsible for any damage or defects caused by, or resulting from repairs, service, conversion or alterations to the product or any of its parts and accessories which have been performed by service centers or repairmen not authorized by dealer. Dealer will not be responsible for any direct, indirect or consequential damages, losses or other costs and expenses resulting from any spoilage of any items stored in this refrigeration system.

▪ TROUBLESHOOTING

You can easily solve many common problems by trying the suggestions below

If your refrigerator is not working properly, it may be a minor problem, therefore check the following, before calling an electrician to save time and money.

What to do if your appliance does not operate;

Check that;

- There is no power,
- The fuse has not blown in the plug,
- The fuse box for the house to ensure this has not tripped.

What to do if your appliance performs poorly;**Check that;**

- You have overloaded the appliance ,
- The thermostat setting is “1” position (if so set the thermostat dial suitable value)
- The doors are closed perfectly ,
- There is no dust on the condenser ,
- There is enough place at the rear and side walls

If there is noise;

The cooling gas which circulates in the refrigerator circuit may make a slight noise (bubbling sound) even when the compressor is not running. Do not worry this is quite normal. If these sounds are different check that;

- The appliance is well levelled
- Nothing is touching the rear.
- The stuffs on the appliance are vibrating.

If there is water in the lower part of the refrigerator,**Check that;**

The drain hole for defrost water is not clogged(Use defrost drain plug to clean the drain hole)

Recommendations

- The compressor protection thermal fuse will cutout after sudden power breakdowns or after unplugging the appliance, because the gas in the cooling system is not stabilised. This is quite normal, and the fridge will restart after 4 or 5 minutes.
- The cooling unit of your refrigerator is hidden in the rear wall. Therefore, water droplets or icing may occur on the rear surface of your fridge due to the operation of the compressor in specified intervals. This is normal. There is no need to perform a defrosting operation unless the icing is excessive.
- If the appliance is not used for a long time (for example during the summer holidays), unplug from main socket. Defrost and clean the refrigerator leaving the door open to prevent the formation of mildew and smell.
- If there is still a problem with your refrigerator although you have followed the instructions in this book, please consult your nearest authorized service center.
- The appliance you have purchased is designed for home type use and can be used only at home and for the stated purposes. It is not suitable for commercial or common use. If the

consumer use the appliance in a way that does not comply with these features, we emphasise that the producer and the dealer shall not be responsible for any repair and failure within the guarantee period.

▪ **TIPS FOR SAVING ENERGY**

- 1– Install the appliance in a cool, well ventilated room , but not in direct sunlight and not near heat source (radiator, cooker.. etc). Otherwise use an insulating plate.
- 2– Allow warm food and drinks to cool down outside the appliance.
- 3– When thawing frozen food, place it in the refrigerator compartment. The low temperature of the frozen food will help to cool the refrigerator compartment when it is thawing. So it reduces the energy requirements.
- 4– When placing, drinks and liquids they must be covered. Otherwise humidity increases at the appliance. Therefore the working time gets longer. Also covering drinks and liquids helps preserve the smell and taste.
- 5– When placing food and drinks, open the appliance door as briefly as possible.
- 6– Keep the covers closed of any different temperature compartment in the appliance (crisper, chiller ...etc).
- 7– Door gasket must be clean and pliable. Replace gaskets if worn.

▪ **HASSLE-FREE REPLACEMENT WARRANTY**

Your ultimate satisfaction in Tasha products is our goal, so if your Tasha ® Fridges should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, visit us at <https://www.tasha.com/contact>.

Or call our Consumer Service Center toll-free at 1800- 678 8888 to speak with a representative. This warranty excludes damage caused by accident, misuse, or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration, or other damage to external or internal surfaces that does not impair the functional utility of the cookware. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.