



Solving the

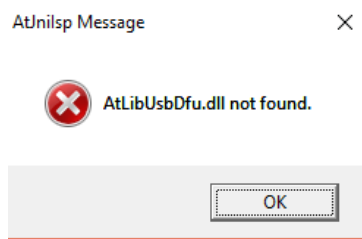


problem (Atmel Flip)

In Device Manager, you will see that the Arduino is not being recognised

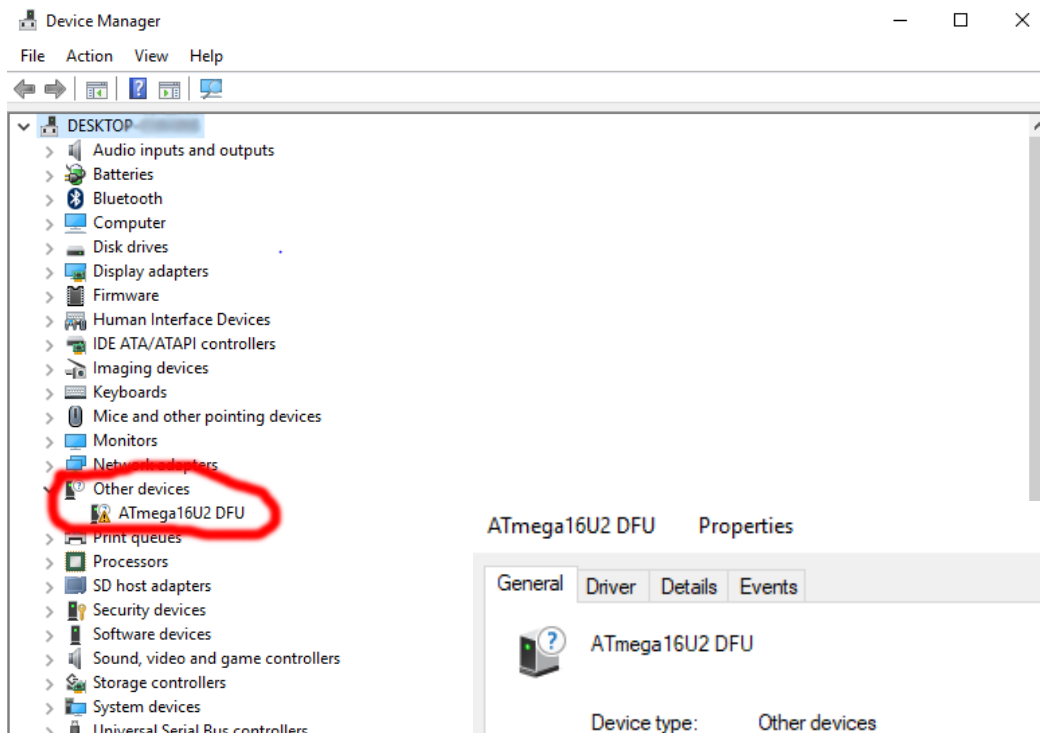


Upon double clicking it, you will get something like this ----->

Click on Update Driver...

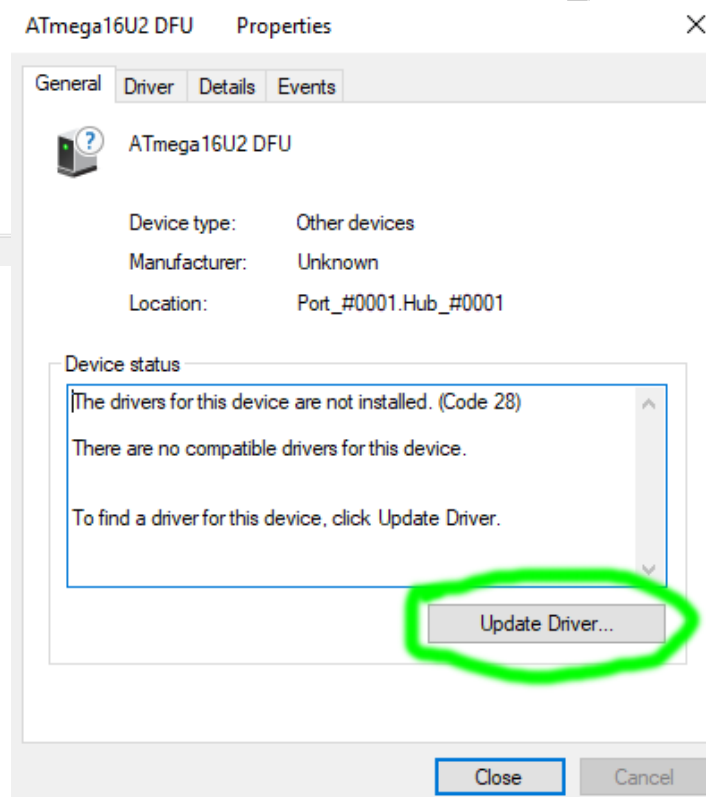


Then, Click on “Browse my computer for driver software”

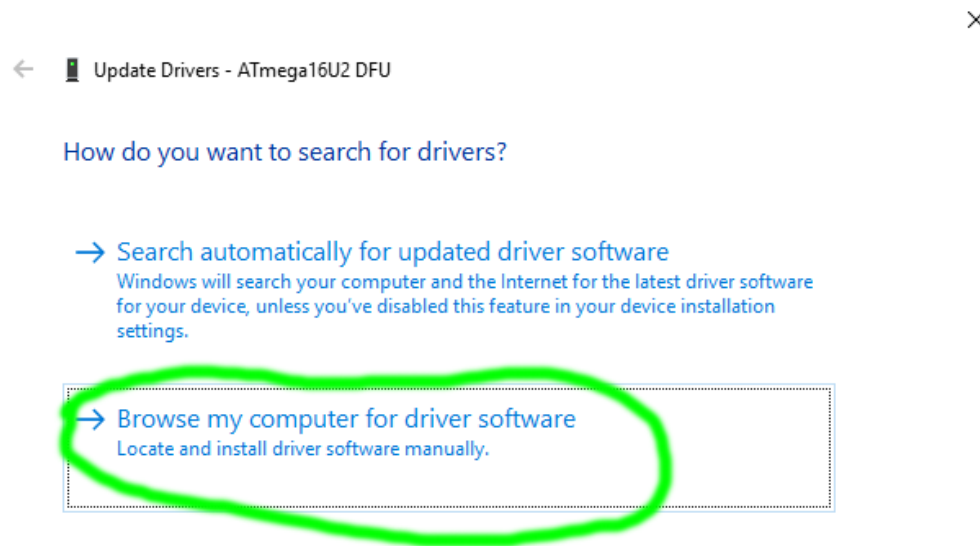


Click on “Let me pick from a list of available drivers on my computer”

The location (“Search for drivers in this location”) does not matter

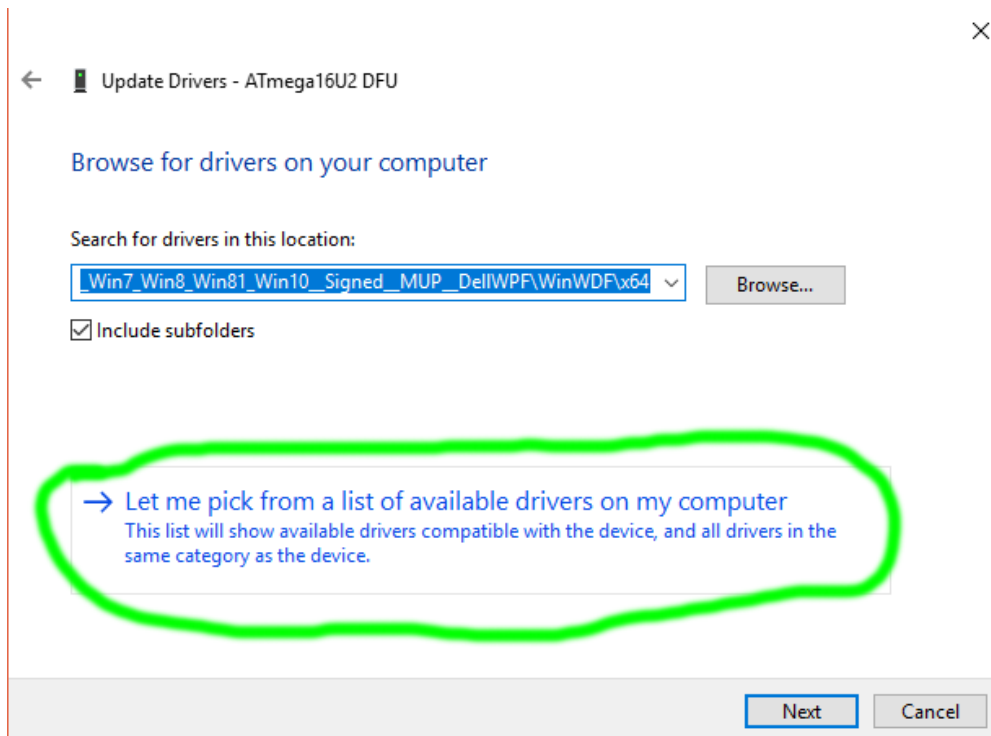


Click next


Ensure that "Show All Devices" is selected

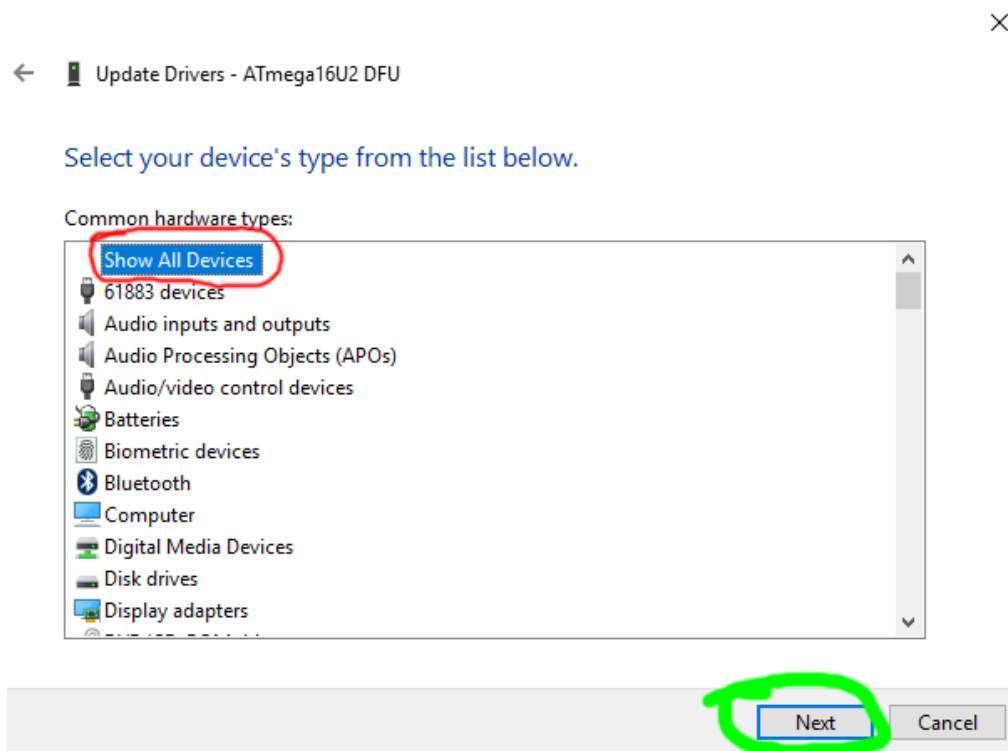


Click "Have Disk..."

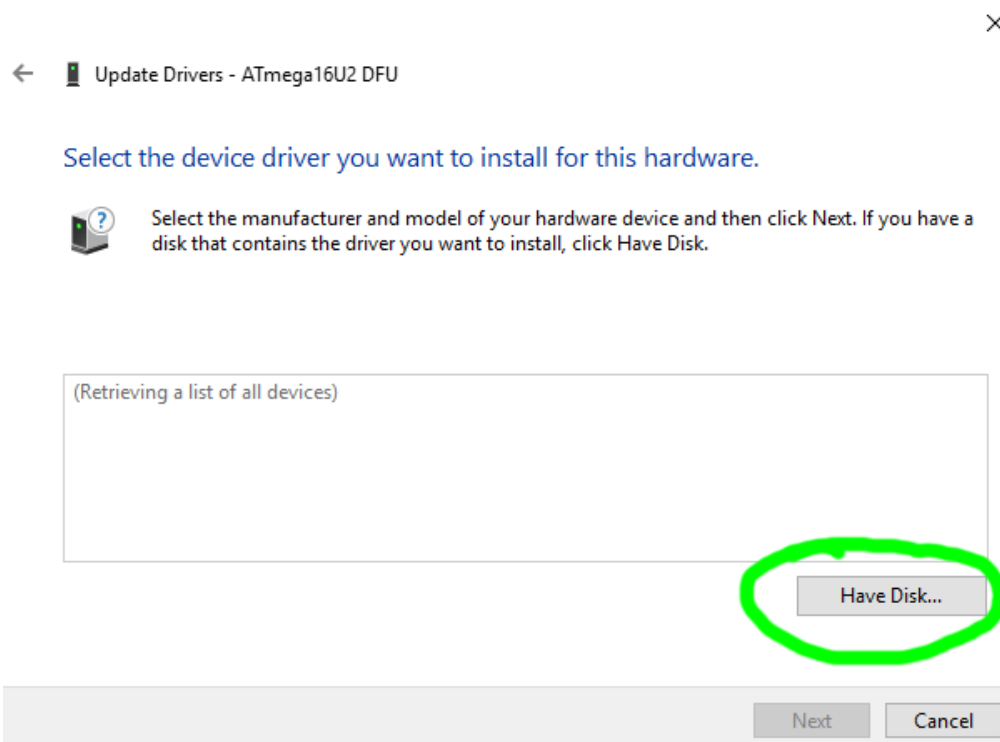


Click "Browse"

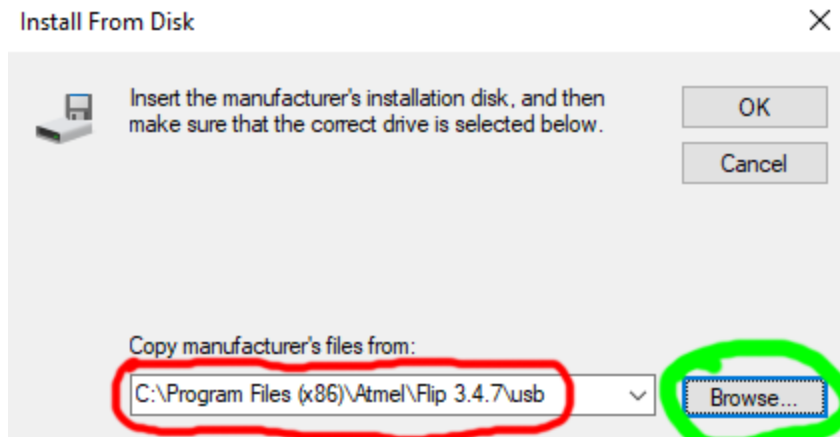

Select the atmel_usb_dfu, and then click Open. The directory of this file is normally located in Program Files(x86)----- Address shown above (highlighted in red)

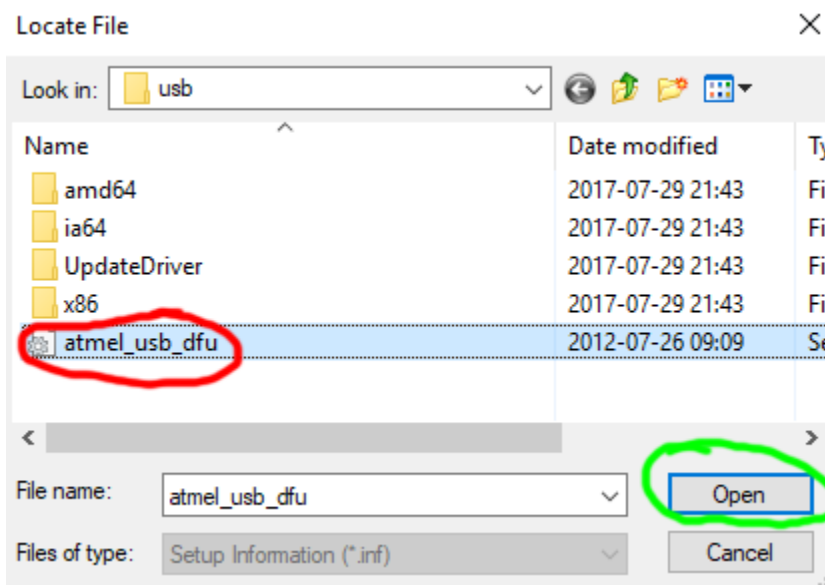


Ensure that you have selected the correct location. Click OK

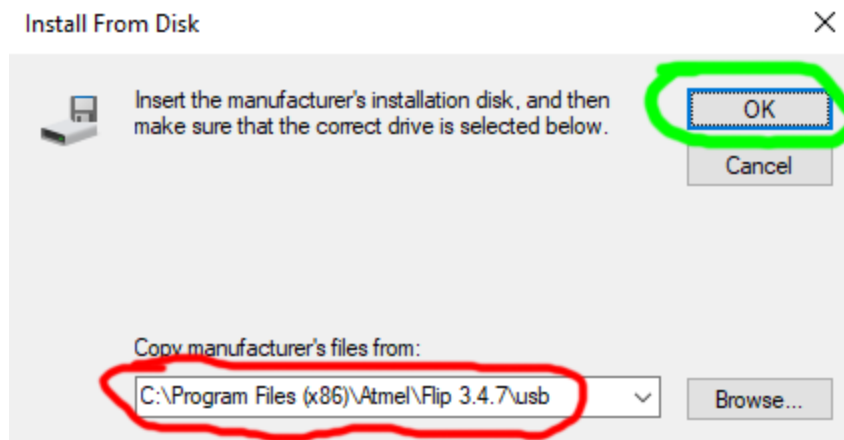


Notice that the correct model has been shown

Click Next

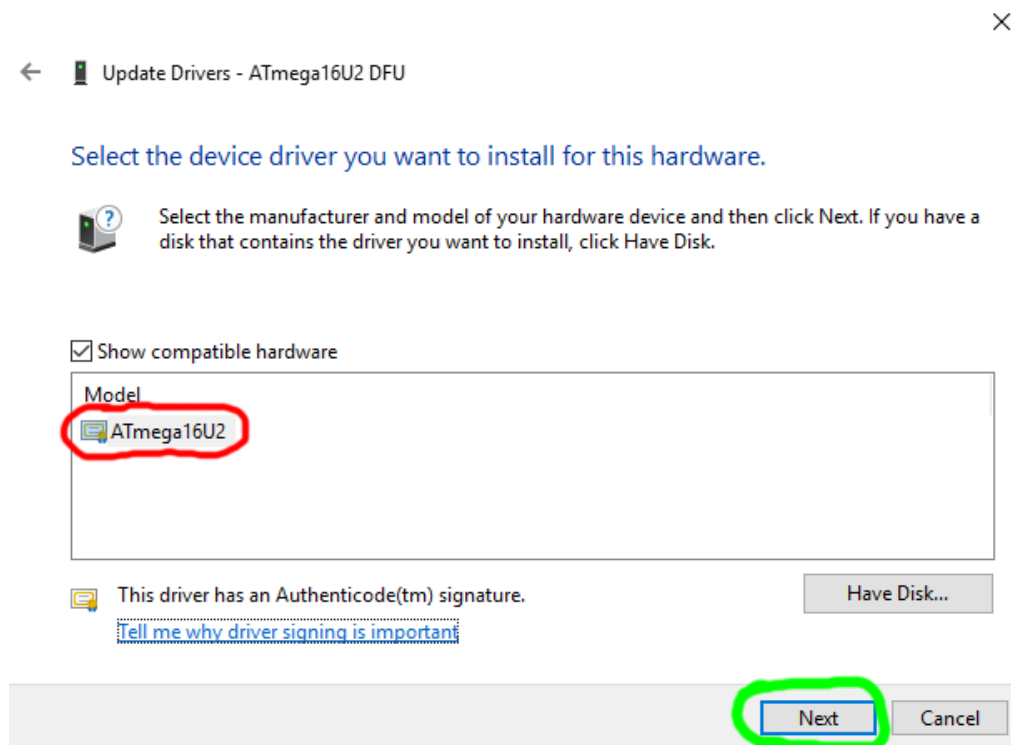


Windows will start installing the driver

Click Install when this new window pops up (as shown below)

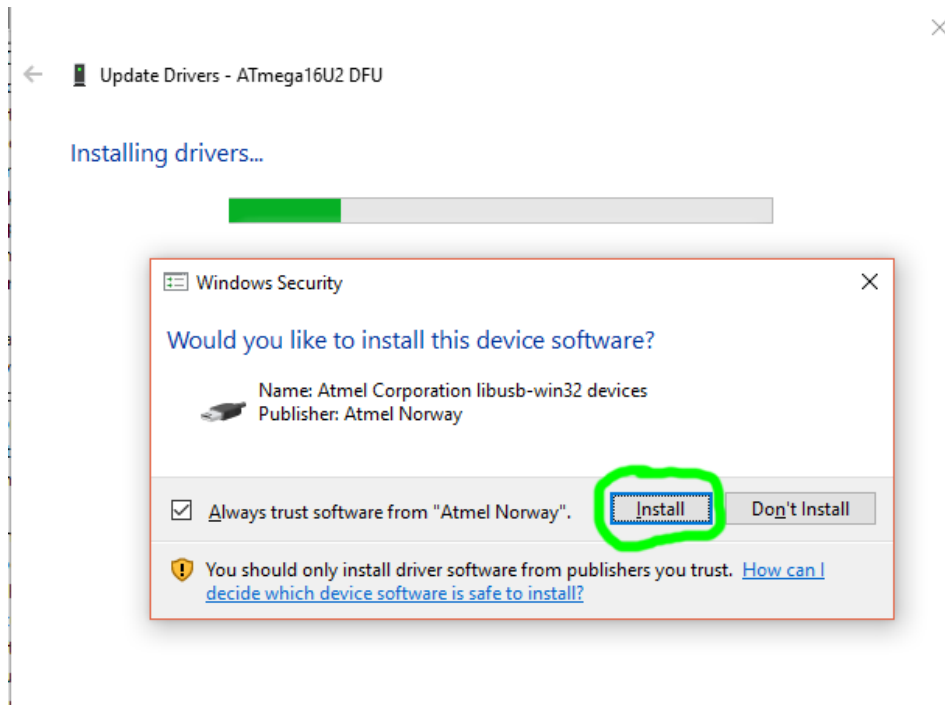

You will see that Window has successfully installed the CORRECT driver. Click close to complete installation.

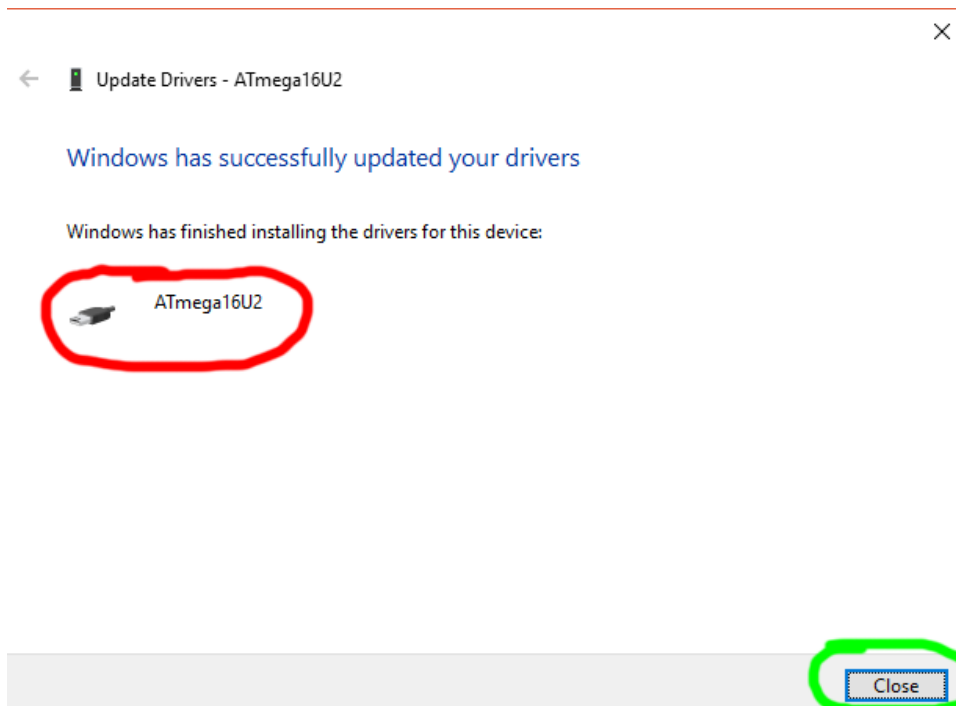

Congratulation, Windows has successfully recognised device! Now your Arduino Uno can enter DFU without any problems!

