


Network Interface Board

MELSEC

MELSEC Data Link Library Reference Manual

-Q80BD-J61BT11N
-Q81BD-J61BT11
-Q80BD-J71LP21-25
-Q80BD-J71LP21S-25
-Q81BD-J71LP21-25
-Q80BD-J71LP21G
-Q80BD-J71BR11
-Q80BD-J71GP21-SX
-Q80BD-J71GP21S-SX
-Q81BD-J71GP21-SX
-Q81BD-J71GP21S-SX
-Q80BD-J71GF11-T2
-Q81BD-J71GF11-T2

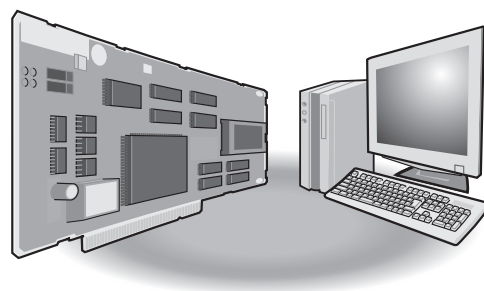

SAFETY PRECAUTIONS

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

CONDITIONS OF USE FOR THE PRODUCT

(1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;

- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
- ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

(2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

INTRODUCTION

Thank you for purchasing the Mitsubishi Electric network interface boards.

This manual describes the programming procedure and function specifications of the MELSEC data link library.

Before using this product, please read this manual and the related manuals carefully and develop familiarity with the functions and performance of the MELSEC data link library to handle the product correctly.

Please make sure that the end users read this manual.

Relevant products

Item	Model
CC-Link Ver.2 board	Q80BD-J61BT11N, Q81BD-J61BT11
MELSECNET/H board	Q80BD-J71LP21-25, Q81BD-J71LP21-25, Q80BD-J71LP21S-25, Q80BD-J71LP21G, Q80BD-J71LP21GE, Q80BD-J71BR11
CC-Link IE Controller Network board	Q80BD-J71GP21-SX, Q80BD-J71GP21S-SX, Q81BD-J71GP21-SX, Q81BD-J71GP21S-SX
CC-Link IE Field Network board	Q80BD-J71GF11-T2, Q81BD-J71GF11-T2

CONTENTS

SAFETY PRECAUTIONS	1
CONDITIONS OF USE FOR THE PRODUCT	1
INTRODUCTION	2
RELATED MANUALS	6
TERMS	7
CHAPTER 1 OVERVIEW	8
CHAPTER 2 PROGRAMMING	10
2.1 Programming Procedure	10
2.2 Precautions when Using MELSEC Data Link Library	11
Precautions when programming	11
Precautions when accessing own station link devices and other station's programmable controller devices. . .	13
2.3 Settings for Using Functions	14
Using Visual Basic 5.0, Visual Basic 6.0	14
Using Visual C++ 5.0, Visual C++ 6.0	15
Using Visual Basic .NET	17
Using Visual C++ .NET 2003, Visual C++ 2005, Visual C++ 2008	18
Using Visual C++ in Visual Studio 2010 or Visual Studio 2012	20
Using Visual C++ in Visual Studio 2013, Visual Studio 2015, or Visual Studio 2017	27
CHAPTER 3 ACCESSIBLE DEVICES AND RANGES	35
3.1 Access Target	35
3.2 Accessible Ranges	36
Access target on own network.	36
Access target when connected via network	37
3.3 Accessible Devices	38
Access to link devices and buffer memory of the own station.	38
Access to devices of MELSEC iQ-R series module	39
Access to devices of MELSEC QnA, Q, and L series module.	40
Access to devices of MELSEC A series module	41
Access to Ethernet adapter module, Head module, and CC-Link IE Field remote device station.	42
Access to other station buffer memory of CC-Link	42
Access using the SEND function or the RECV function	43
CHAPTER 4 FUNCTIONS	44
4.1 List of Functions	44
4.2 Common Specifications of Functions	46
Specifying channel number	46
Specifying station numbers	47
Specifying network numbers and station numbers for extended functions	49
Specifying device types	51
4.3 Function Details	54
mdOpen (opening communication lines)	55
mdClose (closing communication lines)	56
mdSendEx (batch writing extended devices)	57
mdSendEx (SEND function)	59
mdReceiveEx (batch reading extended devices)	61

mdReceiveEx (RECV function)	63
mdRandWEx (writing extended devices randomly)	65
mdRandREx (reading extended devices randomly)	68
mdDevSetEx (setting extended bit devices)	71
mdDevRstEx (resetting extended bit devices)	72
mdRemBufWriteEx (writing data to the buffer memory of a remote device station)	73
mdRemBufReadEx (reading data from the buffer memory of a remote device station)	74
mdTypeRead (reading model names of CPU)	75
mdControl (remote RUN/STOP/PAUSE)	79
mdWaitBdEvent (waiting for event occurrence)	80
mdBdRst (resetting board)	83
mdBdModSet (setting modes of board)	84
mdBdModRead (reading modes of board)	86
mdBdLedRead (read LED information of the board)	87
mdBdSwRead (reading switch status of the board)	93
mdBdVerRead (read version information of the board)	94
mdInit (initializing programmable controller information table)	96
mdSend (batch writing devices)	97
mdSend (SEND function)	99
mdReceive (batch read devices)	101
mdReceive (RECV function)	103
mdRandW (writing devices randomly)	105
mdRandR (reading devices randomly)	107
mdDevSet (setting bit devices)	108
mdDevRst (resetting bit devices)	109

CHAPTER 5 SAMPLE PROGRAMS **110**

5.1 Using Visual Basic .NET	111
MTEST and MTEST2	111
5.2 Using Visual Basic 5.0, Visual Basic 6.0	112
5.3 Using Visual C++	112

CHAPTER 6 DEVICE MONITOR UTILITY **113**

6.1 Operation Flow	114
6.2 Menu List	115
6.3 Screen Configuration and Basic Operations	116
Start and end	116
Screen configuration and basic operations	117
Help function	118
6.4 Selecting Monitoring Method	119
Monitoring devices in batch	119
Monitoring registered 16-point devices	119
6.5 Setting Monitoring Target	120
6.6 Setting Devices to be Monitored	121
6.7 Changing Current Values	122
Changing word device/double word device values	122
Turning bit devices ON and OFF	124
6.8 Switching Display Format	125
6.9 Using Numerical Pad	126

CHAPTER 7 ERROR CODES	127
APPENDIX	134
Appendix 1 Method for Increasing Minimum Working Set Size of Personal Computer	134
Processing overview of sample program.	134
Sample programs	135
FUNCTION INDEX	138
REVISIONS.	140
WARRANTY	141
TRADEMARKS	142

RELATED MANUALS

Manual name [manual number]	Description	Available form
MELSEC Data Link Library Reference Manual [SH-081035ENG] (this manual)	Explains the programming, accessible devices and range, function specifications, sample programming and error code for MELSEC data link library.	Print book e-Manual PDF
Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B) [SH-080527ENG]	Explains the system configuration, specifications, functions, handling, wiring, and troubleshooting for type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link system master/local interface board.	Print book PDF
MELSECNET/H Interface Board User's Manual (For SW0DNC-MNETH-B) [SH-080128]	Explains the system configuration, specifications, functions, handling, wiring, and troubleshooting for MELSECNET/H interface boards.	Print book PDF
CC-Link IE Controller Network Interface Board User's Manual (For SW1DNC-MNETG-B) [SH-080691ENG]	Explains the system configuration, specifications, functions, handling, wiring, and troubleshooting for CC-Link IE Controller Network interface board.	Print book PDF
CC-Link IE Field Network Interface Board User's Manual (For SW1DNC-CCIEF-B) [SH-080980ENG]	Explains the system configuration, specifications, functions, handling, wiring, and troubleshooting for CC-Link IE Field Network interface board.	Print book e-Manual PDF



e-Manual refers to the Mitsubishi FA electronic book manuals that can be browsed using a dedicated tool.

e-Manual has the following features:

- Required information can be cross-searched in multiple manuals.
- Other manuals can be accessed from the links in the manual.
- The hardware specifications of each part can be found from the product figures.
- Pages that users often browse can be bookmarked.

TERMS

Unless otherwise specified, this manual uses the following terms.

Term	Description
Board	A generic term for PC interface boards supported by MELSEC data link library.
CC-Link IE Controller Network board	A generic term for the Q80BD-J71GP21-SX, Q80BD-J71GP21S-SX, Q81BD-J71GP21-SX, and Q81BD-J71GP21S-SX CC-Link IE Controller Network interface board.
CC-Link IE Field Network board	A generic term for the Q80BD-J71GF11-T2 and Q81BD-J71GF11-T2 CC-Link IE Field Network interface board.
CC-Link Ver.2 board	A generic term for the Q80BD-J61BT11N and Q81BD-J61BT11 CC-Link system master/local interface board.
MELSECNET/H board	A generic term for the Q80BD-J71LP21-25, Q81BD-J71LP21-25, Q80BD-J71LP21S-25, Q80BD-J71LP21G, Q80BD-J71LP21GE, and Q80BD-J71BR11 MELSECNET/H interface board.
Utility	A generic term for utilities of PC interface board supported by MELSEC data link library.

1 OVERVIEW

This chapter explains overview of the MELSEC data link library.

MELSEC Data Link Library

MELSEC data link library is a library used to access own station link devices of the board and device memory of other station's programmable controller CPU which uses the board.


With the MELSEC data link library, programs to access devices or device memories can be created easily without concern for communication routes.

2 PROGRAMMING

This chapter explains how to use the MELSEC data link library.

2.1 Programming Procedure

The following flow chart shows the procedure to create a user program using the MELSEC data link library on the personal computer to which the software package is installed.

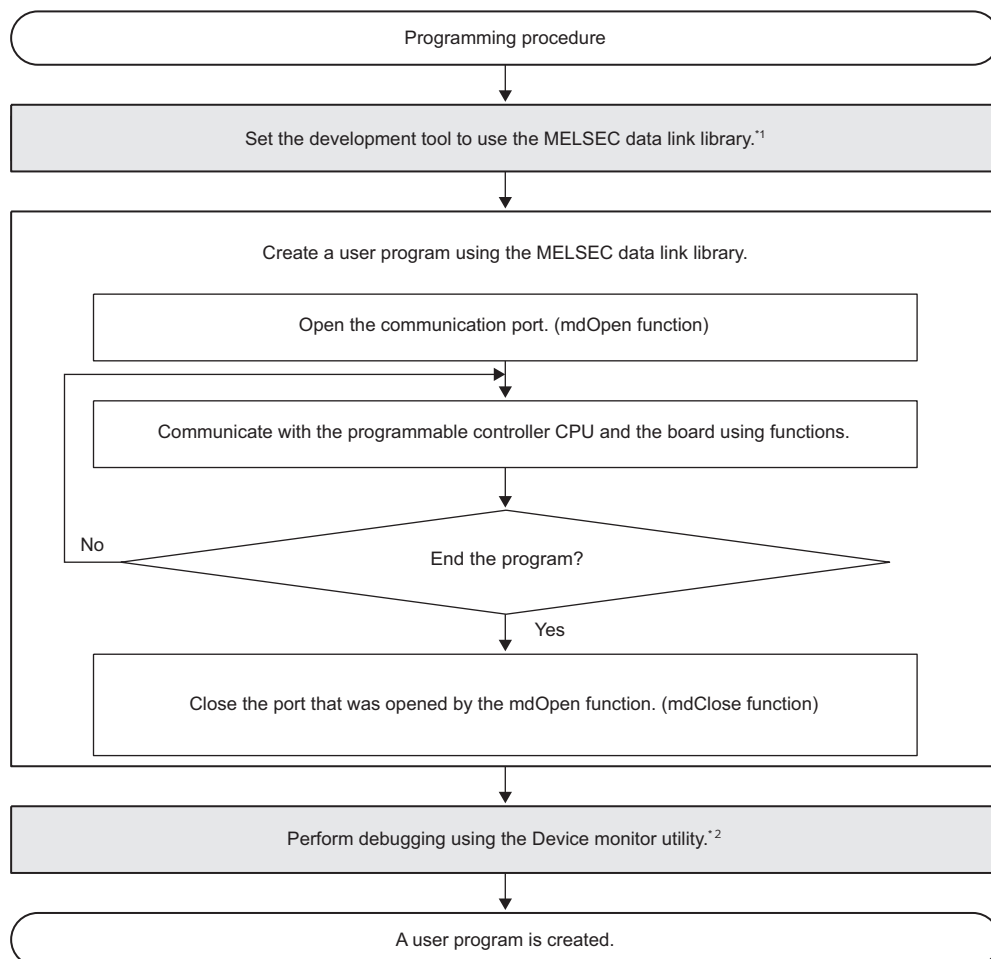

*1 Page 14 Settings for Using Functions

*2 Page 113 DEVICE MONITOR UTILITY

2.2 Precautions when Using MELSEC Data Link Library

Precautions when programming

Multi-thread communications

The MELSEC data link library cannot be accessed from multiple threads within the same process.

Access the MELSEC data link library with a single thread.

Opening and closing of a communication line

Perform the opening and closing processes of a communication line (mdOpen, mdClose) only once at the beginning and the end of a user program.

Repeating opening and closing processes for each communication causes deterioration of communication performance.

Number of stations for other station accesses

When accessing other stations with the user program, limit the total number of access stations to 256 or less.

The communication performance will be deteriorated if the total number of access stations is 257 or more.

Function execution time at the initial access

The MELSEC data link library obtains detailed information of the programmable controller at the initial access to the programmable controller CPU.

Therefore, a longer function execution time is required for the initial function.

Forcible termination of user program

When the user program in which the MELSEC data link library operation is currently running is forcibly terminated, the following symptoms may occur.

- The application that is forcibly terminated cannot be ended.
- An error of MELSEC Data Link Library occurs in other application.
- The forcible termination affects other Mitsubishi software packages (such as MX Component, GX Works2).

Execution speed

The execution speed and the execution interval of the MELSEC data link library function may be extended temporarily by Windows® processes or other applications.

Create programs considering these conditions.

Static type variables

Do not specify any variables which are declared in static for output arguments of the MELSEC data link library functions.

Service applications

The MELSEC data link library cannot be accessed from Windows Service applications.

Access the MELSEC data link library from a user application.

Board reset

When executing the mdBdRst function or mdBdModSet function using a user program, the board rest process of each function completes at the time when the value is returned.

Create a program which checks the returned value of the function.

64-bit version user program

■Accessing CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules

64-bit version user program cannot access CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules. Use a 32-bit version user program.

■Creating 64-bit version user program

To create 64-bit version user program, a project needs to be configured to set the 64-bit platform as a target platform. For configuring a project and setting a target platform, refer to Help (How to: Configure Projects to Target Platforms) in Visual Studio®.

■Creating 64-bit version user program using Visual Basic


.NET Framework 4.0 or .NET Framework compatible with .NET Framework 4.0 is required.
Use Visual Studio 2010 or later.

■Restriction when creating 64-bit version user programs

64-bit version user programs can be created on a 32-bit version operating system. However, the following dialog box appears and cannot be executed.

Ex.

<When using Windows 7 (32-bit version)>

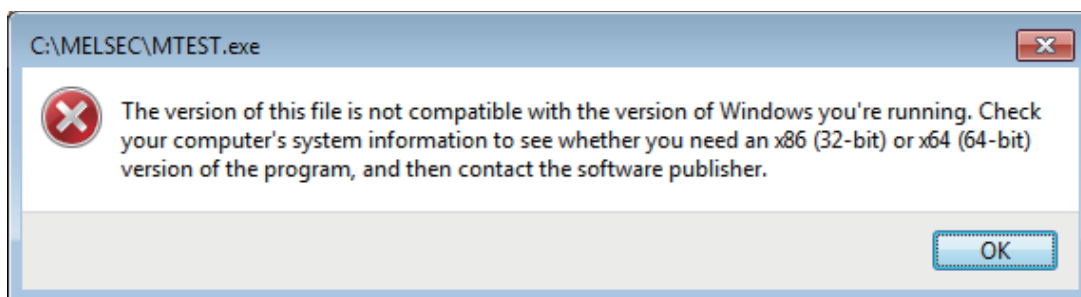

/SAFESEH (Image has Safe Exception Handlers)

Do not use /SAFESEH (Image has Safe Exception Handlers) option.
The project cannot be built normally.

Influence of operating system and other applications

When the system resource of the operating system is insufficient due to the automatic start of the update program of the operating system or other applications, or the devices are accessed from other applications, "Board Driver I/F error 102 (0066H)" may occur during executing a MELSEC data link library function.

Take the following measures as necessary.

- Retry process of a MELSEC data link library function
- Disable the automatic update of the operating system and other applications
- Stop other applications

Device access when the cyclic data assurance is enabled

Use the batch write/batch read function (mdSendEx/mdSend/mdReceiveEx/mdReceive) to access devices when enabling the cyclic data assurance (32-bit data integrity assurance and block data assurance per station).

The cyclic data assurance (32-bit data integrity assurance and block data assurance per station) is not enabled while accessing the device by the random write/random read function (mdRandWEx/mdRandW/mdRandREx/mdRandR).

Precautions when accessing own station link devices and other station's programmable controller devices

It is necessary to establish an interlock depending on a link status between the own station and other station.
Data are validated only when the following conditions are satisfied.

MELSECNET/H

■Accessing to own station link devices (LX, LY, LB, LW)

Writing/reading data to/from the own station link devices are validated only when the bits of the own station handshaking status (SB47) and own station data link status (SB49) are OFF (normal communication), and the bit of the own station module status (SB20) is OFF (normal communication).

However, even if the above conditions are not satisfied, the processing of writing/reading data to/from the MELSECNET/H board ends normally.

■Other station transient access (remote operation and device access of other station's programmable controller CPU)

While the access is validated for the devices which check the link device accesses, the other station transient access can be performed when the bits of the handshake status in accessed station (the bits in the accessed station correspond to SW70 to 73 read from the own station) and OFF (normal communication) and the bits of the cyclic transmission status (the bits in the accessed station correspond to SW74 to 77 read from the own station) are OFF (cyclic transmission is being processed).

CC-Link IE Controller Network

■Accessing to own station link devices (LX, LY, LB, LW)

Writing/reading data to/from the own station link devices are validated only when the bits of the own station handshaking status (SB47) and own station data link status (SB49) are OFF (normal communication), and the bit of the own station module status (SB20) is OFF (normal communication).

However, even if the above conditions are not satisfied, the processing of writing/reading data to/from the CC-Link IE Controller Network board ends normally.

■Other station transient access (remote operation and device access of other station's programmable controller CPU)

While the access is validated for the devices which check the link device accesses, the other station transient access can be performed when the bits of the handshake status in accessed station (the bits in the accessed station correspond to SWA0 to A7 read from the own station) and the bits of the data link status (the bits in the accessed station correspond to SWB0 to B7 read from the own station) are OFF (normal communication).

CC-Link IE Field Network

■Accessing to own station link devices (RX, RY, RW)

Writing/reading data to/from the own station link devices are validated only when the bits of the own station handshaking status (SB47) and own station data link status (SB49) are OFF (normal communication).

However, even if the above conditions are not satisfied, the processing of writing/reading data to/from the CC-Link IE Field Network board ends normally.

■Other station transient access (remote operation and device access of other station's programmable controller CPU)

While the access is validated for the devices which check the link device accesses, the other station transient access can be performed when the bits of the handshake status in accessed station (the bits in the accessed station correspond to SWA0 to A7 read from the own station) and the bits of the data link status (the bits in the accessed station correspond to SWB0 to B7 read from the own station) are OFF (normal communication).

2.3 Settings for Using Functions

This section explains how to set the development tool to use the MELSEC data link library functions.
For programming languages supported by boards, refer to the manual of each board.

Point



When creating 64-bit version user application

- To create a 64-bit version user application, a project needs to be configured to set the 64-bit platform as a target platform.
- For configuring a project and setting a target platform, refer to Help (How to: Configure Projects to Target Platforms) in Visual Studio.

When creating 64-bit version user programs using Visual Basic

- .NET Framework 4.0 or .NET Framework compatible with .NET Framework 4.0 is required.
- Use Visual Studio 2010 or later as a development environment.

Using Visual Basic 5.0, Visual Basic 6.0

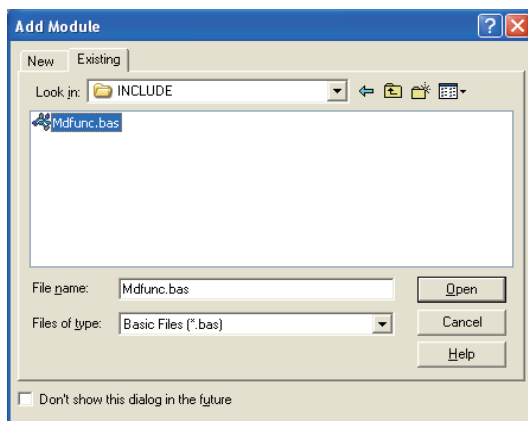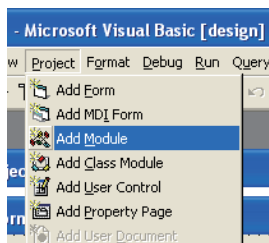

1. Start Visual Basic® and select [Project] ⇒ [Add Module].




2. Select [Existing] tab and select "Mdfunc.bas".

- "Mdfunc.bas" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.

Using Visual C++ 5.0, Visual C++ 6.0





Setting include files

1. Start Visual C++[®] and select [Tools] ⇒ [Options].

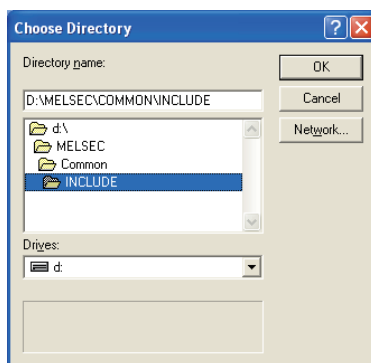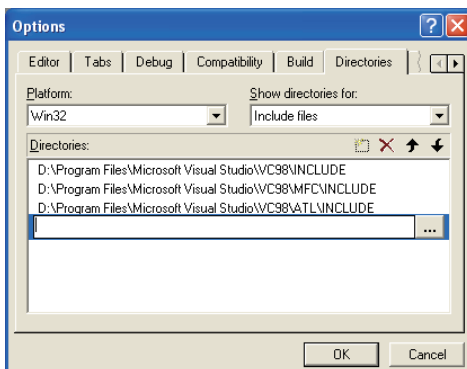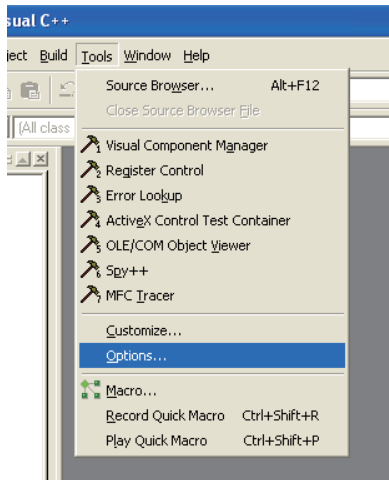

2. Select [Directories] tab and specify "Include files" for "Show directories for".
3. Double-click the item to be set and browse the folder containing include files.
 - "Mdfunc.h" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.
4. Add #include<Mdfunc.h> at the beginning of the program.

Setting library files

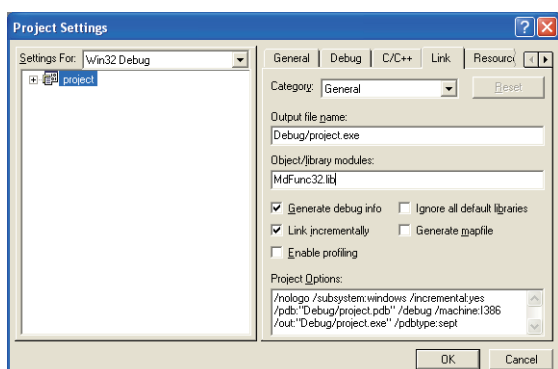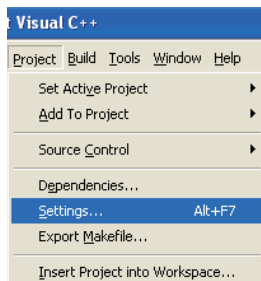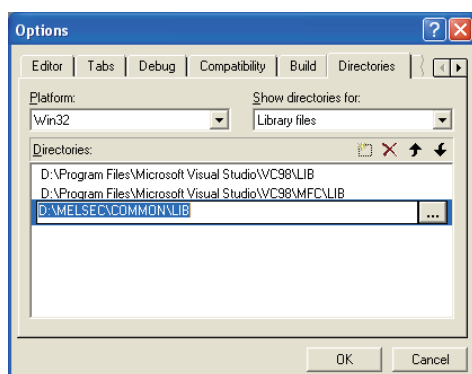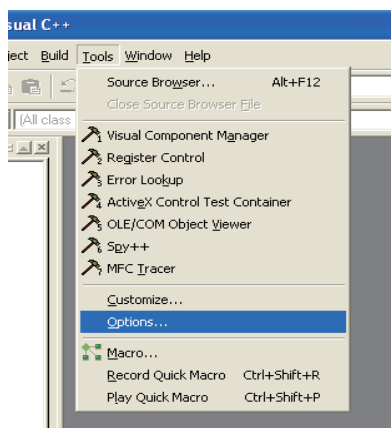

1. Start Visual C++ and select [Tools] ⇒ [Options].

2. Select [Directories] tab and specify "Library files" for "Show directories for".

3. Double-click the item to be set and browse the folder containing library files.

- "MdFunc32.lib" is stored in 'COMMON\LIB' in the folder where the software package has been installed.

4. Open the workspace to create a user application and select [Project] ⇒ [Settings].

5. Select [Link] tab and specify "General" for the category, and enter "MdFunc32.lib" in the "Object/library modules" field.



Using Visual Basic .NET

This section explains the setting operation when using Visual Basic in Visual Studio or Visual Studio .NET 2003.

Point

The screens of Visual Studio 2008 Visual Basic are used for the explanation in this section.
These screens are slightly different from other Visual Basic.

2

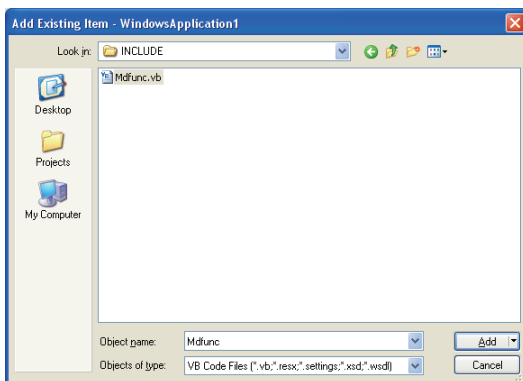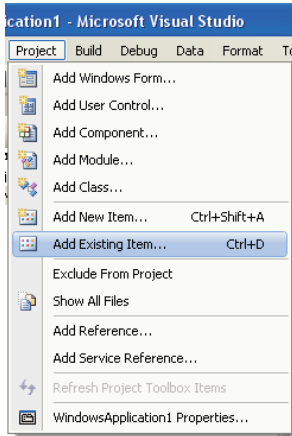

1. Start Visual Basic and select [Add Existing Item] menu.

- For Visual Basic other than that in Visual Studio .NET 2003: Select [Project] ⇒ [Add Existing Item].
- For Visual Basic in Visual Studio .NET 2003: Select [File] ⇒ [Add Existing Item].

2. On the "Add Existing Item" screen, select "Mdfunc.vb".

- "Mdfunc.vb" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.




Using Visual C++ .NET 2003, Visual C++ 2005, Visual C++ 2008



The screens of Visual C++ in Visual Studio 2008 are used for the explanation in this section.
These screens are slightly different from other Visual C++.


Setting include files

1. Start Visual C++ and select [Tools] ⇒ [Options].

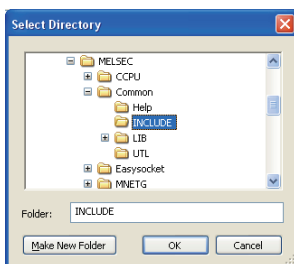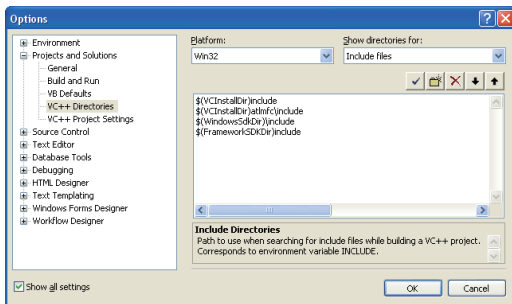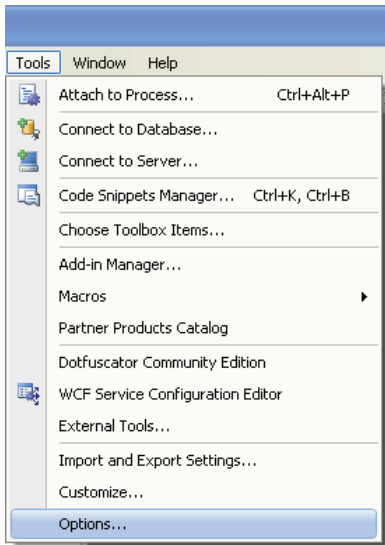

2. Select "VC++ Directories" in the folder area of the "Options" screen.

- For other than Visual C++ .NET 2003: Select "Projects and Solutions" ⇒ "VC++ Directories".
- For Visual C++ .NET 2003: Select "Projects" ⇒ "VC++ Directories".





3. Specify "Include Files" for "Show directories for" and click  button.

4. Browse the folder containing include files.

- "Mdfunc.h" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.

5. Add #include<Mdfunc.h> at the beginning of the program.

Setting library files

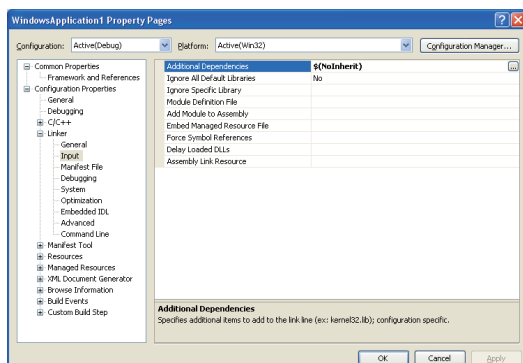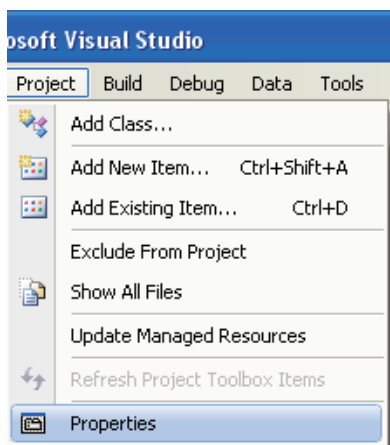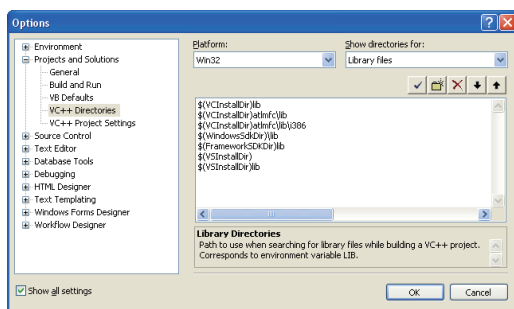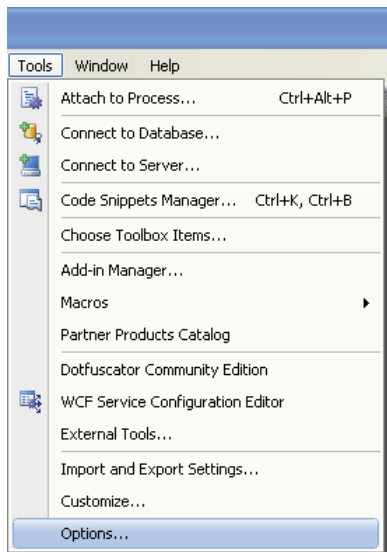


1. Start Visual C++ and select [Tools] ⇒ [Options].

2

2. Select "VC++ Directories" in the folder area of the "Options" screen.

- For other than Visual C++ .NET 2003: Select "Projects and Solutions" ⇒ "VC++ Directories".
- For Visual C++ .NET 2003: Select "Projects" ⇒ "VC++ Directories".

3. Specify "Library files" for "Show directories for", and click the  button.

4. Browse the folder containing library files.

- For creating a 32-bit version user application: "MdFunc32.lib" is stored in 'COMMON\LIB' in the folder where the software package has been installed.
- For creating a 64-bit version user application: "MdFunc32.lib" is stored in 'COMMON\LIB\x64' in the folder where the software package has been installed.

5. Open a project to create a user application and select [Project] ⇒ [project Properties].


6. Select "Configuration Properties" ⇒ "Linker" ⇒ "Input" in the folder area of the "Property Pages" screen. Enter "MdFunc32.lib" in the "Additional Dependencies" field.

Using Visual C++ in Visual Studio 2010 or Visual Studio 2012

Point


The screens of Visual C++ in Visual Studio 2010 are used for the explanation in this section.
These screens are slightly different from other Visual C++.

Setting include files

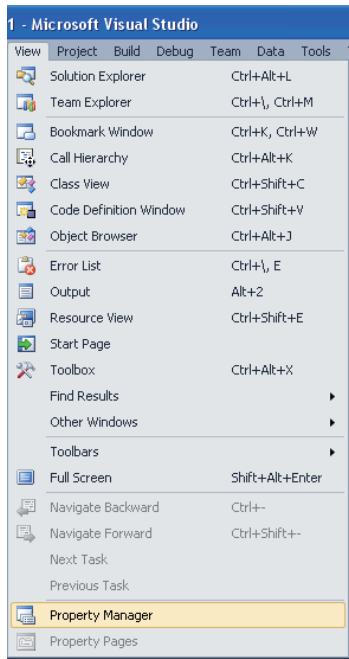


1. Open the project to create a user application and select [View] ⇒ [Property Manager]^{*1}.

^{*1} The menu configuration may differ depending on the development setting or customized setting.



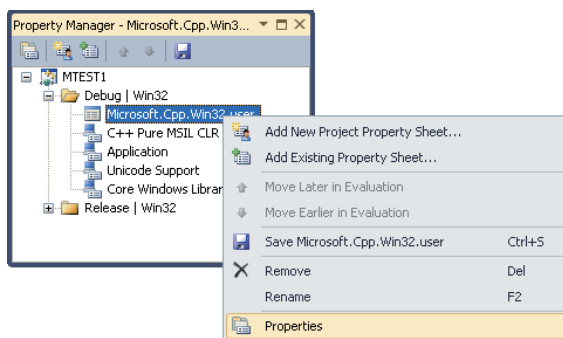



2. Right-click the user property sheet, and select [Properties] from the shortcut menu.

The "Property Pages" screen is displayed.

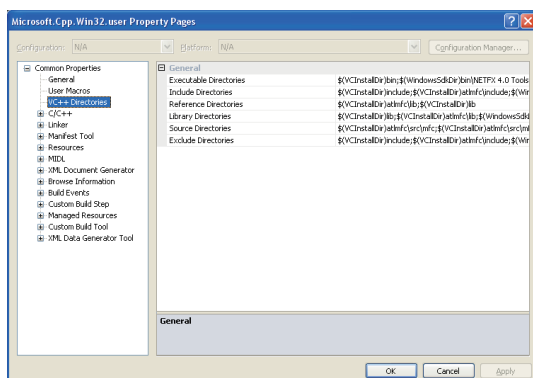

3. Select "Common Properties" ⇒ "VC++ Directories" on the "Property Pages" screen.

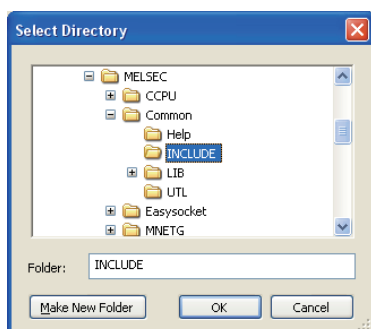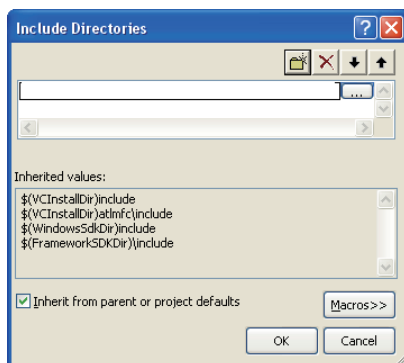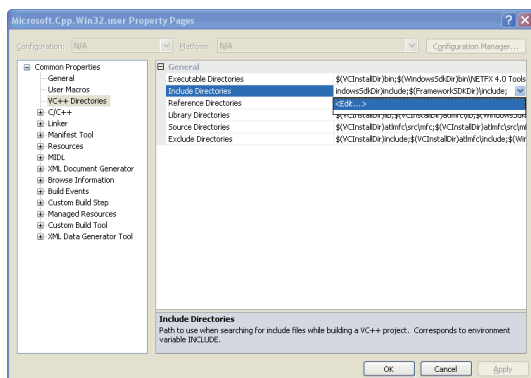

4. Select "Include Directories". Click the  button and select "<Edit...>".




5. On the "Include Directories" screen, click the  button, and then click .

6. On the "Select Directory" screen, select the folder to which the include file is stored.

- "Mdfunc.h" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.

7. Add `#include<Mdfunc.h>` at the beginning of the program.

Setting library files

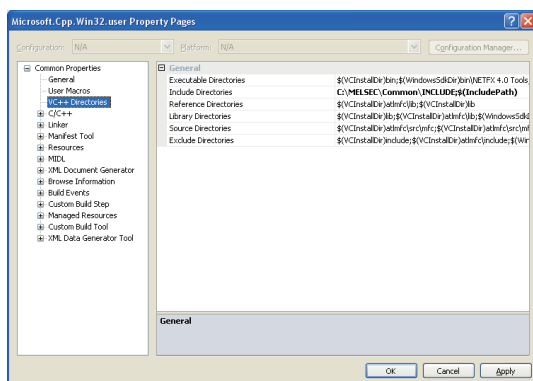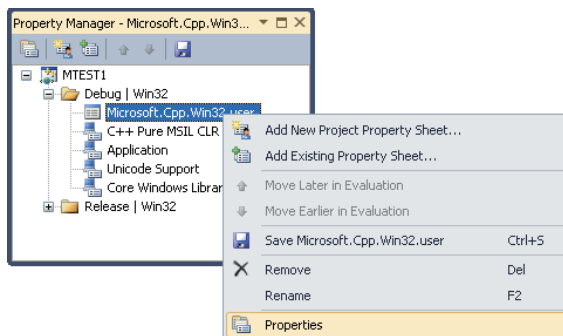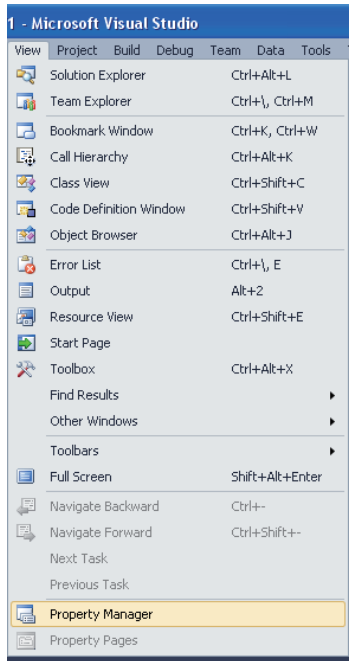





1. Open the project to create a user application and select [View] ⇒ [Property Manager]^{*1}.


*1 The menu configuration may differ depending on the development setting or customized setting.



2. Right-click the user property sheet, and select [Properties] from the shortcut menu.

The "Property Pages" screen is displayed.

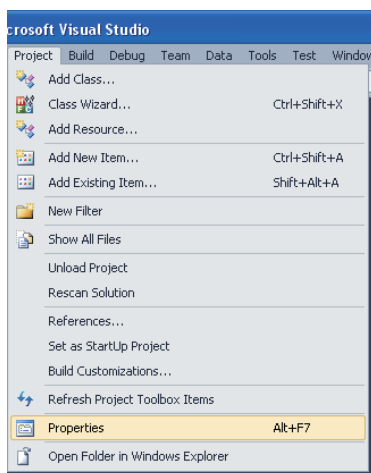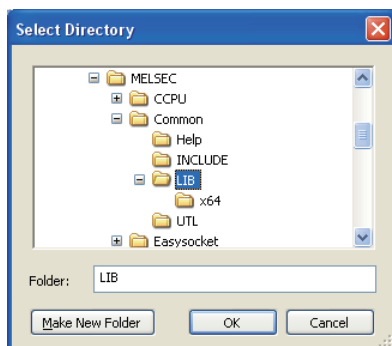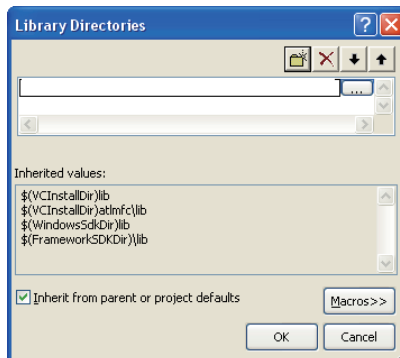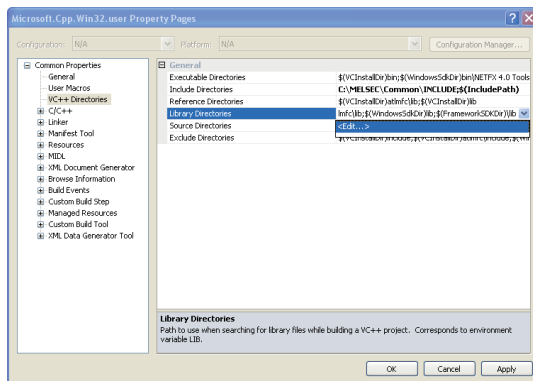3. Select "Common Properties" ⇒ "VC++ Directories" on the "Property Pages" screen.






4. Select "Library Directories" . Click the  button and select "<Edit...>".

5. On the "Library Directories" screen, click the  button, and then click .


6. On the "Select Directory" screen, select the folder to which the library file is stored.

- For creating a 32-bit version user application: "MdFunc32.lib" is stored in 'COMMON\LIB' in the folder where the software package has been installed.
- For creating a 64-bit version user application: "MdFunc32.lib" is stored in 'COMMON\LIB\x64' in the folder where the software package has been installed.

7. Open a project to create a user application and select [Project] ⇒ [project Properties].

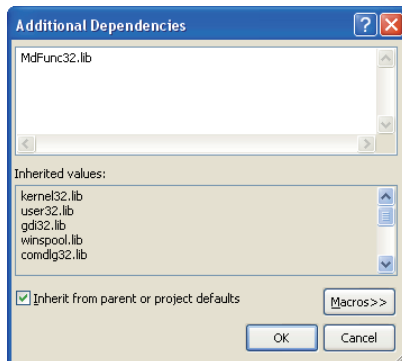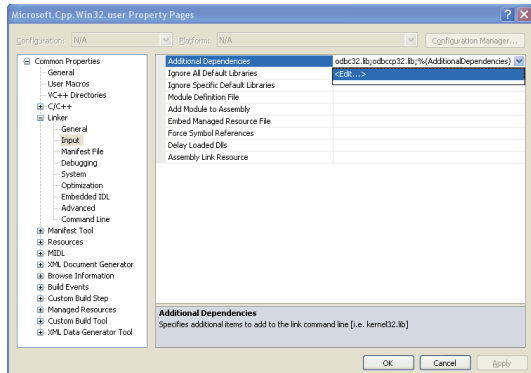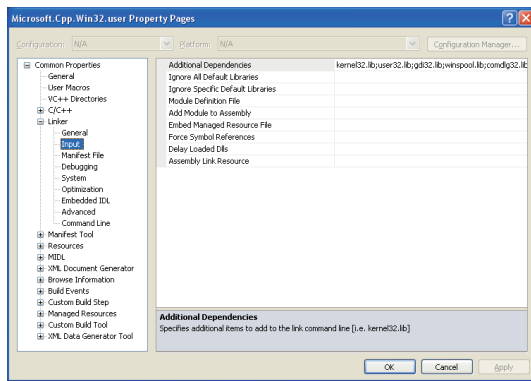


8. In the folder area of the "Property Pages" screen, select "Configuration Properties" ⇒ "Linker" ⇒ "Input".

9. Select "Additional Dependencies". Click the  button and select "<Edit...>".

10. On the "Additional Dependencies" screen, enter "MdFunc32.lib".


Procedure to delete /SAFESEH (Image has Safe Exception Handlers) option

When /SAFESEH (Image has Safe Exception Handlers) option is set to the linker option, the project cannot be built normally. For Visual Studio 2012 Visual C++, delete the /SAFESEH option following the procedure shown below because it is set as a default.

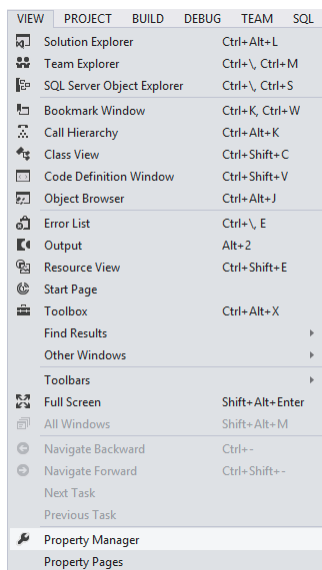


1. Open the project to create a user application and select [View] ⇒ [Property Manager]^{*1}.

^{*1} The menu configuration may differ depending on the development setting or customized setting.

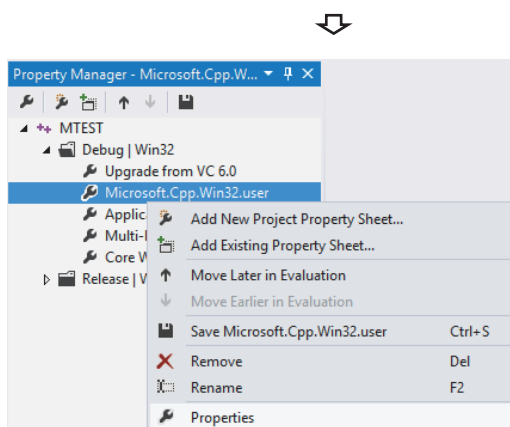


2. Right-click the user property sheet, and select [Properties] from the shortcut menu.

The "Property Pages" screen is displayed.

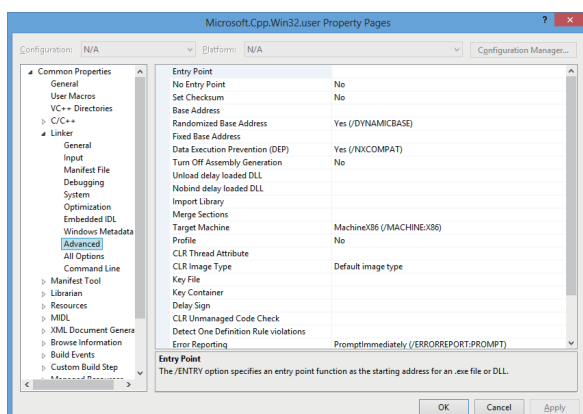

3. Select "Common Properties" ⇒ "Linker" ⇒ "Advanced" on the "Property Pages" screen.

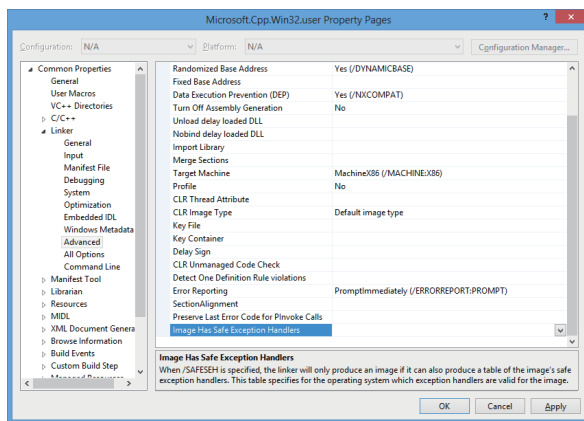

4. Select "Image Has Safe Exception Handlers". When the option has been set, delete it.


Using Visual C++ in Visual Studio 2013, Visual Studio 2015, or Visual Studio 2017

2




- The screens of Visual C++ 2013 opened by converting the sample program "MTEST(VC)" on Windows 8 Professional (x64) are used for the explanation in this section.
- If Visual Studio 2015 or Visual Studio 2017 is installed by default, some necessary functions are not installed; an error may occur in the project conversion of a sample program. Customize the installation by selecting "Microsoft Foundation Classes for C++". For the method to select a function during the installation process or to add a function after the installation, refer to the Microsoft website.





Setting include files

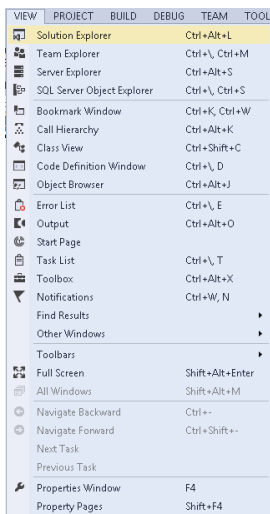

1. Open the project to create a user application and select [VIEW] ⇒ [Solution Explorer].

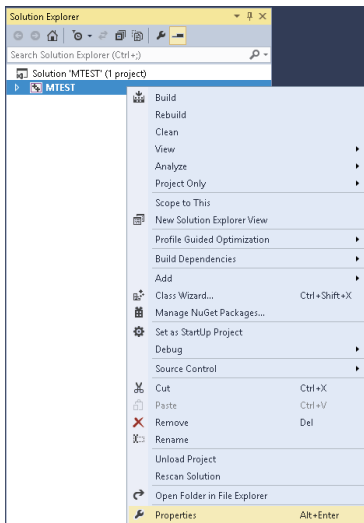

2. Right-click the project in the Solution Explorer, and select [Properties] from the shortcut menu. The "Property Pages" screen is displayed.

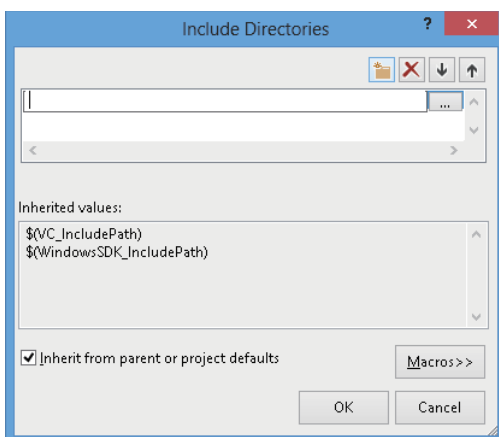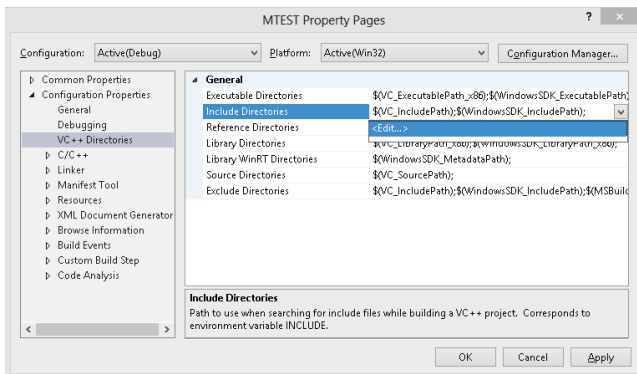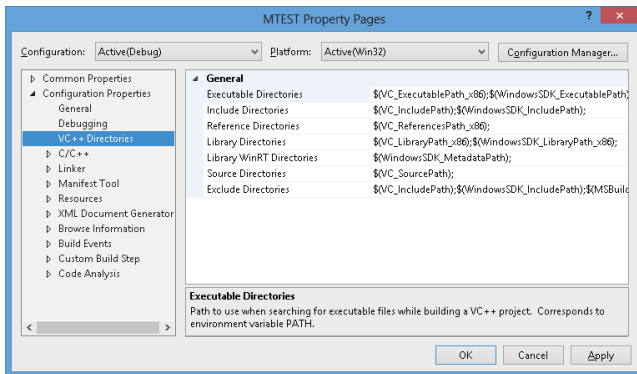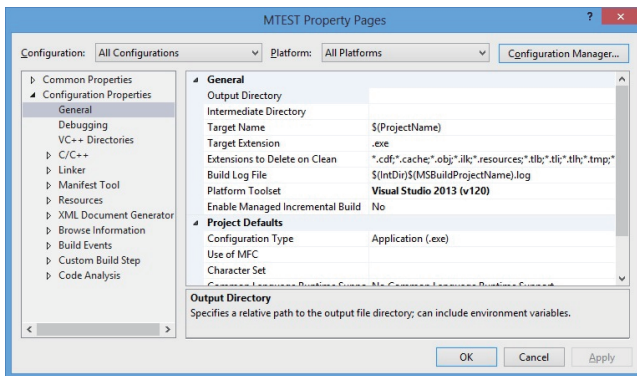


3. Select the configuration and the platform to be changed in the Configuration and the Platform.


If there are multiple configurations, select the following option to change settings at a time.

- Configuration: "All Configurations"
- Platform: "All Platforms"

4. On the "Property Pages" screen, select "Configuration Properties" ⇒ "VC++ Directories".


5. Select "Include Directories". Click the  button and select "<Edit...>".

6. On the "Include Directories" screen, click the  button, and then click .

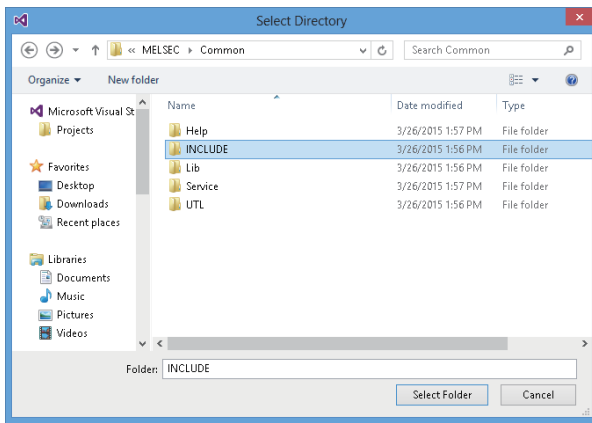


7. On the "Select Directory" screen, select the folder to which the include file is stored.
 - "Mdfunc.h" is stored in 'COMMON\INCLUDE' in the folder where the software package has been installed.
8. Add `#include<Mdfunc.h>` at the beginning of the program.


Setting library files

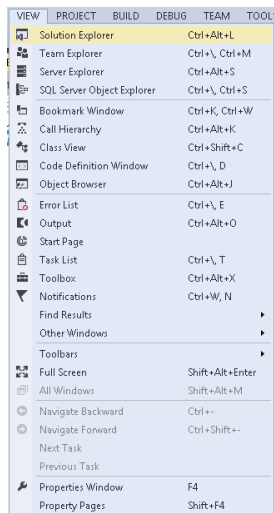

1. Open the project to create a user application and select [VIEW] ⇒ [Solution Explorer].

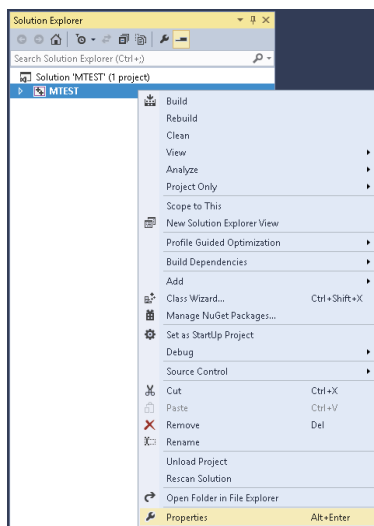


2. Right-click the project in the Solution Explorer, and select [Properties] from the shortcut menu. The "Property Pages" screen is displayed.

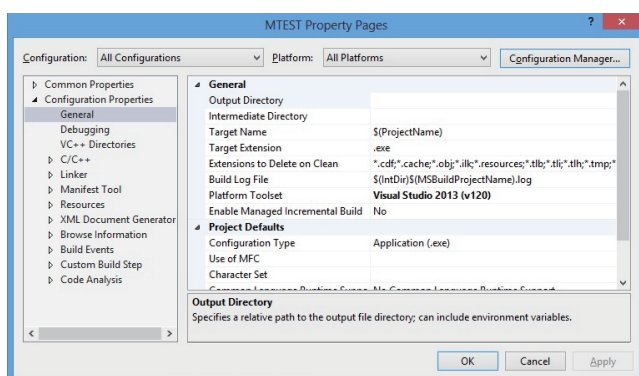


3. Select the configuration and the platform to be changed in the Configuration and the Platform.


If there are multiple configurations, select the following option to change settings at a time.


- Configuration: "All Configurations"
- Platform: "All Platforms"

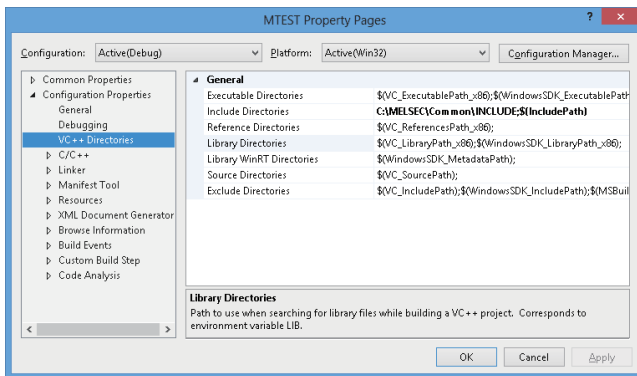

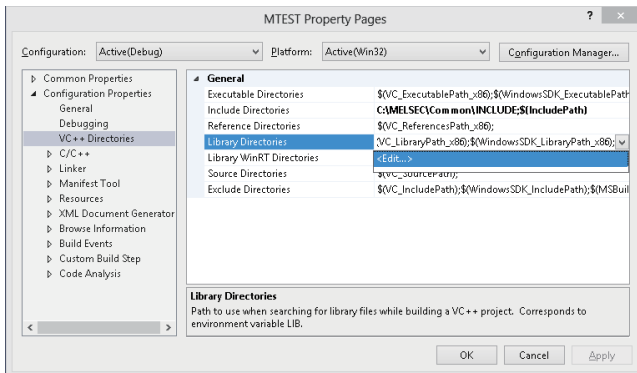


4. On the "Property Pages" screen, select "Configuration Properties" ⇒ "VC++ Directories".

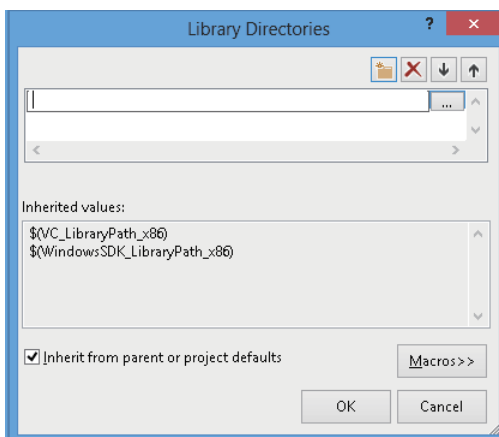


5. Select "Library Directories" . Click the  button and select "<Edit...>".




6. On the "Library Directories" screen, click the  button, and then click .

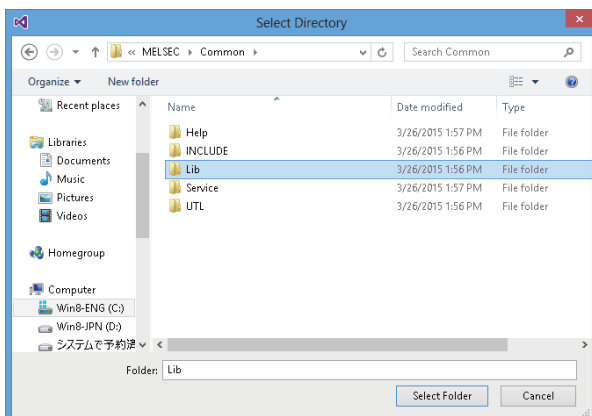


7. On the "Select Directory" screen, select the folder to which the library file is stored.
- For creating a 32-bit version user application:
"MdFunc32.lib" is stored in 'COMMON\LIB' in the folder where the software package has been installed.
 - For creating a 64-bit version user application:
"MdFunc32.lib" is stored in 'COMMON\LIB\x64' in the folder where the software package has been installed.

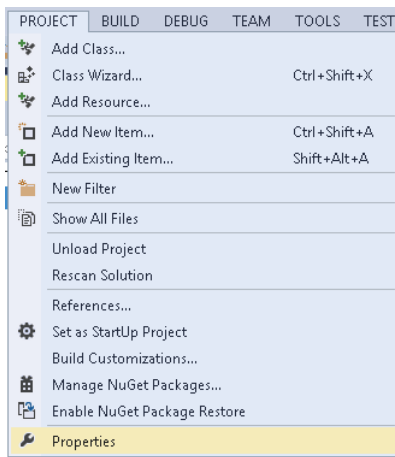


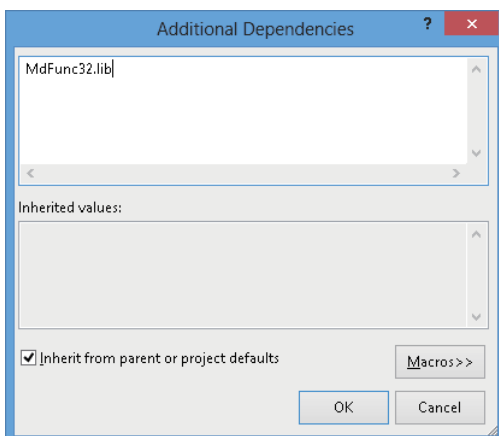
8. Open a project to create a user application and select [Project] ⇒ [project Properties].

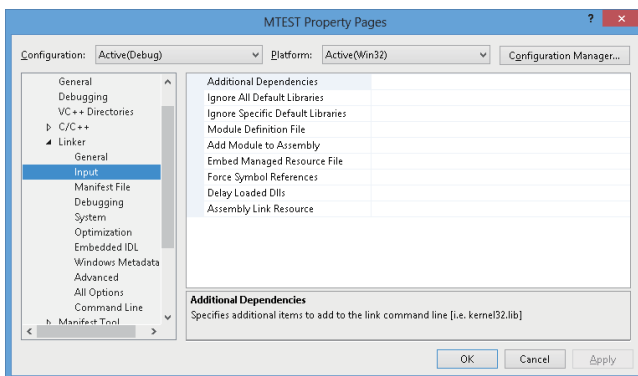

9. In the folder area of the "Property Pages" screen, select "Configuration Properties" ⇒ "Linker" ⇒ "Input".

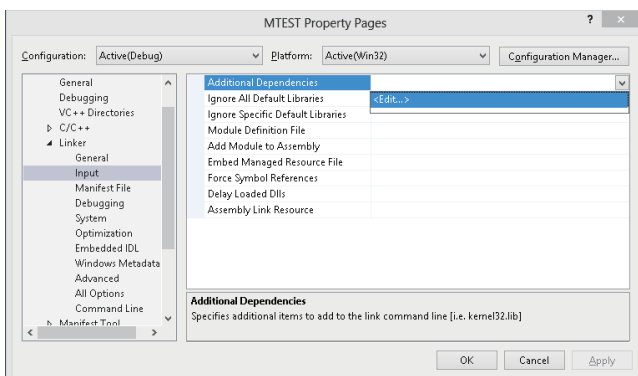

10. Select "Additional Dependencies". Click the  button and select "<Edit...>".




11. On the "Additional Dependencies" screen, enter "MdFunc32.lib".

Setting platform and deleting option that are unnecessary


Set the platform by the following operations 1) to 5).

Also, delete unnecessary options by the following operations 6) to 9).

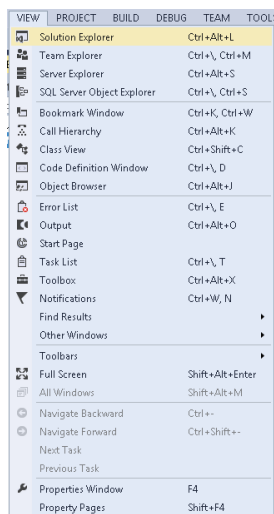


1. Open the project to create a user application and select [VIEW] ⇒ [Solution Explorer].

2

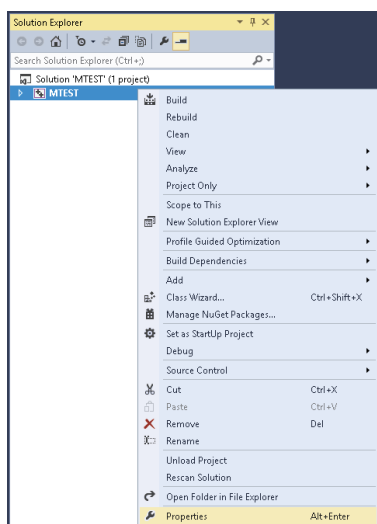





2. Right-click the project in the Solution Explorer, and select [Properties] from the shortcut menu.
The "Property Pages" screen is displayed.

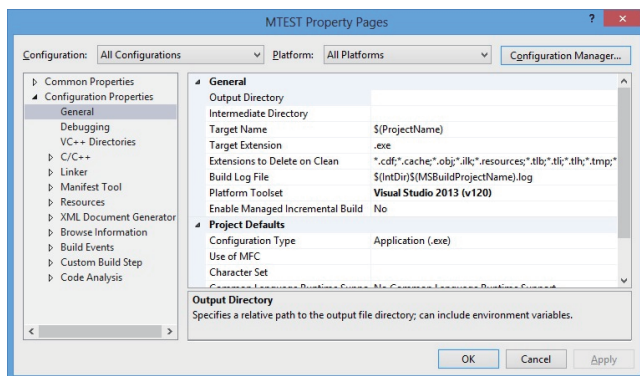


3. Select the configuration and the platform to be changed in the Configuration and the Platform.

If there are multiple configurations, select the following option to change settings at a time.

- Configuration: "All Configurations"
- Platform: "All Platforms"

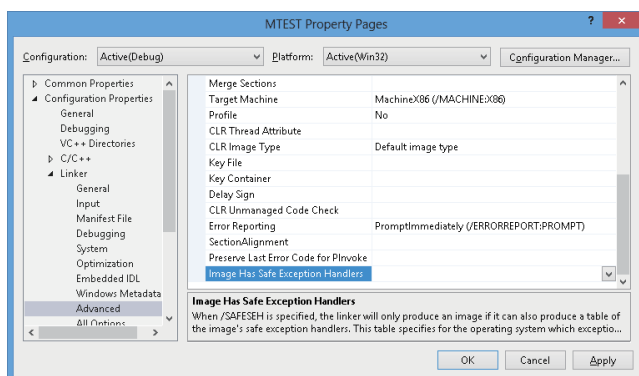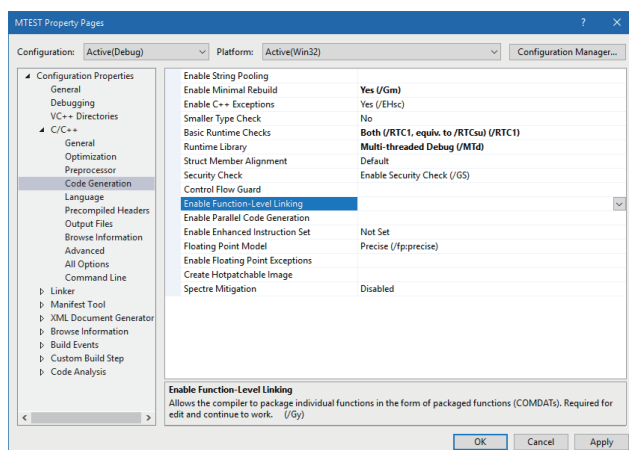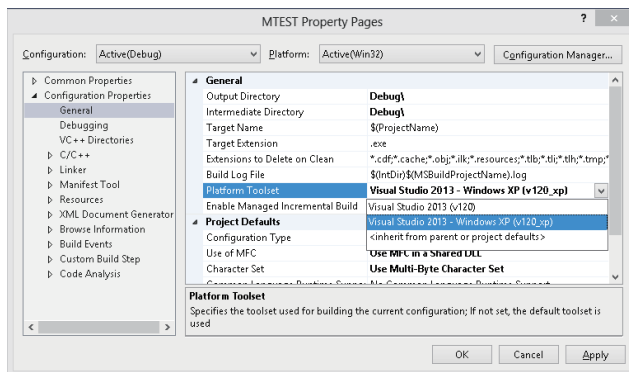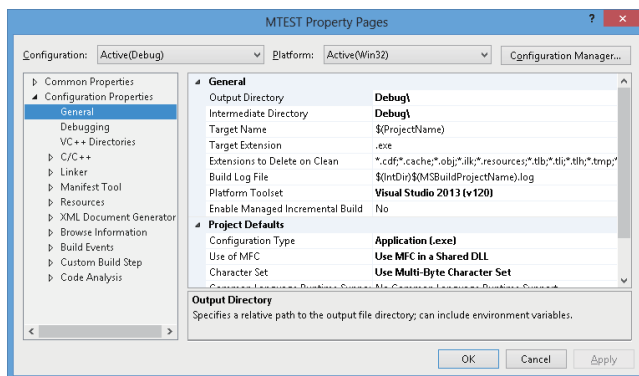

4. On the "Property Pages" screen, select "Configuration Properties" ⇒ "General".

5. Select "Platform Toolset", click the  button, and select either one of the following.

- "Visual Studio 2013 - Windows XP (v120_xp)"
- "Visual Studio 2015 - Windows XP (v140_xp)"
- "Visual Studio 2017 - Windows XP (v141_xp)"

It is required for configuring programs for Windows XP.

6. On the "Property Pages" screen, select "Configuration Properties" ⇒ "C/C++" ⇒ "Code Generation".^{*1}

^{*1} The screen shown on the left is the screen of Windows Server 2017.

7. Check that the option is not set for "Enable Function-Level Linking". When the option has been set, delete it.

If this option has been set, the command-line error 'D8016' may occur when a sample program is updated.

8. On the "Property Pages" screen, select "Configuration Properties" ⇒ "Linker" ⇒ "Advanced".

9. Check that no option is set for "Image Has Safe Exception Handlers". When an option has been set, delete it.

When using "Image Has Safe Exception Handlers" option, the project cannot be built normally.

3 ACCESSIBLE DEVICES AND RANGES

This chapter explains the devices and the ranges that can be accessed when communicating with each type of boards.

3.1 Access Target

The following table shows the accessible other stations.

Item			Model name*1
MELSEC A series	CPU module	ACPU*2	A0J2HCPU, A1SCPU, A1SJCPU, A1SHCPU, A1SJHCPU, A1NCP, A2CCPU, A2CJCPU, A2NCP, A2NCP-S1, A2SCPU, A2SHCPU, A3NCP, A2ACPU, A2ACPU-S1, A3ACPU, A2UCPU, A2UCPU-S1, A2USCPU, A2USCPU-S1, A2USHCPU-S1, A3UCPU, A4UCPU
		QCPU (A mode)	Q02CPU-A, Q02HCPU-A, Q06HCPU-A
MELSEC QnA series	CPU module	QnACPU	Q2ACPU, Q2ASCPU, Q2ASHCPU, Q2ACPU-S1, Q2ASCPU-S1, Q2ASHCPU-S1, Q3ACPU, Q4ACPU, Q4ARCPU
MELSEC Q series	CPU module	QCPU(Q mode)	■Basic model QCPU Q00JCPU, Q00CPU, Q01CPU ■High Performance model QCPU Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU ■Process CPU Q02PHCPU, Q06PHCPU, Q12PHCPU, Q25PHCPU ■Redundant CPU Q12PRHCPU, Q25PRHCPU ■Universal model QCPU Q00UCPU, Q00JVCPU, Q01UCPU, Q02UCPU, Q03UDCPU, Q03UDECPU, Q03UDVCPU, Q04UDHCPU, Q04UDEHCPU, Q04UDVCPU, Q04UDPVCPU, Q06UDHCPU, Q06UDEHCPU, Q06UDVCPU, Q06UDPVCPU, Q10UDHCPU, Q10UDEHCPU, Q13UDHCPU, Q13UDEHCPU, Q13UDVCPU, Q13UDPVCPU, Q20UDHCPU, Q20UDEHCPU, Q26UDHCPU, Q26UDEHCPU, Q26UDVCPU, Q26UDPVCPU, Q50UDEHCPU, Q100UDEHCPU
MELSEC L series	CPU module	LCPU	L02SCPU, L02SCPU-P, L02CPU, L02CPU-P, L06CPU, L06CPU-P, L26CPU, L26CPU-P, L26CPU-BT, L26CPU-PBT
	Head module		LJ72GF15-T2
MELSEC iQ-R series	CPU module*3	RCPU	R04CPU, R04ENCPU, R08CPU, R08ENCPU, R16CPU, R16ENCPU, R32CPU, R32ENCPU, R120CPU, R120ENCPU
Ethernet adapter module			NZ2GF-ETB
Intelligent device station			AJ65BT-R2 and other slave stations that can perform transient transmission on a CC-Link system
CC-Link IE Field remote device station			NZ2GF2B1-16D and other CC-Link IE Field Network remote device stations manufactured by Mitsubishi which have buffer memory
PC interface board	CC-Link Ver.2 board		Q80BD-J61BT11N, Q81BD-J61BT11
	MELSECNET/H board		Q80BD-J71LP21-25, Q81BD-J71LP21-25, Q80BD-J71LP21S-25, Q80BD-J71LP21G, Q80BD-J71LP21GE, Q80BD-J71BR11
	CC-Link IE Controller Network board		Q80BD-J71GP21-SX, Q80BD-J71GP21S-SX, Q81BD-J71GP21-SX, Q81BD-J71GP21S-SX
	CC-Link IE Field Network board		Q80BD-J71GF11-T2, Q81BD-J71GF11-T2

*1 Cannot be accessed when using a product whose model name or version is not supported by the network.

For the supported network of each product, refer to the manual of product.

*2 For CC-Link IE Field network board, only A2UCPU, A2UCPU-S1, A2USCPU, A2USCPU-S1, A2USHCPU-S1, A3UCPU, and A4UCPU can be accessed.

*3 For CC-Link IE Field network board, only R04CPU, R08CPU, R16CPU, R32CPU, and R120CPU can be accessed.




When accessing QCPU (Q mode), RCP, or CC-Link IE Field Network remote device station, a 64-bit version user application can be used. When accessing other than one of these devices, use a 32-bit version user application.

3.2 Accessible Ranges

This section explains accessible ranges when communicating with boards.

Access target on own network

The following module, board, or own station can be accessed on the network connected to each board.

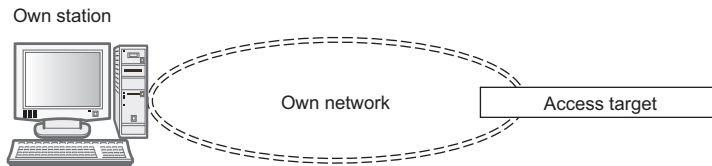

○: Accessible, ×: Not accessible

Own station	Own network	Access target ^{*1}						
		MELSEC iQ-R series CPU module	LCPU, Head module	Ethernet adapter module	QCPU (Q mode), PC interface board	ACPU, QnACPU, QCPU (A mode)	Intelligent device station	CC-Link IE Field remote device station
CC-Link Ver.2 board ^{*2}	CC-Link	○	○	×	○	○	○	×
MELSECNET/H board	MELSECNET/H	○	×	×	○	×	×	×
	MELSECNET/10	×	×	×	○	○	×	×
CC-Link IE Controller Network board	CC-Link IE Controller Network	○	×	×	○	×	×	×
CC-Link IE Field Network board	CC-Link IE Field Network	○ ^{*3}	○	○	○	×	×	○

*1 Page 35 Access Target

*2 When the own station number is 64, other station cannot be accessed. Only the own station can be accessed.

*3 For CC-Link IE Field network board, only R04CPU, R08CPU, R16CPU, R32CPU, and R120CPU can be accessed.

For the accessible devices of each access target, refer to the following table.


Access target		Reference
Access to link devices and buffer memory of the own station	PC interface board	Page 38 Access to link devices and buffer memory of the own station
Access to devices of other station module	MELSEC iQ-R series CPU module	Page 39 Access to devices of MELSEC iQ-R series module
	QnACPU, QCPU (Q mode), LCPU	Page 40 Access to devices of MELSEC QnA, Q, and L series module
	ACPU, QCPU (A mode)	Page 41 Access to devices of MELSEC A series module
	Ethernet adapter module, Head module	Page 42 Access to Ethernet adapter module, Head module, and CC-Link IE Field remote device station
Access to other station buffer memory of CC-Link	CC-Link network module, CC-Link Ver.2 board, etc.	Page 42 Access to other station buffer memory of CC-Link
Access using the SEND function or the RECV function	QnACPU, QCPU (Q mode), LCPU, MELSEC iQ-R series CPU module, PC interface board	Page 43 Access using the SEND function or the RECV function

Access target when connected via network

The following shows the accessibility when accessing via multiple networks.

The combination other than shown in the following table cannot be accessed.

Accessing the access target via multiple networks is not supported by CC-Link network.

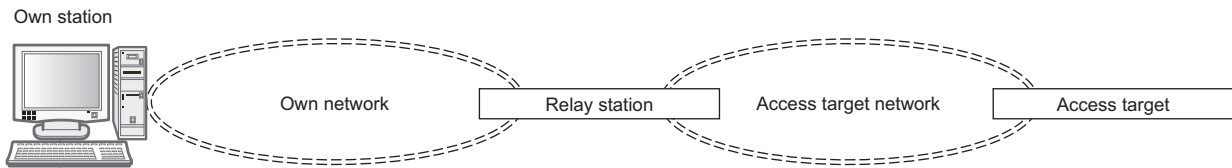

○: Accessible, ×: Not accessible

Own network	Relay station	Access target network	Access target ^{*1}				
			MELSEC iQ-R series CPU module ^{*4}	LCPU, Head module, Ethernet adapter module	QCPU (Q mode), PC interface board	ACPU ^{*3} , QnACPU, QCPU (A mode)	CC-Link IE Field remote device station
CC-Link IE Controller Network, CC-Link IE Field Network	RCPU	CC-Link IE Controller Network	○	×	○	×	×
		CC-Link IE Field Network	○	○	○	×	×
	QCPU (Q mode) ^{*2}	MELSECNET/H	×	×	○	×	×
		MELSECNET/10	×	×	○	○	×
		CC-Link IE Controller Network	○	×	○	×	×
		CC-Link IE Field Network	○	○	○	×	×
MELSECNET/H, MELSECNET/10	QCPU (Q mode) ^{*2}	MELSECNET/H	×	×	○	×	×
		MELSECNET/10	×	×	○	○	×
		CC-Link IE Controller Network	×	×	○	×	×
		CC-Link IE Field Network	×	○	○	×	×
CC-Link IE Field Network	LCPU	CC-Link IE Field Network	○	○	○	×	×
MELSECNET/10	QnACPU, ACP, QCPU (A mode)	MELSECNET/10	×	×	○	○	×

*1 Page 35 Access Target

*2 When using a CPU module whose number of mountable network module is one, the CPU module cannot be set as a relay station.

*3 For CC-Link IE Field network board, A2UCPU, A2UCPU-S1, A2USCPU, A2USCPU-S1, A2USHCPU-S1, A3UCPU, and A4UCPU can be accessed.

*4 For CC-Link IE Field network board, only R04CPU, R08CPU, R16CPU, R32CPU, and R120CPU can be accessed.

For the accessible devices of each access target, refer to the following table.

Access target		Reference
Access to devices of other station module	MELSEC iQ-R series CPU module	Page 39 Access to devices of MELSEC iQ-R series module
	QnACPU, QCPU (Q mode), LCPU	Page 40 Access to devices of MELSEC QnA, Q, and L series module
	ACPU, QCPU (A mode)	Page 41 Access to devices of MELSEC A series module
	Ethernet adapter module, Head module	Page 42 Access to Ethernet adapter module, Head module, and CC-Link IE Field remote device station
Access using the SEND function or the RECV function	QnACPU, QCPU (Q mode), LCPU, MELSEC iQ-R series CPU module, PC interface board	Page 43 Access using the SEND function or the RECV function

3.3 Accessible Devices

This section explains accessible devices for boards.

The table in this section divides the functions used for access into "Batch" and "Random" and indicates accessibility for each of these two categories.

Access type	Description
Batch	Batch write (mdSend, mdSendEx)
	Batch read (mdReceive, mdReceiveEx)
Random	Random write (mdRandW, mdRandWEx)
	Random read (mdRandR, mdRandREx)
	Bit set (mdDevSet, mdDevSetEx)
	Bit reset (mdDevRst, mdDevRstEx)

Access to link devices and buffer memory of the own station

The following table shows the accessible devices when accessing a board (own station).

○: Accessible, ×: Not accessible


Device		Access type	Access target			
			CC-Link Ver.2 board	MELSECNET/H board	CC-Link IE Controller Network board	CC-Link IE Field Network board
Link input	LX	Batch/Random	×	○	○	×
Link output	LY	Batch/Random	×	○	○	×
Link relay	LB	Batch/Random	×	○	○	×
Link register	LW	Batch/Random	×	○	○	×
Link special relay	SB	Batch/Random	○	○	○	○
Link special register	SW	Batch/Random	○	○	○	○
Remote input	RX	Batch/Random	○	×	×	○
Remote output	RY	Batch/Random	○	×	×	○
Remote register (for transmission)	RWw	Batch/Random	○	×	×	○
Remote register (for reception)	RWr	Batch/Random	○	×	×	○
Buffer memory	—	Batch/Random	○	×	○	○
Random access buffer	—	Batch/Random	○	×	×	×

Access to devices of MELSEC iQ-R series module

The following table shows the accessible devices of MELSEC iQ-R series CPU modules controlling other station module.

○: Accessible, ×: Not accessible

Device			Access type	Access target ^{*1}
				RCPU
Input		X	Batch/Random	○
Output		Y	Batch/Random	○
Internal relay		M	Batch/Random	○
Latch relay		L	Batch/Random	○
Link relay		B	Batch/Random	○
Annunciator		F	Batch/Random	○
Link special relay		SB	Batch/Random	○
Edge relay		V	Batch/Random	○
Timer	contact, coil, current value	T	Batch/Random	○
Retentive timer	contact, coil, current value	ST	Batch/Random	○
Long timer	contact, coil, current value	LT	Batch/Random	○ ^{*2}
Long retentive timer	contact, coil, current value	LST	Batch/Random	○ ^{*2}
Counter	contact, coil, current value	C	Batch/Random	○
Long counter	contact, coil, current value	LC	Batch/Random	○ ^{*2}
Data register		D	Batch/Random	○
Link register		W	Batch/Random	○
Link special register		SW	Batch/Random	○
Special relay		SM	Batch/Random	○
Special register		SD	Batch/Random	○
Link direct device	Link input Link output Link relay Link special relay Link register Link special register	Jn\X Jn\Y Jn\B Jn\SB Jn\W Jn\SW	Batch/Random	○
Module access device		Un\G	Batch/Random	○
Index register		Z	Batch/Random	○
Long index register		LZ	Batch/Random	○ ^{*2}
File register		R ^{*3} , ZR	Batch/Random	○
Refresh data register		RD	Batch/Random	○ ^{*2}

*1  Page 35 Access Target

*2 Cannot be accessed from MELSECNET/H board.


*3 When using the device type DevE0 to 256, a device can be accessed by specifying a block number.

Access to devices of MELSEC QnA, Q, and L series module

The following table shows the accessible devices of QnACPU, QCPU (Q mode), and LCPU controlling other station module.

○: Accessible, ×: Not accessible

Device			Access type	Access target ^{*1}
				QnACPU, QCPU, LCPU
Input		X	Batch/Random	○
Output		Y	Batch/Random	○
Internal relay		M	Batch/Random	○
Latch relay		L	Batch/Random	○
Annunciator		F	Batch/Random	○
Edge relay		V	Batch/Random	○
Link relay		B	Batch/Random	○
Link special relay		SB	Batch/Random	○
Timer	contact, coil, current value	T	Batch/Random	○
Retentive timer	contact, coil, current value	ST	Batch/Random	○
Counter	contact, coil, current value	C	Batch/Random	○
Data register		D	Batch/Random	○
Link register		W	Batch/Random	○
Link special register		SW	Batch/Random	○
Special relay		SM	Batch/Random	○
Special register		SD	Batch/Random	○
Link direct device	Link input Link output Link relay Link register Link special relay Link special register	Jn\X Jn\Y Jn\B Jn\W Jn\SB Jn\SW	Batch/Random	○
Intelligent function module device		Un\G	Batch/Random	○
Index register		Z	Batch/Random	○
File register		R ^{*2} , ZR	Batch/Random	○ ^{*3}

*1  Page 35 Access Target

*2 When using the device type DevER0 to 256, a device can be accessed by specifying a block number.

*3 Cannot be accessed with Q00CPU.

Access to devices of MELSEC A series module

The following table shows the accessible devices of ACPU or QCPU (A mode) controlling other station module.

○: Accessible, ×: Not accessible

Device			Access type	Access target				
				A1NCPU ^{*1}	A0J2HCPU, A1SCPU, A1SJCPU, A1SHCPU, A1SJHCPU, A2CCPU, A2CJCPU, A2NCPU, A2NCPU-S1, A2SCPU, A2SHCPU, A2ACPU, A2ACPU-S1 ^{*1}	A3NCPU, A3ACPU ^{*1}	A2UCPU, A2UCPU-S1, A2USCPU, A2USCPU-S1, A2USHCPU-S1, A3UCPU, QCPU (A mode)	A4UCPU
Input	X		Batch/Random	○	○	○	○	○
Output	Y		Batch/Random	○	○	○	○	○
Latch relay	L		Batch/Random	○	○	○	○	○
Internal relay	M		Batch/Random	○	○	○	○	○
Special relay	M9000 to		Batch/Random	○	○	○	○	○
Data register	D		Batch/Random	○	○	○	○	○
Special register	D9000 to		Batch/Random	○	○	○	○	○
Annunciator	F		Batch/Random	○	○	○	○	○
Timer	contact, coil, current value	T	Batch/Random	○	○	○	○	○
	setting value main		Batch	○	○	○	○	○
			Random	×	×	×	×	×
	setting value sub1		Batch	×	×	○	○	○
			Random	×	×	×	×	×
	setting value sub2, sub3		Batch	×	×	×	×	○
			Random	×	×	×	×	×
Counter	contact, coil, current value	C	Batch/Random	○	○	○	○	○
	setting value main		Batch	○	○	○	○	○
			Random	×	×	×	×	×
	setting value sub1		Batch	×	×	○	○	○
			Random	×	×	×	×	×
	setting value sub2, sub3		Batch	×	×	×	×	○
			Random	×	×	×	×	×
Accumulator	A		Batch/Random	○	○	○	○	○
Index register	Z, V		Batch/Random	○	○	○	○	○
File register Extended file register ^{*2}	R		Batch/Random	×	○	○	○	○
Link relay	B		Batch/Random	○	○	○	○	○
Link register	W		Batch/Random	○	○	○	○	○

*1 Cannot be accessed from CC-Link IE Field Network board.

*2 When using the device type DevER0 to 64, a device can be accessed by specifying a block number.

Access to Ethernet adapter module, Head module, and CC-Link IE Field remote device station

The following table shows the accessible Ethernet adapter module, Head module, and CC-Link IE Field remote device station via CC-Link and CC-Link IE Field Network.

○: Accessible, ×: Not accessible

Device		Access target	Access target		
			Ethernet adapter module	Head module	CC-Link IE Field remote device station
Input	X	Batch/Random	○	○	×
Output	Y	Batch/Random	○	○	×
Special relay	SM	Batch/Random	○	○	×
Special register	SD	Batch/Random	○	○	×
Link register	W	Batch/Random	○	○	×
Link special relay	SB	Batch/Random	○	○	×
Link special register	SW	Batch/Random	○	○	×
Intelligent function module device	Un\G	Batch/Random	×	○	×
Buffer memory					○ ^{*1}
Intelligent function module access device					×

*1 When accessing via CC-Link IE Field Network, the buffer memory can be accessed only by the mdRemBufWriteEx function or the mdRemBufReadEx function.

Access to other station buffer memory of CC-Link

The following table shows the accessible buffer memory of CC-Link network module and CC-Link Ver.2 board.

The multiple CPU system (when the logical station is specified) cannot be accessed.

○: Accessible, ×: Not accessible

Device		Access type	Accessibility
Link special relay	SB	Batch	○
Link special register	SW	Batch	○
Remote input	RX	Batch	○
Remote output	RY	Batch	○
Remote register	RW	Batch	○
Buffer memory	—	Batch	○
Random access buffer	—	Batch	○



When the own station number is 64, other station cannot be accessed. Only the own station can be accessed.

Access using the SEND function or the RECV function

The same operation as device access, the SEND function and the RECV function execute Batch write (mdSend, mdSendEx) or Batch read (mdReceive, mdReceiveEx) with specified device type for each function.

○: Accessible, —: Not accessible

Device	Access type	Access target	
		QnACPU, QCPU (Q mode), LCPU, MELSEC iQ-R series CPU module	PC interface board
RECV function	Batch	—	○(Own station)
SEND function (with arrival acknowledgment)	Batch	○	○
SEND function (without arrival acknowledgment)			

Point

- The SEND function and the RECV function are not supported by CC-Link.
- The SEND function and the RECV function are supported by SW1DNC-MNETG-B Version 1.08J or later.
- The SEND function and the RECV function are not supported by MELSEC A series CPU module, Ethernet adapter module, and Head module.

4 FUNCTIONS

This chapter explains the MELSEC data link library functions.

4.1 List of Functions

The following table shows the list of the functions in the MELSEC data link library that is provided with the software package.

Function name	Description	Remarks	Reference
mdOpen	Opens a communication line.	—	Page 55 mdOpen (opening communication lines)
mdClose	Closes a communication line.	—	Page 56 mdClose (closing communication lines)
mdSendEx	Batch writes devices.	Extended function ^{*3}	Page 57 mdSendEx (batch writing extended devices)
	Sends data. (SEND function) ^{*1,*2}	Extended function ^{*3}	Page 59 mdSendEx (SEND function)
mdReceiveEx	Batch reads devices.	Extended function ^{*3}	Page 61 mdReceiveEx (batch reading extended devices)
	Receives data. (RECV function) ^{*1,*2}	Extended function ^{*3}	Page 63 mdReceiveEx (RECV function)
mdRandWEx	Writes devices randomly.	Extended function ^{*3}	Page 65 mdRandWEx (writing extended devices randomly)
mdRandREx	Reads devices randomly.	Extended function ^{*3}	Page 68 mdRandREx (reading extended devices randomly)
mdDevSetEx	Sets a bit device.	Extended function ^{*3}	Page 71 mdDevSetEx (setting extended bit devices)
mdDevRstEx	Resets a bit device.	Extended function ^{*3}	Page 72 mdDevRstEx (resetting extended bit devices)
mdRemBufWriteEx	Write data to the buffer memory of a remote device station. ^{*4}	Extended function ^{*3}	Page 73 mdRemBufWriteEx (writing data to the buffer memory of a remote device station)
mdRemBufReadEx	Read data from the buffer memory of a remote device station. ^{*4}	Extended function ^{*3}	Page 74 mdRemBufReadEx (reading data from the buffer memory of a remote device station)
mdTypeRead	Reads the type of programmable controller CPU.	—	Page 75 mdTypeRead (reading model names of CPU)
mdControl	Remote operation of programmable controller CPU. (RUN/STOP/PAUSE).	—	Page 79 mdControl (remote RUN/STOP/PAUSE)
mdWaitBdEvent	Waits for an event occurrence. ^{*1}	—	Page 80 mdWaitBdEvent (waiting for event occurrence)
mdBdRst	Resets the board.	—	Page 83 mdBdRst (resetting board)
mdBdModSet	Sets the mode of the board.	—	Page 84 mdBdModSet (setting modes of board)
mdBdModRead	Reads the mode of the board.	—	Page 86 mdBdModRead (reading modes of board)
mdBdLedRead	Reads the LED information of the board.	—	Page 87 mdBdLedRead (read LED information of the board)
mdBdSwRead	Reads the switch status of the board.	—	Page 93 mdBdSwRead (reading switch status of the board)
mdBdVerRead	Reads the version information of the board.	—	Page 94 mdBdVerRead (read version information of the board)
mdInit	Initializes programmable controller information table.	—	Page 96 mdInit (initializing programmable controller information table)

*1 Applicable to CC-Link IE Controller Network boards and CC-Link IE Field Network boards.

*2 CC-Link IE Field Network boards are supported by the 1.08J or later version of SW1DNC-MNETG-B.

*3 A function in which the access range is extended according to the extension of the device points at the access target. It is accessible to all device numbers.

Use extended functions when creating a new program.

*4 The functions can be used for CC-Link IE Field Network board with a serial number whose first five digits are '15102' or higher, and SW1DNC-CCIEF-B Ver. 1.06G or later.

For a 64-bit version user application, use an SW1DNC-CCIEF-B with a version 1.12N or later.

List of conventional compatible functions

Conventional compatible functions are functions used for programs created conventionally.

Function name	Description	Remarks	Reference
mdSend	Batch writes devices.	—	Page 97 mdSend (batch writing devices)
	Sends data. (SEND function)*1,*2	—	Page 99 mdSend (SEND function)
mdReceive	Batch reads devices.	—	Page 101 mdReceive (batch read devices)
	Receives data. (RECV function)*1,*2	—	Page 103 mdReceive (RECV function)
mdRandW	Writes devices randomly.	—	Page 105 mdRandW (writing devices randomly)
mdRandR	Reads devices randomly.	—	Page 107 mdRandR (reading devices randomly)
mdDevSet	Sets a bit device.	—	Page 108 mdDevSet (setting bit devices)
mdDevRst	Resets a bit device.	—	Page 109 mdDevRst (resetting bit devices)

*1 Applicable to MELSECNET/H boards, CC-Link IE Controller Network boards, and CC-Link IE Field Network boards.

*2 Supported by the 1.08J or later version of CC-Link IE Controller Network board.



When using the conventional compatible functions, the accessible device numbers are from 0 to 32767.

4.2 Common Specifications of Functions

This section explains the definitions of arguments commonly used with the MELSEC data link library functions.

Specifying channel number


The following table shows the channels used with the MELSEC data link library.

Channel number	Channel name	Description
51	MELSECNET/H (1 slot)	MELSECNET/H board Channel number is set with MELSECNET/H utility.
52	MELSECNET/H (2 slot)	
53	MELSECNET/H (3 slot)	
54	MELSECNET/H (4 slot)	
81	CC-Link (1 slot)	CC-Link Ver.2 board Channel number is set with the channel number setting switch. The channels are set as follows according to the SW1 and SW2 settings: <ul style="list-style-type: none">• 81: OFF, OFF• 82: ON, OFF• 83: OFF, ON• 84: ON, ON
82	CC-Link (2 slot)	
83	CC-Link (3 slot)	
84	CC-Link (4 slot)	
151	CC-Link IE Controller Network (Channel No.151)	CC-Link IE Controller Network board Channel number is set with CC IE Control utility.
152	CC-Link IE Controller Network (Channel No.152)	
153	CC-Link IE Controller Network (Channel No.153)	
154	CC-Link IE Controller Network (Channel No.154)	
181	CC-Link IE Field Network (Channel No.181)	CC-Link IE Field Network board Channel number is set with CC IE Field utility.
182	CC-Link IE Field Network (Channel No.182)	
183	CC-Link IE Field Network (Channel No.183)	
184	CC-Link IE Field Network (Channel No.184)	

Specifying station numbers

The following tables show the station numbers specified in the MELSEC data link library.

For specifying network numbers and station numbers for extended functions, refer to the following section.

( Page 49 Specifying network numbers and station numbers for extended functions)

CC-Link Ver.2 board

Specification	Station number
Own station	255 (FFH)
Other station	0 (00H) to 63 (3FH) ^{*1}
The logical station number set with the utility	65 (41H) to 239 (EFH)

^{*1} Station number 64 cannot be specified on the CC-Link Ver.2 board.

When the own station number is 64, other station cannot be accessed. Only the own station can be accessed.

MELSECNET/H board


Specification		Station number	
		Upper byte	Lower byte
Own station		255 (FFH)	
Other station	Station number	Network number ^{*3} 1 (01H) to 239 (EFH)	0 (00H) ^{*4}
			1 (01H) to 120 (78H) ^{*5}
	Group number 1 to 32 ^{*1,*2}		125 (7DH) ^{*4}
	All stations ^{*1}		129 (81H) to 160 (A0H)
The logical station number set with the utility		65 (41H) to 239 (EFH)	
			240 (F0H)

^{*1} All stations and group numbers can be specified when using the SEND function (mdSend) without arrival acknowledgment.

^{*2} For MELSECNET/10 mode, only group numbers from 1 to 9 (129 (81H) to 137 (89H)) can be specified.

^{*3} For specifying another station, set a network number in the upper byte of the station number.

<Setting a station number when another station is specified>



^{*4} Access to the control station or master station (station number 0) specified with the network number on the network.

When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

^{*5} Station numbers from 65 (41H) to 120 (78H) can be specified when using CC-Link IE Controller Network.


CC-Link IE Controller Network board

Specification		Station number	
		Upper byte	Lower byte
Own station		255 (FFH)	
Other station	Station number	Network number ^{*2} 1 (01H) to 239 (EFH)	0 (00H) ^{*3}
			1 (01H) to 120 (78H)
			125 (7DH) ^{*3}
			129 (81H) to 160 (A0H)
	Group Number 1 to 32 ^{*1}		129 (81H) to 160 (A0H)
	All stations ^{*1}		240 (F0H)
The logical station number set with the utility		0 (00H) to 239 (EFH)	

*1 All stations and group numbers can be specified when using the SEND function (mdSend) without arrival acknowledgment.

*2 For specifying another station, set a network number in the upper byte of the station number.

<Setting a station number when another station is specified>



*3 Access to the control station or master station (station number 0) specified with the network number on the network.

When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

CC-Link IE Field Network board


Specification		Station number	
		Upper byte	Lower byte
Own station		255 (FFH)	
Other station	Station number	Network number ^{*3} 1 (01H) to 239 (EFH)	0 (00H) ^{*4} to 120 (78H)
			125 (7DH) ^{*4}
			129 (81H) to 160 (A0H)
			240 (F0H)
	Group Number 1 to 32 ^{*1,*2}		129 (81H) to 160 (A0H)
	All stations ^{*1}		240 (F0H)
The logical station number set with the utility		0 (00H) to 239 (EFH)	

*1 All stations and group numbers can be specified when using the SEND function (mdSend) without arrival acknowledgment.

*2 Group numbers can be specified when using MELSECNET/H network or CC-Link IE Controller Network.

*3 For specifying another station, set a network number in the upper byte of the station number.

<Setting a station number when another station is specified>



*4 Access to the control station or master station (station number 0) specified with the network number on the network.

When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

Specifying network numbers and station numbers for extended functions

The following tables show the network numbers and the station numbers used for extended functions in the MELSEC data link library.

For specifying network numbers and station numbers for functions other than the extended functions, refer to the following section.

( Page 47 Specifying station numbers)

CC-Link Ver.2 board

Specification	Network number	Station number
Own station	0 (00H)	255 (FFH)
Other station		0 (00H) to 63 (3FH)* ¹
The logical station number set with the utility		65 (41H) to 239 (EFH)

*¹ Station number 64 cannot be specified on the CC-Link Ver.2 board.

When the own station number is 64, other station cannot be accessed. Only the own station can be accessed.

MELSECNET/H board

Specification	Network number	Station number
Own station	0 (00H)	255 (FFH)
Other station	1 (01H) to 239 (EFH)	0 (00H)* ¹
		1 (01H) to 120 (78H)* ²
		125 (7DH)* ¹
The logical station number set with the utility	0 (00H)	65 (41H) to 239 (EFH)

*¹ Access to the control station or master station (station number 0) specified with the network number on the network.

When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

*² Station numbers from 65 (41H) to 120 (78H) can be specified when using CC-Link IE Controller Network.

CC-Link IE Controller Network board

Specification		Network number	Station number
Own station		0 (00H)	255 (FFH)
Other station	Station number	1 (01H) to 239 (EFH)	0 (00H)* ²
			1 (01H) to 120 (78H)
			125 (7DH)* ²
	Group Number 1 to 32* ¹		129 (81H) to 160 (A0H)
	All stations* ¹		240 (F0H)
The logical station number set with the utility		0 (00H)	0 (00H) to 239 (EFH)

*1 All stations and group numbers can be specified when using the SEND function (mdSendEx) without arrival acknowledgment.

*2 Access to the control station or master station (station number 0) specified with the network number on the network.
When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

CC-Link IE Field Network board

Specification		Network number	Station number
Own station		0 (00H)	255 (FFH)
Other station	Station number	1 (01H) to 239 (EFH)	0 (00H) ^{*3} to 120 (78H)
			125 (7DH) ^{*3}
	Group Number 1 to 32 ^{*1,*2}		129 (81H) to 160 (A0H)
	All stations ^{*1}		240 (F0H)
The logical station number set with the utility		0 (00H)	0 (00H) to 239 (EFH)

*1 All stations and group numbers can be specified when using the SEND function (mdSendEx) without arrival acknowledgment.

*2 Group numbers can be specified when using MELSECNET/H network or CC-Link IE Controller Network.

*3 Access to the control station or master station (station number 0) specified with the network number on the network.
When accessing the control station (operating as a control station) and the master station (operating as a master station when using the submaster function), specify the station number.

Specifying device types

The following tables show the device types to be used for the MELSEC data link library and Device Monitor Utility.

Specify a device type by code specification or device name specification for the functions of the MELSEC data link library.

Set a device type listed in the 'Device type when monitoring devices' column in the following tables for Device Monitor Utility.

Link devices and buffer memory of own station

Device			Device type to be specified to a function			Device type when monitoring devices
Device name	Symbol	Type	Code specification		Device name specification	
			Decimal	Hexadecimal		
Link input	LX	Bit	1	0001H	DevX	X
Remote input	RX	Bit				
Link output	LY	Bit	2	0002H	DevY	Y
Remote output	RY	Bit				
Special relay	SM	Bit	5	0005H	DevSM	SM
Link special relay	SB	Bit				
Special register	SD	Word	14	000EH	DevSD	SD
Link special register	SW	Word				
Link relay	LB	Bit	23	0017H	DevB	B
Link register	LW	Word	24	0018H	DevW	W
Remote register	RW	Word				
Remote register (for transmission)	RWw	Word	36	0024H	DevWw	Ww
Remote register (for reception)	RWr	Word	37	0025H	DevWr	Wr
Buffer memory	—	Word	50	0032H	DevSPB	SPB
Random access buffer	—	Word	33	0021H	DevMRB	MRB

Devices of other station module

Device			Device type to be specified to a function			Device type when monitoring devices	
Device name		Symbol	Type	Code specification			Device name specification
				Decimal	Hexadecimal		
Input		X	Bit	1	0001H	DevX	X
Output		Y	Bit	2	0002H	DevY	Y
Latch relay		L	Bit	3	0003H	DevL	L
Internal relay		M	Bit	4	0004H	DevM	M
Special relay		SM	Bit	5	0005H	DevSM	SM
Annunciator		F	Bit	6	0006H	DevF	F
Timer	contact	T	Bit	7	0007H	DevTT	TT
	coil		Bit	8	0008H	DevTC	TC
Counter	contact	C	Bit	9	0009H	DevCT	CT
	coil		Bit	10	000AH	DevCC	CC
Timer	current value	T	Word	11	000BH	DevTN	TN
Counter	current value	C	Word	12	000CH	DevCN	CN
Data register		D	Word	13	000DH	DevD	D
Special register		SD	Word	14	000EH	DevSD	SD
Timer	setting value main	T	Word	15	000FH	DevTM	TM
	setting value sub1		Word	16	0010H	DevTS	TS
	setting value sub2		Word	16002	3E82H	DevTS2	TS2
	setting value sub3		Word	16003	3E83H	DevTS3	TS3
Counter	setting value main	C	Word	17	0011H	DevCM	CM
	setting value sub1		Word	18	0012H	DevCS	CS
	setting value sub2		Word	18002	4652H	DevCS2	CS2
	setting value sub3		Word	18003	4653H	DevCS3	CS3

Device			Device type to be specified to a function			Device type when monitoring devices	
Device name		Symbol	Type	Code specification			Device name specification
				Decimal	Hexadecimal		
Accumulator		A	Word	19	0013H	DevA	A
Index register		Z	Word	20	0014H	DevZ	Z
		V	Word	21	0015H	DevV	V
File register	Block switching method	R	Word	22	0016H	DevR	R
Extended file register *1			Word	22000 to 22256*2	55F0H to 56F0H*2	DevER0 to 256*2	ER
	Serial number method	ZR	Word	220	00DCH	DevZR	ZR
Link relay		B	Bit	23	0017H	DevB	B
Link register		W	Word	24	0018H	DevW	W
Link special relay		SB	Bit	25	0019H	DevQSB	QSB
Retentive timer	contact	ST	Bit	26	001AH	DevSTT	STT
	coil		Bit	27	001BH	DevSTC	STC
Link special register		SW	Word	28	001CH	DevQSW	QSW
Edge relay		V	Bit	30	001EH	DevQV	QV
Retentive timer	current value	ST	Word	35	0023H	DevSTN	STN
Long index register		LZ	Double word	38	0026H	DevLZ	LZ
Refresh data register		RD	Word	39	0027H	DevRD	RD
Long Timer	contact	LT	Bit	41	0029H	DevLTT	LTT
	coil		Bit	42	002AH	DevLTC	LTC
	current value		Double word	43	002BH	DevLTN	LTN
Long counter	contact	LC	Bit	44	002CH	DevLCT	LCT
	coil		Bit	45	002DH	DevLCC	LCC
	current value		Double word	46	002EH	DevLCN	LCN
Long retentive timer	contact	LST	Bit	47	002FH	DevLSTT	LSTT
	coil		Bit	48	0030H	DevLSTC	LSTC
	current value		Double word	49	0031H	DevLSTN	LSTN
Link direct device *1,*3	Link input	Jn\X	Bit	1001 to 1255	03E9H to 04E7H	DevLX1 to 255	LX
	Link output	Jn\Y	Bit	2001 to 2255	07D1H to 08CFH	DevLY1 to 255	LY
	Link relay	Jn\B	Bit	23001 to 23255	59D9H to 5AD7H	DevLB1 to 255	LB
	Link register	Jn\W	Word	24001 to 24255	5DC1H to 5EBFH	DevLW1 to 255	LW
	Link special relay	Jn\SB	Bit	25001 to 25255	61A9H to 62A7H	DevLSB1 to 255	LSB
	Link special register	Jn\SW	Word	28001 to 28255	6D61H to 6E5FH	DevLSW1 to 255	LSW
Intelligent function module device Buffer memory Module access device *1,*4		Un\G	Word	29000 to 29255	7148H to 7247H	DevSPG0 to 255	SPG

*1 With the random read function (mdRandR, mdRandREx), the function may complete normally even if the specified devices do not exist. (The read data is error.)

*2 Access to the file register of the block specified with the device type.
Specify a block number (0 to 256) for the lower 3 digits of the code specification (decimal) and the numerical value of the device name specification.

*3 Specify a network number (1 to 255) for the lower 3 digits of the code specification (decimal) and the numerical value of the device specification.

*4 Specify a value (start I/O number divided by 16) for the lower 3 digits of the code specification (decimal) and the numerical value of the device name specification.

Buffer memory of CC-Link other station

When accessing the buffer memory of CC-Link network module or other CC-Link Ver.2 board from CC-Link Ver.2 board, specify the following device type.

Device			Device type to be specified to a function			Device type when monitoring devices
Device name	Symbol	Type	Code specification		Device name specification	
			Decimal	Hexadecimal		
Buffer memory ^{*1}	—	Word	-32768	8000H	DevRBM	RBM
Random access buffer ^{*1}	—	Word	-32736	8020H	DevRAB	RAB
Remote input ^{*1}	RX	Bit	-32735	8021H	DevRX	RX
Remote output ^{*1}	RY	Bit	-32734	8022H	DevRY	RY
Remote register ^{*1}	RWw, RWr	Word	-32732	8024H	DevRW	RW
Link special relay ^{*1}	SB	Bit	-32669	8063H	DevSB	SB
Link special register ^{*1}	SW	Word	-32668	8064H	DevSW	SW

*1 These devices can not be used for random write (mdRandW, mdRandWEx), random read (mdRandR, mdRandREx), bit set (mdDevSet, mdDevSetEx) and bit reset (mdDevRst, mdDevRstEx).

The SEND function and the RECV function

The same operation as device access, the SEND function and the RECV function execute Batch write (mdSend, mdSendEx) or Batch read (mdReceive, mdReceiveEx) with specified device type for each function.

Function	Device type to be specified to a function			Device type when monitoring devices
	Code specification		Device name specification	
	Decimal	Hexadecimal		
RECV function	101	0065H	DevMAIL	MAIL
SEND function (with arrival acknowledgment)				
SEND function (without arrival acknowledgment)	102	0066H	DevMAILNC	MAILNC

4.3 Function Details

The following shows the detailed specifications of the MELSEC data link library.
This section provides the description of the instructions in the layout as shown below.

Format

Indicates the description format in each programming language.

■Visual C++

A format for Microsoft® Visual C++

■Visual Basic .NET

A format for the following Visual Basic

- Visual Studio .NET 2003 Visual Basic
- Visual Studio 2005 Visual Basic
- Visual Studio 2008 Visual Basic
- Visual Studio 2010 Visual Basic
- Visual Studio 2012 Visual Basic
- Visual Studio 2013 Visual Basic
- Visual Studio 2015 Visual Basic
- Visual Studio 2017 Visual Basic

■Visual Basic 5.0, Visual Basic 6.0

A format for the following Visual Basic

- Visual Basic 5.0
- Visual Basic 6.0

Detailed specifications

■Argument

Describes arguments of the function.

■Explanation

Describes features of the function and details of arguments.

■Return value

Indicates the return values.

■Related function

Indicates related functions for programming.

mdOpen (opening communication lines)

Open a communication line by specifying a channel number of communication line.

Format

■Visual C++

Format	ret = mdOpen(chan,mode,path);			
Argument	short	ret;	//Return value	OUT
	short	chan;	//Channel number of communication line	IN
	short	mode;	//Dummy	IN
	long	*path;	//Opened line path pointer	OUT

■Visual Basic .NET

Format	ret = mdOpen(chan,mode,path)			
Argument	Short	ret	;Return value	OUT
	Short	chan	;Channel number of communication line	IN
	Short	mode	;Dummy	IN
	Integer	path	;Opened line path pointer	OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdOpen(chan%,mode%,path%)			
Argument	Integer	ret	;Return value	OUT
	Integer	chan	;Channel number of communication line	IN
	Integer	mode	;Dummy	IN
	Long	path	;Opened line path pointer	OUT

Detailed specifications

■Argument

Argument	Description
chan	Specify the channel number of communication line. (🔗 Page 46 Specifying channel number)
mode	Specify -1.
path	Return the opened line path.

■Explanation

- A path of the channel used for argument of another function is returned to the opened line path pointer.
- When using multiple communication lines, opening for each channel number is necessary.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (🔗 Page 127 ERROR CODES)

■Related function

mdClose()

mdClose (closing communication lines)

Close a communication line by specifying a communication line path.

Format

■Visual C++

Format	ret = mdClose(path);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN

■Visual Basic .NET

Format	ret = mdClose(path)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdClose(path&)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)

■Explanation

When using multiple communication lines, they need to be closed for each channel number.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📖 Page 127 ERROR CODES)

■Related function

mdOpen()

mdSendEx (batch writing extended devices)

Batch write data to the devices on the target station for the number of written data bytes from the start device number.

Format

■Visual C++

Format	ret = mdSendEx(path,netno,stno,devtyp,devno,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Start device number IN
	long	*size;	//Written byte size IN/OUT
	short	data[];	//Written data (single-precision integer array) IN

■Visual Basic .NET

Format	ret = mdSendEx(path,netno,stno,devtyp,devno,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	Start device number IN
	Integer	size	;Written byte size IN/OUT
	Short	data(n)	;Written data (single-precision integer array) IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdSendEx(path&,netno%,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Start device number IN
	Long	size	;Written byte size IN/OUT
	Any	data(n)	;Written data (single-precision integer array) IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
devtyp	Specify the type of device to which the data is written. (☞ Page 51 Specifying device types)
devno	Specify the start device number of device to which the data is written. <ul style="list-style-type: none"> Specify the start device number with a multiple of 8 for the access to a bit device. (However, the start device number can be specified arbitrarily for accessing a contact and coil of the long timer and long retentive timer.) Specify the start device number with a multiple of 16 (0, 16, 32...) for the access to a bit device (RX, RY, SB) of CC-Link other station link device.
size	Specify the byte size to be written in even number. <ul style="list-style-type: none"> When the specified byte size to be written exceeds the device range (-5: size error), the applicable size is returned to "size". When a double word device is specified to "devtyp", specify the size in multiples of 4.
data	Specify the data to be written in single-precision integer array.

■Explanation

- When the specified written byte size exceeds the transient transmission size, data are divided inside the function and written.
- When accessing another station, the extended comment information will be deleted by writing data to the block (extended file register) to which the extended comment is assigned.
- When accessing another station, the sub2 and sub3 programs will be deleted by writing data to the block (extended file register) which overlaps with the setting areas of the sub2 and sub3 programs.
- When a double word device is specified to "devtyp", store the data to be written to "data" as follows:


Ex.

When "devtyp" is LZ and "size" is 8

Array	Value
data[0]	Lower 1 word of LZ0
data[1]	Upper 1 word of LZ0
data[2]	Lower 1 word of LZ1
data[3]	Upper 1 word of LZ1

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdSend(), mdReceive(), mdReceiveEx()

mdSendEx (SEND function)

Send data to the specified channel number of the target station.

Format

■Visual C++

Format	ret = mdSendEx(path,netno,stno,devtyp,devno,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Channel number IN
	long	*size;	//Send byte size IN/OUT
	short	data[];	//Send data (single-precision integer array) IN

■Visual Basic .NET

Format	ret = mdSendEx(path,netno,stno,devtyp,devno,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Channel number IN
	Integer	size	;Send byte size IN/OUT
	Short	data(n)	;Send data (single-precision integer array) IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdSendEx(path&,&netno%,&stno%,&devtyp%,&devno%,&size%,&data%(0))		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Channel number IN
	Long	size	;Send byte size IN/OUT
	Any	data(n)	;Send data (single-precision integer array) IN

Detailed specifications


■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions) • Logical station numbers cannot be specified.
devtyp	Specify whether to send data with arrival acknowledgment or without arrival acknowledgment. • With arrival acknowledgment*1: Specify 101 (65H) • Without arrival acknowledgment: Specify 102 (66H)
devno	Specify a channel used by the own station and a target station channel. (☞ Page 60 Explanation)
size	Specify the byte size of send data in even number. • Specify the byte size within the range of 2 to 1920. • When accessing via MELSECNET/10 network, specify the byte size within the range of 2 to 960.
data	Specify the data to be written in single-precision integer array.

*1 Do not specify all stations or group numbers for the station number when sending data with arrival acknowledgment.

■Explanation

- This function supports the SEND instruction of the link dedicated instruction. For details of the functions , refer to the manuals of each board.
- The following explains how to specify the channel numbers.

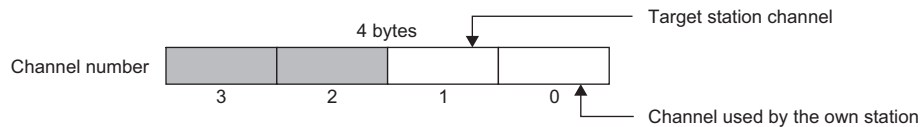

Item	Description	
target station channel	Specify a target station channel number. <ul style="list-style-type: none">• MELSECNET/H board, CC-Link IE Controller Network board• CC-Link IE Field Network board	— 1 to 8 1 to 2
channel used by the own station	Specify a channel number used by the own station. <ul style="list-style-type: none">• CC-Link IE Controller Network board• CC-Link IE Field Network board	— 1 to 8 1 to 2

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📖 Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdSend(), mdReceive(), mdReceiveEx()

mdReceiveEx (batch reading extended devices)

Batch read data from the devices on the target station for the number of read data bytes from the start device number.

Format

■Visual C++

Format	ret = mdReceiveEx(path,netno,stno,devtyp,devno,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Start device number IN
	long	*size;	//Read byte size IN/OUT
	short	data[];	//Read data (single-precision integer array) OUT

■Visual Basic .NET

Format	ret = mdReceiveEx(path,netno,stno,devtyp,devno,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Start device number IN
	Integer	size	;Read byte size IN/OUT
	Short	data(n)	;Read data (single-precision integer array) OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdReceiveEx(path&,netno%,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Start device number IN
	Long	size	;Read byte size IN/OUT
	Any	data(n)	;Read data (single-precision integer array) OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
devtyp	Specify the type of device from which the data is read. (☞ Page 51 Specifying device types)
devno	Specify the start device number of device range to be read. <ul style="list-style-type: none"> Specify the start device number with a multiple of 8 for the access to a bit device. (However, the start device number can be specified arbitrarily for accessing a contact and coil of the long timer and long retentive timer.) Specify the start device number with a multiple of 16 (0, 16, 32...) for the access to a bit device (RX, RY, SB) of CC-Link other station link device.
size	Specify the byte size to be read in even number. <ul style="list-style-type: none"> When the specified byte size to be read exceeds the device range (-5: size error), the applicable size is returned to "size". When a double word device is specified to "devtyp", specify the size in multiples of 4.
data	Store the data being read.

■Explanation

- When the specified read byte size exceeds the transient transmission size, data are divided inside the function and read.
- When a double word device is specified to "devtyp", the data is stored to "data" as follows:


Ex.

When "devtyp" is LZ and "size" is 8

Array	Value
data[0]	Lower 1 word of LZ0
data[1]	Upper 1 word of LZ0
data[2]	Lower 1 word of LZ1
data[3]	Upper 1 word of LZ1

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdReceive(), mdSend(), mdSendEx()

mdReceiveEx (RECV function)

Read data of the specified channel number from the data which are received by the own station.

Format

■Visual C++

Format	ret = mdReceiveEx(path,netno,stno,devtyp,devno,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Channel number IN
	long	*size;	//Receive byte size IN/OUT
	short	data[];	//Receive data with send source information (single-precision integer array) OUT

■Visual Basic .NET

Format	ret = mdReceiveEx(path,netno,stno,devtyp,devno,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Channel number IN
	Integer	size	;Receive byte size IN/OUT
	Short	data(n)	;Receive data with send source information (single-precision integer array) OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdReceiveEx(path&,netno%,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Channel number IN
	Long	size	;Receive byte size IN/OUT
	Any	data(n)	;Receive data with send source information (single-precision integer array) OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify 0 (0H).
stno	Specify the own station (255 (FFH)).
devtyp	Specify the RECV function (101 (65H)).
devno	Specify the own station channel number on which the received messages are stored. <ul style="list-style-type: none"> • CC-Link IE Controller Network board 1 to 8 • CC-Link IE Field Network board 1 to 2
size	Specify the byte size of received data in even number. <ul style="list-style-type: none"> • Specify the byte size within the range of 2 to 1920. • When receiving the data which are transmitted by MELSECNET/H board with CC-Link IE Controller Network board or CC-Link IE Controller Network board, specify within the range of 2 to 960. The size of received actual data is received.
data	Received actual data and send source information are stored as single-precision integer array. Reserve an area for the specified receive byte size and send source information (6 bytes).


■Explanation

This function supports the RECV instruction of the link dedicated instruction.
For details of the function, refer to the manuals of each board.

< Receive data with send source information (data) >

- Receive byte size and send source information (6 bytes) are stored in "receive data with send source information (data)".
Reserve an area for [receive byte size and send source information (6 bytes)] in "receive data with send source information (data)".
- Data are stored in "receive data with send source information (data)" as shown below.

Receive data with send source information (data)

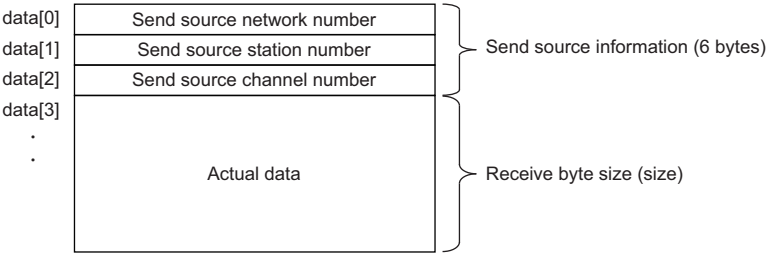

- Only the actual data with the specified receive byte size (size) is stored when the received actual data size is greater than the specified receive byte size (size).
- 125 (7DH) is stored to the send source station number when the station number of the send source is 0.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📖 Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdReceive(), mdSend(), mdSendEx()

mdRandWEx (writing extended devices randomly)

Write data to the devices on the target station specified with the randomly-specified devices.

Format

■Visual C++

Format	ret = mdRandWEx(path,netno,stno,dev,buf,bufsize);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	dev[];	//Randomly-specified device IN
	short	buf[];	//Written data (single-precision integer array) IN
	long	bufsize;	//Dummy IN

■Visual Basic .NET





Format	ret = mdRandWEx(path,netno,stno,dev(0),buf(0),bufsize)		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	dev(n)	;Randomly-specified device IN
	Short	buf(n)	;Written data (single-precision integer array) IN
	Integer	bufsize	;Dummy IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdRandWEx(path&,netno%,stno%,dev%(0),buf%(0),bufsize%)		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	dev(n)	;Randomly-specified device IN
	Any	buf(n)	;Written data (single-precision integer array) IN
	Long	bufsize	;Dummy IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
dev	Specify the number of blocks, the device type, the start device number, and points of device to be written. ( Page 67 How to specify the randomly-specified devices (dev))
buf	Specify the data to be written to the array variable of buf[0] or later.( Page 67 How to specify the randomly-specified devices (dev))
bufsize	—

■Explanation

- The number of transient transmissions performed inside of the function changes with the specified randomly-specified devices.
- A longer function processing time is required for the random write function as compared with the batch write function. Consider using the batch write function if a shorter function processing time is required.
- When accessing another station, the extended comment information will be deleted by writing data to the block (extended file register) to which the extended comment is assigned.
- When accessing another station, the sub2 and sub3 programs will be deleted by writing data to the block (extended file register) which overlaps with the setting areas of the sub2 and sub3 programs.
- If an error occurs when writing devices randomly to B or W of the own station in MELSECNET(II) or MELSECNET/10, blocks with errors may exist among blocks in which the write function is normally completed.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRandREx()

How to specify the randomly-specified devices (dev)

The following table shows how to specify the randomly-specified devices (dev).

Randomly-specified device	Description	
dev[0]	Specify the number of blocks. (1 to 32767)	
dev[1]	Device type	Specify the device of block 1.
dev[2]	Start device number	
dev[3]	Points	
dev[4]	Device type	Specify the device of block 2.
dev[5]	Start device number	
dev[6]	Points	
:	(Specify the devices for the specified number of blocks.)	

■When writing values to multiple devices

The following tables show an example when writing the values in devices.

Block	Specified device	Device value
Block 1	M100 to M115 (16 points of bit device)	All the bits are OFF. (0000H)
Block 2	D10 to D13 (4 points of word device)	D10: 10, D11: 200, D12: 300, D13: 400

• Randomly-specified device (dev)

Program example	Description
dev[0]=2;	Number of blocks: 2
dev[1]=DevM; dev[2]=100; dev[3]=16;	Block 1 • Start device: M100 • Points: 16 points
dev[4]=DevD; dev[5]=10; dev[6]=4;	Block 2 • Start device: D10 • Points: 4 points

• Written data (buf)

Array	Value	Device
buf[0]	0	M100 to M115
buf[1]	10	D10
buf[2]	200	D11
buf[3]	300	D12
buf[4]	400	D13

■When writing values to double word devices

The following tables show an example when writing the values in devices.

Block	Specified device	Device value
Block 1	LC100 to LC101 (2 points of double word device)	LC100 (current value) = 1, LC101 (current value) = 65536 (10000H)

• Randomly-specified device (dev)

Program example	Description
dev[0]=1;	Number of blocks: 1
dev[1]=DevLCN; dev[2]=100; dev[3]=2;	Block 1 • Start device: LC100 (current value) • Points: 2 points

• Written data (buf)

Array	Value	Device
buf[0]	1	Lower 1 word of LC100 (current value)
buf[1]	0	Upper 1 word of LC100 (current value)
buf[2]	0	Lower 1 word of LC101 (current value)
buf[3]	1	Upper 1 word of LC101 (current value)

mdRandREx (reading extended devices randomly)

Read the device specified with the randomly-specified devices from the target station.

Format

■Visual C++

Format	ret = mdRandREx(path,netno,stno,dev,buf,bufsize);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	dev[];	//Randomly-specified device IN
	short	buf[];	//Read data (single-precision integer array) OUT
	long	bufsize;	//Number of bytes of read data IN

■Visual Basic .NET






Format	ret = mdRandREx(path,netno,stno,dev(0),buf(0),bufsize)		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	dev(n)	;Randomly-specified device IN
	Short	buf(n)	;Read data (single-precision integer array) OUT
	Integer	bufsize	;Number of bytes of read data IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdRandREx(path&,netno%,stno%,dev%(0),buf%(0),bufsize%)		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	dev(n)	;Randomly-specified device IN
	Any	buf(n)	;Read data (single-precision integer array) OUT
	Long	bufsize	;Number of bytes of read data IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
dev	Specify the number of blocks, the device type, the start device number, and points of device to be read. ( Page 69 How to specify the randomly-specified devices (dev))
buf	Store the read data to the array variable of buf[0] or later. ( Page 69 How to specify the randomly-specified devices (dev))
bufsize	Specify the number of bytes of read data. ( Page 69 How to specify the randomly-specified devices (dev))

■Explanation

- The number of transient transmissions performed inside of the function changes with the specified randomly-specified devices.
- A longer function processing time is required for the random read function as compared with the batch read function.
Consider using the batch read function if a shorter function processing time is required.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRandWEx()

How to specify the randomly-specified devices (dev)

The following table shows how to specify the randomly-specified devices (dev).

Randomly-specified device	Description	
dev[0]	Specify the number of blocks. (1 to 32767)	
dev[1]	Device type	Specify the device of block 1.
dev[2]	Start device number	
dev[3]	Points	
dev[4]	Device type	Specify the device of block 2.
dev[5]	Start device number	
dev[6]	Points	
:	(Specify the devices for the specified number of blocks.)	

■When reading values from multiple devices

The following tables show an example when reading the values from devices.

Block	Specified device	Device value
Block 1	M100 to M115 (16 points of bit device)	All the bits are OFF. (0000H)
Block 2	D10 to D13 (4 points of word device)	D10: 10, D11: 200, D12: 300, D13: 400
Block 3	M0 to M13 (14 points of bit device)	All the bits are ON. (3FFFH)
Block 4	T10 (current value) (1 point of word device)	T10 (current value): 10

• Randomly-specified device (dev)

Program example	Description
dev[0]=4;	Number of blocks: 4
dev[1]=DevM; dev[2]=100; dev[3]=16;	Block 1 • Start device: M100 • Points: 16 points
dev[4]=DevD; dev[5]=10; dev[6]=4;	Block 2 • Start device: D10 • Points: 4 points
dev[7]=DevM; dev[8]=0; dev[9]=14;	Block 3 • Start device: M0 • Points: 14 points
dev[10]=DevTN; dev[11]=10; dev[12]=1;	Block 4 • Start device: T10 (current value) • Points: 1 point

• Read data (buf)

Array	Value	Device
buf[0]	0	M100 to M115
buf[1]	10	D10
buf[2]	200	D11
buf[3]	300	D12
buf[4]	400	D13
buf[5]	16383 (3FFFH)	M0 to M13
buf[6]	10	T10 (current value)

• Number of bytes of read data (bufsize)

Specify the number of bytes of array variable buf which stores the read data.

(buf[0] to buf[6] = 7) × 2 = 14 bytes

Enter "14" for this example.

■When reading values from double word devices

The following tables show an example when reading the values from devices.

Block	Specified device	Device value
Block 1	LC100 to LC101 (2 points of double word device)	LC100 (current value) = 1, LC101 (current value) = 65536 (10000H)

- Randomly-specified device (dev)

Program example	Description
dev[0]=1;	Number of blocks: 1
dev[1]=DevLCN; dev[2]=100; dev[3]=2;	Block 1 • Start device: LC100 (current value) • Points: 2 points

- Read data (buf)

Array	Value	Device
buf[0]	1	Lower 1 word of LC100 (current value)
buf[1]	0	Upper 1 word of LC100 (current value)
buf[2]	0	Lower 1 word of LC101 (current value)
buf[3]	1	Upper 1 word of LC101 (current value)

- Number of bytes of read data (bufsize)

Specify the number of bytes of array variable buf which stores the read data.

(buf[0] to buf[3] = 4) × 2 = 8 bytes

Enter "8" for this example.

mdDevSetEx (setting extended bit devices)

Set the specified bit device on the target station (to ON).

Format

■Visual C++

Format	ret = mdDevSetEx(path,netno,stno,devtyp,devno);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Specified device number IN

■Visual Basic .NET




Format	ret = mdDevSetEx(path,netno,stno,devtyp,devno)		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Specified device number IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdDevSetEx(path&,netno%,stno%,devtyp%,devno%)		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Specified device number IN

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
devtyp	Specify the type of device to be set (ON). ( Page 51 Specifying device types)
devno	Specify the device number of device to be set (ON).

■Explanation

This function is a dedicated function for bit devices such as link relays (B) and internal relays (M).

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdDevRstEx()

mdDevRstEx (resetting extended bit devices)

Reset the specified bit device on the target station (to OFF).

Format

■Visual C++

Format	ret = mdDevRstEx(path,netno,stno,devtyp,devno);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	devtyp;	//Device type IN
	long	devno;	//Specified device number IN

■Visual Basic .NET




Format	ret = mdDevRstEx(path,netno,stno,devtyp,devno)		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Specified device number IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdDevRstEx(path&,netno%,stno%,devtyp%,devno%)		
Argument	Long	ret	;Return value OUT
	Long	path	;Path of channel IN
	Long	netno	;Network number IN
	Long	stno	;Station number IN
	Long	devtyp	;Device type IN
	Long	devno	;Specified device number IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
devtyp	Specify the type of device to be reset (OFF). ( Page 51 Specifying device types)
devno	Specify the device number of device to be reset (OFF).

■Explanation

This function is a dedicated function for bit devices such as link relays (B) and internal relays (M).

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdDevSetEx()

mdRemBufWriteEx (writing data to the buffer memory of a remote device station)

Write data to the buffer memory of a target station (remote device station of CC-Link IE Field Network).

Format

■Visual C++

Format	ret = mdRemBufWriteEx(path,netno,stno,offset,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	offset;	//Offset IN
	long	*size;	//Written byte size IN
	short	data[];	//Written data (single-precision integer array) IN

■Visual Basic .NET

Format	ret = mdRemBufWriteEx(path,netno,stno,offset,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	offset	;Offset IN
	Integer	size	;Written byte size IN
	Short	data(n)	;Written data (single-precision integer array) IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. (☞ Page 49 Specifying network numbers and station numbers for extended functions)
offset	Specify the start address of the remote device station buffer memory to be written.
size	Specify the byte size to be written in even number (2 to 480).
data	Specify the data to be written in single-precision integer array.

■Explanation

- This function writes data only to the buffer memory of a remote device station on a CC-Link IE Field Network.
Data cannot be written to the buffer memory of an intelligent function module controlled by a CC-Link IE Field Network Head module.
When writing data to an intelligent function module controlled by a CC-Link IE Field Network Head module, use mdSendEx/mdSend function.
- Be sure that the write byte size from offset does not exceed the buffer memory range of the remote device station. Failure to do so may cause a timeout error or the remote device station may not operate normally. For the buffer memory range of a remote device station, refer to the manuals of each remote device station.
- For a 64-bit version user application, use an SW1DNC-CCIEF-B with a version 1.12N or later.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (☞ Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRemBufReadEx()

mdRemBufReadEx (reading data from the buffer memory of a remote device station)

Read data from the buffer memory of a target station (remote device station of CC-Link IE Field Network).

Format

■Visual C++



Format	ret = mdRemBufReadEx(path,netno,stno,offset,size,data);		
Argument	long	ret;	//Return value OUT
	long	path;	//Path of channel IN
	long	netno;	//Network number IN
	long	stno;	//Station number IN
	long	offset;	//Offset IN
	long	*size;	//Read byte size IN
	short	data[];	//Read data (single-precision integer array) OUT

■Visual Basic .NET

Format	ret = mdRemBufReadEx(path,netno,stno,offset,size,data(0))		
Argument	Integer	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Integer	netno	;Network number IN
	Integer	stno	;Station number IN
	Integer	offset	;Offset IN
	Integer	size	;Read byte size IN
	Short	data(n)	;Read data (single-precision integer array) OUT

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
netno	Specify the network number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
stno	Specify the station number of target station. ( Page 49 Specifying network numbers and station numbers for extended functions)
offset	Specify the start address of the remote device station buffer memory to be read.
size	Specify the byte size to be read in even number (2 to 480).
data	Specify the data to be read in single-precision integer array.

■Explanation

- This function reads data only from the buffer memory of a remote device station on a CC-Link IE Field Network.
Data cannot be read from the buffer memory of an intelligent function module controlled by a CC-Link IE Field Network Head module.
When reading data from an intelligent function module controlled by a CC-Link IE Field Network Head module, use the mdRecieveEx/mdRecieve function.
- Be sure that the read byte size from offset does not exceed the buffer memory range of the remote device station. Failure to do so may cause a timeout error or undefined value may be read. For the buffer memory range of a remote device station, refer to the manuals of each remote device station.
- For a 64-bit version user application, use an SW1DNC-CCIEF-B with a version 1.12N or later.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRemBufWriteEx()

mdTypeRead (reading model names of CPU)

Read a model name code of the CPU on the target station.

Format

■Visual C++

```
Format      ret = mdTypeRead(path,stno,buf);
Argument    short      ret;           //Return value          OUT
            long       path;         //Path of channel       IN
            short      stno;         //Station number       IN
            short      *buf;         //Model name code      OUT
```

■Visual Basic .NET



```
Format      ret = mdTypeRead(path,stno,buf)
Argument    Short      ret           ;Return value          OUT
            Integer    path         ;Path of channel       IN
            Short      stno         ;Station number       IN
            Short      buf          ;Model name code      OUT
```

■Visual Basic 5.0, Visual Basic 6.0


```
Format      ret% = mdTypeRead(path&,stno%,buf%)
Argument    Integer    ret           ;Return value          OUT
            Long       path         ;Path of channel       IN
            Integer    stno         ;Station number       IN
            Integer    buf          ;Model name code      OUT
```

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
buf	Return the model name code of CPU being read. ( Page 76 List of Model code and CPU model)

■Explanation

The following table shows the model name codes and corresponding model names. ( Page 76 List of Model code and CPU model)

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

List of Model code and CPU model

■MELSEC iQ-R series

Model name code (Hexadecimal)	Model name
4800H	R04CPU
4801H	R08CPU
4802H	R16CPU
4803H	R32CPU
4804H	R120CPU
4805H	R04ENCPU
4806H	R08ENCPU
4807H	R16ENCPU
4808H	R32ENCPU
4809H	R120ENCPU

■MELSEC-L series

Model name code (Hexadecimal)	Model name
0541H	L02CPU
0543H	L02SCPU
0544H	L06CPU
0545H	L26CPU
0548H	L26CPU-BT
0549H	L02CPU-P
054AH	L26CPU-PBT
054BH	L26CPU-P
054CH	L02SCPU-P
054DH	L06CPU-P
0641H	LJ72GF15-T2

■MELSEC-Q series

Model name code (Hexadecimal)	Model name
0041H	Q02CPU, Q02HCPU
0042H	Q06HCPU
0043H	Q12HCPU
0044H	Q25HCPU
0049H	Q12PHCPU
004AH	Q25PHCPU
004BH	Q12PRHCPU
004CH	Q25PRHCPU
004DH	Q02PHCPU
004EH	Q06PHCPU
0141H	Q02CPU (A mode), Q02HCPU (A mode)
0142H	Q06HCPU (A mode)
0250H	Q00JCPU
0251H	Q00CPU
0252H	Q01CPU
0260H	Q00JCPU
0261H	Q00UCPU
0262H	Q01UCPU
0263H	Q02UCPU
0266H	Q10UDHCPU

Model name code (Hexadecimal)	Model name
0267H	Q20UDHCPU
0268H	Q03UDCPU
0269H	Q04UDHCPU
026AH	Q06UDHCPU
026BH	Q13UDHCPU
026CH	Q26UDHCPU
02E6H	Q10UDEHCPU
02E7H	Q20UDEHCPU
02E8H	Q03UDECPU
02E9H	Q04UDEHCPU
02EAH	Q06UDEHCPU
02EBH	Q13UDEHCPU
02ECH	Q26UDEHCPU
02EDH	Q50UDEHCPU
02EEH	Q100UDEHCPU
0362H	Q04UDPVCPU
0363H	Q06UDPVCPU
0364H	Q13UDPVCPU
0365H	Q26UDPVCPU
0366H	Q03UDVCPU
0367H	Q04UDVCPU
0368H	Q06UDVCPU
036AH	Q13UDVCPU
036CH	Q26UDVCPU
2010H	Q172CPU, Q172CPUN, Q172CPUN-T
2012H	Q172HCPU
2011H	Q173CPU, Q173CPUN, Q173CPUN-T
2013H	Q173HCPU
2014H	Q172DCPU
2015H	Q173DCPU
2018H	Q172DSCPU
2019H	Q173DSCPU

■MELSEC-QnA series

Model name code (Hexadecimal)	Model name
0021H	Q2ACPU, Q2AHCPU, Q2ASCPU, Q2ASHCPU
0022H	Q2ACPU-S1, Q2AHCPU-S1, Q2ASCPU-S1, Q2ASHCPU-S1
0023H	Q3ACPU
0024H	Q4ACPU, Q4ARCPU

■MELSEC-A series

Model name code (Hexadecimal)	Model name
0082H	A2UCPU, A2USCPU
0083H	A2UCPU-S1, A2USCPU-S1
0084H	A3UCPU, A2USHCPU-S1
0085H	A4UCPU
0092H	A2ACPU
0093H	A2ACPU-S1
0094H	A3ACPU
0098H	A0J2HCPU, A1SCPU, A1SJCPU
009AH	A2CCPU, A2CJCPU
00A0H	A0J2CPU
00A1H	A1CPU, A1NCPU
00A2H	A2CPU, A2NCPU, A2SCPU
00A3H	A3CPU, A3NCPU, A1SHCPU, A1SJHCPU, A2SHCPU, A2SH1CPU
00A4H	A3HCPU, A3MCPU

■Others

Model name code (Hexadecimal)	Model name
0090H	Q80BD-J71GF11-T2, Q81BD-J71GF11-T2, Q80BD-J71GP21-SX, Q80BD-J71GP21S-SX, Q81BD-J71GP21-SX, Q81BD-J71GP21S-SX, Q80BD-J71LP21-25, Q81BD-J71LP21-25, Q80BD-J71LP21S-25, Q80BD-J71LP21G, Q80BD-J71LP21GE, Q80BD-J71BR11, Q80BD-J61BT11N, Q81BD-J61BT11
0642H	NZ2GF-ETB

mdControl (remote RUN/STOP/PAUSE)

Remotely operate a CPU on the target station. (Remote RUN/STOP/PAUSE)

Format

■Visual C++

Format	ret = mdControl(path,stno,buf);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	stno;	//Station number	IN
	short	buf;	//Command code	IN

■Visual Basic .NET



Format	ret = mdControl(path,stno,buf)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	stno	;Station number	IN
	Short	buf	;Command code	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdControl(path&,stno%,buf%)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	stno	;Station number	IN
	Integer	buf	;Command code	IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
buf	Specify the command code (remote RUN/STOP/PAUSE) for remote operation of CPU. ( Page 79 Explanation)


■Explanation

The following table shows the command codes and the corresponding descriptions.

Command code (Hexadecimal)	Description
0	Remote RUN
1	Remote STOP
2	Remote PAUSE

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

mdWaitBdEvent (waiting for event occurrence)

Wait an occurrence of event until the time out.

Format

■Visual C++

Format	ret = mdWaitBdEvent(path, eventno, timeout, signaledno, details);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	eventno[];	//Waiting event number	IN
	long	timeout;	//Timeout value	IN
	short	*signaledno;	//Driven event number	OUT
	short	details[4];	//Event detail information	OUT

■Visual Basic .NET

Format	ret = mdWaitBdEvent(path, eventno(0), timeout, signaledno, details(0))			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	eventno(n)	;Waiting event number	IN
	Integer	timeout	;Timeout value	IN
	Short	signaledno	;Driven event number	OUT
	Short	details(4)	;Event detail information	OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdWaitBdEvent(path&,eventno%(0),timeout&,signaledno%,details%(0))			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	eventno(n)	;Waiting event number	IN
	Long	timeout	;Timeout value	IN
	Integer	signaledno	;Driven event number	OUT
	Integer	details(4)	;Event detail information	OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
eventno	Specify the event number of event to wait. (Use the event number set in the utility.)
timeout	Specify the time until time out to wait the event.
signaledno	Return the occurred event number.
details	Store the bit pattern or device value when the conditions of device are satisfied. Reserve the variable for 4 words.

■Explanation

This function waits the occurrence of the event specified by the waiting event number on the specified channel for a period of time out.

Timeout value	Description
-1	Indefinitely waiting
0	No wait
0 to 2147483647 (7FFFFFFFH)	Millisecond waiting

Waiting event number (eventno) is specified as follows.

Waiting event (eventno)	Specified data
eventno[0]	Number of waiting events (1 to 64)
eventno[1]	Waiting event number (0 to 63) ... 1st event
eventno[2]	Waiting event number (0 to 63) ... 2nd event
.	.
eventno[64]	Waiting event number (0 to 63) ... 64th event

The following is an example when waiting the multiple events simultaneously.


Ex.

When waiting the event No. 1, No. 5, and No. 12 simultaneously.

Waiting event (eventno)	Specified data
eventno[0]=3;	Number of waiting events (3)
eventno[1]=1;	Waiting event number (1) ... 1st event
eventno[2]=5;	Waiting event number (5) ... 2nd event
eventno[3]=12;	Waiting event number (12) ... 3rd event


When the No. 5 interrupt event occurs, 5 is returned to "signaledno".

Values stored to the event detail information (details) differ depending on whether the specified device of the occurred event condition is a bit device or a word device. Refer to the following section.

 Page 82 Values stored to the event detail information (details)

■Return value


Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

Point

- If the data link is not executed properly, an event does not occur.
- When the device assigned by "Network range assignment" is not used, an event does not occur.
- This function returns immediately if the event has already occurred when it is called.
- Create a program to avoid calling this function from multiple processes with specifying same event number of the same channel number simultaneously. If executed, "Event number registration overlap error -63 (FFC1H)" of return value is returned to the process that called this function later.
- Lengthen the occurrence interval of the event up to extent where the user program can process satisfactorily.
- This function returns "The event is not set error -67 (FFBDH)" of return value if executed without the event setting.
- When the board or the master station (control station) is reset during the execution of this function, the function returns "Event initialization error -66 (FFBEH)" of return value.
- When multiple or more events occur simultaneously, either of events is detected first. When this function is executed again, the other events are detected.
- This function is a dedicated function for CC-Link IE Controller Network board and CC-Link IE Field Network board. If channel path of another board is specified, an error occurs. ( Page 127 ERROR CODES)

Values stored to the event detail information (details)

Values stored to the event detail information (details) are as follows depending on whether the specified device of the occurred event condition is a bit device or a word device.

■Bit device

A bit pattern which indicates the condition-satisfied device is stored to the event detail information.

- 1 is set to the bits that correspond to the condition-satisfied device.
- 1 is set to the first bit at the condition satisfaction because device points cannot be specified with the CC-Link IE Field Network board.
- 0 is set to the bits other than the corresponding bits when the device point is less than 64.

Event detail information (details)	Number of points from the start device	Bit pattern to be stored
details[0]	1st to 16th point	bit0: 1st point ... bit15: 16th point
details[1]	17th to 32nd point	bit0: 17th point ... bit15: 32nd point
details[2]	33rd to 48th point	bit0: 33rd point ... bit15: 48th point
details[3]	49th to 64th point	bit0: 49th point ... bit15: 64th point

■Word device

Device values at the condition satisfaction are stored to the event detail information.

Event detail information (details)	Device value to be stored
details[0]	Device value when condition is satisfied.
details[1]	0
details[2]	0
details[3]	0

■RECV function (CC-Link IE Field Network board)

The information on received data is stored to the event detail information.

Event detail information (details)	Device value to be stored
details[0]	Receive channel (1 to 2)
details[1]	0
details[2]	0
details[3]	0

When the event does not occur within the timeout time, a timeout error is returned as a return value.

When the same event number occurs multiple times

When the events whose number is the same occur multiple times, "Execution result of this function" and "Value details[] stored" of "Bit device" and "Word device" are as follows.

■Bit device

- This function ends normally.
- "Logical add in the bit pattern of each driven event" is stored in "details[]".

■Word device

- This function returns "Event overlapped occurrence error -70 (FFBAH)".
- The device value when the condition of the event that occurred first is satisfied is stored in "details[0]".

mdBdRst (resetting board)

Reset a board.

Format

■Visual C++

Format	ret = mdBdRst(path);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN

■Visual Basic .NET

Format	ret = mdBdRst(path)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdBdRst(path&)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)

■Explanation

- The board is reset to the current settings with the utility function. (The same process as that of the board reset operation of the utility function.)
- The board reset error (9922H), which notifies that the board is reset, is returned to other applications which are accessing the reset board.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

mdBdModSet (setting modes of board)

Change the modes of a board temporarily.

Format

■Visual C++

Format	ret = mdBdModSet(path,mode);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	mode;	//Mode	IN

■Visual Basic .NET


Format	ret = mdBdModSet(path,mode)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	mode	;Mode	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdBdModSet(path&,mode%)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	mode	;Mode	IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
mode	Specify the code corresponding to the mode to be executed.( Page 84 Explanation)

■Explanation

- The board is reset when this function is executed.
- Reset the board or restart the personal computer to recover the mode set in the utility.
- The following table shows the modes and the corresponding codes.

Code	Description			
	CC-Link Ver.2	MELSECNET/H	CC-Link IE Controller Network	CC-Link IE Field Network
0000H	Online (with automatic return)	Online (with automatic return)	Online	Online (normal mode)
0001H	—	—	—	Online (high-speed mode)* ¹
0002H	Offline	Offline	Offline	Offline
0003H	Data link test	Forward loop test* ²	—	—
0004H	Remote station test	Reverse loop test* ²	—	—
0005H	—	Station-to-station test (executing stations)* ²	Station-to-station test* ²	—
0006H	Hardware test	Station-to-station test (target stations)* ²	Loop test* ²	Loop test* ^{1,3}
0007H	Not applicable	Self-loopback test* ²	Self-loopback test* ²	Self-loopback test* ³
0008H	—	Self-loopback test (internal)* ²	—	—
0009H	—	Hardware test* ²	Hardware test* ²	Hardware test* ³
000EH	—	—	Bus interface test* ²	Bus interface test* ⁴
0010H	—	—	—	Memory test* ⁴

*1 Cannot be set when the target board is local station.


*2 For the test method and check method of the test result, refer to the manuals of each board.

*3 For the test method, refer to the manuals of each board. For the test result, check with the values of the link special relays/link special registers of each board.

*4 Check the test result with the return value.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdBdModRead()

mdBdModRead (reading modes of board)

Read the mode in which the board is currently operating.

Format

■Visual C++

Format	ret = mdBdModRead(path,mode);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	*mode;	//Mode	OUT

■Visual Basic .NET


Format	ret = mdBdModRead(path,mode)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	mode	;Mode	OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdBdModRead(path&,mode%)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	mode	;Mode	OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
mode	Return the corresponding code to the mode being read. ( Page 86 Explanation)

■Explanation

- When the mdBdModSet() function is executed and the mode of the board is changed temporarily, the mode set in the utility is read instead of the currently operating mode.
- The following table shows the modes and the corresponding codes.

Code	Description			
	CC-Link Ver.2	MELSECNET/H	CC-Link IE Controller Network	CC-Link IE Field Network
0000H	Online (with automatic return)	Online (with automatic return)	Online	Online (normal mode)
0001H	—	—	—	Online (high-speed mode)
0002H	Offline	Offline	Offline	Offline
0003H	Data link test	Forward loop test	—	—
0004H	Remote station test	Reverse loop test	—	—
0005H	—	Station-to-station test (executing stations)	Station-to-station test	—
0006H	Hardware test	Station-to-station test (target stations)	Loop test	Loop test
0007H	Not applicable	Self-loopback test	Self-loopback test	Self-loopback test
0008H	—	Self-loopback test (internal)	—	—
0009H	—	Hardware test	Hardware test	Hardware test
000EH	—	—	Bus interface test	Bus interface test
0010H	—	—	—	Memory test

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdBdModSet()

mdBdLedRead (read LED information of the board)

Read the LED information of the board.

Format

■Visual C++

Format	ret = mdBdLedRead(path,buf);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	buf[];	//Read data	OUT

■Visual Basic .NET

Format	ret = mdBdLedRead(path,buf(0))			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	buf(n)	;Read data	OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdBdLedRead(path&,buf%(0))			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	buf(n)	;Read data	OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
buf	Store the LED information being read. (📄 Page 88 List of LED information)

■Explanation

- For LED information, refer to the 'List of LED information'. (📄 Page 88 List of LED information)
- When the LED is flashing, the status at read is stored. For details of the LED, refer to the manual of each board.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📄 Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

List of LED information

■CC-Link Ver.2 Board

Element	Bit	LED	Description	Remarks
buf[0]	b15-b9	RESERVE	—	—
	b8	ERR	Display the detection status of communication error for all stations. 1: Detected 0: Not detected	ON:1 OFF:0
	b7-b1	RESERVE	—	—
	b0	RUN	Display the operating status of board. 1: Operating normally 0: Board WDT error	ON:1 OFF:0
buf[1]	b15-b1	RESERVE	—	—
	b0	SW	Display the detection status of switch setting error. 1: Detected 0: Not detected	ON:1 OFF:0
buf[2]	b15-b9	RESERVE	—	—
	b8	PRM	Display the detection status of parameter error. 1: Detected 0: Not detected	ON:1 OFF:0
	b7-b1	RESERVE	—	—
	b0	M/S	Display the detection status of master station duplication error. 1: Detected 0: Not detected	ON:1 OFF:0
buf[3]	b15-b9	RESERVE	—	—
	b8	LINE	Display the detection status of cable disconnection error. 1: Detected 0: Not detected	ON:1 OFF:0
	b7-b1	RESERVE	—	—
	b0	TIME	Display the error detection status when the data link monitoring timer is operated. 1: Detected 0: Not detected	ON:1 OFF:0
buf[4]	b15-b9	RESERVE	—	—
	b8	L.ERR	Display the detection status of communication error. 1: Detected 0: Not detected	ON:1 OFF:0
	b7-b1	RESERVE	—	—
	b0	L.RUN	Display the data link execution status. 1: Data link in operation 0: No data link	ON:1 OFF:0
buf[5]	b15-b9	RESERVE	—	—
	b8	RD	Display the data reception status. 1: Data being received 0: Data not received	ON:1 OFF:0
	b7-b1	RESERVE	—	—
	b0	SD	Display the data sending status. 1: Data being sent 0: Data not sent	ON:1 OFF:0

■MELSECNET/H

Element	Bit	LED	Description	Remarks
buff[0]	b15	R.LOOP OVER	Display the detection status of data import delay error on the reverse loop side. 1: Detected 0: Not detected	ON:1 OFF:0
	b14	F.LOOP CRC	Display the detection status of code check error on the forward loop side. 1: Detected 0: Not detected	
	b13	R.LOOP CRC	Display the detection status of code check error on the reverse loop side. 1: Detected 0: Not detected	
	b12	F.LOOP	Display the detection status of loop line error on the forward loop side. 1: Detected 0: Not detected	
	b11	R.LOOP	Display the detection status of loop line error on the reverse loop side. 1: Detected 0: Not detected	
	b10	F.LOOP RD	Display the data reception status on the forward loop side. 1: Data being received 0: Data not received	
	b9	R.LOOP RD	Display the data reception status on the reverse loop side. 1: Data being received 0: Data not received	
	b8	F.LOOP SD	Display the data sending status on the forward loop side. 1: Data being sent 0: Data not sent	
	b7	R.LOOP SD	Display the data sending status on the reverse loop side. 1: Data being sent 0: Data not sent	
	b6	S.MNG	Display the station type. 1: Operating as a sub control station 0: Other than sub control station	
	b5	MNG	Display the station type. 1: Operating as a control station 0: Other than control station	
	b4	D.LINK	Display the data link status (cyclic transmission status). 1: Data link in operation 0: No data link	
	b3	T.PASS	Display the baton pass status. 1: Baton pass in progress 0: No baton pass	
	b2	PRM.E.	Display the detection status of parameter error. 1: Detected 0: Not detected	
	b1	SW.E.	Display the detection status of switch setting error. 1: Detected 0: Not detected	
	b0	RUN	Display the operating status of board. 1: Operating normally 0: Hardware error or Board WDT error	

Element	Bit	LED	Description	Remarks
buff[1]	b15-b10	RESERVE	—	—
	b9	M/S.E.	Display the detection status of station number or control station duplication error on the same network. 1: Detected 0: Not detected	ON:1 OFF:0
	b8	F.LOOP UNDER	Display the error detection status when the internal processing of send data is not performed on the forward loop side at regular intervals. 1: Detected 0: Not detected	
	b7	R.LOOP UNDER	Display the error detection status when the internal processing of send data is not performed on the reverse loop side at regular intervals. 1: Detected 0: Not detected	
	b6	F.LOOP DATA	Display the error detection status when the error data whose size is 2K bytes or more is received on the forward loop side. 1: Detected 0: Not detected	
	b5	R.LOOP DATA	Display the error detection status when the error data whose size is 2K bytes or more is received on the reverse loop side. 1: Detected 0: Not detected	
	b4	F.LOOP TIME	Display the error detection status when the data link monitoring timer is operated on the forward loop side. 1: Detected 0: Not detected	
	b3	R.LOOP TIME	Display the error detection status when the data link monitoring timer is operated on the reverse loop side. 1: Detected 0: Not detected	
	b2	F.LOOP AB.IF	Display the error detection status when receiving "1" more than specified number of times continuously, or the received data length is too short on the forward loop side. 1: Detected 0: Not detected	
	b1	R.LOOP AB.IF	Display the error detection status when receiving "1" more than specified number of times continuously, or the received data length is too short on the reverse loop side. 1: Detected 0: Not detected	
	b0	F.LOOP OVER	Display the detection status of data import delay error on the forward loop side. 1: Detected 0: Not detected	

■CC-Link IE Controller Network

Element	Bit	LED	Description	Remarks
buff[0]	b15	EXT.PW	Display the external power supply status of CC-Link IE Controller Network module with external power supply function. 1: External power supply being supplied 0: External power supply not supplied	ON:1 OFF:0
	b14-b7	RESERVE	—	—
	b6	RD	Display the data reception status. 1: Data being received 0: Data not received	ON:1 OFF:0
	b5	D.LNK	Display the data link status (cyclic transmission status). 1: Data link in operation 0: No data link	
	b4	PRM	Display the detection status of parameter error. 1: Detected 0: Not detected	
	b3	ERR.	Display the error detection status. 1: Detected 0: Not detected	
	b2	SD	Display the data sending status. 1: Data being sent 0: Data not sent	
	b1	MODE	Display the operating mode. 1: Operating in online mode 0: Operating in offline mode	
	b0	RUN	Display the operating status of board. 1: Operating normally 0: Hardware error or Board WDT error	
buff[1]	b15-b0	RESERVE	—	—

■CC-Link IE Field Network

Element	Bit	LED	Description	Remarks
buff[0]	b15-b12	RESERVE	—	—
	b11	LNK2	Display the link status of PORT2. 1: Linkup in progress 0: Linkdown in progress	ON:1 OFF:0
	b10	LINK1	Display the link status of PORT1. 1: Linkup in progress 0: Linkdown in progress	
	b9	LER2	Display the frame loss status of PORT2. 1: Frame loss occurring 0: No frame loss	
	b8	LER1	Display the frame loss status of PORT1. 1: Frame loss occurring 0: No frame loss	
	b7	MODE	Display the operating mode. 1: Operating in online mode 0: Operating in offline mode	
	b6	RD	Display the network reception status. 1: Data being received 0: Data not received	
	b5	SD	Display the network sending status. 1: Data being sent 0: Data not sent	
	b4	L.ERR	Display the detection status of communication error. 1: Detected 0: Not detected	
	b3	ERR.	Display the detection status of network board error. 1: Detected 0: Not detected	
	b2	D.LINK	Display the data link status (cyclic transmission status). 1: Data link in operation 0: No data link	
	b1	MST	Display the station type. 1: Operating as the master station 0: Other than master station	
	b0	RUN	Display the operating status of board. 1: Operating normally 0: A board WDT error is occurring or the board is resetting	
buff[1]	b15-b0	RESERVE	—	—

mdBdSwRead (reading switch status of the board)

Read a board switch status (such as station number setting, board number setting, board identification, and I/O address setting information).

Format

■Visual C++

```
Format      ret = mdBdSwRead(path,buf);
Argument    short      ret;           //Return value      OUT
            long       path;         //Path of channel   IN
            short      buf[];        //Read data        OUT
```

■Visual Basic .NET


```
Format      ret = mdBdSwRead(path,buf(0))
Argument    Short      ret           ;Return value      OUT
            Integer     path         ;Path of channel   IN
            Short       buf(n)       ;Read data        OUT
```

■Visual Basic 5.0, Visual Basic 6.0

```
Format      ret% = mdBdSwRead(path&,buf%(0))
Argument    Integer     ret          ;Return value      OUT
            Long         path        ;Path of channel   IN
            Integer      buf(n)      ;Read data        OUT
```

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
buf	Store the board switch status being read. ( Page 93 Explanation)

■Explanation

The board switch status (such as station number setting, board number setting, board identification, I/O address setting information) is read.

Element	Item	Description			
		CC-Link Ver.2	MELSECNET/H	CC-Link IE Controller Network	CC-Link IE Field Network
buf[0]	Setting value of station number	0 to 64 (0:master station)	1 to 64	1 to 120	0 to 120
buf[1]	Setting value of group number	0 fixed	MNET/10 mode 0 to 9 MNET/H mode 0 to 32	0 to 32	0 fixed
buf[2]	Setting value of network number	0 fixed	1 to 239	1 to 239	1 to 239
buf[3]	RESERVE	0 fixed	0 fixed	0 fixed	0 fixed
buf[4]	RESERVE	0 fixed	0 fixed	0 fixed	0 fixed
buf[5]	RESERVE	0 fixed	0 fixed	0 fixed	0 fixed

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

mdBdVerRead (read version information of the board)

Read the version information of the board.

Format

■Visual C++

Format	ret = mdBdVerRead(path,buf);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	buf[];	//Read data	OUT

■Visual Basic .NET


Format	ret = mdBdVerRead(path,buf(0))			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	buf(n)	;Read data	OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdBdVerRead(path&,buf%(0))			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	buf(n)	;Read data	OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
buf	Store the version information of board being read. ( Page 95 Explanation)

■Explanation

The following table shows the details of the version information.

Offset (word)	Item	Description			
		CC-Link Ver.2	MELSECNET/H	CC-Link IE Controller Network	CC-Link IE Field Network
00H	Fixed value	'S', 'G' fixed	'S', 'G' fixed	'S', 'G' fixed	'S', 'G' fixed
01H	Checksum	Sum of 02H to 0FH	Sum of 02H to 0FH	Sum of 02H to 0FH	Sum of 02H to 0FH
02H	Software version	'A' to 'ZZ'	'0A' to '9Z'	'0A' to '9Z'	'0A' to '9Z'
03H to 05H	Date	Date year / month / day Example)2010/2/1 '1' '0' '0' '2' '0' '1'	Date year / month / day Example)2010/2/1 '1' '0' '0' '2' '0' '1'	Date year / month / day Example)2010/2/1 '1' '0' '0' '2' '0' '1'	Date year / month / day Example)2010/2/1 '1' '0' '0' '2' '0' '1'
06H to 07H	Reservation area (4 bytes)	000H fixed	000H fixed	000H fixed	000H fixed
08H to 0FH	Software model name (16 bytes)	'QJ61BT11N'	'QJ71LP21-25', 'QJ71LP21S-2', 'QJ71LP21G', 'QJ71BR11'	'QJ71GP21-SX', 'QJ71GP21S-SX'	'QJ71GF11-T2'
10H to 17H	Hardware model name (16 bytes)	'Q80BD-J61BT11N', 'Q81BD-J61BT11'	'Q80BD-J71LP21-25', 'Q81BD-J71LP21-25', 'Q80BD-J71LP21S-25', 'Q80BD-J71LP21G', 'Q80BD-J71LP21GE', 'Q80BD-J71BR11'	'Q80BD-J71GP21', 'Q80BD-J71GP21S', 'Q81BD-J71GP21', 'Q81BD-J71GP21S'	'Q80BD-J71GF11-T2', 'Q81BD-J71GF11-T2'
18H	2 port memory possession size	0200H (512 KB)	0080H (128 KB)	0180H (384 KB)	0080H (128 KB)
19H	2 port attribute	0080H fixed	0080H fixed	0080H fixed	0080H fixed
1AH	Applicable offset	0000H fixed	0000H fixed	0000H fixed	0000H fixed
1BH (L)	Machine classification (10 bytes)	Function version ('A', 'B'...)	0000H fixed	Function version ('A', 'B'...)	Function version ('A', 'B'...)
1BH (H)		Major version of CC-Link (0002H)		0000H fixed	0000H fixed
1CH(L)		Minor version of CC-Link (0000H)			
1CH (H) to 1FH		0000H fixed			

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

mdInit (initializing programmable controller information table)

Refresh a programmable controller device address table which is the internal data of the MELSEC data link library.

Format

■Visual C++

Format	ret = mdInit(path);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN

■Visual Basic .NET

Format	ret = mdInit(path)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdInit(path&)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)

■Explanation

- Programmable controller device information acquired at the initial access to the programmable controller CPU is discarded.
- After the execution of the mdInit function, programmable controller device information is reacquired at the initial access to the programmable controller CPU. Therefore, after the execution of the mdInit function, a longer function execution time is required at the initial access.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose()

mdSend (batch writing devices)

Batch write data to the devices on the target station for the number of written data bytes from the start device number.

Format

■Visual C++

Format	ret = mdSend(path,stno,devtyp,devno,size,data);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	devtyp;	//Device type IN
	short	devno;	//Start device number IN
	short	*size;	//Written byte size IN/OUT
	short	data[];	//Written data (single-precision integer array) IN

■Visual Basic .NET



Format	ret = mdSend(path,stno,devtyp,devno,size,data(0))		
Argument	Short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Short	stno	;Station number IN
	Short	devtyp	;Device type IN
	Short	devno	;Start device number IN
	Short	size	;Written byte size IN/OUT
	Short	data(n)	;Written data (single-precision integer array) IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdSend(path&,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Start device number IN
	Integer	size	;Written byte size IN/OUT
	Integer	data(n)	;Written data (single-precision integer array) IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
devtyp	Specify the type of device to which the data is written. ( Page 51 Specifying device types)
devno	Specify the start device number of device to which the data is written. <ul style="list-style-type: none"> Specify the start device number with a multiple of 8 for the access to a bit device. (However, the start device number can be specified arbitrarily for accessing a contact and coil of the long timer and long retentive timer.) Specify the start device number with a multiple of 16 (0, 16, 32...) for the access to a bit device (RX, RY, SB) of CC-Link other station link device.
size	Specify the byte size to be written in even number. <ul style="list-style-type: none"> When the specified byte size to be written exceeds the device range (-5: size error), the applicable size is returned to "size". When a double word device is specified to "devtyp", specify the size in multiples of 4.
data	Specify the data to be written in single-precision integer array.

■Explanation

- When the specified written byte size exceeds the transient transmission size, data are divided inside the function and written.
- When accessing another station, the extended comment information will be deleted by writing data to the block (extended file register) to which the extended comment is assigned.
- When accessing another station, the sub2 and sub3 programs will be deleted by writing data to the block (extended file register) which overlaps with the setting areas of the sub2 and sub3 programs.
- When a double word device is specified to "devtyp", store the data to be written to "data" as follows:


Ex.

When "devtyp" is LZ and "size" is 8

Array	Value
data(0)	Lower 1 word of LZ0
data(1)	Upper 1 word of LZ0
data(2)	Lower 1 word of LZ1
data(3)	Upper 1 word of LZ1

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdSendEx(), mdReceive(), mdReceiveEx()

mdSend (SEND function)

Send data to the specified channel number of the target station.

Format

■Visual C++

Format	ret = mdSend(path,stno,devtyp,devno,size,data);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	devtyp;	//Device type IN
	short	devno;	//Channel number IN
	short	*size;	//Send byte size IN/OUT
	short	data[];	//Send data (single-precision integer array) IN

■Visual Basic .NET

Format	ret = mdSend(path,stno,devtyp,devno,size,data(0))		
Argument	Short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Short	stno	;Station number IN
	Short	devtyp	;Device type IN
	Short	devno	;Channel number IN
	Short	size	;Send byte size IN/OUT
	Short	data(n)	;Send data (single-precision integer array) IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdSend(path&,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Channel number IN
	Integer	size	;Send byte size IN/OUT
	Any	data(n)	;Send data (single-precision integer array) IN

Detailed specifications


■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. (☞ Page 47 Specifying station numbers) • Logical station numbers cannot be specified.
devtyp	Specify whether to send data with arrival acknowledgment or without arrival acknowledgment. • With arrival acknowledgment*1: Specify 101 (65H) • Without arrival acknowledgment: Specify 102 (66H)
devno	Specify a channel used by the own station and a target station channel. (☞ Page 100 Explanation)
size	Specify the byte size of send data in even number. • Specify the byte size within the range of 2 to 1920. • When receiving the data which are transmitted by MELSECNET/H board with CC-Link IE Controller Network board or CC-Link IE Controller Network board, specify within the range of 2 to 960. • When accessing via MELSECNET/10 network, specify the byte size within the range of 2 to 960.
data	Specify the data to be written in single-precision integer array.

*1 Do not specify all stations or group numbers for the station number when sending data with arrival acknowledgment.

■Explanation

- This function supports the SEND instruction of the link dedicated instruction. For details of the functions , refer to the manuals of each board.
- The following explains how to specify the channel numbers.

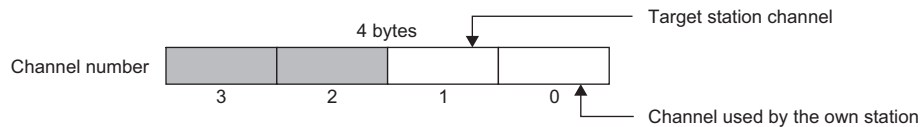

Item	Description	
target station channel	Specify a target station channel number. <ul style="list-style-type: none">• MELSECNET/H board, CC-Link IE Controller Network board• CC-Link IE Field Network board	— 1 to 8 1 to 2
channel used by the own station	Specify a channel number used by the own station. <ul style="list-style-type: none">• MELSECNET/H board, CC-Link IE Controller Network board• CC-Link IE Field Network board	— 1 to 8 1 to 2

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📖 Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdSendEx(), mdReceive(), mdReceiveEx()

mdReceive (batch read devices)

Batch read data from the devices on the target station for the number of read data bytes from the start device number.

Format

■Visual C++

Format	ret = mdReceive(path,stno,devtyp,devno,size,data);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	devtyp;	//Device type IN
	short	devno;	//Start device number IN
	short	*size;	//Read byte size IN/OUT
	short	data[];	//Read data (single-precision integer array) OUT

■Visual Basic .NET



Format	ret = mdReceive(path,stno,devtyp,devno,size,data(0))		
Argument	Short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Short	stno	;Station number IN
	Short	devtyp	;Device type IN
	Short	devno	;Start device number IN
	Short	size	;Read byte size IN/OUT
	Short	data(n)	;Read data (single-precision integer array) OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdReceive(path&,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Start device number IN
	Integer	size	;Read byte size IN/OUT
	Integer	data(n)	;Read data (single-precision integer array) OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
devtyp	Specify the type of device from which the data is read. ( Page 51 Specifying device types)
devno	Specify the start device number of device range to be read. <ul style="list-style-type: none"> Specify the start device number with a multiple of 8 for the access to a bit device. (However, the start device number can be specified arbitrarily for accessing a contact and coil of the long timer and long retentive timer.) Specify the start device number with a multiple of 16 (0, 16, 32...) for the access to a bit device (RX, RY, SB) of CC-Link other station link device.
size	Specify the byte size to be read in even number. <ul style="list-style-type: none"> When the specified byte size to be read exceeds the device range (-5: size error), the applicable size is returned to "size". When a double word device is specified to "devtyp", specify the size in multiples of 4.
data	Store the data being read.

■Explanation

- When the specified read byte size exceeds the transient transmission size, data are divided inside the function and read.
- When a double word device is specified to "devtyp", the data is stored to "data" as follows:


Ex.

When "devtyp" is LZ and "size" is 8

Array	Value
data(0)	Lower 1 word of LZ0
data(1)	Upper 1 word of LZ0
data(2)	Lower 1 word of LZ1
data(3)	Upper 1 word of LZ1

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdReceiveEx(), mdSend(), mdSendEx()

mdReceive (RECV function)

Read data of the specified channel number from the data which are received by the own station.

Format

■Visual C++

Format	ret = mdReceive(path,stno,devtyp,devno,size,data);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	devtyp;	//Device type IN
	short	devno;	//Channel number IN
	short	*size;	//Receive byte size IN/OUT
	short	data[];	//Receive data with send source information (single-precision integer array) OUT

■Visual Basic .NET

Format	ret = mdReceive(path,stno,devtyp,devno,size,data(0))		
Argument	Short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Short	stno	;Station number IN
	Short	devtyp	;Device type IN
	Short	devno	;Channel number IN
	Short	size	;Receive byte size IN/OUT
	Short	data(n)	;Receive data with send source information (single-precision integer array) OUT

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdReceive(path&,stno%,devtyp%,devno%,size%,data%(0))		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	devtyp	;Device type IN
	Integer	devno	;Channel number IN
	Integer	size	;Receive byte size IN/OUT
	Integer	data(n)	;Receive data with send source information (single-precision integer array) OUT

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the own station (255 (FFH)).
devtyp	Specify the RECV function (101 (65H)).
devno	Specify the own station channel number on which the received messages are stored. • MELSECNET/H board, CC-Link IE Controller Network board 1 to 8 • CC-Link IE Field Network board 1 to 2
size	Specify the byte size of received data in even number. • Specify the byte size within the range of 2 to 1920. • When receiving the data which are transmitted by MELSECNET/H board with CC-Link IE Controller Network board or CC-Link IE Controller Network board, specify within the range of 2 to 960. • When accessing via MELSECNET/10 network, specify the byte size within the range of 2 to 960. The size of received actual data is received.
data	Received actual data and send source information are stored as single-precision integer array. Reserve an area for the specified receive byte size and send source information (6 bytes).


■Explanation

This function supports the RECV instruction of the link dedicated instruction.
For details of the function, refer to the manuals of each board.

< Receive data with send source information (data) >

- Receive byte size and send source information (6 bytes) are stored in "receive data with send source information (data)".
Reserve an area for [receive byte size and send source information (6 bytes)] in "receive data with send source information (data)".
- Data are stored in "receive data with send source information (data)" as shown below.

Receive data with send source information (data)

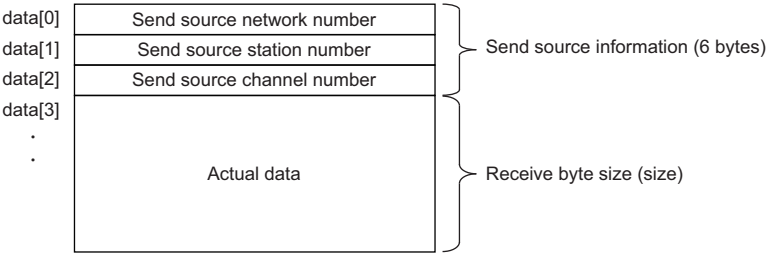

- Only the actual data with the specified receive byte size (size) is stored when the received actual data size is greater than the specified receive byte size (size).
- 125 (7DH) is stored to the send source station number when the station number of the send source is 0.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (📖 Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdReceiveEx(), mdSend(), mdSendEx()

mdRandW (writing devices randomly)

Write data to the devices on the target station specified with the randomly-specified devices.

Format

■Visual C++

Format	ret = mdRandW(path,stno,dev,buf,bufsize);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	dev[];	//Randomly-specified device IN
	short	buf[];	//Written data (single-precision integer array) IN
	short	bufsize;	//Dummy IN

■Visual Basic .NET

Format	ret = mdRandW(path,stno,dev(0),buf(0),bufsize)		
Argument	short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	short	stno	;Station number IN
	short	dev(n)	;Randomly-specified device IN
	Short	buf(n)	;Written data (single-precision integer array) IN
	short	bufsize	;Dummy IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdRandW(path&,stno%,dev%(0),buf%(0),bufsize%)		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	dev(n)	;Randomly-specified device IN
	Any	buf(n)	;Written data (single-precision integer array) IN
	Integer	bufsize	;Dummy IN

Detailed specifications

■Argument

Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. (☞ Page 47 Specifying station numbers)
dev	Specify the number of blocks, the device type, the start device number, and points of device to be written. (☞ Page 67 How to specify the randomly-specified devices (dev))
buf	Specify the data to be written in single-precision integer array. (☞ Page 67 How to specify the randomly-specified devices (dev))
bufsize	—

■Explanation

- The number of transient transmissions performed inside of the function changes with the specified randomly-specified devices.
- A longer function processing time is required for the random write function as compared with the batch write function. Consider using the batch write function if a shorter function processing time is required.
- When accessing another station, the extended comment information will be deleted by writing data to the block (extended file register) to which the extended comment is assigned.
- When accessing another station, the sub2 and sub3 programs will be deleted by writing data to the block (extended file register) which overlaps with the setting areas of the sub2 and sub3 programs.
- If an error occurs when writing devices randomly to B or W of the own station in MELSECNET(II) or MELSECNET/10, blocks with errors may exist among blocks in which the write function is normally completed.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. (☞ Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRandR()

mdRandR (reading devices randomly)

Read the device specified with the randomly-specified devices from the target station.

Format

■Visual C++

Format	ret = mdRandR(path,stno,dev,buf,bufsize);		
Argument	short	ret;	//Return value OUT
	long	path;	//Path of channel IN
	short	stno;	//Station number IN
	short	dev[];	//Randomly-specified device IN
	short	buf[];	//Read data (single-precision integer array) OUT
	short	bufsize;	//Number of bytes of read data IN

■Visual Basic .NET





Format	ret = mdRandR(path,stno,dev(0),buf(0),bufsize)		
Argument	Short	ret	;Return value OUT
	Integer	path	;Path of channel IN
	Short	stno	;Station number IN
	Short	dev(n)	;Randomly-specified device IN
	Short	buf(n)	;Read data (single-precision integer array) OUT
	Short	bufsize	;Number of bytes of read data IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdRandR(path&,stno%,dev%(0),buf%(0),bufsize%)		
Argument	Integer	ret	;Return value OUT
	Long	path	;Path of channel IN
	Integer	stno	;Station number IN
	Integer	dev(n)	;Randomly-specified device IN
	Any	buf(n)	;Read data (single-precision integer array) OUT
	Integer	bufsize	;Number of bytes of read data IN

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
dev	Specify the number of blocks, the device type, the start device number, and points of device to be read. ( Page 69 How to specify the randomly-specified devices (dev))
buf	Store the data being read. ( Page 69 How to specify the randomly-specified devices (dev))
bufsize	Specify the number of bytes of read data. ( Page 69 How to specify the randomly-specified devices (dev))

■Explanation

- The number of transient transmissions performed inside of the function changes with the specified randomly-specified devices.
- A longer function processing time is required for the random read function as compared with the batch read function.
Consider using the batch read function if a shorter function processing time is required.

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdRandW()

mdDevSet (setting bit devices)

Set the specified bit device on the target station (to ON).

Format

■Visual C++

Format	ret = mdDevSet(path,stno,devtyp,devno);			
Argument	short	ret;	//Return value	OUT
	long	path;	//Path of channel	IN
	short	stno;	//Station number	IN
	short	devtyp;	//Device type	IN
	short	devno;	//Specified device number	IN

■Visual Basic .NET



Format	ret = mdDevSet(path,stno,devtyp,devno)			
Argument	Short	ret	;Return value	OUT
	Integer	path	;Path of channel	IN
	Short	stno	;Station number	IN
	Short	devtyp	;Device type	IN
	Short	devno	;Specified device number	IN

■Visual Basic 5.0, Visual Basic 6.0

Format	ret% = mdDevSet(path&,stno%,devtyp%,devno%)			
Argument	Integer	ret	;Return value	OUT
	Long	path	;Path of channel	IN
	Integer	stno	;Station number	IN
	Integer	devtyp	;Device type	IN
	Integer	devno	;Specified device number	IN

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
devtyp	Specify the type of device to be set (ON). ( Page 51 Specifying device types)
devno	Specify the device number of device to be set (ON).

■Explanation

This function is a dedicated function for bit devices such as link relays (B) and internal relays (M).

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdDevRst()

mdDevRst (resetting bit devices)

Reset the specified bit device on the target station (to OFF).

Format

■Visual C++

```
Format      ret = mdDevRst(path,stno,devtyp,devno);
Argument    short      ret;           //Return value          OUT
            long      path;         //Path of channel       IN
            short     stno;         //Station number       IN
            short     devtyp;       //Device type          IN
            short     devno;       //Specified device number IN
```

■Visual Basic .NET



```
Format      ret = mdDevRst(path,stno,devtyp,devno)
Argument    Short      ret           ;Return value          OUT
            Integer    path         ;Path of channel       IN
            Short      stno         ;Station number       IN
            Short      devtyp       ;Device type          IN
            Short      devno       ;Specified device number IN
```

■Visual Basic 5.0, Visual Basic 6.0

```
Format      ret% = mdDevRst(path&,stno%,devtyp%,devno%)
Argument    Integer    ret           ;Return value          OUT
            Long       path         ;Path of channel       IN
            Integer    stno         ;Station number       IN
            Integer    devtyp       ;Device type          IN
            Integer    devno       ;Specified device number IN
```

Detailed specifications

■Argument


Argument	Description
path	Specify the path of channel whose communication line is opened. (Use the path which is returned when executing mdOpen.)
stno	Specify the station number of target station. ( Page 47 Specifying station numbers)
devtyp	Specify the type of device to be reset (OFF). ( Page 51 Specifying device types)
devno	Specify the device number of device to be reset (OFF).

■Explanation

This function is a dedicated function for bit devices such as link relays (B) and internal relays (M).

■Return value

Success : Returns the value 0

Error : Return the value other than 0. Refer to the list of error codes. ( Page 127 ERROR CODES)

■Related function

mdOpen(), mdClose(), mdDevSet()

5 SAMPLE PROGRAMS

This chapter explains the sample programs that are included on the CD-ROM of the software package. Sample programs are registered in the folder in which the utility has been installed.

Type	Folder	Description
CC-Link Ver.2 board	\CCBD2\Sample\MDFunction	A sample program for MELSEC data link library
	\CCBD2\Sample\LocalStation	A sample program for data link check of a CC-Link Ver.2 board
	\CCBD2\Sample\MasterStation	
MELSECNET/H board	\MNETH\SAMPLES	A sample program for MELSEC data link library
CC-Link IE Controller Network board	\MNETG\SAMPLES	A sample program for MELSEC data link library
CC-Link IE Field Network board	\CCIEF\SAMPLES	A sample program for MELSEC data link library
	\CCIEF\SAMPLES\RemoteDevice	A sample program for a remote I/O module

Point

Sample programs are provided as a reference for creating user application programs. Use sample programs on a user's own responsibility.

Sample program for MELSEC data link library

The following sample programs are stored as examples of functions.


Folder	Description		
DEMO	Reading device data	CC-Link Ver.2 board	A sample program for reading device D0 of a master station
		MELSECNET/H board	A sample program for reading device D0 of network number 1 and station number 1
		CC-Link IE Controller Network board	
		CC-Link IE Field Network board	
MTEST MTEST2	Testing MELSEC data link library in general		A sample program for MELSEC data link library in general

Sample program for data link check of a CC-Link Ver.2 board

The following sample programs are stored as program examples to check whether the data link between the master station and each station is executed properly.

Folder		Description	
LocalStation	Datalink	Communication between a master station and a local station	A sample program for communication between a master station and a local station
MasterStation	Datalink	Communication between a master station and a local station	A sample program for communication between a master station and a local station
	PositioningSystem	Communication between a master station and an intelligent device station (AJ65BT-D75P2-S3)	A sample program for initialization, positioning, origin point return, and JOG operation for AJ65BT-D75P2-S3
	R2	Communication between a master station and an intelligent device station (AJ65BT-R2)	A sample program for initialization, transmission and reception for AJ65BT-R2
	RemoteDevice	Communication between a master station and a remote device station	A sample program for converting digital/analog for AJ65BT-64DAV
	RemoteIO	Communication between a master station and a remote I/O station	A sample program for reading/writing remote I/Os for a remote I/O station

For details, refer to the following manual.

 Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B)

Sample program for a CC-Link IE Field Network remote I/O module

A program example to set the initial setting of a CC-Link IE Field Network remote I/O module (remote device station) with mdRemBufWriteEx function and mdRemBufReadEx function is stored.

5.1 Using Visual Basic .NET

Sample programs for Visual Basic .NET are stored in the "NETVB" folder.

Sample programs are created in Visual Studio .NET 2003 project format.

Convert the project when using Visual Basic other than that in Visual Studio .NET 2003.



"Mdfunc.vb" is not included in the sample program.

Add "Mdfunc.vb" before using the sample program.

For the setting method, refer to the following section.

Page 17 Using Visual Basic .NET

MTEST and MTEST2

Sample programs for tests of MELSEC data link library functions are stored in the following folders depending on a programming language used.

Folder	MTEST	MTEST2
Programming language	Visual Studio .NET 2003 Visual Studio 2005 Visual Studio 2008 Visual Studio 2010	Visual Studio 2012 Visual Studio 2013 Visual Studio 2015 Visual Studio 2017



This sample program cannot be used as a 64-bit version user application. In order to use it on a 64-bit version operating system, select "x86" for the platform in Visual Studio, and build it as a 32-bit version user application.

NETVB\MTEST

MSFlexGrid is used in the sample program. If MSFlexGrid is not installed, a warning occurs, however, the operation of sample program is not affected.

NETVB\MTEST2

A warning occurs because a controller created by the Visual Basic 6.0 is used for this sample program. However, there is no effect for the operation of the sample program.

5.2 Using Visual Basic 5.0, Visual Basic 6.0

Sample programs for Visual Basic 5.0 and Visual Basic 6.0 are stored in the "VB" folder.

Point

"Mdfunc.bas" is not included in the sample program.
Add "Mdfunc.bas" before using the sample program.
For the setting method, refer to the following section.
☞ Page 14 Using Visual Basic 5.0, Visual Basic 6.0

5.3 Using Visual C++

Sample programs for Visual C++ are stored in the "VC" folder.

Sample programs are created in the following Visual C++ project formats.

Convert the project when using a different format of Visual C++.

Software package	Project format of a sample program
SW1DNC-CCBD2-B	Visual C++ 5.0
SW0DNC-MNETH-B	Visual C++ 5.0
SW1DNC-MNETG-B	Visual C++ 6.0
SW1DNC-CCIEF-B	Visual C++ .NET2003

If Visual Studio is installed by default, some necessary functions are not installed; an error may occur in the project conversion of a sample program.

Customize the installation by selecting necessary functions.

Example) For Visual Studio 2017, select the checkbox(es) of the following item(s).

- To use MFC: "Microsoft Foundation Classes for C++"
- To create a program which can be executed on Windows XP: "Windows XP Support for C++" and "Windows Universal CRT SDK"

For the method to select a function during the installation process or to add a function after the installation, refer to the Microsoft website.

Point

An include file and a library file are not included in the sample program.
Set an include file and a library file before using the sample program.
For the setting method, refer to the following section.

- ☞ Page 15 Using Visual C++ 5.0, Visual C++ 6.0
- ☞ Page 18 Using Visual C++ .NET 2003, Visual C++ 2005, Visual C++ 2008
- ☞ Page 20 Using Visual C++ in Visual Studio 2010 or Visual Studio 2012
- ☞ Page 27 Using Visual C++ in Visual Studio 2013, Visual Studio 2015, or Visual Studio 2017

6 DEVICE MONITOR UTILITY

Device Monitor Utility is a utility to monitor devices and change current values.

Device Monitor Utility monitors devices by using the MELSEC data link library.





For accessible devices of Device Monitor Utility, refer to the following section.

 Page 38 Accessible Devices

Installing Device Monitor Utility


It is included in the following software packages. When installing it in the same personal computer, Device Monitor Utility included in a newer software package is valid.

For the operating environment and installation method, refer to the manual of each software package.

Software package	Reference
SW1DNC-CCBD2-B	 Type Q80BD-J61BT11N/Q81BD-J61BT11 CC-Link System Master/Local Interface Board User's Manual (For SW1DNC-CCBD2-B)
SW0DNC-MNETH-B	 MELSECNET/H Interface Board User's Manual (For SW0DNC-MNETH-B)
SW1DNC-MNETG-B	 CC-Link IE Controller Network Interface Board User's Manual (For SW1DNC-MNETG-B)
SW1DNC-CCIEF-B	 CC-Link IE Field Network Interface Board User's Manual (For SW1DNC-CCIEF-B)

6.1 Operation Flow

The following flowchart shows a basic monitoring operation flow.

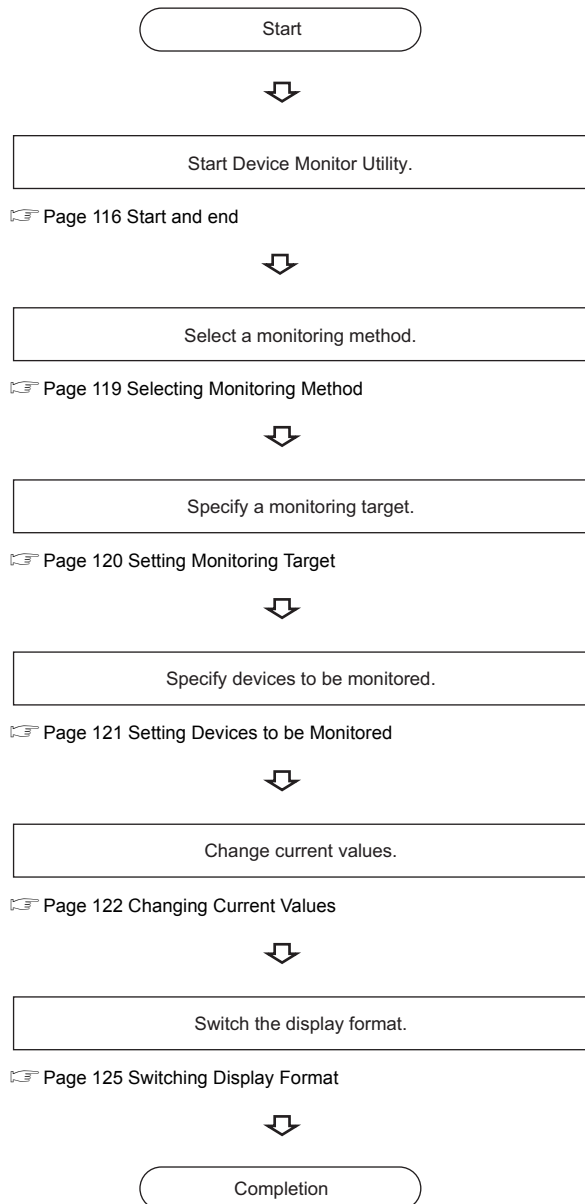

Point

- Buffer memory of CC-Link IE Field Network remote device station cannot be monitored with the Device Monitor Utility.
- When an error occurs in Device Monitor Utility, check the occurred error code in the error code list in the following section. (Page 127 ERROR CODES)

6.2 Menu List

The following explains the functions of Device Monitor Utility.

[Menu]		Reference
⇒ [Batch monitor]	Batch monitor one type of devices.	Page 119 Monitoring devices in batch
⇒ [16-point register monitor]	Monitor multiple devices simultaneously in units of 16 points.	Page 119 Monitoring registered 16-point devices
⇒ [Exit]	End Device Monitor Utility.	Page 116 Start and end
[Setting]		Reference
⇒ [Network setting]	Set a programmable controller CPU or board to be monitored.	Page 120 Setting Monitoring Target
⇒ [Device setting]	Set devices to be monitored.	Page 121 Setting Devices to be Monitored
[Device Write]		Reference
⇒ [Data changing]	Change the word device/double word device value.	Page 122 Changing word device/double word device values
⇒ [Continuous change in data]	Change the sequenced word devices/double word devices to the same value.	
⇒ [Bit device setting]	Turn ON the specified bit devices.	Page 124 Turning bit devices ON and OFF
⇒ [Bit device resetting]	Turn OFF the specified bit devices.	
[Changing display]		Reference
⇒ [Word device] ⇒ [(Display format)]	Change the display format of word devices.	Page 125 Switching Display Format
⇒ [Double Word device] ⇒ [(Display format)]	Change the display format of double word devices.	
⇒ [Bit device] ⇒ [(Display format)]	Change the display format of bit devices.	
[Options]		Reference
⇒ [Numerical Pad]	Enable/disable the setting to use the numerical pad.	Page 126 Using Numerical Pad
[Help]		Reference
⇒ [Help]	Display Help.	Page 118 Help function
⇒ [About]	Display product information such as a product version.	

6.3 Screen Configuration and Basic Operations

This section explains the screen configuration and basic operations of Device Monitor Utility.

Start and end

The following explains the operating method to start/end the utility.

Start

Start Device Monitor Utility.

The utility is started from the menu of the utility of each board or Windows Start.

■Start from CC-Link Ver.2 Utility or MNETH Utility

Operating procedure

1. Click the [Device Monitor] button.

■Start from CC IE Control Utility

Operating procedure

1. Select [Device Monitor Utility] from the system menu.

■Start from CC IE Field Utility

Operating procedure

1. Select [Online] ⇒ [Device Monitor Utility]

■Start from the Windows Start

Operating procedure

1. Select [MELSEC] ⇒ [Device Monitor Utility (Board)] from Windows Start*1.

*1 [Start screen] ⇒ [All apps] or [Start] ⇒ [All Programs]

End

End Device Monitor Utility.


Operating procedure

1. Select [Menu] ⇒ [Exit]

Screen configuration and basic operations

The following explains the screen configuration of Device Monitor Utility.

Window

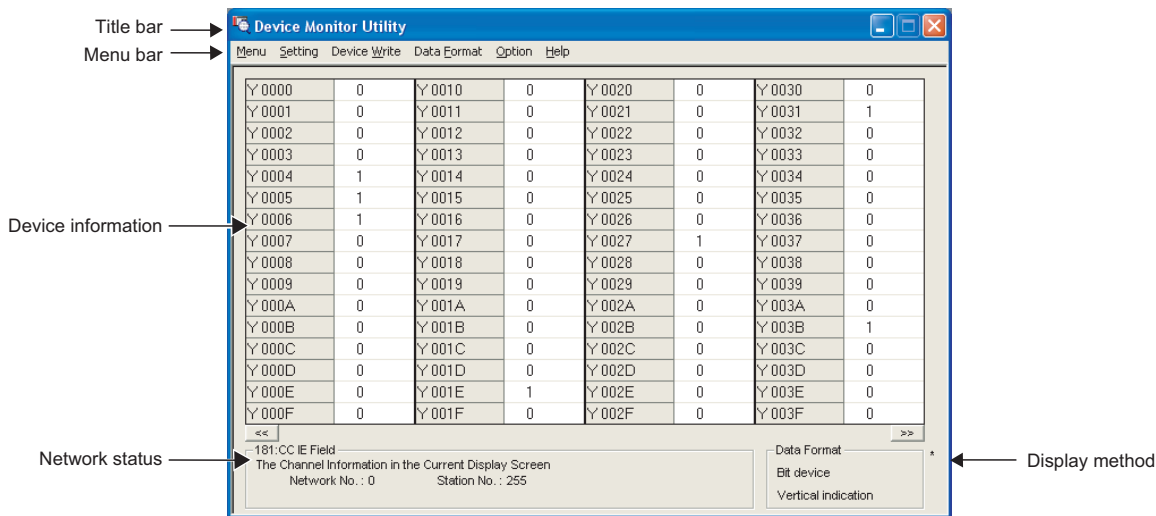

Displayed items

Item	Description
Title bar	Displays a project name.
Menu bar	Displays menu options for executing each function.
Device information	Display the current device status. For changing the monitoring method, refer to the following section. ☞ Page 119 Selecting Monitoring Method For changing the current values, refer to the following section. ☞ Page 122 Changing Current Values
Network status	Display the currently set network status. For setting the network, refer to the following section. ☞ Page 120 Setting Monitoring Target
Display method	Display the type and display format of devices being displayed. For changing a device type, refer to the following section. ☞ Page 121 Setting Devices to be Monitored For changing a display format, refer to the following section. ☞ Page 125 Switching Display Format

Point

- When own station is set as a monitoring target
"0" is displayed for the network number and "255" is displayed for the station number as a network status.

Help function

Displaying Help screen

Display the Help screen of Device Monitor Utility.

Operating procedure

1. Select [Help] ⇒ [Manual]

Checking product version

Displays information such as, software version of Device Monitor Utility.

Operating procedure

1. Select [Help] ⇒ [About]




6.4 Selecting Monitoring Method

This section explains a method for selecting a monitoring method in Device Monitor Utility.

Monitoring devices in batch

Specify one type of devices to monitor in batch.

Window

 [Menu] ⇒ [Batch monitor]

< Bit devices >

Y 0000	0	Y 0010	0	Y 0020	0	Y 0030	0
Y 0001	0	Y 0011	0	Y 0021	0	Y 0031	1
Y 0002	0	Y 0012	0	Y 0022	0	Y 0032	0
Y 0003	0	Y 0013	0	Y 0023	0	Y 0033	0
Y 0004	1	Y 0014	0	Y 0024	0	Y 0034	0
Y 0005	1	Y 0015	0	Y 0025	0	Y 0035	0
Y 0006	1	Y 0016	0	Y 0026	0	Y 0036	0
Y 0007	0	Y 0017	0	Y 0027	1	Y 0037	0
Y 0008	0	Y 0018	0	Y 0028	0	Y 0038	0
Y 0009	0	Y 0019	0	Y 0029	0	Y 0039	0
Y 000A	0	Y 001A	0	Y 002A	0	Y 003A	0
Y 000B	0	Y 001B	0	Y 002B	0	Y 003B	1
Y 000C	0	Y 001C	0	Y 002C	0	Y 003C	0
Y 000D	0	Y 001D	0	Y 002D	0	Y 003D	0
Y 000E	0	Y 001E	1	Y 002E	0	Y 003E	0
Y 000F	0	Y 001F	0	Y 002F	0	Y 003F	0

< Word devices >

Ww 0000	0	Ww 0010	0	Ww 0020	0	Ww 0030	0
Ww 0001	0	Ww 0011	0	Ww 0021	0	Ww 0031	0
Ww 0002	0	Ww 0012	0	Ww 0022	0	Ww 0032	0
Ww 0003	0	Ww 0013	0	Ww 0023	0	Ww 0033	0
Ww 0004	0	Ww 0014	0	Ww 0024	0	Ww 0034	0
Ww 0005	10	Ww 0015	0	Ww 0025	0	Ww 0035	0
Ww 0006	0	Ww 0016	0	Ww 0026	0	Ww 0036	0
Ww 0007	0	Ww 0017	0	Ww 0027	0	Ww 0037	0
Ww 0008	0	Ww 0018	0	Ww 0028	0	Ww 0038	0
Ww 0009	0	Ww 0019	255	Ww 0029	0	Ww 0039	0
Ww 000A	0	Ww 001A	0	Ww 002A	0	Ww 003A	0
Ww 000B	0	Ww 001B	0	Ww 002B	0	Ww 003B	0
Ww 000C	0	Ww 001C	0	Ww 002C	0	Ww 003C	0
Ww 000D	0	Ww 001D	0	Ww 002D	0	Ww 003D	0
Ww 000E	0	Ww 001E	0	Ww 002E	0	Ww 003E	0
Ww 000F	0	Ww 001F	0	Ww 002F	0	Ww 003F	0

Displayed items

Item	Description
Device information*1	—
	Device name
	Monitoring result
[<< / >>] button	

*1 The number of displayed columns will differ depending on the settings of a connection target CPU and display format.


Monitoring registered 16-point devices

Monitor devices by specifying different types of devices in units of 16 points.

This function can monitor a maximum of five different types of bit devices and one type of word devices/double word devices simultaneously.

The displayed information of devices is the same as that of the batch monitor function.

Window


 [Menu] ⇒ [16 point register monitor]


X 0000	0	X 0010	0	Y 0000	0	Y 0010	0	Ww 0000	0
X 0001	0	X 0011	0	Y 0001	0	Y 0011	0	Ww 0001	0
X 0002	0	X 0012	0	Y 0002	0	Y 0012	0	Ww 0002	0
X 0003	0	X 0013	0	Y 0003	0	Y 0013	0	Ww 0003	0
X 0004	0	X 0014	0	Y 0004	1	Y 0014	0	Ww 0004	0
X 0005	0	X 0015	0	Y 0005	1	Y 0015	0	Ww 0005	10
X 0006	0	X 0016	0	Y 0006	1	Y 0016	0	Ww 0006	0
X 0007	0	X 0017	0	Y 0007	0	Y 0017	0	Ww 0007	0
X 0008	0	X 0018	0	Y 0008	0	Y 0018	0	Ww 0008	0
X 0009	0	X 0019	0	Y 0009	0	Y 0019	0	Ww 0009	0
X 000A	0	X 001A	0	Y 000A	0	Y 001A	0	Ww 000A	0
X 000B	0	X 001B	0	Y 000B	0	Y 001B	0	Ww 000B	0
X 000C	0	X 001C	0	Y 000C	0	Y 001C	0	Ww 000C	0
X 000D	0	X 001D	0	Y 000D	0	Y 001D	0	Ww 000D	0
X 000E	0	X 001E	0	Y 000E	0	Y 001E	1	Ww 000E	0
X 000F	0	X 001F	0	Y 000F	0	Y 001F	0	Ww 000F	0

6.5 Setting Monitoring Target

This section explains the method for setting a programmable controller CPU or board to be monitored.
Set a target when starting Device Monitor Utility.

Window

 [Setting] ⇒ [Network setting]

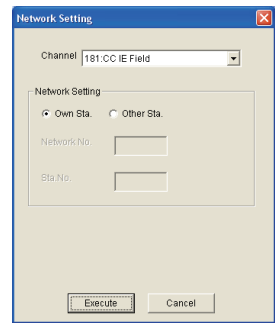

Operating procedure

1. Set the items on the screen.

Item	Description
Channel	Set the access source channel number to be used.
Network Setting	Set the monitoring target. Set the network number and the station number when the access target is at another station.

2. Click the [Execute] button.


Point

- Accessing multiple CPU system
Enter "0" for the network number and a value of "logical station number" which was set in the each utility for the station number.
- Do not specify the remote I/O station and intelligent device station on CC-Link for the monitoring target.
Otherwise, an error occurs.

6.6 Setting Devices to be Monitored

This section explains a method for setting devices to be monitored.

Window

 [Setting] ⇒ [Device setting]

< For batch monitor >

Device Setting

Device Type

Device Type ER(extension file register)

Block No. 1

DeviceNo.

HEX

DEC

OCT

0

Execute

Cancel

< For 16-point register monitor >

Device Setting

Device

Device Type LW(direct link register)

Network No. 1

DeviceNo.

HEX

DEC

OCT

00000000

Setting

Register Device List

Bit device	Word device/ Double Word device
X 0000	LW1 00000000
Y 0000	--
B 00000000	--
--	--
--	--

Change

Delete

Execute

Cancel

Operating procedure

1. Set the items on the screen.

Item	Description
Device Type	Set a type of a device to be monitored. Specify a device type of the MELSEC data link library. (🔗 Page 51 Specifying device types) <ul style="list-style-type: none">• Enter a block number for ER.• Enter a network number for LX, LY, LB, LW, LSB, and LSW.• Enter a value of start I/O number divided by 16 in decimal for SPG.
Device No.	Set a start number of the device to be monitored. (HEX: Hexadecimal, DEC: Decimal, OCT: Octal)
Register Device List	Display a list of registered devices.
[Setting] button	Adds the items set for "Device Type" and "Device No." to "Register Device List".
[Change] button	Sets the setting of the device selected in "Register Device List" to the settings set for "Device Type" and "Device No.".
[Delete] button	Deletes the setting of the device selected in "Register Device List".

2. Click the [Execute] button.

Point

- Devices that can be monitored with 16-point register monitor

The only devices that can be monitored using the 16-point register monitor are ones that have random access capability. If a device that is not capable of random access is specified, a device type error will occur.

For details of the random access capability of each device, refer to the following manual.

🔗 Page 38 Accessible Devices

6 DEVICE MONITOR UTILITY
6.6 Setting Devices to be Monitored

121

6.7 Changing Current Values

This section explains a method for changing current device values.

Precaution

When changing data during operation, configure an interlock circuit in the program to ensure that the entire system will always operate safely. And determine corrective actions to be taken between the personal computer and CPU module in case of a communication failure.


Changing word device/double word device values

Change word device/double word device values. The "Continuous Change in Data" function changes the values of continuous word devices/double word devices to the same value.

Window


 [Device Write] ⇒ [Data changing]/[Continuous change in data]

< For Data Changing >

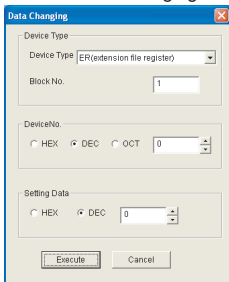

The 'Data Changing' dialog box has the following fields: 'Device Type' (dropdown menu showing 'ER(extension file register)'), 'Block No.' (text box with '1'), 'Device No.' (radio buttons for HEX, DEC, OCT with '0' in the text box), and 'Setting Data' (radio buttons for HEX, DEC with '0' in the text box). It has 'Execute' and 'Cancel' buttons at the bottom.


< For Continuous Change in Data >

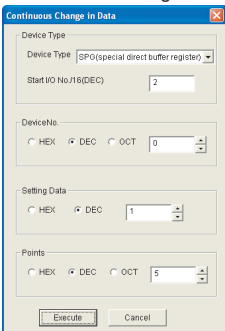

The 'Continuous Change in Data' dialog box has the following fields: 'Device Type' (dropdown menu showing 'SPG(special direct buffer register)'), 'Start I/O No./16(DEC)' (text box with '2'), 'Device No.' (radio buttons for HEX, DEC, OCT with '0' in the text box), 'Setting Data' (radio buttons for HEX, DEC with '1' in the text box), and 'Points' (radio buttons for HEX, DEC, OCT with '5' in the text box). It has 'Execute' and 'Cancel' buttons at the bottom.

Operating procedure

1. Set the type and number of devices whose current values are to be changed.

Item	Description
Device Type	Set a type of devices whose values are to be changed. Specify a device type of the MELSEC data link library. ( Page 51 Specifying device types) <ul style="list-style-type: none">• Enter a block number for ER.• Enter a network number for LW and LSW.• Enter a value of start I/O number divided by 16 in decimal for SPG.
Device No.	Set a start number of devices whose values are to be changed. (HEX: Hexadecimal, DEC: Decimal, OCT: Octal)

2. Set a value and points to be changed.

Item	Description
Setting Data	Set a value to be changed. (HEX: Hexadecimal, DEC: Decimal)*1


*1 When the DEC (Decimal) is selected, only signed decimal format can be specified.

3. For the "Continuous Change in Data" function, set device points to be changed.


Item	Description
Points	Set a number of devices whose values are to be changed. (HEX: Hexadecimal, DEC: Decimal, OCT: Octal) Setting range: 1 to 64 points

4. Click the [Execute] button.

A data of a word device/double word device can also be changed by double-clicking the device column of the device information on the monitoring screen.

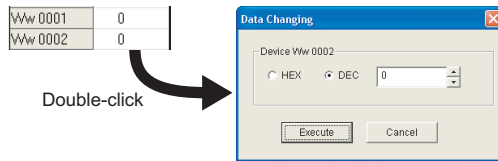


When the display format is set to decimal (unsigned 16-bit) or decimal (unsigned 32-bit) on the Data Changing screen displayed by double-clicking the device column, the value same as the display format can be set.

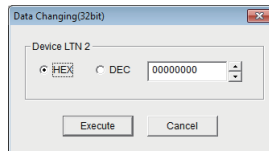


Turning bit devices ON and OFF

Change ON and OFF of bit devices.


Window

 [Device Write] ⇒ [Bit device set]/[Bit device reset]

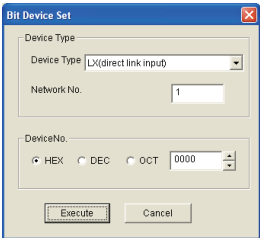


Operating procedure


1. Set the type and number of devices whose current values are to be changed.

Item	Description
Device Type	Set a type of devices whose values are to be changed. Specify a device type of the MELSEC data link library. ( Page 51 Specifying device types) <ul style="list-style-type: none">• Enter a network number for LX, LY, LB, and LSB.
Device No.	Set a start number of devices whose values are to be changed. (HEX: Hexadecimal, DEC: Decimal, OCT: Octal)

2. Click the [Execute] button.

Point

- Devices that can be changed
The only devices that can be changed in this function are ones that have random access capability.
If a device that is not capable of random access is specified, a device type error will occur.
For details of the random access capability of each device, refer to the following manual.
 Page 38 Accessible Devices
- A bit device can also be turned ON and OFF by double-clicking the device column of the device information on the monitoring screen.

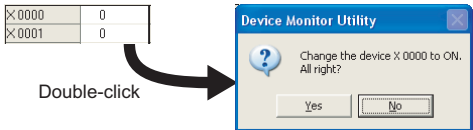

6.8 Switching Display Format

This section explains a method for switching a display format (such as in hexadecimal or in decimal) of device information for monitoring.

The following shows the menus that can be selected with the Batch monitor and 16-point register monitor functions.

Operating procedure

1. Select [Data Format] ⇒ [Word device]/[Double Word device]/[Bit device] ⇒ [(display format)]

Word devices

○: Can be displayed, —: Cannot be displayed

Display format	Batch monitor	16-point register monitor
DEC (decimal) (signed 16 bits)	○	○
DEC (decimal) (unsigned 16 bits)	○	○
HEX (hexadecimal) (16 bits)	○	○
OCT (octal) (16 bits)	○	○
BIN (binary) (16 bits)	○	—
DEC (decimal) (signed 32 bits)	○	○
DEC (decimal) (unsigned 32 bits)	○	○
HEX (hexadecimal) (32 bits)	○	○
OCT (octal) (32 bits)	○	○
BIN (binary) (32 bits)	○	—

Double word devices

○: Can be displayed, —: Cannot be displayed

Display format	Batch monitor	16-point register monitor
DEC (decimal) (signed 32 bits)	○	○
DEC (decimal) (unsigned 32 bits)	○	○
HEX (hexadecimal) (32 bits)	○	○
OCT (octal) (32 bits)	○	○
BIN (binary) (32 bits)	○	—

Bit devices

○: Can be displayed, —: Cannot be displayed

Display format	Batch monitor	16-point register monitor
Vertical Indication	○	—
Horizontal Indication (F-0) (decimal)	○	—
Horizontal Indication (F-0) (hexadecimal)	○	—
Horizontal Indication (0-F) (decimal)	○	—
Horizontal Indication (0-F) (hexadecimal)	○	—

6.9 Using Numerical Pad

This section explains the option function for entering numerals.

A numerical pad allows numeric values, such as device values, to be entered only with the mouse operation.

Enabling/disabling numerical pad

Operating procedure


1. [Option] ⇒ [Numerical Pad]


After the setting, a numerical pad is displayed by clicking a numeric value input field.

The setting is disabled by selecting this menu again.

Entering values using numerical pad

Window

 Click a numeric value input field on a screen.

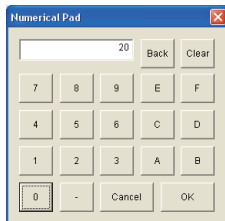

Operating procedure

1. Click the buttons and enter a value.
2. Click the [OK] button.

The value is entered in the numeric value input field.

7 ERROR CODES

The following table shows the errors and the corrective actions that correspond to the error code.

When an error whose error code is not described in the following table occurs, consult your local Mitsubishi representative.

Error Code		Error description	Corrective action
Decimal	Hexadecimal		
1	0001H	■Driver not started The driver is not started.	<ul style="list-style-type: none"> • Check the channel number. • Check the driver operating condition with Device Manager. • Check the error of event viewer. • Check the board settings. • Reinstall the software package.
2	0002H	■Time-out error <ul style="list-style-type: none"> • Timeout during waiting for the response of process • The process was requested with a 64-bit version user application to a CPU module other than QCPU (Q mode) or MELSEC iQ-R series CPU modules. • The consistency between the board and the software package cannot be identified. • When accessing to the buffer memory of the remote device station, the offset values or offset + write/read byte size out of the range of the target station buffer memory is specified. • When the own station number is 64 on the CC-Link Ver.2 board, a request was made to other station. 	<ul style="list-style-type: none"> • Check the status of the network, operation status of the access station(s), and mounting condition of the module(s). • Check the mounting condition of the board. • Check the Target Setting of the utility. • Check the Transient Timeout Monitoring Time of the utility. • Retry the operation. • When accessing CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules, use the 32-bit version user application. • When this error has occurred while executing the RECV function with CC-Link IE Field Network board, use SW1DNC-CCIEF-B version 1.04E or later. • Check if the offset values or offset + write/read byte size is within the range of the buffer memory of the target station. • When requesting to other station by using CC-Link Ver.2 board, set a station number other than 64 to the own station number. • Check if a line error such as CRC error occurs. For the checking method, refer to the manuals of network systems to use.
66	0042H	■Channel-opened error Specified channel is already opened.	<ul style="list-style-type: none"> • Open the channel only once. • Since the correct value is stored to the path, this error can be regarded as normal status.
68	0044H	■Path error <ul style="list-style-type: none"> • The specified path is invalid. • No board exists at the specified path. 	<ul style="list-style-type: none"> • Check the path. • Check the driver operating condition with Device Manager. • Check the mounting condition of the board.
69	0045H	■Unsupported function execution error <ul style="list-style-type: none"> • A function which is not supported by the target station was executed. • A function which is not supported by the specified channel is executed. 	<ul style="list-style-type: none"> • Check the path of the channel, the network number, and the station number. • Check if the function is supported by the target station.
70	0046H	■Station number error <ul style="list-style-type: none"> • The specified station number is incorrect. • A process that should be requested to other station was requested to the own station, or the station number corresponds to the own station (255 (FFH)) but the network number is not 0. • The process was requested with a 64-bit version user application to a CPU module other than QCPU (Q mode) or MELSEC iQ-R series CPU modules. 	<ul style="list-style-type: none"> • Check the network number and the station number. • When accessing CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules, use the 32-bit version user application.
71	0047H	■No reception data error (for RECV function) <ul style="list-style-type: none"> • Data is not received. • With the RECV function of CC-Link IE Controller Network board or CC-Link IE Field Network board, the data over 960 bytes has been received from MELSECNET/H. 	<ul style="list-style-type: none"> • Check the channel number. • Check whether the data is sent on the sending station with the SEND function. • Check if the sent data using the SEND function of MELSECNET/H board exceeds 960 bytes. • When the receive station is CC-Link IE Controller Network board, restart a personal computer of the receive station. • Retry the operation.

Error Code		Error description	Corrective action
Decimal	Hexadecimal		
77	004DH	■Memory reservation error/resource memory shortage error Enough memory could not be reserved.	<ul style="list-style-type: none"> • The memory may be insufficient. End another running application. • End the program and restart the personal computer. • Increase the minimum working set size of the personal computer. (☞ Page 134 Method for Increasing Minimum Working Set Size of Personal Computer)
85	0055H	■SEND/RCV channel number error The channel number specified with the SEND/RCV function is incorrect.	Check the channel number.
100	0064H	■Board H/W resource busy The next processing cannot be executed because of the insufficient resource on the board.	<ul style="list-style-type: none"> • Retry the operation. • If the error occurs repeatedly, please consult your local Mitsubishi representative.
101	0065H	■Routing parameter error The routing parameter is not set correctly.	Check the routing parameter setting. Check the specified network number.
102	0066H	■Board Driver I/F error <ul style="list-style-type: none"> • An attempt to send request data to the board driver is failed. • The system resource of the operating system is insufficient. For details, refer to the following section. ☞ Page 12 Influence of operating system and other applications	<ul style="list-style-type: none"> • Retry the operation. • Check with the function such as event log whether Windows® is operating normally. • End the program and restart the personal computer. • Check the mounting condition of the board.
103	0067H	■Board Driver I/F error <ul style="list-style-type: none"> • An attempt to receive response data from the board driver is failed. • The consistency between the board and the software package cannot be identified. 	<ul style="list-style-type: none"> • Retry the operation. • Check with the function such as event log whether Windows® is operating normally. • End the program and restart the personal computer. • When this error has occurred while executing the SEND function with CC-Link IE Field Network board, use SW1DNC-CCIEF-B version 1.04E or later.
133	0085H	■Parameter error A parameter set on the board is incorrect.	<ul style="list-style-type: none"> • Reset the board. • Correct the parameter.
4096 to 16383	1000H to 3FFFH	■MELSEC data link library internal error	<ul style="list-style-type: none"> • End the program and restart the personal computer. • Reinstall the software package. • Consult your local Mitsubishi representative.
16384 to 20479	4000H to 4FFFH	■Error detected by the access target CPU	Refer to the user's manual of the access target CPU module.
16432	4030H	■Device error The specified device type is invalid.	Specify a device type described in the device type list. Check if the specified device is valid on the programmable controller CPU of the target station.
16433	4031H	■Device error <ul style="list-style-type: none"> • The specified device number is out of the range. • The start I/O number of the specified devices is invalid. • The block number of the specified device is invalid. 	<ul style="list-style-type: none"> • Check the device number. • Check the block number (device type) and the start I/O number of the specified device. • Check with the programmable controller CPU on the target station whether the specified device, the block number, and the start I/O number are valid.
16512	4080H	■Request data error The process was requested with a 64-bit version user application to a CPU module other than QCPU (Q mode) or MELSEC iQ-R series CPU modules.	<ul style="list-style-type: none"> • Check the content of specified request data. • When accessing CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules, use the 32-bit version user application.
18944	4A00H	■Link-related error <ul style="list-style-type: none"> • The network of the number set to the routing parameters does not exist. • The network is not supported by the target CPU. • The network number or station number of the target station is incorrect. 	<ul style="list-style-type: none"> • Check the routing parameter setting. • Exchange the CPU with a CPU which supports the network. • Check the network number and the station number.
18945	4A01H		
19202	4B02H	The request is not for a CPU module.	Perform the operation for a module for which the specific function can be executed.
-1	FFFFH (FFFFFFFFH)	■Path error The specified path is invalid.	Use the path that was returned with mdOpen function. Use a path of the communication line that supports the function.


Error Code		Error description	Corrective action
Decimal	Hexadecimal		
-2	FFFEH (FFFFFFFEH)	Start device number error <ul style="list-style-type: none"> The specified start device number is out of the range. When specifying a bit device, the start device number is not multiples of 8. The set of start device number and points in the same block that is specified for the device random read/write, is over the device range. 	<ul style="list-style-type: none"> Check the start device number. When specifying a bit device, specify a start device number in multiples of 8. Check the device number and points. Check if the specified device is valid on the programmable controller CPU of the target station.
-3	FFFDH (FFFFFFFDH)	Device type error The specified device type is invalid.	<ul style="list-style-type: none"> Specify a device type described in the device type list. Check if the specified device is valid on the programmable controller CPU of the target station.
-5	FFFBH (FFFFFFFBH)	Size error <ul style="list-style-type: none"> The set of start device number and size is over the device range. An access was attempted with odd number bytes. 	<ul style="list-style-type: none"> Check the device size. Check the start device number and size. Specify even number bytes.
-6	FFFAH (FFFFFFFAH)	Number of blocks error The number of blocks specified for the device random read/write is out of the range.	Check the number of blocks.
-8	FFF8H (FFFFFFF8H)	Channel number error The channel number specified with mdOpen function is invalid.	Check the channel number.
-12	FFF4H (FFFFFFF4H)	Block number error The block number of the specified file register is invalid.	<ul style="list-style-type: none"> Check the block number (device type) of the file register. Check if the specified device is valid on the programmable controller CPU of the target station.
-13	FFF3H (FFFFFFF3H)	Write protect error The block number of the specified extension file register is overlapping with the write protect area of the memory cassette.	<ul style="list-style-type: none"> Check the block number (device type) of the extension file register. Check the write protect switch of the memory cassette on the programmable controller CPU of the target station.
-16	FFF0H (FFFFFFF0H)	Network number and station number error The specified network number or station number is out of the range.	Check the network number and the station number.
-17	FFEFH (FFFFFFEFH)	All station specification and group number specification error <ul style="list-style-type: none"> All stations or group number was specified for a function other than the SEND function. The device type with arrival acknowledgment was specified when using the SEND function with all station specification and group number specification. 	<ul style="list-style-type: none"> Check the network number and the station number. Check if the function supports all station specification and group number specification. Specify the device type without arrival acknowledgment when using the SEND function with all station specification and group number specification.
-18	FFEEH (FFFFFFEEH)	Remote command code error A command code which is not valid for mdControl was specified.	Check the command code.
-19	FFEDH (FFFFFFEDH)	SEND/RECV channel number error The channel number specified for the SEND/RECV function is out of the range.	Check the channel number.
-31	FFE1H (FFFFFFE1H)	DLL load error An attempt to load DLL required to execute the function failed.	Reinstall the software package.
-32	FFE0H (FFFFFFE0H)	Resource time-out error <ul style="list-style-type: none"> The user program was forcibly terminated. The resource is not freed within the transient timeout monitoring time because other tasks and threads are occupying the resource. 	<ul style="list-style-type: none"> End the user program correctly. Retry the operation. The memory may be insufficient. End another running application. End the program and restart the personal computer.
-33	FFDFH (FFFFFFDFH)	Incorrect access target error The communication target specified by the network number and the station number is a model which is not supported.	<ul style="list-style-type: none"> Check whether an unsupported communication target is specified by the network number and the station number. Check the Target Setting of the utility. Update the software package.
-34	FFDEH (FFFFFFDEH)	Registry access error	Reinstall the software package.
-35	FFDDH (FFFFFFDDH)		
-36	FFDCH (FFFFFFDCH)		

Error Code		Error description	Corrective action
Decimal	Hexadecimal		
-37	FFDBH (FFFFFFDBH)	■Communication initialization setting error The initial setting for communication is failed.	<ul style="list-style-type: none"> • Retry the operation. • The memory may be insufficient. End another running application. • End the program and restart the personal computer. • Check the free space of the memory.
-42	FFD6H (FFFFFFD6H)	■Close error The communication cannot be closed.	<ul style="list-style-type: none"> • Retry the operation. • End the program and restart the personal computer.
-43	FFD5H (FFFFFFD5H)	■ROM operation error A TC setting value was written to the CPU during ROM operation.	Change the TC setting value during RAM operation.
-61	FFC3H (FFFFFFC3H)	■Number of events error The number of events which is specified with mdWaitBdEvent function to set the user application to wait is out of the range.	Check the number of events that sets the user application to wait.
-62	FFC2H (FFFFFFC2H)	■Event number error The event number which is specified with mdWaitBdEvent function to set the user application to wait is out of the range.	Check the event number that sets the user application to wait.
-63	FFC1H (FFFFFFC1H)	■Event number duplicate registration error The event number which is specified with mdWaitBdEvent function to set the user application to wait is duplicated.	Specify the event number, that set the user application to wait, so as not to be duplicated.
-64	FFC0H (FFFFFFC0H)	■Timeout time error The timeout time specified with mdWaitBdEvent function is out of the range.	Check the time-out value.
-65	FFBFH (FFFFFFBFH)	■Event wait time-out error An event did not occur within the timeout time.	Retry the operation.
-66	FFBEH (FFFFFFBEH)	■Event initialization error The board or the master station (control station) was reset during the execution of mdWaitBdEvent function.	Retry the operation.
-67	FFBDH (FFFFFFBDH)	■No event setting error There is no event setting of the event number that is specified with mdWaitBdEvent function to wait the user application.	Set the event number that sets the user application to wait in the utility.
-69	FFBBH (FFFFFFBBH)	■Unsupported function execution error A function which is not supported by the software package or the driver was executed.	Check if the function is supported by the software package or the driver.
-70	FFBAH (FFFFFFBAH)	■Event duplication occurrence error An, event with the same event number occurred multiple times.	Set the interval of the event occurrence longer enough for the user program to process.
-71	FFB9H (FFFFFFB9H)	■Remote device station access error Failed to access to the buffer memory of a remote device station.	<ul style="list-style-type: none"> • Check if the target station is remote device station of CC-Link IE Field Network. • Check the network number and station number. • Check if the offset values or offset + write/read byte size is within the range of the buffer memory of the target station.
-257 to -4096	FEFFH to F000H (FFFFFFFFH to FFFFF000H)	■Errors detected in the MELSECNET/H and MELSECNET/10 network system	Refer to the reference manuals of MELSECNET/10 or MELSECNET/H network systems.
-2174	F782H (FFFFF782H)	■Transient data target station number error <ul style="list-style-type: none"> • The target station number is incorrect. • The target station number is 0. 	<ul style="list-style-type: none"> • Check the target station number, and perform the operation again. • If the error occurs after performing the above corrective action, please consult your local Mitsubishi representative.
-4097 to -8192	EFFFH to E000H (FFFFEFFFH to FFFFE000H)	■Errors detected in the CC-Link IE Controller network system	When an error which is not described in this table occurs, refer to the manuals of CC-Link IE Controller Network.
-7656	E218H (FFFFE218H)	■Transient data target station number error <ul style="list-style-type: none"> • The target station number is incorrect. • The target station number is 0. 	<ul style="list-style-type: none"> • Check the target station number, and perform the operation again. • If the error occurs after performing the above corrective action, please consult your local Mitsubishi representative.
-7672	E208H (FFFFE208H)		

Error Code		Error description	Corrective action
Decimal	Hexadecimal		
-8193 to -12288	DFFFH to D000H (FFFFDFFFH) to (FFFFD000H)	■Errors detected in the CC-Link IE Field network system	When an error which is not described in this table occurs, refer to the user's manuals of CC-Link IE Field Network interface boards and CC-Link IE Field Network master/local modules.
-11683	D25DH (FFFFD25DH)	■Transient data improper The data over 960 bytes has been sent from MELSECNET/H board to CC-Link IE Field Network board.	Check if the sent data using the SEND function of MELSECNET/H board exceeds 960 bytes.
-11717	D23BH (FFFFD23BH)	■Network number error A network number other than its own network was specified with the mdRemBufReadEx function/ mdRemBufWriteEx function.	Check whether an unsupported communication target is specified by the network number.
-11746	D21EH (FFFFD21EH)	■Station number error • The specified station number is incorrect. • A process that should be requested to other station was requested to the own station, or the station number corresponds to the own station (255 (FFH)) but the network number is not 0.	Check the network number and the station number.
-12128	D0A0H (FFFFD0A0H)	■Transient data send response wait time-out error	<ul style="list-style-type: none"> • Check if the own station or the target station is disconnected. • Check if an unsupported communication target is specified with the network number and the station number.
-12289 to -16384	CFFFH to C000H (FFFCFFFH) to (FFFC000H)	■Errors detected in the Ethernet network system	Refer to the user's manuals of Ethernet interface modules.
-16385 to -20480	BFFFH to B000H (FFFBFFFH) to (FFFB000H)	■Errors detected in the CC-Link system	When an error which is not described in this table occurs, refer to the user's manuals of CC-Link system master/local interface boards and CC-Link system master/local modules.
-18560	B780H (FFFB780H)	■Module mode setting error A transient transmission was executed to the remote I/O station.	Check the network number and the station number.
-18572	B774H (FFFB774H)	■Transient unsupported error A transient request was transmitted to the station that is not an intelligent device station.	<ul style="list-style-type: none"> • Check the network number and the station number. • Specify the station number for the intelligent device station. • Check the device type
-25056	9E20H (FFFF9E20H)	■Processing code error • A processing code that cannot be processed by the request destination station was set. (Request destination link module check) • The process was requested with a 64-bit version user application to a CPU module other than QCPU (Q mode) or MELSEC iQ-R series CPU modules.	<ul style="list-style-type: none"> • Check the request destination station number and the processing code. • Do not execute a function other than mdTypeRead function to a board in another station. • When accessing CPU modules other than QCPU (Q mode) or MELSEC iQ-R series CPU modules, use the 32-bit version user application.
-26334	9922H (FFFF9922H)	■Reset error • Reset was executed by another task that uses the same channel when accessing to the own station or the other station. • Reset was executed when monitoring with the utility.	Retry the operation.
-26336	9920H (FFFF9920H)	■Routing request error on routing function unsupported station A routing to another loop was requested to the station which does not support the routing function.	Check the routing parameter setting.
-27902	9302H (FFFF9302H)	■Event wait time-out error An event did not occur within the timeout time specified with mdWaitBdEvent function.	<ul style="list-style-type: none"> • Lengthen the timeout time. • Check the condition to occur an event.
-28138	9216H (FFFF9216H)	■Unsupported block data assurance per station Reset or restart was performed to the CC-Link Ver.2 Board of which ROM version is 1A and the function "block data assurance per station" is enabled.	<ul style="list-style-type: none"> • Replace it with the ROM version 2B or later board. • Disable the block data assurance per station.

Error Code		Error description	Corrective action
Decimal	Hexadecimal		
-28139	9215H (FFFF9215H)	■Link refresh error Link refresh processing did not operate normally.	<ul style="list-style-type: none"> Reset the board. The memory may be insufficient. End another running application. End the program and restart the personal computer. Check the free space of the memory. Check the mounting condition of the board. A personal computer error is suspected if the board operates normally on other personal computers. Repair or replace the personal computer. When the same error occurs on other personal computers, replace the board. Consult your local Mitsubishi representative.
-28140	9214H (FFFF9214H)	■Incorrect mode setting error An incorrect mode was specified when setting the mode.	Check the mode.
-28141	9213H (FFFF9213H)	■System sleep error Entering sleep mode, hibernation mode, or fast startup was detected.	<ul style="list-style-type: none"> End the program and restart the personal computer. Change the setting of the power option to prevent the system from entering sleep mode, hibernation mode, or fast startup.
-28142	9212H (FFFF9212H)	■Mode error A request which cannot be used in the currently set mode was executed.	<ul style="list-style-type: none"> Check if the parameters are set. Check the currently set mode.
-28143	9211H (FFFF9211H)	■Hardware self-diagnosis error An error was detected by the hardware self-diagnosis.	<ul style="list-style-type: none"> Check the system log of event viewer, and take a corrective action on the registered error. End the program and restart the personal computer. Take anti-noise measures for a personal computer. Put the connector in and out after turning OFF the personal computer. Check the mounting condition of the board. A personal computer error is suspected if the board operates normally on other personal computers. Repair or replace the personal computer. When the same error occurs on other personal computers, replace the board. Consult your local Mitsubishi representative.
-28144	9210H (FFFF9210H)		
-28150	920AH (FFFF920AH)	■Data link disconnected device access error An access was attempted to the device ranges of own station devices RX, RY, RWw, RWr which are assigned to the data link interrupted station or the reserved station.	<ul style="list-style-type: none"> Check the specified device start number and size, or the device range of the parameter on the master station. The data write/read function can be performed even when this error occurs, but the function of the data security is not guaranteed.
-28151	9209H (FFFF9209H)	■Abnormal data reception error An incorrect response data was received.	<ul style="list-style-type: none"> Check for errors in the target station and on the programmable controller CPU in the target station. If they are normal, request a process again. Check the network status by referring to the manuals of each product.
-28158	9202H (FFFF9202H)	■Driver WDT error Driver WDT error is occurring. A driver WDT error may occur from the temporary system overload by the following factors. <ul style="list-style-type: none"> Windows® activation process when starting the personal computer Operation of a device driver such as a graphic board Operation of other software applications 	<ul style="list-style-type: none"> Reset the board. Restart the personal computer. Remove the factor of system overload. Clear "Use driver WDT function" with the utility to disable WDT. Or, extend the Driver WDT monitoring time. By changing the graphic board, an environment in which a driver WDT error does not occur may be created.
-28622	9032H (FFFF9032H)	■Channel busy (dedicated instruction) error The channel specified for "Channel used by the own station" or "Target station channel" is being used by another instruction.	Wait for a little while, and retry it. Change the setting of "Channel used by the own station" or "Target station channel" in the control data.
-28634	9026H (FFFF9026H)	■Hardware self-diagnosis error An error was detected by the hardware self-diagnosis.	<ul style="list-style-type: none"> Check the system log of event viewer, and take a corrective action on the registered error. End the program and restart the personal computer. Check the mounting condition of the board. A personal computer error is suspected if the board operates normally on other personal computers. Repair or replace the personal computer. When the same error occurs on other personal computers, replace the board. Consult your local Mitsubishi representative.
-28636	9024H (FFFF9024H)		

Point

When an error code is returned as a return value of the extended function ( Page 44 List of Functions), the error codes from -1 to -28636 will be an 8-digit value (FFFFFFFFH to FFFF9024H) in the hexadecimal format as described in the table.

APPENDIX

Appendix 1 Method for Increasing Minimum Working Set Size of Personal Computer

The following explains the method and sample programs for increasing the minimum working set size of the personal computer when an error with code 77(004DH) occurs due to the execution of the MELSEC data link library function. The personal computer board driver runs using the minimum working set size in the memory area reserved in the user program.

Some user programs may use a larger size for the minimum working set.

Therefore, if the minimum working set size for the personal computer board driver cannot be reserved, an error code 77 is returned.

In this situation, increase the minimum working set size in the user program before executing the MELSEC data link library function. (📖 Page 135 Sample programs)

The minimum working set size of 200KB is reserved at startup of the personal computer.

When applying the sample programs introduced in this manual to the actual system, ensure the applicability and confirm that they will not cause system control problems.

Processing overview of sample program

1. Obtain the user program ID with the GetCurrentProcessId function.
2. Using the ID obtained in step 1, obtain the user program handle with the OpenProcess function.
3. The current minimum and maximum working set sizes can be obtained by executing the GetProcessWorkingSetSize function.
4. Set a size larger than the minimum working set obtained in step 3 and execute SetProcessWorkingSetSize function.
5. Release the user program handle with the CloseHandle function.

Sample programs

When setting with Visual Basic

■ An example when the minimum working set size is 1 MB and the maximum working set size is 3 MB

When programming with Visual Basic 5.0 or Visual Basic 6.0, change the type definition of variables (id, ph, wkmin, wkmax) from Integer to Long.

The set sizes shown here are reference sizes. Adjust the sizes according to your system.

Program example

```
Dim id As Integer           'User program ID variable
Dim ph As Integer           'User program handle variable
Dim wkmin As Integer        'Minimum working set variable
Dim wkmax As Integer        'Maximum working set variable
Dim bret As Boolean         'Return value

'Obtain the user program ID
id = GetCurrentProcessId()

'Open the user program handle
PROCESS_SET_QUOTA = 256, PROCESS_QUERY_INFORMATION = 1024
ph = OpenProcess(256 + 1024, False, id)

'Obtain the maximum working set size and the minimum working set size for the user program
bret = GetProcessWorkingSetSize(ph, wkmin, wkmax)

'Set the minimum working set size to 1 MB (1 * 1024 * 1024 = 1048576)
wkmin = 1048576

'Set the maximum working set size to 3 MB (3 * 1024 * 1024 = 3145728)
wkmax = 3145728

'Change the maximum working set size and the minimum working set size for the user program
bret = SetProcessWorkingSetSize(ph, wkmin, wkmax)

'Close the user program handle
bret = CloseHandle(ph)
```

A

When setting with Visual C++

■An example when the minimum working set size is 1 MB and the maximum working set size is 3 MB

The set sizes shown here are reference sizes. Adjust the sizes according to your system.

Program example

```
#define ERROR -1
short ChangeWorkingSetSize()
{
    DWORD dwProcessId;      /*User program ID variable*/
    HANDLE hProcess;         /*User program handle variable*/
    DWORD dwMinimumWorkingSetSize; /*Minimum working set variable*/
    DWORD dwMaximumWorkingSetSize; /*Maximum working set variable*/

    /*Obtain the user program ID*/
    dwProcessId = GetCurrentProcessId();

    /*Open the user program handle*/
    hProcess = OpenProcess(PROCESS_SET_QUOTA+PROCESS_QUERY_INFORMATION,FALSE,dwProcessId);
    if(hProcess == NULL){
        /*Error end*/
        return(ERROR);
    }

    /*Obtain the maximum working set size and the minimum working set size for the user program */
    if(GetProcessWorkingSetSize(hProcess,&dwMinimumWorkingSetSize,&dwMaximumWorkingSetSize)==0){
        /*Error end*/
        CloseHandle(hProcess);
        return(ERROR);
    }

    /*Set the minimum working set size to 1 MB*/
    dwMinimumWorkingSetSize = 1 * 1024 * 1024;
    /*Set the maximum working set size to 3 MB*/
    dwMaximumWorkingSetSize = 3 * 1024 * 1024;

    /*Change the maximum working set size and the minimum working set size for the user program */
    if(SetProcessWorkingSetSize(hProcess,dwMinimumWorkingSetSize,dwMaximumWorkingSetSize)==0){
        /*Error end*/
        CloseHandle(hProcess);
        return(ERROR);
    }

    /*Close the user program handle*/
    CloseHandle(hProcess);
    /*Normal return*/
    return(0);
}
```

MEMO

A

FUNCTION INDEX

M

mdBdLedRead (read LED information of the board)	87
mdBdModRead (reading modes of board)	86
mdBdModSet (setting modes of board)	84
mdBdRst (resetting board)	83
mdBdSwRead (reading switch status of the board)	93
mdBdVerRead (read version information of the board)	94
mdClose (closing communication lines)	56
mdControl (remote RUN/STOP/PAUSE)	79
mdDevRst (resetting bit devices)	109
mdDevRstEx (resetting extended bit devices)	72
mdDevSet (setting bit devices)	108
mdDevSetEx (setting extended bit devices)	71
mdInit (initializing programmable controller information table)	96
mdOpen (opening communication lines)	55
mdRandR (reading devices randomly)	107
mdRandREx (reading extended devices randomly)	68
mdRandW (writing devices randomly)	105
mdRandWEx (writing extended devices randomly)	65
mdReceive (batch read devices)	101
mdReceive (RECV function)	103
mdReceiveEx (batch reading extended devices)	61
mdReceiveEx (RECV function)	63
mdRemBufReadEx (reading data from buffer memory of remote device station)	74
mdRemBufWriteEx (writing data to buffer memory of remote device station)	73
mdSend (batch writing devices)	97
mdSend (SEND function)	99
mdSendEx (batch writing extended devices)	57
mdSendEx (SEND function)	59
mdTypeRead (reading model names of CPU)	75
mdWaitBdEvent (waiting for event occurrence)	80

MEMO

REVISIONS

*The manual number is written at the bottom left of the back cover.

Revision date	*Manual number	Description
July 2011 to September 2015	SH(NA)-081035ENG-A to SH(NA)-081035ENG-H	Due to the transition to the e-Manual, the content of the revisions has been deleted.
May 2016	SH(NA)-081035ENG-I	Complete revision (layout change)
September 2016	SH(NA)-081035ENG-J	■ Added or modified parts Section 2.3, Section 4.2, Section 4.3, Chapter 5, Chapter 6
October 2016	SH(NA)-081035ENG-K	■ Added or modified parts Chapter 5, Chapter 7
January 2017	SH(NA)-081035ENG-L	■ Added or modified parts Section 3.1, Section 3.2, Section 4.1, Section 4.3, Chapter 5, Chapter 7
January 2018	SH(NA)-081035ENG-M	■ Added or modified parts Chapter 7
June 2019	SH(NA)-081035ENG-N	■ Added or modified parts Section 2.2, Section 2.3, Section 3.1, Section 3.2, Section 3.3, Section 4.3, Section 5.1, Section 5.3, Chapter 7

Japanese manual number: SH-081034-N

This manual confers no industrial property rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2011 MITSUBISHI ELECTRIC CORPORATION

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the sales representative or Mitsubishi Service Company.

However, if repairs are required onsite at domestic or overseas location, expenses to send an engineer will be solely at the customer's discretion. Mitsubishi shall not be held responsible for any re-commissioning, maintenance, or testing on-site that involves replacement of the failed module.

[Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place. Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

[Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
 1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
 2. Failure caused by unapproved modifications, etc., to the product by the user.
 3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
 5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
 6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
 7. Any other failure found not to be the responsibility of Mitsubishi or that admitted not to be so by the user.

2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not available after production is discontinued.

3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

4. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi.
- (2) Loss in opportunity, lost profits incurred to the user by Failures of Mitsubishi products.
- (3) Special damages and secondary damages whether foreseeable or not, compensation for accidents, and compensation for damages to products other than Mitsubishi products.
- (4) Replacement by the user, maintenance of on-site equipment, start-up test run and other tasks.

5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

TRADEMARKS

Microsoft, Visual Basic, Visual C++, Visual Studio, Windows, and Windows XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The company names, system names and product names mentioned in this manual are either registered trademarks or trademarks of their respective companies.

In some cases, trademark symbols such as [™] or [®] are not specified in this manual.

SH(NA)-081035ENG-N(1906)KWIX

MODEL: MD-FUNC-LIB-R-E

MODEL CODE: 13JV25

mitsubishi electric corporation

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the
Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.