



DecaRanging Ranging Demo Application (PC Version) User Guide

Revision 2.0

17 December 2013

This document is subject to change without notice

DOCUMENT INFORMATION

Disclaimer

DecaWave reserves the right to change product specifications without notice. As far as possible changes to functionality and specifications will be issued in product specific errata sheets or in new versions of this document. Customers are advised to check the DecaWave website for the most recent updates on this product

Copyright © 2013 DecaWave Ltd

LIFE SUPPORT POLICY

DecaWave products are not authorized for use in safety-critical applications (such as life support) where a failure of the DecaWave product would reasonably be expected to cause severe personal injury or death. DecaWave customers using or selling DecaWave products in such a manner do so entirely at their own risk and agree to fully indemnify DecaWave and its representatives against any damages arising out of the use of DecaWave products in such safety-critical applications.



Caution! ESD sensitive device.

Precaution should be used when handling the device in order to prevent permanent damage

Contents

1	INTRODUCTION	4
1.1	DecaRanging capabilities	5
1.2	DecaRanging control of the DW1000 transceiver	5
2	INSTALLATION AND SET-UP	7
2.1	USB virtual COM: port software installation	7
2.2	Cheetah Driver Installation – OPTIONAL	8
2.3	DecaRanging Application Installation	8
2.3.1	Installation of Runtime Environment for Visual C++	8
2.4	System Setup	9
3	RUNNING THE DECAWAVE RANGING TEST APPLICATION	10
3.1	Running DecaRanging	10
3.1.1	Ranging Method Explained	11
3.1.2	Running <i>DecaRanging</i> (continued)	12
3.1.3	Pairing Method Explained	12
3.1.4	Running <i>DecaRanging</i> (continued again)	13
3.1.5	Setting the role	13
3.2	DecaRanging Main Window Display and Controls	15
3.2.1	Status and Statistics report	15
3.2.2	Main Controls	16
3.3	Configuration – Channel Setup	18
3.4	Configuration – Payload Setup	20
3.5	View – Channel Response View Enable	22
3.6	View – Display Distance in Feet and Inches	23
3.7	View – Large Text Range Display Enable	23
3.8	Debug – Register Access	23
3.9	Debug - Log Channel Responses	24
3.10	Debug - Log SPI Activity	24
3.11	Debug - Soft Reset (and Restart)	24
3.12	Keyboard shortcuts	24
3.13	Troubleshooting	25
4	Appendix 1 – Bibliography:	26
5	About DecaWave	27

1 INTRODUCTION

DecaWave's *DecaRanging* is a demonstration application that drives DecaWave's DW1000 integrated circuit, to demonstrate the accurate range measurement can be made between a pair of DW1000 units using a technique called two-way ranging. The DW1000 is a single chip RF transceiver supporting the IEEE 802.15.4 UWB PHY standard. DecaWave supplies the EVK1000 kit, comprised of two DW1000 evaluation boards (EVB1000 boards) for use in conjunction with this application.

This document covers the version of DecaWave's *DecaRanging* software that runs on a windows PC, describing how to install the software, how to run it, and how to interpret its results. It also discusses the basic operation of the two-way ranging algorithm being employed to measure the range.

The DW1000 evaluation boards (EVB1000) are supplied as a pair in a kit (EVK1000). The EVB100 boards have an on-board ARM microcontroller, with a preinstalled ARM version of *DecaRanging*, allowing them to run autonomously as a pair (once powered up) performing two-way ranging and displaying the range result on their on-board LCD. Please refer to the [EVK1000 User Manual](#) document for details of how to use, configure and interface to the DW1000 evaluation kit boards.

The *DecaRanging* PC application offers an alternative to the ARM embedded *DecaRanging* application allowing for additional configuration and diagnostic display possibilities. A DW1000 controlled by the *DecaRanging* PC application, can perform two-way ranging to another DW1000 controlled by either the *DecaRanging* PC application or the *DecaRanging* ARM application.

There are two ways for the *DecaRanging* PC application to connect and control the DW1000 IC on the DW1000 evaluation boards. That is either via the USB interface or via the SPI interface header (and employing a *Cheetah* USB-to-SPI convertor). Please refer to section [1.2 – DecaRanging control of the DW1000 transceiver](#) for more details. In either case the *DecaRanging* PC application essentially has control of the DW1000 which it drives to exchange messages between a pair of devices, calculate the time-of-flight of those messages and display the resultant distance between the two units.

The pre-built *DecaRanging* PC application (DecaRanging.exe) is built to run on a 32-bit windows PC. DecaWave can facilitate customers who wish to drive the DW1000 from their own microprocessor system by providing the source code for the PC and/or ARM versions of the *DecaRanging* application.

1.1 *DecaRanging capabilities*

The *DecaRanging* application enables the following DW1000 capabilities to be observed and tested:

- a) General operation of DecaWave's 802.15.4 UWB transceiver IC on the supported channels and modes as it sends and receives data frames.
 - IEEE specified preamble codes are supported giving complex channels as per standard
 - Data Rates: 110 kbits/s, 850 kbits/s and 6.8 Mbits/s
 - Mean nominal Pulse Repetition Frequencies (PRF) of 16 MHz and 64 MHz
 - Preamble lengths or Preamble Symbol Repetitions (PSR) from 64 to 4096 symbols
- b) Line-of-Sight (LOS) Range. The operator can check the operational range as the receiver is placed at various distances in LOS from the transmitter. This may be tested in all supported modes.
- c) Non-line-of-Sight (NLOS) Range. The operator can check operational range when various obstructions are between the receiver and the transmitter giving a NLOS channel. This may be tested in all supported modes.
- d) Time-of-Flight Ranging Measurements. The *DecaRanging* application performs 2-way ranging between two DW1000 transceivers (EVB1000 evaluation boards), and estimates the distance between them based on the time-of-flight calculations. The operator can check how the distance estimate changes as the two units are moved nearer/further from each other, and when there are walls and other obstructions between the units. Again, this may be tested in all supported modes.

1.2 *DecaRanging control of the DW1000 transceiver*

The DW1000 is controlled via its SPI bus. There are two ways for the *DecaRanging* PC application to connect and control the DW1000 IC on the DW1000 evaluation boards:

- a) Via the USB interface – The EVB1000's on-board ARM microcontroller's a preinstalled application can operate as a simple USB to SPI controller, passing the *DecaRanging* PC applications SPI accesses to/from the DW1000 IC. Please refer to the [EVK1000 User Manual](#) document for details of how to configure and enable this mode of operation.
- b) Via the SPI interface header – The [EVK1000 User Manual](#) document for details of how to configure EVB1000 for DW1000 direct SPI access. The *DecaRanging* PC application can optionally employ a *Cheetah* USB-to-SPI convertor control the DW1000 IC directly. This is a legacy operation supported on earlier versions of DecaRanging. The *Cheetah*¹ USB-to-SPI convertor is a commercial product of Total Phase, Inc. This mode of operation may be useful to control the DW1000 on a customer developed board (through a suitable header or wiring) to validate the board performance compared to the EVB1000.

¹ Cheetah SPI Host Adapter - These are available from http://www.totalphase.com/products/cheetah_spi/ for USD \$350.

Whichever SPI connection method is employed, the *DecaRanging* PC application essentially directly controls the DW1000 transceiver to exchange messages, calculate their time-of-flight and display the resultant distance between a pair of units.

So, the DecaRanging demo application is supported running on the EVB1000's on-board ARM microcontroller, or on a Windows PC where it can either use USB virtual com port connection to the EVB1000's software USB-to-SPI conversion, or, use a *Cheetah* USB-to-SPI converter and connect to the EVB1000 via the SPI header. All these modes are inter-operable. Two EVB1000 evaluation units along with two *DecaRanging* applications (PC or ARM) allows the DW1000 transceiver's capabilities to be demonstrated and verified, the operating arrangement options are shown in Figure 1.

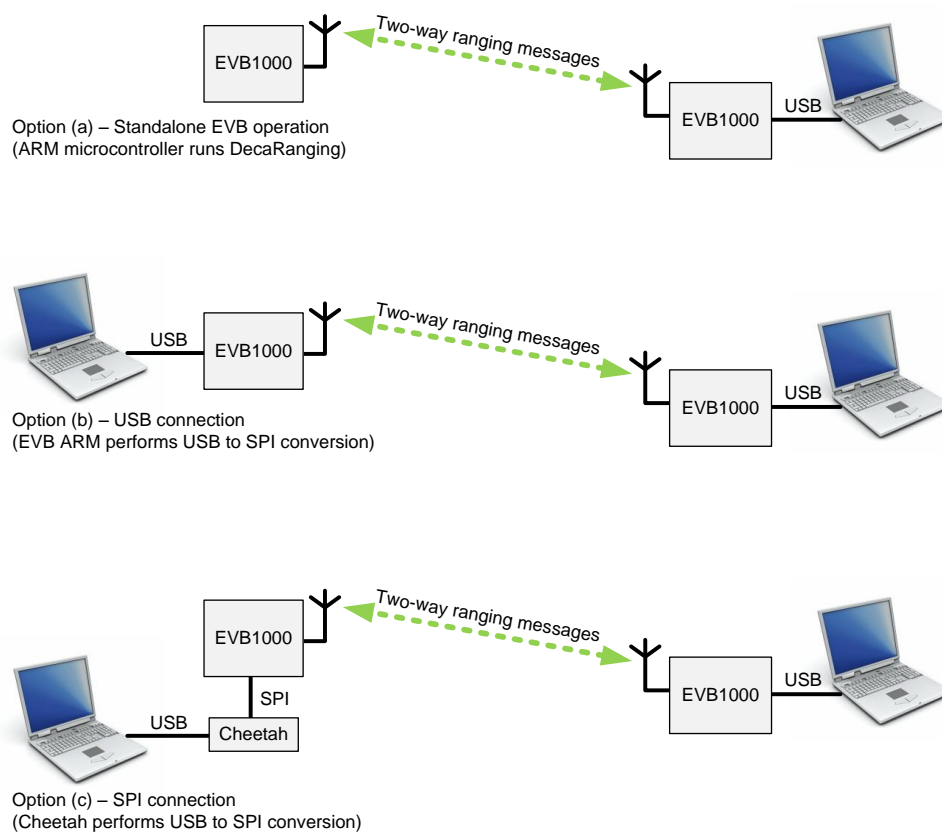


Figure 1 – DecaRanging operating arrangement options

Note: In Figure 1 the right-hand side unit is shown as per the arrangement of option (b) but it too may also be either of options (a) or (c). For details of the EVB1000 standalone operation, please refer to the [EVK1000 User Manual](#).

2 INSTALLATION AND SET-UP

This installation and setup chapter deals only with the PC version of DecaRanging and the PC software drivers that are necessary for its operation. The reader should also consult the [EVK1000 User Manual](#) document for details of how to configure and use the EVB1000 boards.

Additional documentation available from DecaWave deals with the ARM version of the DecaRanging application.

2.1 *USB virtual COM: port software installation*

This section describes how to install the software to allow the PC to connect to the EVB1000 USB port and employ the EVB1000's ARM software USB-to-SPI conversion to drive the DW1000 IC. The windows PC driver is available from the ST Microelectronics website at:

<http://www.st.com/web/en/catalog/tools/FM147/CL1794/SC961/SS1533/PF257938>

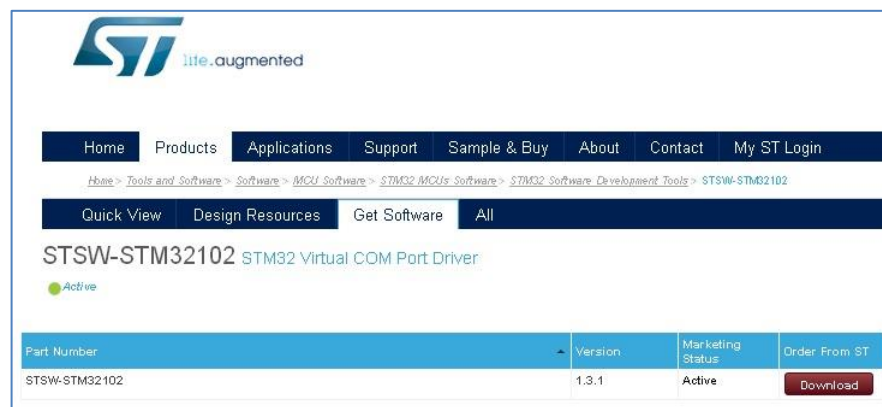


Figure 2 – partial screen capture from ST Microelectronics website

Click the download button to download the “stsw-stm32102.zip” file containing the driver. Inside the ZIP file are installation programs for 32-bit and 64-bit versions of Windows, (VCP_V1.3.1_Setup.exe and VCP_V1.3.1_Setup_x64.exe). Run the appropriate program and install the driver.

“STMicroelectronics (usbser) Ports (04/25/2010 1.3.1)”

We have successfully employed this driver on Windows-XP, Windows-7 and Windows-8 computers.

After this installation, when the EVB1000 is configured for USB to SPI operation and connected to the PC via the USB port it should be correctly recognised configured as a virtual com port. To allow time for the EVB1000 to start-up and be recognised by the PC and made ready for operation as virtual com port, after any insertion of the EVB1000 USB, please wait for 10 seconds before running the DecaRanging PC application.

2.2 *Cheetah Driver Installation – OPTIONAL*

Driving the EVB1000 from the *DecaRanging* PC application using the *Cheetah* USB-to-SPI convertor is a legacy operation supported on earlier versions of DecaRanging. The EVB on-board USB-to-SPI conversion functionality was added to allow this same direct control avoid having to purchase *Cheetah* devices. Operation with *Cheetah* has been retained to allow *Cheetah* usage, to validate the SPI port on the EVB1000 and to allow the DecaRanging PC application to drive the DW1000 on a customer developed board that expose the appropriate access to the SPI port. This may be useful to validate the customer board performance against that of the EVB1000.

The Cheetah USB drivers are supplied by Total Phase Inc. with the Cheetah adaptors. Use the USB driver supplied on the CD that comes with the Cheetah adaptor to install the USB drivers. This is also available from the Total Phase web-site at: <http://www.totalphase.com>. The installation should be done with the Cheetah disconnected from the PC's USB port. Please follow the installation instructions from Total Phase.

Please refer to the [EVK1000 User Manual](#) document for details of how to configure the EVB1000 boards for SPI port access and connect the cheetah.

2.3 *DecaRanging Application Installation*

The *DecaRanging* application installation is a manual process:

- Simply copy the file [DecaRanging.exe](#) to the desired directory on your windows PC hard-drive.
- Optionally copy the file [cheetah.dll](#) to the same directory if you want to use a *Cheetah* USB-to-SPI convertor

2.3.1 *Installation of Runtime Environment for Visual C++*

To run DecaRanging.exe on a computer that does not have Visual C++ 2010 installed, the runtime libraries, "Microsoft Visual C++ 2010 Redistributable Package (x86)" available from Microsoft need to be installed. These are available at:

<http://www.microsoft.com/en-us/download/details.aspx?id=5555>

Please download and run the [vc redistrib_x86.exe](#) installation program to install the runtime libraries necessary to prepare your system to run the *DecaRanging* application.

2.4 **System Setup**

Figure 1 showed the various operational scenarios supported by the system, for the purposes of this discussion about the *DecaRanging* PC application clearly at least one end must be the EVB1000 driven by this application (direct USB or via Cheetah) while the other end could be either the EVB1000 in standalone mode or the EVB1000 also driven by this the *DecaRanging* PC application. Both these options are covered in the discussion below.

If the software has been installed following instructions above and the PC is connected to the EVB1000 in one of the arrangements shown in Figure 1, (and following instructions in the [EVK1000 User Manual](#)) then everything should be ready to go.

Section 3 below details running the *DecaRanging* application.

3 RUNNING THE DECAWAVE RANGING TEST APPLICATION

The *DecaRanging* two-way ranging demonstration application is Microsoft Windows™ software. Chapter 1 – [INTRODUCTION](#) gives an overview of the capabilities of the *DecaRanging* software and chapter 2 – [INSTALLATION AND SET-UP](#) describes the installation. This chapter describes the runtime operation of the *DecaRanging* application and its user configurations and controls.

3.1 Running DecaRanging

When the [DecaRanging.exe](#) executable is run on the PC, the main display window shown below is opened.²

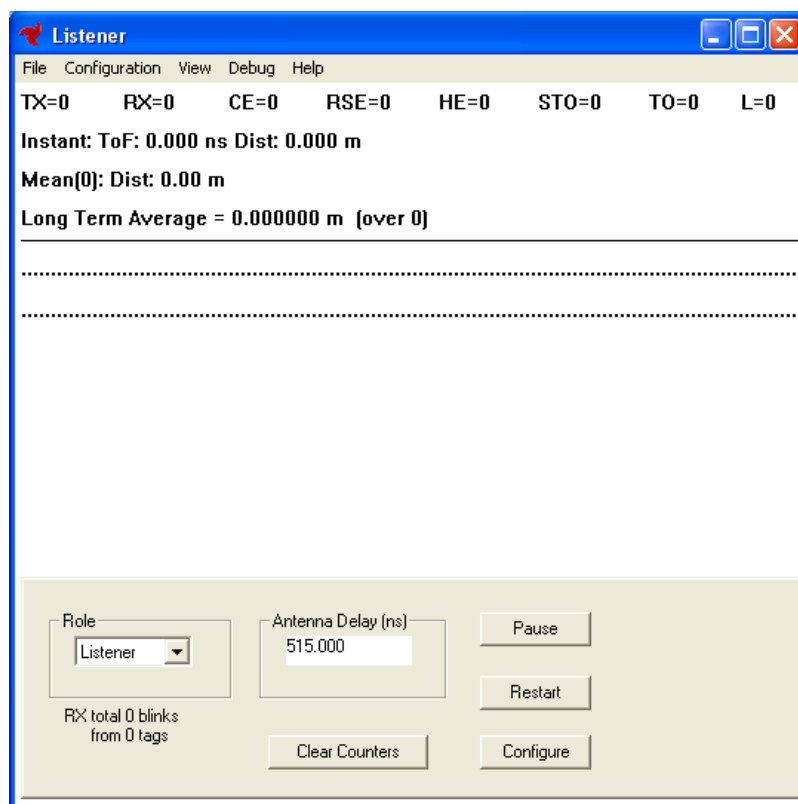


Figure 3 - DecaRanging main screen

Before going any further a brief discussion of the ranging method employed is necessary to understand the operation of the *DecaRanging* application. This is covered in section 3.1.1 directly following below.

² This assumes that communications with the EVB1000 is established. For troubleshooting see section 3.13.

3.1.1 Ranging Method Explained

The ranging method uses a set of three messages to complete two-round trip measurements from which the range is calculated. As messages are sent and received the *DecaRanging* application retrieves the message send and receive times from the DW1000. These transmit and receive timestamps are used to work out a round trip delay and calculate the range.


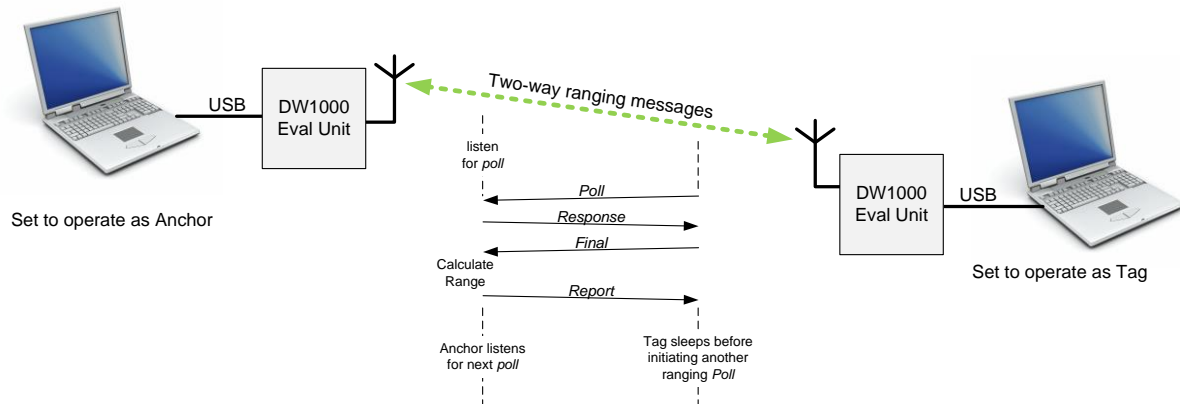


Figure 4 - ranging message exchange

In the ranging algorithm there are two roles, one end is nominated to act as a TAG and the other end is nominated to act as an ANCHOR. The anchor is predominately listening for a message from the tag. A single ranging operation is initiated by the tag sending a poll message. When the anchor receives the poll it sends a response message. The tag then receives the response message and sends a final message with embedded transmit and receive timestamps for the poll, response and the final message itself. The anchor uses this information along with its own transmission and reception timestamps to calculate two round trip times which are averaged and then halved to get the one-hop time-of-flight which equates to the distance when multiplied by the speed-of-light (e.g. the speed of the radio waves) in air.

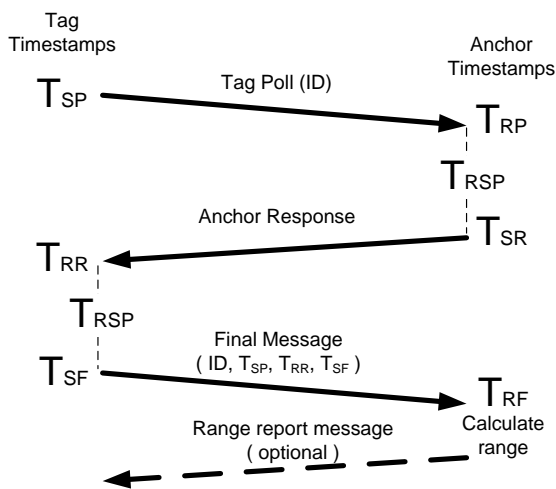

The tag sees Round Trip Delay time T_{TRT} of $(T_{RR} - T_{SP})$
 The anchor sees Round Trip Delay time T_{ART} of $(T_{RF} - T_{SR})$

After receiving the Final message, the anchor knows all the timestamps, so it can:
 (a) remove its response time: $(T_{SR} - T_{RP})$ from the Tag's T_{TRT} , and
 (b) remove tags response time: $(T_{SF} - T_{RR})$ from Anchor's T_{ART} ,
 to give antenna to antenna round trip times

The anchor then averages these two resultant round trip times to remove the effects of each end's clock frequency differences, (a technique which works best when the RX-to-TX response T_{RSP} is the same at both ends), and divides by 2 to get a one-way trip time.

Putting all this into one equation gives a Time of Flight:

$$((T_{RR} - T_{SP}) - (T_{SR} - T_{RP}) + (T_{RF} - T_{SR}) - (T_{SF} - T_{RR})) / 4$$

or $TOF = (2T_{RR} - T_{SP} - 2T_{SR} + T_{RP} + T_{RF} - T_{SF}) / 4$.

Multiplying the TOF by c , the speed of light (and radio waves), gives the distance (or range) between the two devices.

Figure 5 - range calculation

The anchor sends a ranging report message back to the tag (this is disabled by default, so Tag does not display the range, check section 3.4 how to enable this) with the calculated range so both ends have a result that can be displayed. In a practical use of this algorithm this final report message may not be necessary.

3.1.2 Running DecaRanging (continued)

Initially when the [DecaRanging.exe](#) executable is run, the software starts in listener mode where it listens and reports all received messages. In running *DecaRanging* and performing the ranging message exchanges, one end needs to take the role of an Anchor while the other end needs to take the role of a Tag, however because the ranging messages include both source and destination addresses a discovery mechanism is needed for tag and anchor to learn each other's addresses and become paired. This is done according to the pairing method explained in section 3.1.3 below.

3.1.3 Pairing Method Explained

Initially the unpaired anchor and tag are in a discovery phase where the unpaired tag sends a “blink” message that contains its own address, after which it listens for a Ranging Initiation response from an anchor. If it does not get one it sleeps for a period (default value of 1 second) before blinking again. The unpaired anchor listens for tag blink messages. The anchor end decides to pair with a tag and sends the Ranging Initiation message to exit from the Discovery Phase and enter the Ranging phase.

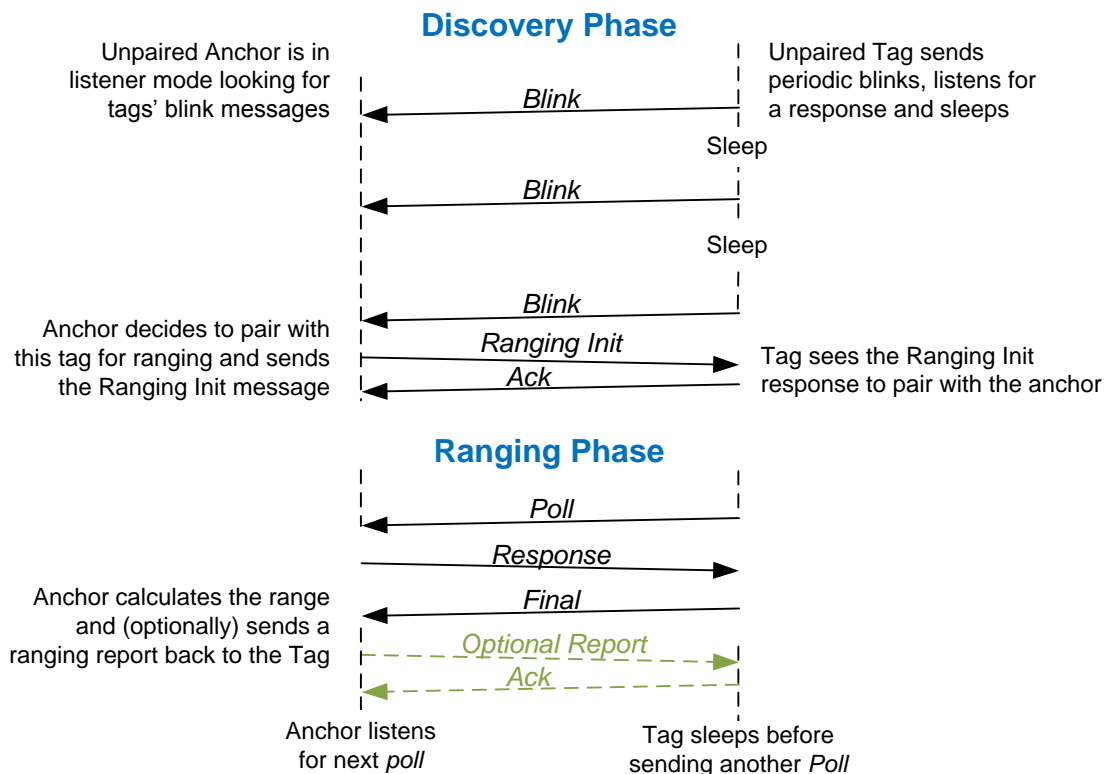


Figure 6 – progression from discovery phase to ranging phase

In the PC *DecaRanging* the program stays in *Listener* mode and reports number of blinks received. The user must choose the tag to range with when changing into *Anchor* mode. In the ARM based *DecaRanging* the board configured to be the anchor automatically transitions to into *Anchor* mode ranging with the tag whose blink is received first.

3.1.4 Running *DecaRanging* (continued again)

If both tag and anchor ends are to be paired using PC *DecaRanging* then one end should be set to take on the role of a tag, while the other end should remain in the listener role until some tag blinks are seen, before changing into the anchor role to complete the discovery phase and enter the ranging phase of the operation. Setting the role is covered in section 3.1.5 below.

3.1.5 Setting the role

To enable the ranging function the user must reconfigure one of the ends to be the Tag and then the other to Anchor (after the anchor has received some tag blinks). This role configuration is done using the drop-down list of the Role group to the bottom left of the main *DecaRanging* window.

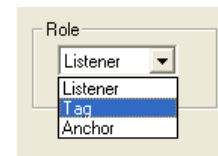


Figure 7 - role selection

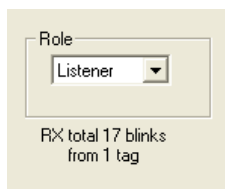


Figure 8 – blink RX report

Note, as described above, the anchor needs to spend some time in the initial Listener role to receive some blink messages from the tag before being taking on the Anchor role. The number of blinks received is reported in text just under the Role selection control.

Assuming some blinks have been received then, when anchor mode is selected an additional dialog box opens wherein the tag may be selected via its address. Use the drop-down list to select which tag this anchor should pair and communicate with during the ranging phase.

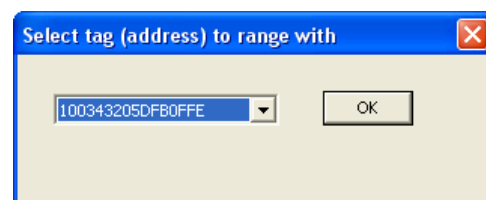


Figure 9 – tag selection by address

3.1.5.1 Listener role

In listener mode the software keeps the receiver turned on and reports (in the area above the main control panel) the contents of the received frames as simple hex dump of the frame octets. This scrolls up with the newest arriving frame displayed at the bottom. The bracketed number on the left is the frame length.

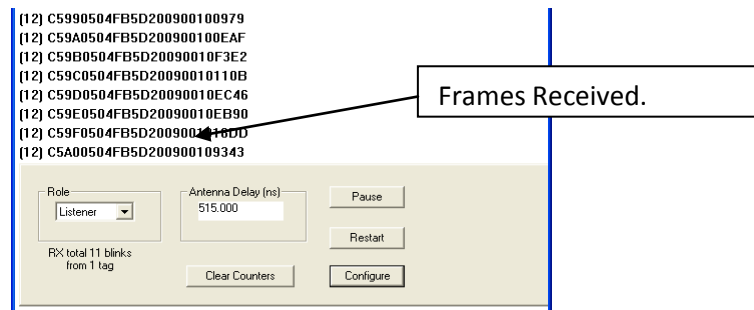


Figure 10 – received frame display in listener mode

Note: In this software the DW1000 IC's double buffering is not enabled, so the receiver stops every time a frame is received. This is to allow reading of the accumulator data for graphical display (see section 3.5 below) which would otherwise be lost if the receiver was re-enabled. After the PC has read the accumulator data the receiver is re-enabled. The affect of this is that listener mode will not see frames that are arriving in close proximity to one another, i.e. frames arriving between a first frame arrival and the receiver being re-enabled.

3.1.5.2 Tag role

In tag mode (after selection or reset) the tag sleeps for 1000 ms (by default) and then sends a blink message and listens for a “Ranging Init” response from the anchor to initiate pairing. The tag will return to sleep if no response is received. When the “Ranging Init” response is received, the tag is paired with the responding anchor. Once paired the tag will sleep for 400 ms (by default), and then initiates a ranging exchange.

The two sleep periods mentioned above can be altered via the payload configuration dialog (see section 3.4 below).

3.1.5.3 Anchor role

After being in Listener mode and receiving some tag blinks the user may set anchor mode, and select the tag to pair with. After this the anchor remains with its receiver enabled waiting for a poll message from the selected tag, to initiate another two-way ranging exchange.

The result of each two-way ranging is a distance estimate displayed on the anchor screen. The ranging result can also be sent back to the tag end for it to display. This ranging report may be enabled and disabled via the payload configuration dialog (see section 3.4 below).

The user controls available within the *DecaRanging* PC application are described below.

3.2 DecaRanging *Main Window Display and Controls*

This section discusses the main elements of operation and functionality available in the *DecaRanging* test and demonstration application.

3.2.1 Status and Statistics report

When the ranging is running the lines at the top of the main window give a status report that indicates count of frames successfully sent and received, and also reports current most recent ranging measurements performed. Figure 11 is a screen capture to show what this might look like in an anchor after a number of messages are exchanged.

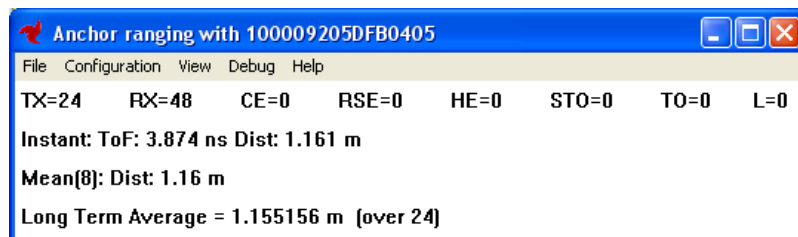


Figure 11 - status and statistics panel

The status information of Figure 11 is described below with reference to the Figure 12 where the red text is used to identify the changing numeric values reported by the application.

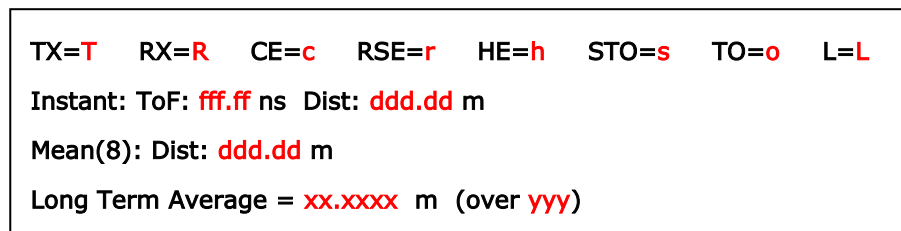


Figure 12 - status and statistics panel fields

On the first line then:

- Value **T** is the number of frames transmitted.
- Value **R** is the number of frames received, (with good CRC).
- Value **c** is a count of CRC errors.
- Value **r** is a count of unrecoverable errors in the Reed Solomon decoder.
- Value **h** is count of uncorrectable errors detected in the PHY header SECDED code.
- Value **s** is count of SFD timeout events.

- Value **O** is the number of times the Tag has timed out from receiving without getting a response frame. This results in another transmission attempt, (incrementing **T**).
- Value **L** is a count of late TX enables and late RX enables. These can occur in the delayed transmission and reception. If this happens frequently (and not as a result of user menu activity) then it probably means that the response time configuration needs to be increased.

The 2nd and 3rd lines are similar in function, except that while the 2nd line reports a single instantaneous value, the 3rd line reports a mean (or average) value. On these 2nd and 3rd lines then:

- Value **fff.ff** is the measured time of flight in nanoseconds.
- Value **ddd.dd** is distance in metres. This is value **fff.ff** multiplied by 299,702,547.0 which is the speed of light in air.

The averaging of the 3rd line is the mean of the last eight values.

The 4th line is reports a long term average of the instantaneous distance measurements, giving the average value **xx.xxxx** in metres, and indicating over how many readings **yyy** this has been averaged.

NOTE: The distance estimates are from antenna to antenna, see section 3.2.2.3 for details of antenna delay setting.

NOTE: With respect to the receiver error conditions counted above: An SFD timeout typically results from a false detection of preamble, where the subsequent expected SFD is not detected. PHY header errors may result from either a real error in the PHR or, after a false detection of preamble and/or SFD. Reed Solomon errors and CRC errors indicate problems in data recovery. Typically frame reception is aborted at the earliest error detected so CRC error may not be counted if an earlier PHR or Reed Solomon has already aborted reception.

3.2.2 Main Controls

The main controls are in a panel on the bottom of the main window.

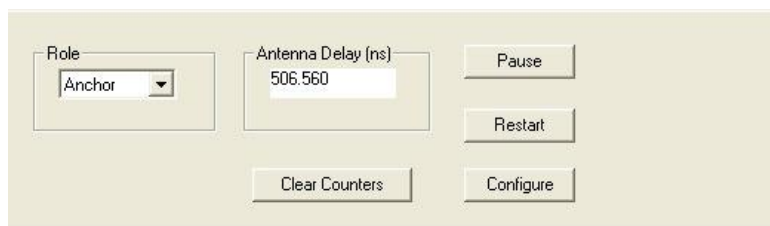



Figure 13 - main controls

3.2.2.1 Role

The *Role* group this is uses to select whether the application acts as the Listener, Tag or Anchor. Role selection is covered in section 3.1.5 above.

3.2.2.2 Restart


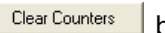
The  button may be used at any time to reset the software and start again. There is also a “Soft Reset (and Restart)” option, see section 3.11, which additionally performs an IC reset.

3.2.2.3 Antenna Delay

The antenna delay entry box is designed to allow for setting the delays to and from the antenna so that these may be subtracted from the round trip. The value specified here is used to correct the reported message send and receive times, half in the transmitter and half in the receiver, compensating for the system delays between physical timestamp and signal presence at the antenna.





In the EVK1000 kits the boards are delivered with a calibrated antenna delay programmed into the IC’s one-time-programmable (OTP) configuration memory, and the configured value is displayed in the antenna delay panel. (If an OTP value is not set a default antenna delay value embedded in the *DecaRanging* application is used).

The value can be recalibrated if necessary (e.g. due to change in antenna) as follows:

- Position the two units some distance apart (not too close, say 8 metres apart).
- Run the *DecaRanging* application at each end setting one to the Tag and the other to Anchor role so that ranging is done and range measurements are being reported.
- Using a tape measure, accurately measure the antenna to antenna distance between the antennas of the two units. Without disturbing the boards.
- Use the  button to clear the measurement averages. Without obstructing the line-of-sight path between the units, observe the reported range average converges to a good agreement with the tape measured value. If it doesn’t, then it is possible to change the antenna delay value to improve this. The value is a decimal value in nanoseconds. After typing new value use “Enter” key to apply the change. Each nanosecond change (when applied at both ends) gives 30 cm difference in range.
- It is recommended that the same value is programmed at each end. After the antenna delay is changed (at both ends), the  button can be used to clear the measurements, and the long term average can be observed to verify that the new antenna delay setting is giving a better average distance measurement agreeing with the manually measured distance.


Note: Antenna delay is actually two values – the value shown/edited at a 16 MHz PRF configuration is separate to value shown/edited when the PRF is reconfigured to 64 MHz.

3.2.2.4 Other Main Panel Buttons

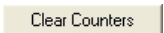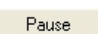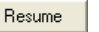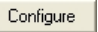The other main panel buttons are fairly self explanatory. The  button clears the counters and values reported on the status lines, as described in section 3.2.1 above. The  button disables all activity in the lower layer application state machine, essentially halting all sending and all receive processing. When the pause is active the Pause button changes to a  button which may be used to resume activity. The  button

button opens the Channel Setup dialog, (see section 3.3 below for details), which is the same dialog reached via Configuration – Channel Setup menu.

3.3 Configuration – Channel Setup

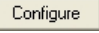This section describes the configurable items that appear on the Channel Setup dialog box accessed via either the main panel  button or via the Configuration menu's *Channel Setup* option. Figure 14 shows the Channel Setup dialog box.





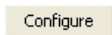
Figure 14 – channel setup configuration dialog box

The Channel Setup dialog box allows for the configuration of all the parameters controlling the format of 802.15.4 messages. The configurable items are described in Table 1 below.

Table 1 - channel setup dialog elements

Item	Description and Notes
Channel Selection	This is a drop down list for selection of the operating channel. The applicable centre frequency and bandwidth is also shown for convenience.
Preamble code	<p>The Channel Selection in conjunction with the configured Preamble Code defines the <i>Complex Channel</i> for the inter device communication. The preamble codes offered in this drop-down list change depending on the Channel Selection</p> <p>NB: For good communication and ranging, both units must have the same Complex Channel configurations.</p>

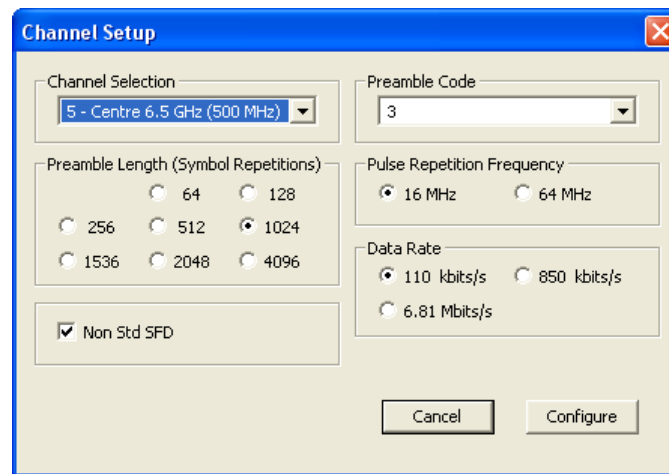Item	Description and Notes
Preamble length	<p>The preamble length is set here. Longer preambles make it easier for the receiver to lock to the message improving the channel matching and the first path determination, hence increasing the viable communications range and the accuracy of ranging measurements at that communications range.</p> <p>Preamble lengths of 64, 1024 and 4096 are defined in the IEEE 802.15.4 standard. The additional preamble lengths provided by the DW1000 allow designers more opportunity to optimise system performance trade-offs.</p> <p>Ideally the same preamble length should be set at both ends to give a balanced communications range, set to be consistent with the data rate. For long range at the 110 kbps data rate one would use a preamble of 1024 (or more) symbols, while at the 6.8 Mbps data rate a long preamble will bring no benefit and a shorter preamble would be used in practice to save power and air-time (increasing network capacity).</p>
Non Std SFD	<p>This tick box enables the use of a non-standard SFD. The SFD is the component of the IEEE 802.15.4 UWB frame marking the end of the preamble and the start of the data frame, which is actually a certain pattern of normal, inverted and deleted preamble symbols. DecaWave has found an alternative SFD pattern that is more robust than the one defined in the IEEE 802.15.4 standard, giving an extra dB or so of performance.</p>
Pulse Repetition Frequency	<p>This selects the Pulse Repetition Frequency to be used in the transmitter and receiver. NB: both units need the same PRF configuration setting.</p>
Data Rate	<p>The data rate may be selected to be any one of the data rates available here. NB: both units need the same data rate setting.</p>

Two buttons are provided: (a) The  button to escape from and close the Channel Setup dialog without making any changes, and, (b) The  button to apply the changed configuration to the ScenSor, which resets everything including the counters to start again with the modified configuration.

3.4 Configuration – Payload Setup

Payload configuration is selectable from Configuration menu's *Payload Setup* menu option

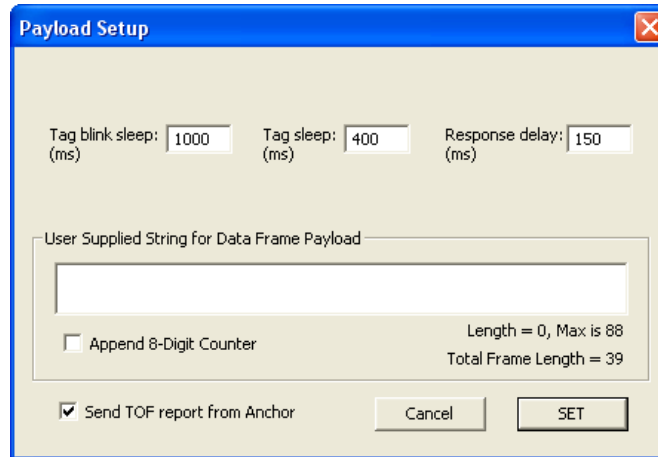


Figure 15 - payload setup configuration

The payload setup dialog is also used configure additional payload data, and configure certain parameters of the tag and anchor message interactions use during the two-way ranging measurement and reporting.

The configurable items are described in Table 2 below.

Table 2 - payload setup dialog elements

Item	Description and Notes
Tag blink sleep:	This sets the time that the tag sleeps between the blinks that are sent while the tag has not been paired with an anchor. See section 3.1.3 above for details.
Tag sleep:	This sets the time that the tag sleeps between ranging attempts. See 3.1.1 above.
Response delay:	This sets the response delay used in anchor for sending the response to the tag poll message, and the delay in the tag between receiving the anchor response and sending the final message. It is <u>very important that this time is set to the same value at both ends</u> for accurate ranging, and also to ensure that the receiver is enabled and waiting for the response at the right time. The time required relates to the responsiveness of the PC. The default 150 ms is good for most reasonably new machines. With older slower PC this may need to be increased to get reliable ranging interactions (e.g. a value of 300 ms might be sufficient). The “L=” error count in the status display may be an indication that the response time is too low. See 3.2.1 above.

Item	Description and Notes
User Supplied String for Data Frame Payload	<p>Here the user may enter a string and/or optionally append a count as described in <i>Append 8-Digit Counter</i> below.</p> <p>The user payload part of the received messages is displayed on 6th line of the status window. This is visible when Channel Response view is off. When Channel Response view is enabled the received the message user payload is displayed to the right of the long term average status line, (to see this window may need to be widened sufficiently or maximised).</p>
Append 8-Digit Counter	<p>When this tick box is ticked, an 8-character zero-padded decimal number is added to the TX frame. This is appended after the normal ranging control messages, after any other user payload, and is displayed on the receiving stations screen as described for user payload above.</p> <p>This counter is incremented every time TX frame is written into the TX frame buffer.</p>
Send TOF report from Anchor	<p>This tick box enables/disables the sending of Time Of Flight reports from the anchor. These TOF reports are the mechanism by which the tag end unit learns of the ranging result which it displays. When the <i>Send TOF report from Anchor</i> tick-box is disabled the anchor will not sent the TOF report when it calculates the distance at the end of the ranging but will instead turn on its receiver to await the next tag poll.</p>

NOTE: When working with EVB1000 version of DecaRanging running on ARM...

- It is assumed that the PC end will be the anchor.
- The TAG board LCD will not display ranging indications and distance estimates unless the “*Send TOF report from Anchor*” control is enabled on the PC anchor.
- If it desired to change the “*Response delay:*” to any value, larger or smaller than the default 150 ms, then the EVB1000 S1 DIP switch S1-8 (i.e. the 8th switch of switch pack S1) needs to be ON.

3.5 View – Channel Response View Enable

Selecting the Channel Response View Enable opens a panel in the middle of the main window into which the Channel Response values are drawn graphically. Figure 16 shows a typical channel impulse response graphic. The channel response is an array of complex values, the red line is the plot of the real values, the green line is the imaginary values, and the blue line is the computed magnitude values. This graphing shows the DW1000's view of the channel impulse response. The graphic also indicates with a vertical orange line where the DW1000 finds the leading path. In normal operation of the DW1000 there is no need to access this channel impulse response data, which is quite a lot of data, doing so will slow down system responsiveness. The hardware reported RX timestamp is accurate and is all that is needed.

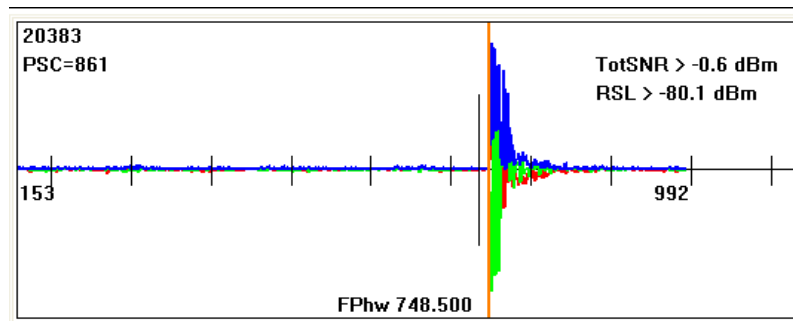


Figure 16 - channel response view

When the channel impulse response display is active, it is possible to zoom in and out using a mouse with a wheel. Make sure the *DecaRanging* application has focus (i.e. is the selected application). Then move the mouse pointer to a particular point over the graph and move the mouse wheel up (away from you) to zoom in on the X-coordinate frame. The zoom uses the mouse position to decide where to zoom. Move the wheel down (towards you) to zoom out again. Holding CTRL while moving the mouse wheel zooms on the Y scale. This Y zoom acts to keeps the graph centred between selected $-Y$ and $+Y$ values, (i.e. max plus and minus are increased/decreased at the same rate).

The view menu has an option for *Channel Response First Path Align*, which is on by default. The view menu also has an option for *Channel Response Only Show Magnitudes* which is self explanatory. When zoomed in on the Magnitude Only display mode, markers indicating individual nanosecond sample intervals are added to the curve displayed. Deselecting Channel Response View removes the panel and stops the graphing display.

The top-left number is an indication of the height of display max-amplitude. The PSC number indicates the number of preamble symbols accumulated. The numbers below the mid line are accumulator index (nanosecond) values, while the FPhw value beside the orange line is the DW1000 IC reported leading path (sub-nanosecond) position. The SNR and RSL values are calculated from diagnostic values reported by the DW1000 (please refer to the DW1000 user manual for more details of these).

3.6 View – Display Distance in Feet and Inches


Selecting this menu option appends a bracketed value in feet and inches to both *Instant:* and *Mean(8):* status lines, which is a conversion of the corresponding meter distance reported by each.

3.7 View – Large Text Range Display Enable

Selecting the Large Range Display Enable view menu option opens a panel in the middle of the main window into which the range (distance) estimates are displayed in metres using in a very larger font to make it clearly visible from a distance, especially when the window is maximised. The view menu has options to select the most prominent value (i.e. the largest figure shown at the top of the panel). The options are: the average of 8 range measurements (this is the default), the average of 4 range measurements or the instantaneous range measurement. There is also an option to set the precision of the value displayed to have 2 decimal places, instead of (the default) 1 decimal place.

3.8 Debug – Register Access

This is a facility sometimes used by DecaWave engineers for debug purposes. In general it is NOT recommend for customers to experiment with this unless directed to do so by DecaWave support engineers. Selecting the *Debug - Register Access* menu opens the Low-Level Register Access dialog.

Debug Register Access is only allowed when the normal operation has been suspended, i.e. paused using the  button in the main control panel – if this is not done then the *Register Access* menu item will be greyed out and unavailable.

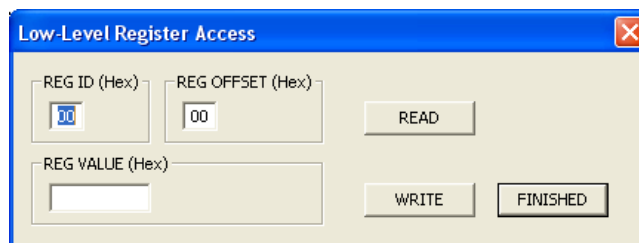



Figure 17 - low-level register access dialog

A hex register ID (00 to 3F) is set in the REG ID field. The READ button initiates the read and displays the result in the REG VALUE area. The REG VALUE may be changed by the user. The WRITE button writes the current REG VALUE to the register selected by REG ID and OFFSET. The FINISHED button closes the dialog.

- Note:**
- (a) Not all registers are present, and some are write-only.
 - (b) Writing incorrect values to certain registers can upset operation completely. The only recovery from this is to reset the unit by exiting the *DecaRanging* application and removing (and restoring) power, and restarting the *DecaRanging* application.


3.9 *Debug - Log Channel Responses*

This log operation opens an automatically named text file and then information about transmitted and received data frames (including the channel impulses data) is dumped into the file. This has proved a useful aid to debugging.

When Logging is enabled a  button appears on right hand side of the main control panel, defined in section 3.2.2 above. This can be used to discontinue logging and close the log file.


3.10 *Debug - Log SPI Activity*

This log operation opens an automatically named text file and then records all SPI traffic in the file. This may be useful to debugging or understand the SPI accesses used to drive the IC.

When Logging is enabled a  button appears on right hand side of the main control panel, defined in section 3.2.2 above. This can be used to discontinue logging and close the log file.

NOTE: Only one logging activity is allowed, so starting an SPI log will close the channel responses log and vice versa.

3.11 *Debug - Soft Reset (and Restart)*

In the case of an issue where the software  button does not seem to resolve it, then this *Soft Reset (and Restart)* menu option might be successful in resolving the issue. This resets the hardware using a software (SPI) accessible register and then restarts the DecaRanging software. If this fails to resolve the issue after two attempts, then to recover close the DecaRanging application and power off the EVB1000 boards a few seconds before restarting again.

3.12 *Keyboard shortcuts*


The various menu selections may also be enabled via the following keyboard short-cuts:

KEY	ACTION
R	Open Low-Level Register Access Dialog
A	Toggle Channel Response View Panel On/Off
C	Open Channel Configuration Dialog
P	Toggle Pause (Resume) On/Off
L	Toggle large range display View Panel On/Off
<ctrl-L>	Toggle debug log of channel responses On/Off

3.13 Troubleshooting

Error messages and recommended actions

(a) Connection to the board

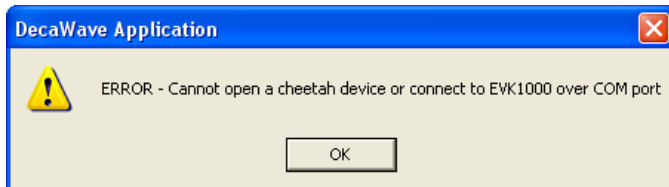

Check USB cable is connected to the EVB1000 or if Cheetah if this being used, check USB cable is connected to the cheetah and that the cheetah.dll is in the same directory as DecaRanging.exe

Install drivers as described in section 2 above.

(b) Connection to the DW1000 evaluation unit.



Check the evaluation unit is powered up and that the cheetah is correctly connected to the evaluation unit.

Refer to the separate evaluation unit user guide for details of how to set up the units and connect power and cheetah, etc.

(c) For other issues try a restart as defined in section 3.2.2.2, if that fails try a this *Soft Reset (and Restart)* see section 3.11, and if that fails after two attempts then exit the DecaRanging application and power off the evaluation unit board(s) for a few seconds before restarting again.

(d) If you are getting poor performance please check that you have both ends configured for the same channel and preamble code, preamble length etc. Also please make sure that the antennas are not loose.

4 Appendix 1 – Bibliography:

1	DecaWave – DW1000 Datasheet
2	DecaWave – DW1000 User Manual
3	DecaWave – EVK1000 User Manual
4	<p>IEEE 802.15.4-2011 or “IEEE Std 802.15.4™-2011” (Revision of IEEE Std 802.15.4-2006).</p> <p>IEEE Standard for Local and metropolitan area networks— Part 15.4: Low-Rate Wireless Personal Area Networks (LR-WPANs). IEEE Computer Society Sponsored by the LAN/MAN Standards Committee.</p> <p>Available from http://standards.ieee.org/</p>

5 About DecaWave

DecaWave is a pioneering fabless semiconductor company whose flagship product, the DW1000, is a complete, single chip CMOS Ultra-Wideband IC based on the IEEE 802.15.4 standard UWB PHY. This device is the first in a family of parts.

The resulting silicon has a wide range of standards-based applications for both Real Time Location Systems (RTLS) and Ultra Low Power Wireless Transceivers in areas as diverse as manufacturing, healthcare, lighting, security, transport, and inventory and supply-chain management.

Further Information:

For further information on this or any other DecaWave product contact a sales representative as follows: -

DecaWave Ltd,
Adelaide Chambers,
Peter Street,
Dublin 8,
Ireland.

<mailto:sales@decawave.com>

<http://www.decawave.com/>