
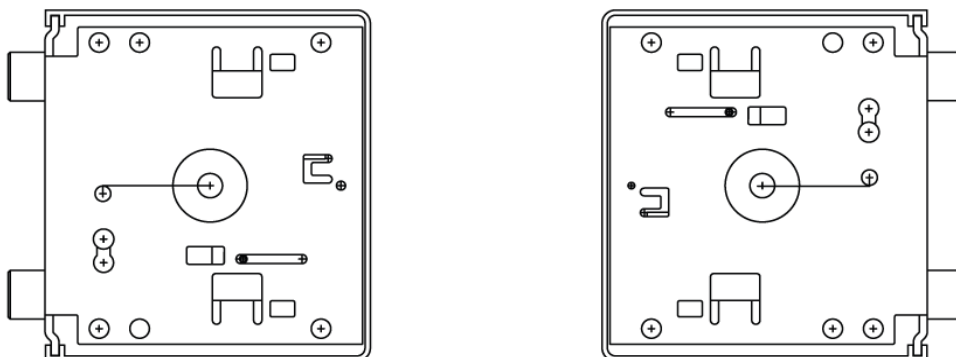


DRILL POINT FOR THE TWO BOLT LOCK DIRECT DRIVE LOCK Models 6000 and 7000

All measurements are taken from the center of the spindle. The diagram is for a lock mounted with the bolts facing right. If the lock is facing in another direction, make the appropriate adjustments. If you do not know how the lock is mounted on the container, call the container manufacturer for additional information.

1. From the center of the spindle hole measure 1 5/8" toward the bolts and 1/8" (counterclockwise).
2. Drill a 1/4" hole.
3. You will be drilling through the lock body into a ball bearing. Remove only enough material to free the ball then rotate the spindle to open the lock.

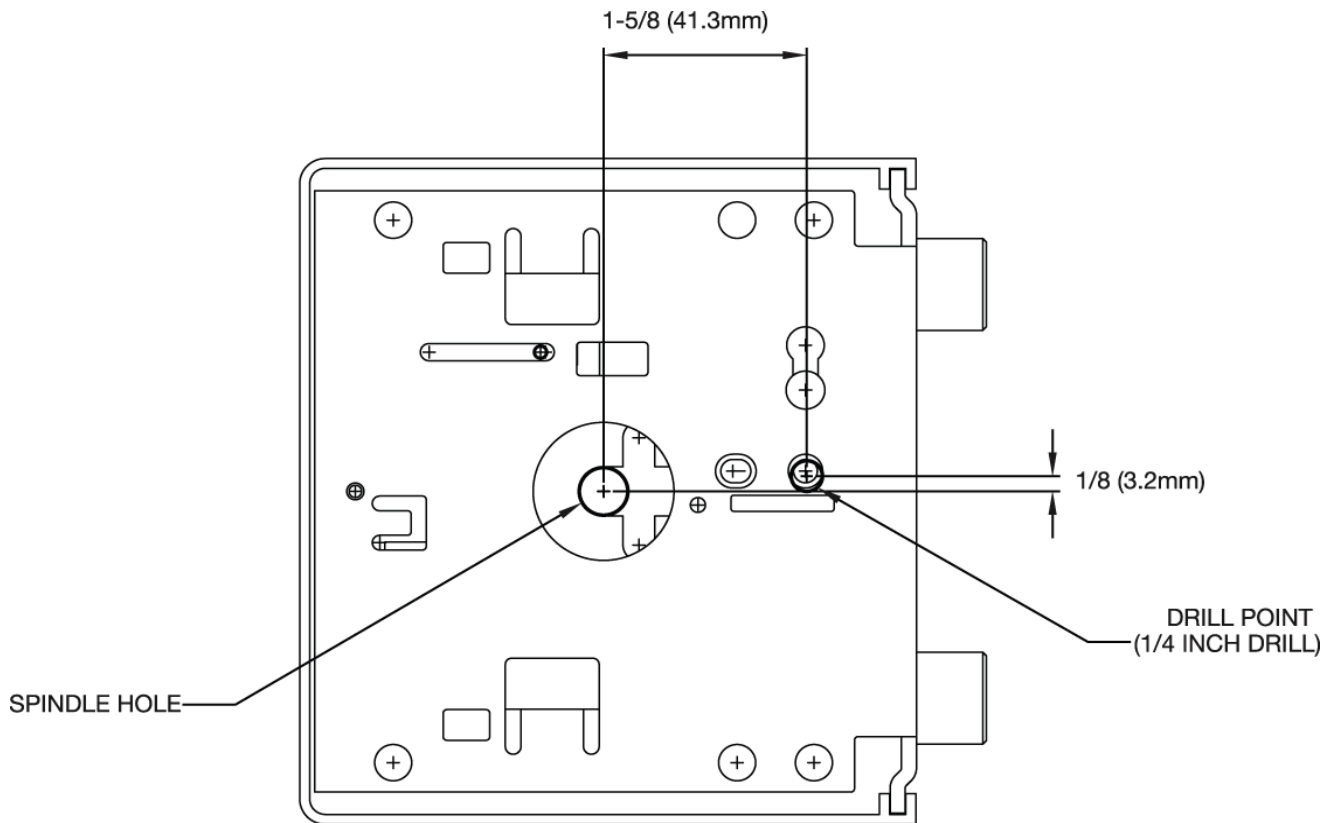

Not to scale