Project Report Sensor Module Interfacing

Task: Ultrasonic Range Sensor Module Interfacing

Team members

Chayatan Mukilan A Shantanu Senguptha $\label{eq:July 4} \text{July 4, 2014}$

Under the guidance of Prof. Kavi Arya and Parin Chedda



Embedded and Real-Time Systems Laboratory
Department of Computer Science and Engineering
Indian Institute of Technology
Bombay

Contents

1	Introduction	3	
2	About MB-1310 2.1 Pin Configuration	4 4	
3	Mounting and Interfacing the Sensor 3.1 Mounting Procedure	4 4 5	
4	Programming and Calibration 4.1 Calibration Procedure	6 6	
5	Output		
6	Beam pattern		
7	Applications	8	

Abstract


The project aims at interfacing ultrasonic range sensor with Fire Bird V educational robot. This additional module can be used for detection and ranging applications even in the harshest conditions. In this paper we will see about the basic MB 1310 ultrasonic range sensor module interfacing with Atmega 2560 in Fire Bird V robot. This will include the basic interfacing circuit, mounting, programming and calibration of the ultrasonic sensor.

1 Introduction

Ultrasonic sensors are transceiver units which send and receive ultrasonic waves to detect and range objects in front of them. They are more reliable in harsh conditions than the sensors that use light waves.

MaxBotix AE1 (MB 1310) is an ultrasonic range sensor operated over low power 3.3V - 5V range which enables the sensor to detect objects from very small range up to long range. It is capable of detecting from 0–765cm and it can provide SONAR range information from 20–765 cm with 1cm resolution. The various interface output formats included are real time analog voltage envelope, analog voltage output and serial digital output.

A detailed description of the MB 1310 ultrasonic sensor module, interfacing circuit, mounting procedure, calibration technique and appropriate C code are explained below.

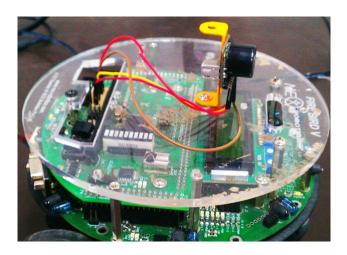

2 About MB-1310

2.1 Pin Configuration



[1];

Pin 1: This pin is internally pulled high. It is left open or connected to the supply, so that it sends serial output through Pin5 in the RS-232 format.

Pin 2: PW pin gives the PWM representation of the range detected by the sensor. It is not used.

Pin 3: AN pin gives the analog output corresponding to the range detected by the sensor with a scaling factor of (Vcc/1024) per cm. This pin is used as the input to the ADC 15 slot in the Servo Pod.

Pin 4: RX pin internally pulled high. This pin is used to either enable or disable the sensor. If it is kept open the sensor is always enabled. It is connected to the PB4 slot in the servo pod. This pin is kept high for 50ms enough to read the data.

Pin 5: TX pin It transmits data in the RS-232 format when Pin 1 is high. It is not used

The V_{cc} and **GND** pins are connected to the supply voltage 5V and ground respectively.


The connections are then given to the servo pod slot provided in the Fire Bird V slot which will be discussed in the later section.

3 Mounting and Interfacing the Sensor

3.1 Mounting Procedure

The sensor is bolted to a C joint which is in turn mounted on the Fire Bird V as shown in picture below. The pin-out connections are then given to the pins in the servo pod. This way of mounting gives the sensor its stability it needs to give correct readings while the bot is moving. It should be fixed in such a way that none of the robot's features affects the range of the sensor. It is advisable to tilt the sensor slightly upwards to prevent these hindrances.

The picture shows how we have mounted the sensor on the robot.

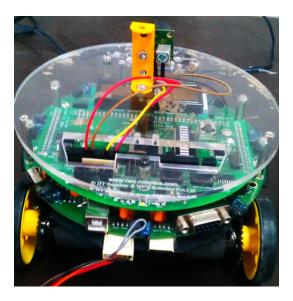

3.2 Servo Pod Connections

The sensor is connected to ATMEGA 2560 through the servo pod slots provided in the Fire Bird V robot. The connections are given below:


Pin 1: ADC 14 connected to analog input (pin 3) of ultrasonic sensor.

Pin 3: PB4 is connected to the Rx pin of the senor. Controlling PB4 can enable or disable the sensor.

Pin 6: GND of the ultrasonic sensor.

Pin 7: Supply Voltage Vcc of the ultrasonic sensor.

The figure shows the servo pod connections.

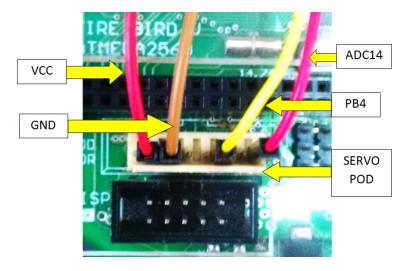

4 Programming and Calibration

The program is used to initialize the ADC 14 pin and receive the analog value from the sensor. Then the problem we face with the values is that it doesn't correspond to any particular value of measurement. It simply gives an analog value proportional to the distance measured. The calibration procedure to give the exact distance in centimeters is given below.

4.1 Calibration Procedure

MB 1310 outputs analog voltage with a scaling factor of $(V_{cc}/1024)per\ cm$.

$$Supply \, Voltage = 5V$$

 $Scaling\ factor = 5/1024 = 4.88mV/cm$

ATMEGA 2560 ADC resolution for the 10 bit ADC it uses

$$Resolution = Vcc/(2^n) = 5/1024$$

$$= 4.88mV/ADCStep$$

$$Distance in cm = ADCSteps * (4.88/4.88)$$

$$= ADC * 1$$

$$Scaling Factor = 1$$

Thus the value got from the ADC pin must be multiplied with this scaling factor to get the value in centimeters. The scaling factor is 1 in this case. It need not be 1 always.

4.2 Determining ADC steps

The data registers of the ADC are ADCL and ADCH and the control bit ADLAR determines in which format the 10 bit value is stored in the data registers.

If ADLAR = 0; the first eight bits are stored in ADCL and the remaining 2 bits are stored in ADC

If ADLAR=1; ADC2-ADC9 are stored in ADCH and the lower order bits ADC0 and ADC1 are stored in the ADCL6 and ADCL7.

We have used ADLAR = 1 and so we have followed the following steps to get the approximated ADC steps:

Right shift the ADCL 6 locations and left shift ADCH by 2 locations and then OR both. Now we have lost the Least Significant 2 bits. And this resultant value should be considered as the ADC Step.

5 Output

The desired output will be in this format.



6 Beam pattern

The beam pattern will give the space in which the sensor will be able to detect any objects present in front of it. The values which we got from the experiment is listed below. The first column gives us how far the object was placed from the base of the robot and the second column gives us the distance from the center of the sensor to the right upto which the object was detected. The beam pattern is symmetric along all direction.

Distance from the sensor	Range from the center of the sensor
20	7
80	21
140	30
200	35
260	34
320	35
380	33
440	35
500	34
560	36
620	30
680	25
740	13

7 Applications

- 1. They find use in applications such as humidifiers, sonar, medical ultra sonography, burglar alarms and non-destructive testing.
- 2. To measure tank or channel level, the sensor measures the distance to the surface of the fluid.
- 3. Ultrasonic sensors are used to detect movement of targets and to measure the distance to targets in many automated factories and process plants.
- 4. Nowadays ultrasonic sensors are widely used in automotive applications for park assist technology.

References

[1] https://solarbotics.com/product/35230/