

# Semestrální projekt

Parkoviště – zadání č. 2

**Jméno:** Jaroslav Mihál, Jáchym A. Kolebacz, Alec Smyček, Mariusz Lisztwan

**Login:** MIH0051, KOL0472, SMY0017, LIS0112

**Typ studia:** prezenční

**Cvičící:** Ing. Jakub Němčík

**Předmět:** Řídicí systémy s počítači

**Datum:** 27. listopadu 2022

# **Obsah**

|  |           |
|--|-----------|
| <b>Seznam obrázků</b>                              | <b>2</b>  |
| <b>1 Zadání</b>                                    | <b>3</b>  |
| 1.1 Specifikace parkoviště . . . . .               | 3         |
| 1.2 Specifikace dokumentace . . . . .              | 3         |
| <b>2 Analýza problému</b>                          | <b>6</b>  |
| <b>3 Dokumentace</b>                               | <b>8</b>  |
| <b>4 Softwarová analýza</b>                        | <b>10</b> |
| 4.1 Komunikace . . . . .                           | 10        |
| 4.2 Analýza dokumentů . . . . .                    | 12        |
| 4.3 Analýza obsahu a struktury informací . . . . . | 13        |
| 4.4 Analýza toku informací . . . . .               | 13        |
| 4.5 Analýza slabých míst . . . . .                 | 13        |
| <b>5 Systémová specifikace</b>                     | <b>15</b> |
| 5.1 Výchozí situace a cíle . . . . .               | 15        |
| 5.2 Vztah okolí k provozování systému . . . . .    | 15        |
| 5.3 Funkční požadavky . . . . .                    | 15        |
| 5.4 Nefunkční (ostatní) požadavky . . . . .        | 15        |
| 5.5 Uživatelská rozhraní . . . . .                 | 16        |
| 5.6 Chování za chybových situací . . . . .         | 17        |
| 5.7 Požadavky na dokumentaci . . . . .             | 18        |
| 5.8 Předávací podmínky . . . . .                   | 18        |
| <b>6 UML analýza</b>                               | <b>19</b> |
| <b>7 Závěr a sebehodnocení</b>                     | <b>21</b> |
| <b>Literatura</b>                                  | <b>22</b> |
| <b>Přílohy</b>                                     | <b>23</b> |

## Seznam obrázků

|     |   |    |
|-----|---|----|
| 2.1 | Mapa parkoviště   | 6  |
| 3.1 | Prvotní návrh   | 8  |
| 3.2 | Prvotní návrh vizualizace                                     | 9  |
| 4.1 | Hlavička UDP paketu   | 11 |
| 4.2 | Komunikace s vizualizací přes UDP                             | 12 |
| 5.1 | Vizualizace pro administrátora (v plné velikosti viz Přílohy) | 17 |
| 5.2 | Vizualizace pro uživatele (v plné velikosti viz Přílohy)      | 17 |
| 6.1 | Sekvenční diagram nastavení intenzity                         | 19 |
| 6.2 | Diagram časování  | 19 |
| 6.3 | Use Case diagram  | 20 |
| 6.4 | Stavový diagram   | 20 |
| 7.1 | Prvotní návrh vizualizace                                     | 23 |
| 7.2 | Prvotní návrh vizualizace                                     | 24 |

# 1 Zadání

## 1.1 Specifikace parkoviště

Ovládání světel lampy na základě různých enviro podmínek. Aplikace bude měřit nějaké rozumné veličiny (tmu, déšť, vítr, smog) a z nich se vytvoří požadavek na přiměřené osvětlení parkoviště. Toto bude zasláno rozhodující aplikaci, jako v předchozím případě.

## 1.2 Specifikace dokumentace

### 1) Analýza technologického řešení

Na základě zadání je potřeba analyzovat hardware dané technologie, což znamená:

- volbu typu systému – distribuovaný, centralizovaný – třeba neopomenout důvod;
- volbu senzorů;
- zapojení – komunikace, řídících jednotek, silového vedení, aktuátorů, senzorů;
- volbu silových jednotek, aktuátorů;
- volbu vizualizační prostředí;
- sledování a ukládání dat;
- a jiné.

Výsledkem je sada výkresů subcelků, seznamy komponent, dokumentace komponent, zdroje informací.

### 2) Dokumentace technologie

Zde je očekáván výstup ve formě výkresu celé technologie (případně její části). Cílem je zachytit podstatu celku a jeho částí, najít případné mezery v rámci komunikace.

Poznámka: K tvorbě výkresů lze využít vektorové programy (Autocad, CorelDraw, atd.), tužku s papírem a scannerem či jiné projektové aplikace.

### 3) Softwarová analýza

Součástí softwarové analýzy je:

- Obecná analýza
  - slovní forma
- Analýza struktury vnějšího prostředí

- interakce lidí se softwarem – kdo a jak může se softwarem pracovat
- Analýza funkcí
  - funkce, které aplikace umožňuje
  - provádění funkcí – kdy a jak často se mají provádět
- Analýza komunikací
  - komunikace mezi jednotlivými částmi aplikace – jak komunikuje hlavní řídicí algoritmus s ostatními částmi aplikace
- Analýza dokumentů
  - všechny dokumenty, které jsou generovány nebo používány v aplikaci – co budou dané dokumenty obsahovat
- Analýza obsahu a struktury informací
  - typ a struktura dat v systému
  - frekvence zpracování a používané přenosy dat
  - délka uchovávání dat
- Analýza toku informací
  - toky dat mezi jednotlivými funkcemi
  - ochrana dat
- Analýza slabých míst
  - identifikace problémů, opomenutí a redundancí (funkcí i celého systému)

#### 4) Systémová specifikace

- Výchozí situace a cíle
  - cíle a účel softwaru
  - aktuální funkcionalita – co lze nabídnout zákazníkovi
- Vztah okolí k provozování systému
  - podmínky pro provoz
  - jaká vnější data jsou potřeba
  - počet uživatelů, jejich činnosti, frekvence užití
- Funkční požadavky
  - seznam funkcí softwaru očekávané uživatelem – co očekáváme od technologie vzhledem k softwaru
- Nefunkční (ostatní) požadavky
  - požadavky na spolehlivost, přenositelnost
  - reakční časy a doba zpracování
- Uživatelská rozhraní
  - popis nedůležitějších bodů uživatelského rozhraní

- popisuje způsob a prostředky, jimiž uživatel komunikuje se systémem
- Chování za chybových situací
  - rozbor vlivů různých chyb a požadované chování systému při jejich výskytu
- Požadavky na dokumentaci
  - referenční příručka, manuál, systémová dokumentace
- Předávací podmínky
  - návrh testů a způsobu kontroly pro každý požadavek samostatně
- Přílohy
  - pojmy, bibliografie atd.

## 5) UML analýza

Analýza pomocí UML diagramů bude obsahovat minimálně tolik diagramů UML, kolik je studentů ve skupině (například: diagram užití, aktivitní diagram, diagram tříd, stavový diagram, sekvenční diagram, časování). Každý ze studentů tedy vytvoří alespoň jeden z těchto diagramů.

## 6) Výstupy projektu

Jsou očekávány dva výstupy, jež budou uloženy pomocí GIT ve vzdáleném repositáři včetně všech dodatečných souborů a příloh. Výstupy jsou:


- dokument splňující veškeré body zadání 1 až 5 a obsahující titulní list, obsah, patřičné formátování, schémata, obrázky, diagramy, přílohy a self-assessment (sebehodnocení přínosu jednotlivých členů týmu – kdo co udělal);
- prezentace výsledku projektu (28.11.2022).

## 2 Analýza problému

Jako semestrální projekt jsme si ve skupině vybrali ovládání světel lampy na základě různých environmentálních podmínek. Konkrétně se jedná o osvětlení parkoviště mezi budovou FEI a FNO (souřadnice 49.830987838430644, 18.160041318757802) o rozloze zhruba přibližně 40x60 m. Naše řešení je centralizovaný systém s distribuovanou vizualizací. Za pomocí jednoho PC (případně i Raspberry Pi) zpracováváme data ze světel a senzorů na chtěné hodnoty a následně je posíláme jako příkazy na ovládání světel. Tento počítač pak posílá data pomocí UDP protokolu po síti, na kterou se lze připojit vizualizaci. Kdyby se kdokoliv rozhodl tento systém uplatnit a chtěl by použít bezdrátovou komunikaci, pak bude systém spíše distribuovaný, neboť hlavní počítač bude posílat pouze data systému jednotlivých světel.

Rozhodli jsme se použít senzory VISIC620 od společnosti SICK. Volba padla právě na tento typ senzoru, protože je schopen snímat v podstatě všechny změny environmentálních podmínek. Používáme konkrétně alespoň čtyři senzory pro určení viditelnosti, ze kterých se vytváří průměrná hodnota viditelnosti, dle které systém reaguje na změny. Následně bude systémově ošetřeno, aby se při případném poškození senzoru (tzn. hodnoty se budou výrazně lišit), zobrazilo upozornění ve vizualizaci.[3]

PC je propojeno se světly pomocí kabelů dle druhu světla, případně bezdrátově, dle možnosti daných světel. PC musí být připojeno k wifi za účelem vizualizace.

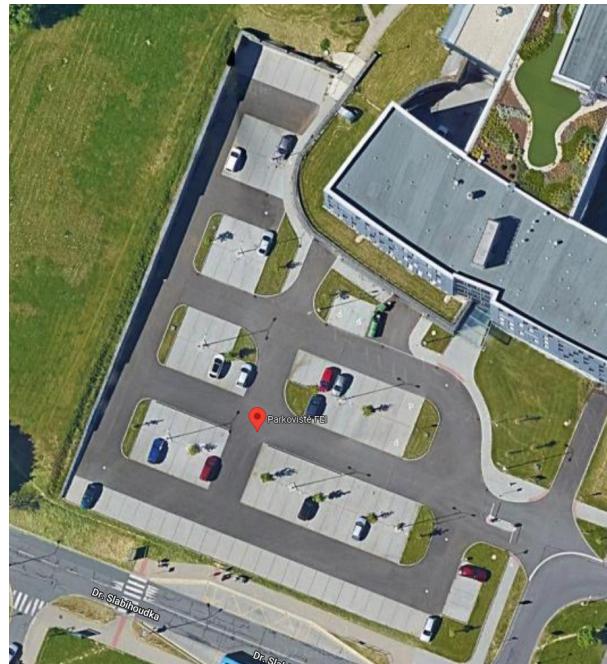

Obrázek 2.1: Mapa parkoviště


Vizualizaci aplikace jsme se rozhodli realizovat v prostředí PROMOTIC. Budou dva účty – administrátor a uživatel. Administrátor bude mít možnost měnit nastavení svítivosti světel v procentech pro každou hodinu pomocí posuvníků.

V aplikaci (vizualizaci), v našem řešení jsme se rozhodli pro PROMOTIC, existují dva účty. Jeden účet je administrátora, který může měnit nastavení svítivosti světel v procentech pro každou hodinu pomocí posuvníků. V případě, že se zhorší viditelnost, svítivost se dle „závaznosti“ situace procentuálně zvýší. Systém je schopen reagovat téměř okamžitě, záleží tedy na programátorovi, jakou frekvenci vyčítání dat ze senzorů zvolí. Ve druhém účtu je možné pouze sledovat stav, tedy na kolik procent daná lampa svítí. V případě například energetické krize, svátků, je možné světla vypínačem vypnout pro úsporu energie. PROMOTIC není zásadní pro běh aplikace, můžeme využít i jiné vizualizační programy, pokud podporují komunikaci přes UDP protokol (např. LabVIEW). Ukládáme hodnoty senzorů při určování osvětlení, požadovanou intenzitu osvětlení administrátorem, tato data jsou pak sledována právě vizualizací a slouží pro zpětnou kontrolu funkčnosti.


Jako potencionální chyby řešení můžou být:

- vliv záškodníků na senzory
- špatně (nedostatečně) nastavené hodnoty osvětlení ve vizualizaci adminem
- delší počáteční ladění systému

### 3 Dokumentace

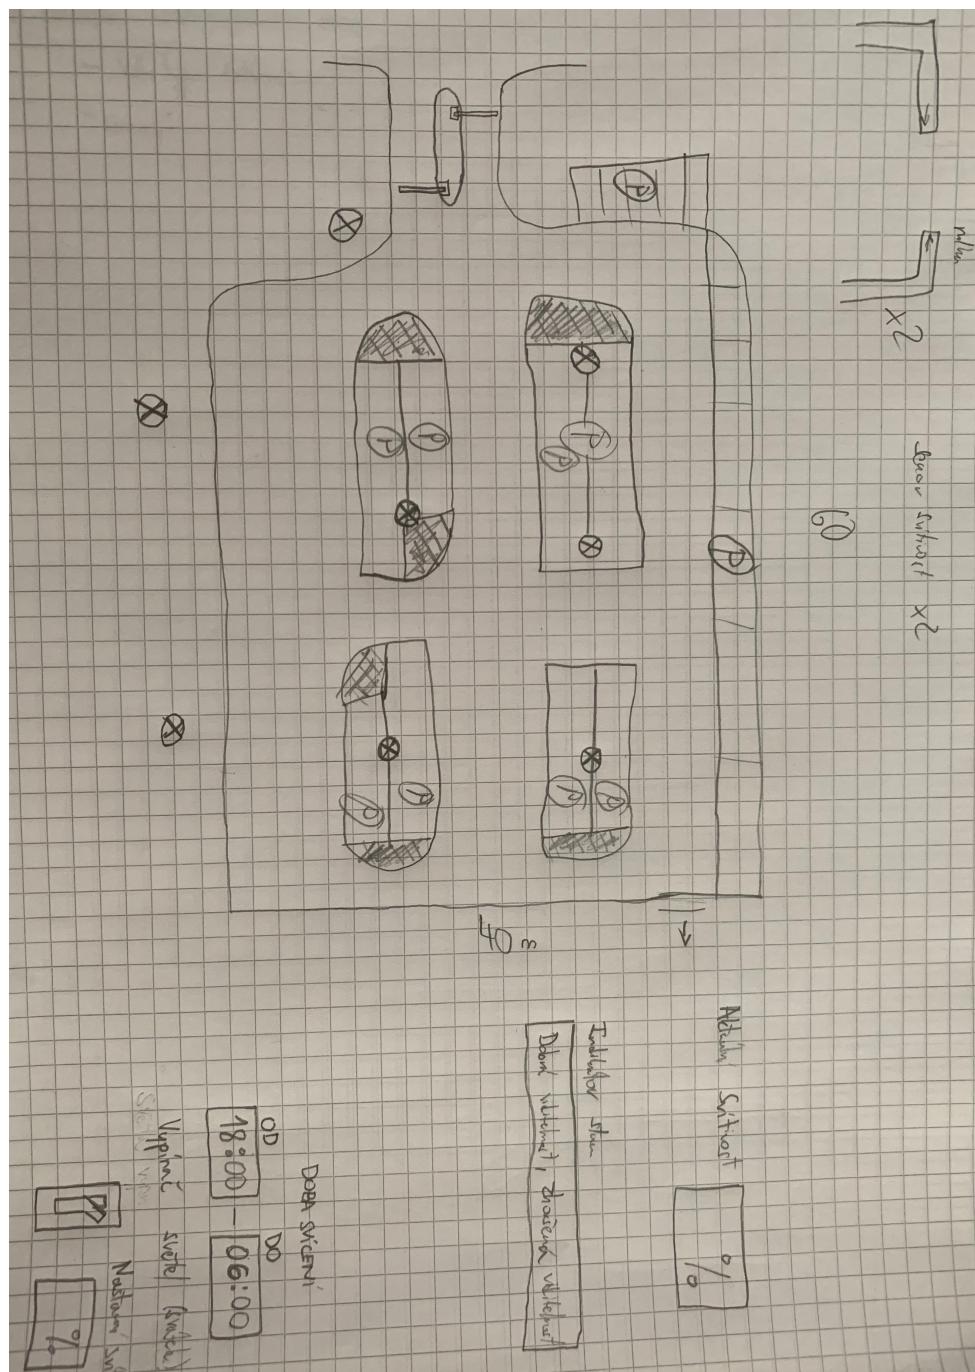

Obrázek 3.1: Prvotní návrh

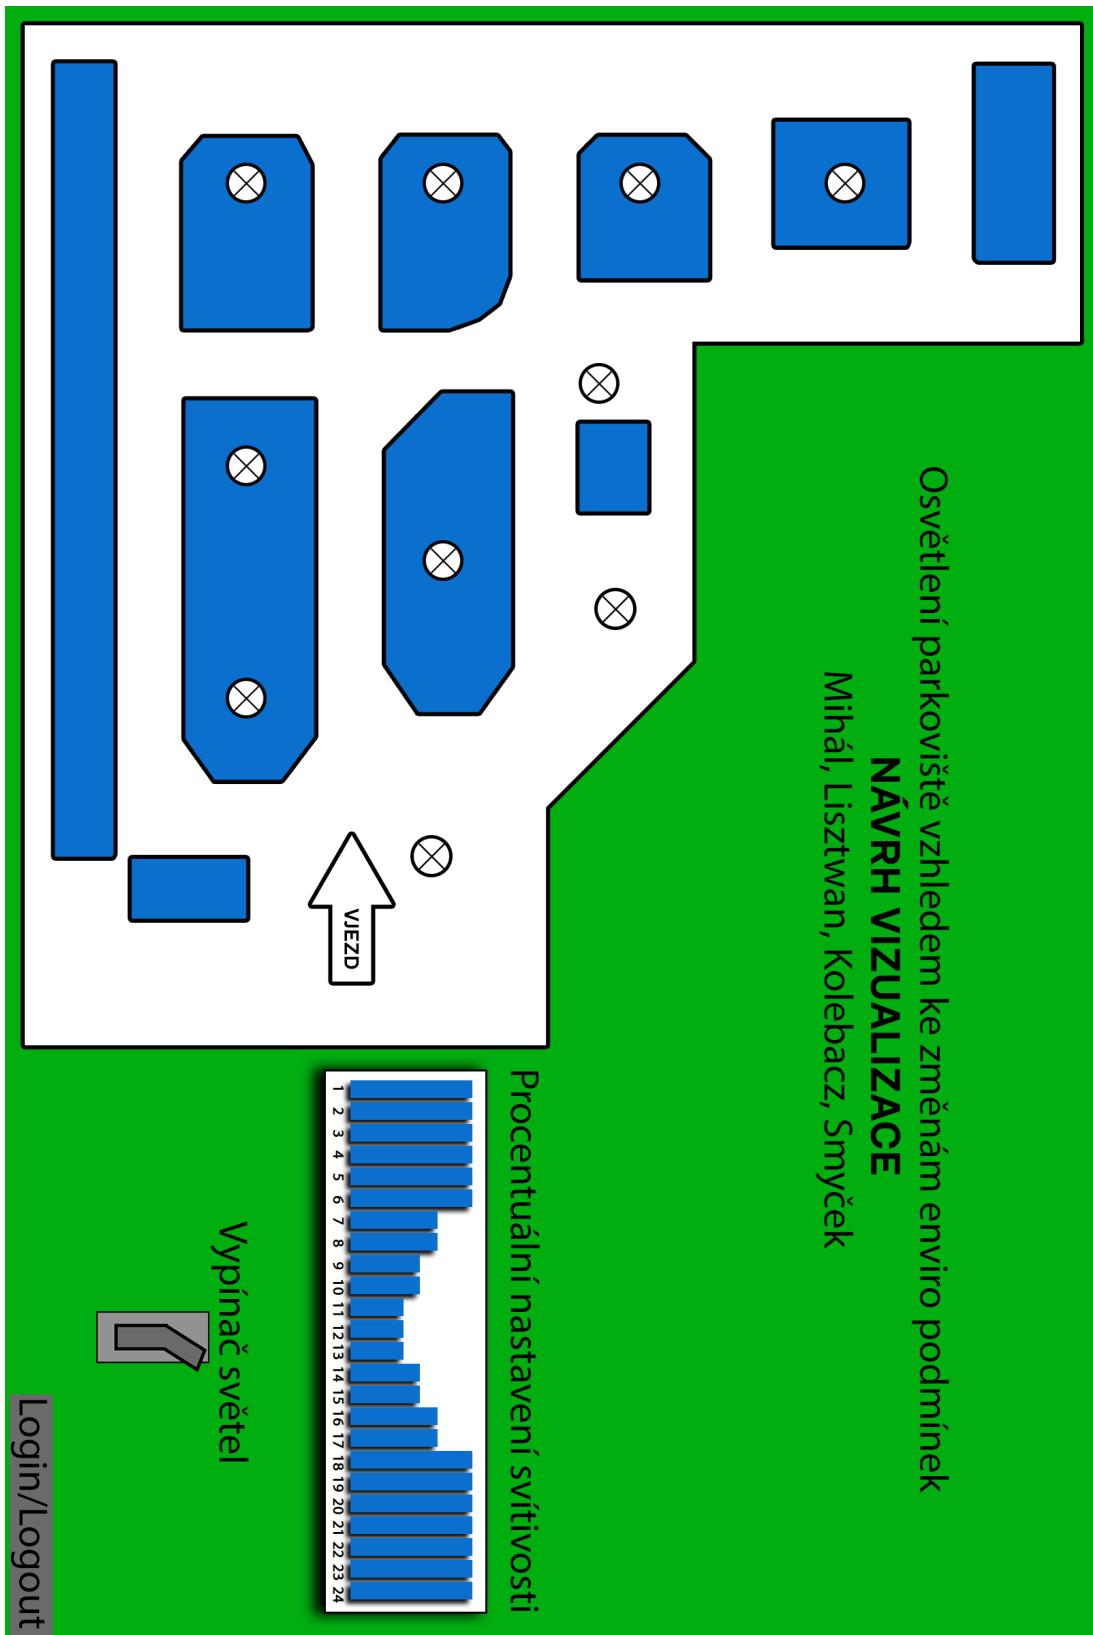

Obrázek 3.2: Prvotní návrh vizualizace

## 4 Softwarová analýza

Bude zapotřebí hlavní program (nepoptřebující GUI), který bude zpracovávat data získaná ze senzorů a ty pak kontrolovat, zda jsou spravné. Poté přes konfigurační soubor bude periodicky načítat chtěnou hodnotu, kterou porovná s daty ze senzoru a nastaví je na světlech. Mezitím bude periodicky posílat přes UDP protokol data pro vizualizaci (vlastní komunikační protokol, který bude obsahovat, hodnoty konfiguračního souboru, poslední data ze senzorů, boolean podezření poruchy senzoru a port pro příjem dat k ovládaní přes vizualizaci).

K aplikaci budou mít přístup dva typy lidí – administrátor a uživatel. Na nejnižší úrovni je uživatel, který může pouze sledovat stavy světel a senzorů. Správce (technik) navíc může vypínat a zapínat celkové osvětlení, upravovat config soubor a manuálně nastavovat intenzitu osvětlení (viz Obrázek 6.3).

Seznam funkcí, které aplikace umí:

- sběr procentuálních hodnot osvětlení
- sběr viditelnosti ze senzorů
- sběr požadovaných procentuálních hodnot skrz vizualizaci
- posílaní a následné nastavení chtěné intenzity světla
- kontrola senzorů - vždy po sběru dat senzorů
- posílaní aktuálního stavu vizualizaci
- výpočet chtěné intenzity: vezme chtěnou základní hodnotu s configu a upraví ji podle dat získaných senzory
- nastavení config souboru pomocí vizualizace
- ukladání dat
- kontrola přihlášení od vizualizace.
- přepočítání intenzity (zavolané vizualizací či změnou config souboru)

### 4.1 Komunikace

V našem projektu jsme se rozhodli využít převážně protokol UDP (User Datagram Protocol), jelikož je jedním z často používaných protokolů v komunikaci a podporuje ho tak námi zvolené

prostředí pro vizualizaci i náš hlavní program. Ke zvážení je i možnost využití protokolu TCP (Transmission Control Protocol), který by zaručil spolehlivost doručení dat. Z hlediska rychlosti by nás neomezoval, protože interval mezi posílanými daty není natolik malý, aby došlo k přetížení komunikace. [2] [4]

#### 4.1.1 UDP

UDP je základním protokolem modelu TCP/IP. Tento protokol je využíván v případě potřeby rychlé komunikace mezi zařízeními, kde není prioritou doručení veškerých dat. Jeho rychlosť spočívá v menší hlavičce paketu, kde oproti protokolu TCP chybí potvrzení o přijetí či možnost obnovení v případě ztráty paketu. Díky tomu hlavička paketu zabírá pouhých 8 B, narozdíl od 20 - 60 B u paketu TCP. UDP navíc funguje jako multicast, což znamená, že může komunikovat s více zařízeními najednou.[2] [4]


V hlavičce paketu se nachází pouze port odesílajícího a přijímajícího zařízení, délka paketu a bitový součet (viz Obrázek 4.1). [2] [4]

| UDP Datagram Header |   |   |   |        |    |    |                  |
|---------------------|---|---|---|--------|----|----|------------------|
| Bit #               | 0 | 7 | 8 | 15     | 16 | 23 | 24               |
| 0                   |   |   |   |        |    |    | Destination Port |
| 32                  |   |   |   | Length |    |    | Checksum         |

Obrázek 4.1: Hlavička UDP paketu

#### 4.1.2 Způsob komunikace

Obrázek 4.2 nám popisuje komunikaci našeho řešení pro osvětlení parkoviště. Senzory posírají na hlavní PC analogovou proudovou hodnotu. Pomocí drátového UDP protokolu posílají světla aktuální hodnoty na hlavní PC, který zpětně je schopný přes UDP světla ovládat a nastavovat tedy jejich hodnotu svítivosti. Dále je schopen komunikovat s PC uživatele, který má naši aplikaci vytvořenou v prostředí PROMOTIC, případně se servisním PC, a to bezdrátově (wifi). Dále existuje možnost pomocí Node.js komunikace s mobilním telefonem, kterou momentálně nevyužíváme.

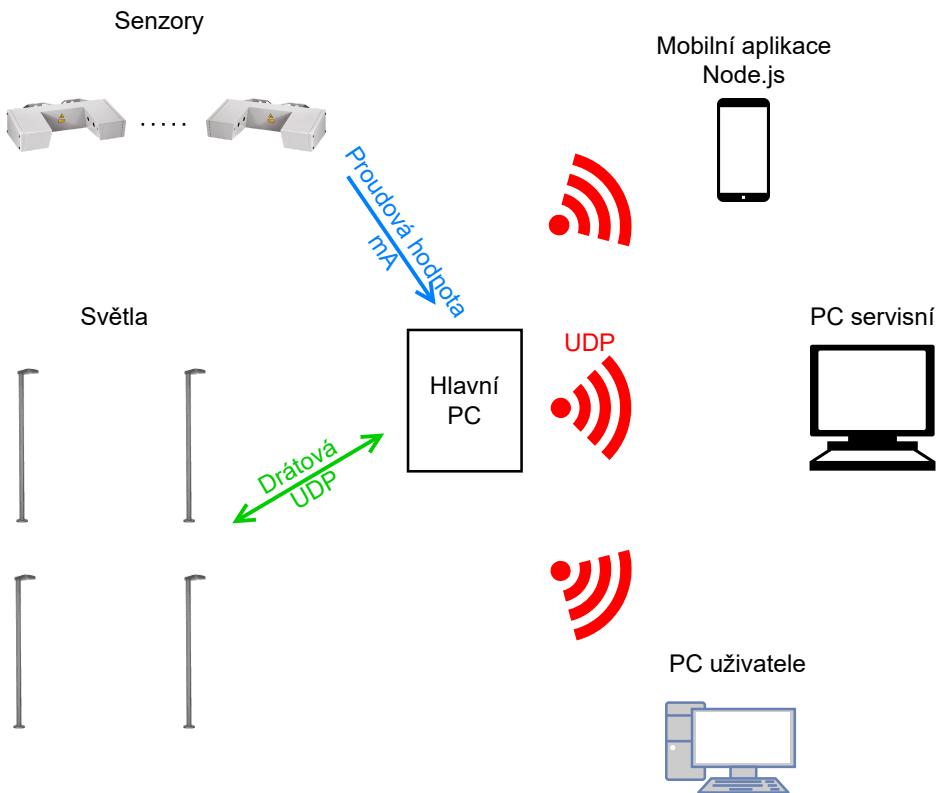

Obrázek 4.2: Komunikace s vizualizací přes UDP

## 4.2 Analýza dokumentů

V naší aplikaci se budou používat tyto soubory:

- Config soubor
- Usage log
- Data log
- Error log

*Konfigurační soubor* bude posílat každou hodinu hodnoty v procentech, na základě které se stanoví žádaná intenzita. *Usage log* bude zapisovat každé připojení do vizualizace, včetně všech úprav, které se v ní vytvoří. V *Data logu* budou veškerá naměřená data ze senzorů, včetně nastavených procentuálních hodnot svítivosti lamp. Pro zápis chyb vygenerovaných programem budou v souboru *Error log*. Může se jednat třeba o oznamení chybné hodnoty jednoho ze senzorů.

### 4.3 Analýza obsahu a struktury informací

V hlavním programu budeme využívat dva objekty (třídy), a to pro světla a senzory, přičemž každý z nich bude mít nějaké vlastnosti:

#### Objekt světla

- ID světla
- intenzita nastavená
- stav on/off

#### Objekt senzoru

- ID senzoru
- viditelnost
- porucha

Viditelnost se porovnává vždycky v určeném časovém úseku (co deset minut) přitom se vyhodnotí případná porucha senzoru. Poté přijde vždy nastavení intenzity, pokud se liší s předchozí hodnotou. Data se budou uchovávat jeden měsíc.

### 4.4 Analýza toku informací

Tok mezi funkcemi jako takovými moc neřešíme. Pracujeme s globálními hodnotami, uloženými v config souboru. Z hlavního PC vychází již pouze hodnoty, avšak napadnutelné budou přenosy dat mezi PC a světly, senzory a vizualizací. Na senzoru snímáme proudový výstup.

Co se týká ochrany dat přes UDP komunikaci, tak je třeba mít oddělenou síť, protože je relativně snadno přístupná jakýmkoliv zařízením na síti. Data je třeba šifrovat, alespoň posunutím bitů o určitou hodnotu. Dostačující je například kódování spojením hodnot a převrácením bitů, alespoň tedy jako prvotní ochrana.

### 4.5 Analýza slabých míst

- bylo by vhodné zakódování dat, aby nebyly lehce čitelné útoky kdy se sledují pakety na síti

- vyhnout se připojení k veřejné síti
- nejsme schopni určit správné nastavení hodnot svítivosti světel – vhodnost zavedení zpětné vazby při jejich nastavování
- nemodulárnost vizualizace
- UDP neobsahuje potvrzovací bit – případně využít protokolu TCP
- administrátor zapomene heslo, nemožnost změny hesla

## 5 Systémová specifikace

### 5.1 Výchozí situace a cíle

Ovládání světel na parkovišti na základě environmentálních podmínek:

1. Pomocí určení základní časové linie
2. Zesílení intenzity při nízké viditelnosti
3. Sledování dat ohledně viditelnosti

Ovládání se provádí automaticky, případně se dá vypnout. Při automatickém ovládání se světlo řídí nahraditelným configem.

### 5.2 Vztah okolí k provozování systému

Pouze stačí počáteční nastavení, systém následně funguje automaticky. S žádnými daty zvenčí se momentálně nepracuje. Počet sledujících téměř neomezený, figurují dva účty – v jednom je umožněno pouze sledování, ve druhém užití se jednou měsíčně nastavují základní svítivosti.

### 5.3 Funkční požadavky

- funkce pro sběr dat ze senzoru čte hodnoty z připojených senzorů
- funkce naslouchače UDP (očekává zpětnou vazbu z vizualizace – nastavení jendnotlivých světel a nastavení configu)
- funkce vysílaní UDP (slouží pro zobrazení vizualizace)
- funkce pro nastavení hodnoty na světlech
- nastavení config souboru

### 5.4 Nefunkční (ostatní) požadavky

Reakční časy by klidně mohli být i v řádech minut (když se jedná o automatickou funkci), avšak v případě vizualizace a ovládání by čas neměl přesáhnout minutu, především aby uživatel

věděl, že je software funkční. Výpadek nás moc neovlivní – data by měli být uložené na disku v config souboru, takže při opětovném spuštění je akorát zapotřebí načíst data ze senzoru a denní dobu a pak software pokračuje v předchozí funkci. (světla taky mohou vypadnout, takže proto je potřeba hned načíst čas s daty a poslat nové požadavky)

## 5.5 Uživatelská rozhraní

Vizualizace je vytvořena v SCADA systému PROMOTIC. PROMOTIC je komplexní SCADA objektový softwarový nástroj pro tvorbu aplikací, které monitorují, řídí a zobrazují technologické procesy v nejrůznějších oblastech průmyslu. Tento systém byl zvolen pro tvorbu vizuální aplikace z důvodu jednoduchosti vytváření aplikací a dostupnosti. Tento vývojový software je k dispozici jako FREEWARE, tzn. zdarma ke stažení, ale s menším omezením. PROMOTIC obsahuje širokou paletu technologických obrázků, ikon atd. Výhodou je, že lze importovat vlastní obrázky do grafického panelu pro další užití. [1]

Vizualizace se skládá z mapy svítidel a senzorů na parkovišti, kde se nachází ikony jednotlivých světel a senzorů, jejich označení a aktuální stav světla nebo senzoru dle barvy rozsvícení ikony. Dále se skládá z vizuální reprezentace procentuálního nastavení svítivosti a jeho hodnoty se zobrazují dle aktuálního nastavení v barech pro určitou hodinu dne. Uživatel se automaticky přihlásí po prvotním zapnutí. Pokud je přihlášený uživatel, může jedině sledovat aktuální stav světel a senzorů a konfiguraci procentuálního nastavení svítivosti (viz Obrázek 5.2). Pokud je přihlášený administrátor, může manuálně upravovat konfig procentuálního nastavení svítivosti pomocí táhel v reálném čase (viz Obrázek 5.1). Administrátor může vypínat a zapínat všechny světla najednou pomocí tlačítka. Dále je mu umožněno odhlásit se tlačítkem odhlásit.

Jednotlivé stavy světel a senzorů:



... světlo je aktivní



... upozornění, že světlo pracuje na 100 %



... chyba světla (např. není zapojené)




... světlo je manuálně vypnuto (neaktivní)




... senzor je aktivní



... chyba senzoru (např. není zapojené nebo došlo k jeho poškození)

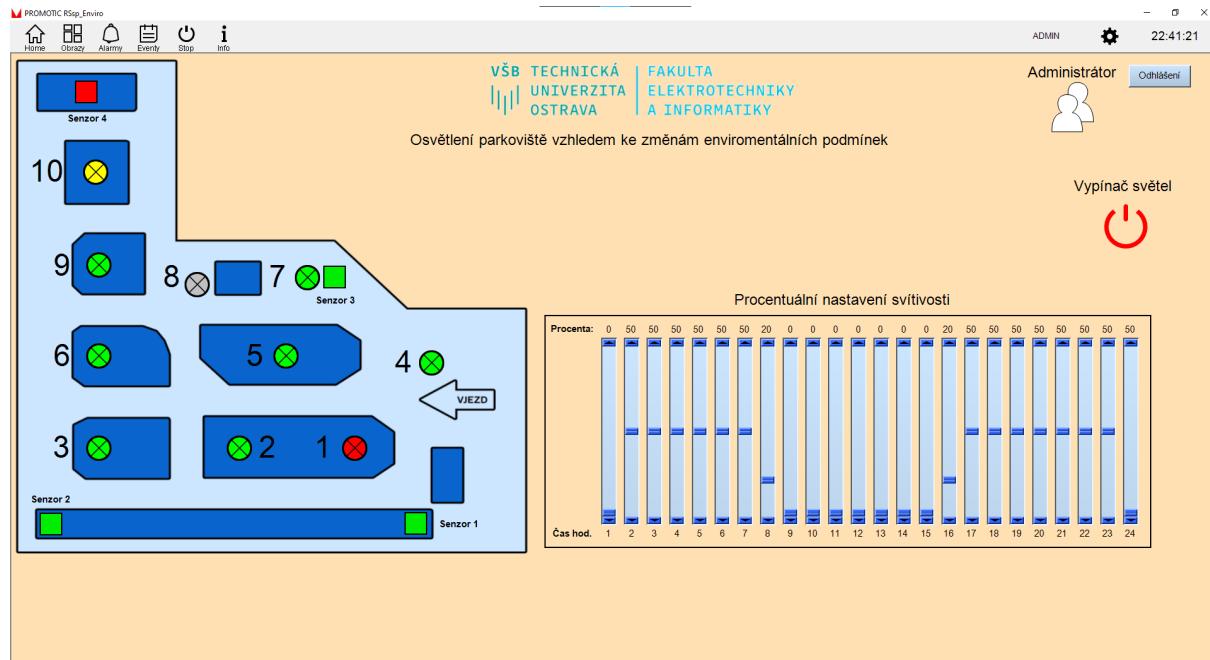

Obrázek 5.1: Vizualizace pro administrátora (v plné velikosti viz Přílohy)

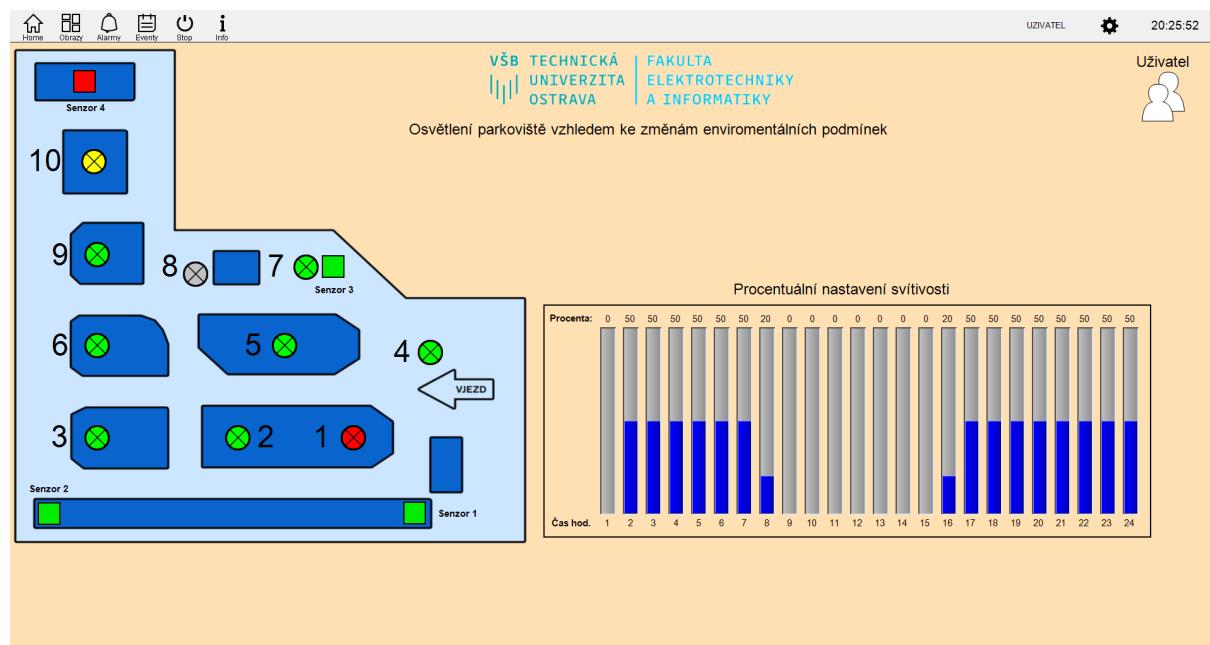

Obrázek 5.2: Vizualizace pro uživatele (v plné velikosti viz Přílohy)

## 5.6 Chování za chybových situací

Při sběru dat ze senzoru se vyhodnocuje průměr a v případě odchylky se vyřadí nejvíce odchýlený senzor z průměru a poté se nahlásí jeho chyba. Světla budou pořád svítit na 100 % (senzor, nebo z důvodu chyby více senzorů, posílá špatné hodnoty) — tedy i přes den.


## 5.7 Požadavky na dokumentaci

Vhodné vytvořit manuál popisující vizualizaci a připojení jednotlivých částí systému.


## 5.8 Předávací podmínky

Možnost softwarového testu, kdy první projde jeden 24-hodinový cyklus v rámci pár minut a následně udělá simulaci snížení viditelnosti. (skvělá ukázka při prodeji).


## 6 UML analýza

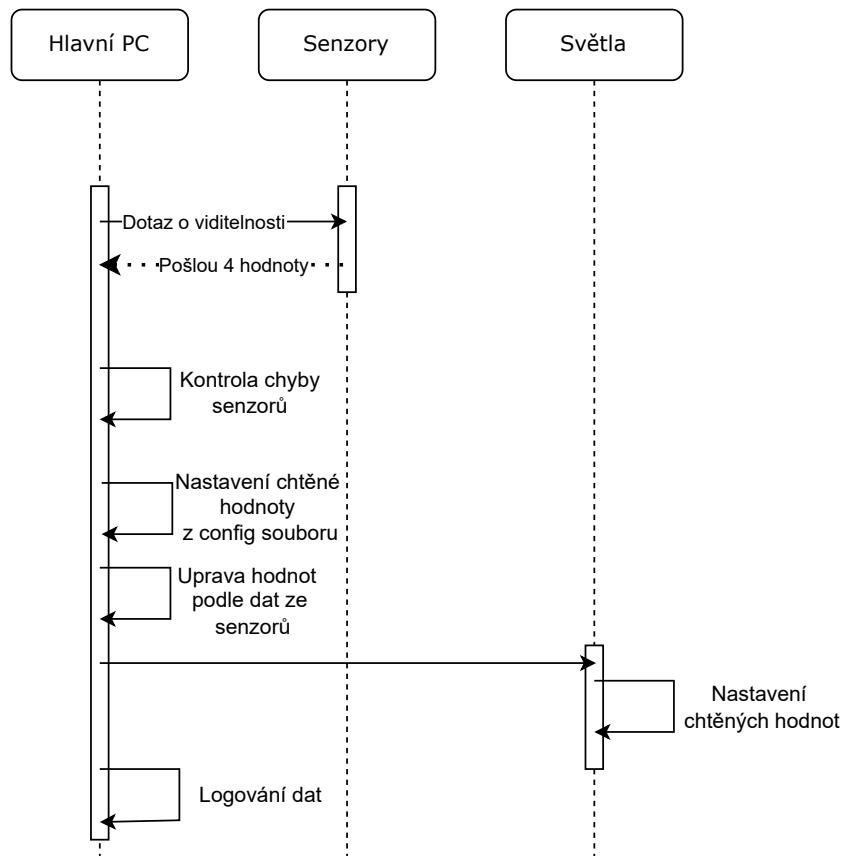


Obrázek 6.1: Sekvenční diagram nastavení intenzity

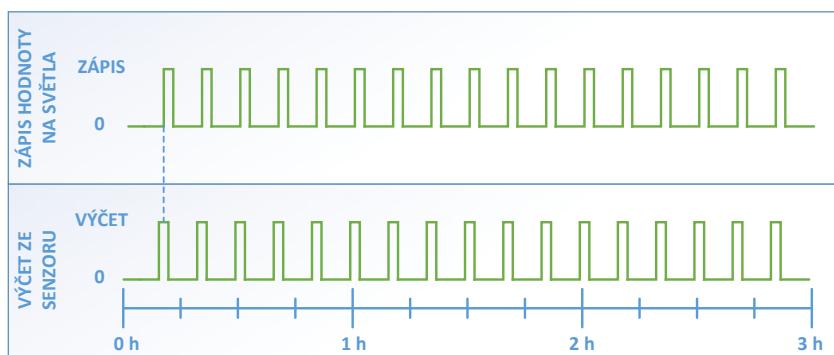

Obrázek 6.2: Diagram časování

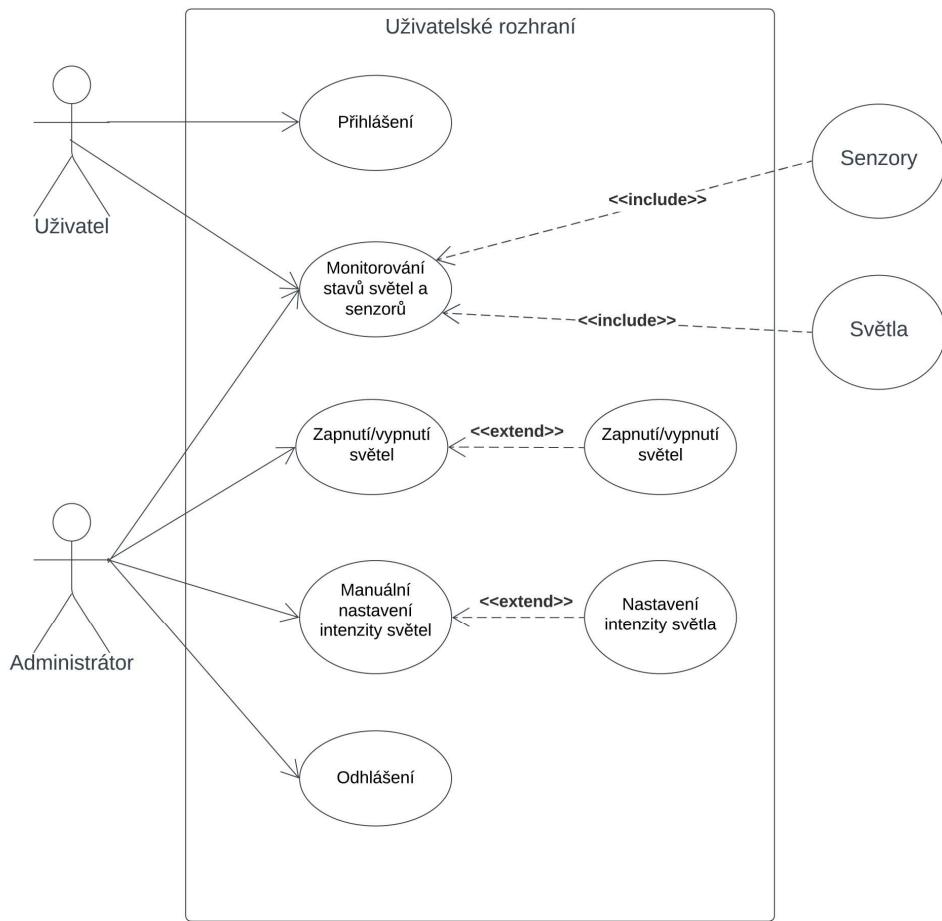

Obrázek 6.3: Use Case diagram

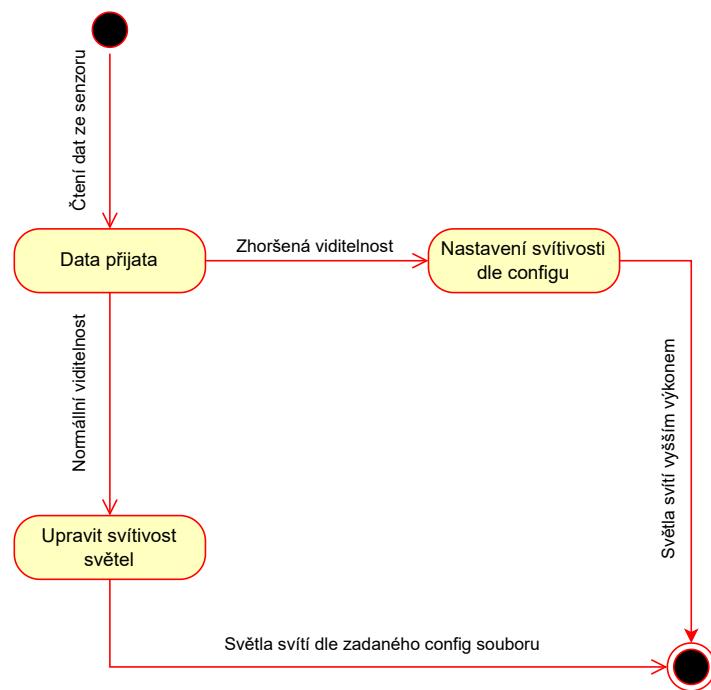

Obrázek 6.4: Stavový diagram

## 7 Závěr a sebehodnocení

Naším úkolem bylo navrhnout řešení osvětlení parkoviště na základě změny environmentálních podmínek. Místo konkrétních měření vstupních veličin (mlha, déšť aj.), jsme se to rozhodli řešit jedním senzorem pro měření viditelnosti. Za pomocí tohoto senzoru nemusíme řešit individuální změny environmentálních podmínek, nýbrž jen zhoršenou viditelnost, na kterou reagují světla.

Kdybychom chtěli tento systém využít v praxi, bylo by potřeba nejdříve nasimulovat zhoršení viditelnosti a odzkoušení, jak moc mají světla v danou chvíli svítit. Po prvotním nastavení bude systém fungovat jednoduše. Administrátor nastaví (podle východu a západu slunce) v config souboru, popřípadě vizualizaci, výkon světla v procentech pro danou hodinu. Ten se bude o určitá nastavená procenta, dle zhoršené viditelnosti, zvyšovat automaticky. V budoucnu je možnost přidání stahování informací z meteostanice do config souboru, dle kterého se budou světla sama přenastavovat, bez nuceného fixního nastavení administrátorem.

V případě, že bychom pracovali znova na podobném projektu, tak bychom jej asi pojali lehce jinak. Více bychom se zaměřili na ochranu dat, šifrování, možnosti připojit systém pomocí aplikace do telefonu, která není zatím řešena a větší automatizací viz. druhý odstavec o nastavování západu a východu slunce.

Jaroslav Mihál, funkcí manažer, se podílel na hledání ideálního senzoru, představil a navrhnul prvotní vizualizaci jak v papírové formě, tak následně ji digitálně překreslil. Dále vytvořil stavový diagram a pomáhal ostatním členům při jejich dílčích úkonech.

Jáchym Alex Kolebacz hledal možnosti komunikace mezi vizualizací a dílčími prostředky, pomáhal Jaroslavu při analýze dané problematiky a několikrát se zapojil i při tvorbě dané aplikace. Rovněž dal do kupy celý technický dokument a diagram časování.

Mariusz Lisztwan navrhnul a zkompletoval vizualizaci v prostředí PROMOTIC. Zlepšil původní návrh, doplnil jej o dva uživatelské účty a vytvořil diagram užití.


Alec Smyček dostal za úkol vymyslet program, rozvržení jeho tříd a následnou implementaci. Svými připomínkami výrazně pomohl k dokladení komunikace pomocí UDP a k celkové finalizaci projektu. K tomu vypracoval sekvenční diagram.

Skupina se scházela zhruba co dva týdny, vždy ve čtvrtek a taktéž, když bylo potřeba řešit jen konkrétní části kdykoliv jindy přes týden. Každý pracoval svědomitě, jak jen nejlépe mohl, přestože každý měl na starosti i další projekty k řešení. Ke komunikaci, průběžnému sdílení souborů atp.


## Literatura

- [1] MICROSYS, ed. *Co je PROMOTIC*. [Online]. URL: <https://www.promotic.eu/cz/pmdoc/WhatIsPromotic/WhatIsPromotic.htm> (cit. 2022-11-20).
- [2] PROFiber Networking, ed. *TCP VS UDP*. [Online]. URL: <https://www.profiber.eu/cz/aplikace/tcp-vs-udp/> (cit. 2022-11-20).
- [3] SICK, ed. *Přístroje pro měření viditelnosti VISIC620*. [Online]. URL: <https://www.sick.com/cz/cs/dopravní-senzory/pristroje-pro-mereni-viditelnosti/vsic620/vsic620-1111/p/p494044> (cit. 2022-11-20).
- [4] Správa sítě, ed. *UDP*. [Online]. URL: <https://www.sprava-site.eu/udp/> (cit. 2022-11-20).


## Přílohy

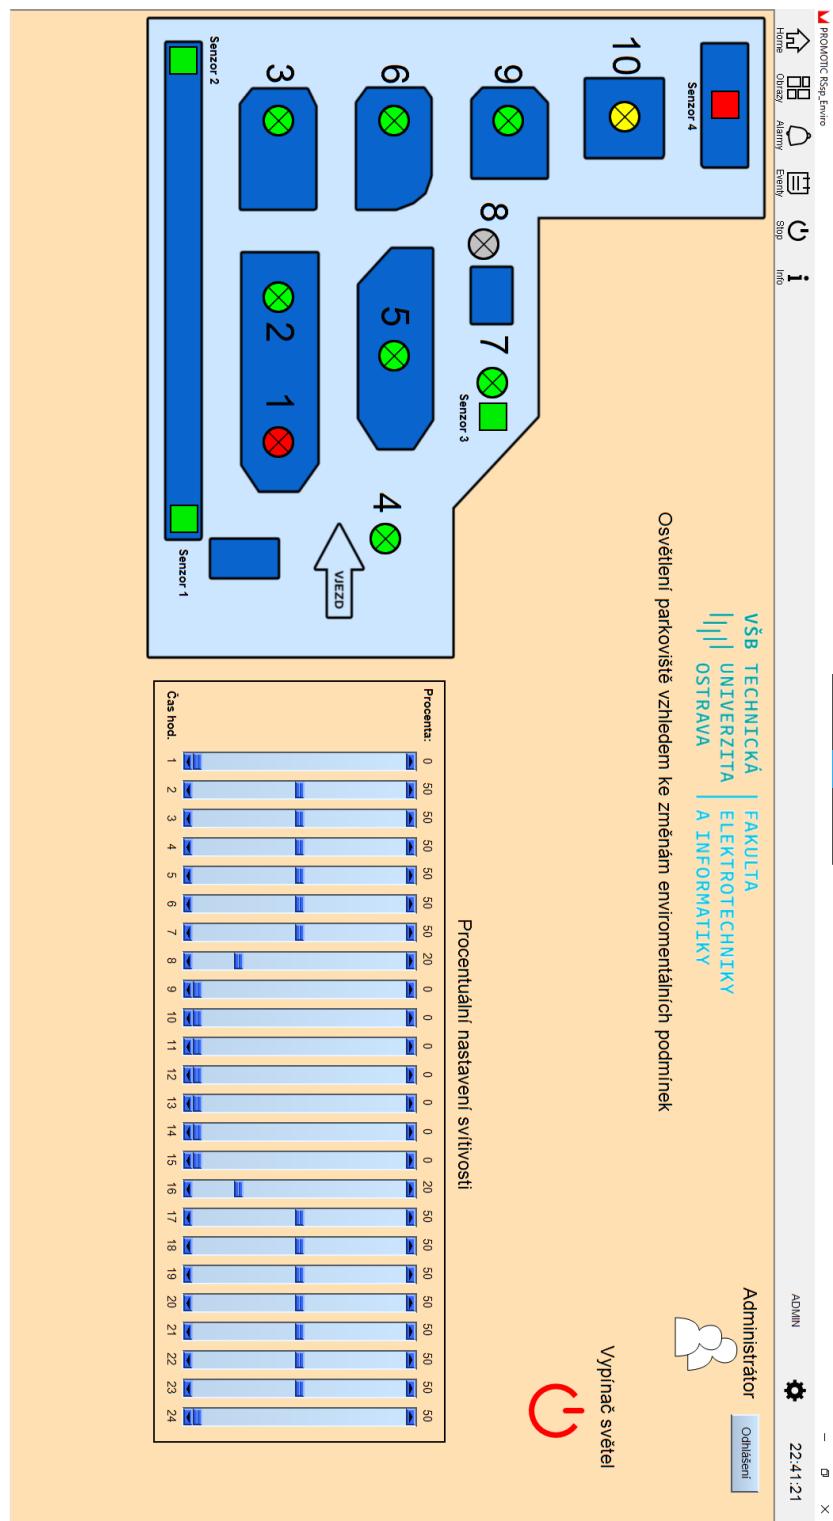

Obrázek 7.1: Prvotní návrh vizualizace

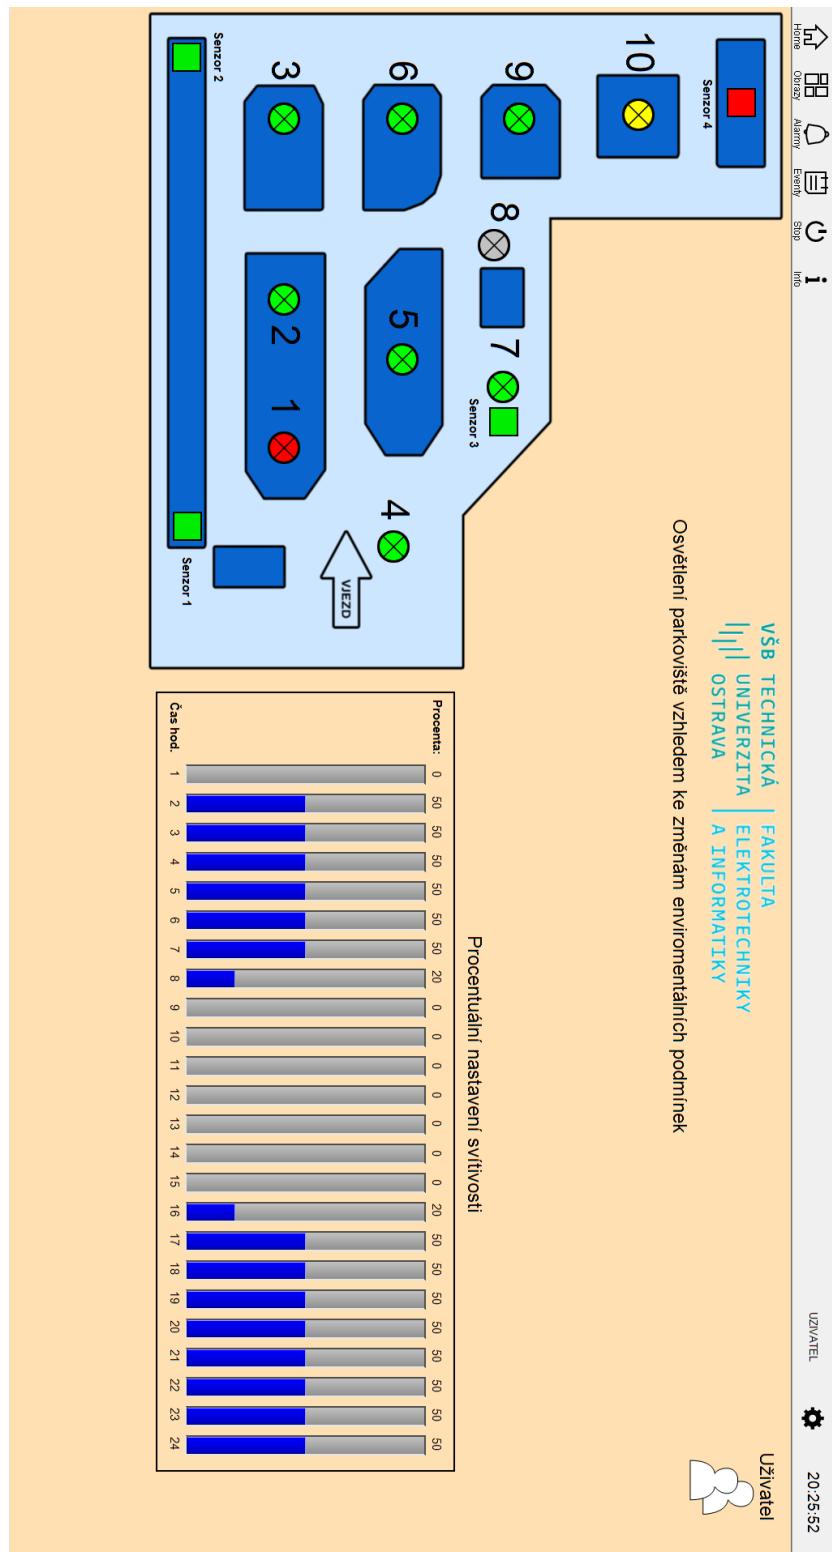

Obrázek 7.2: Prvotní návrh vizualizace

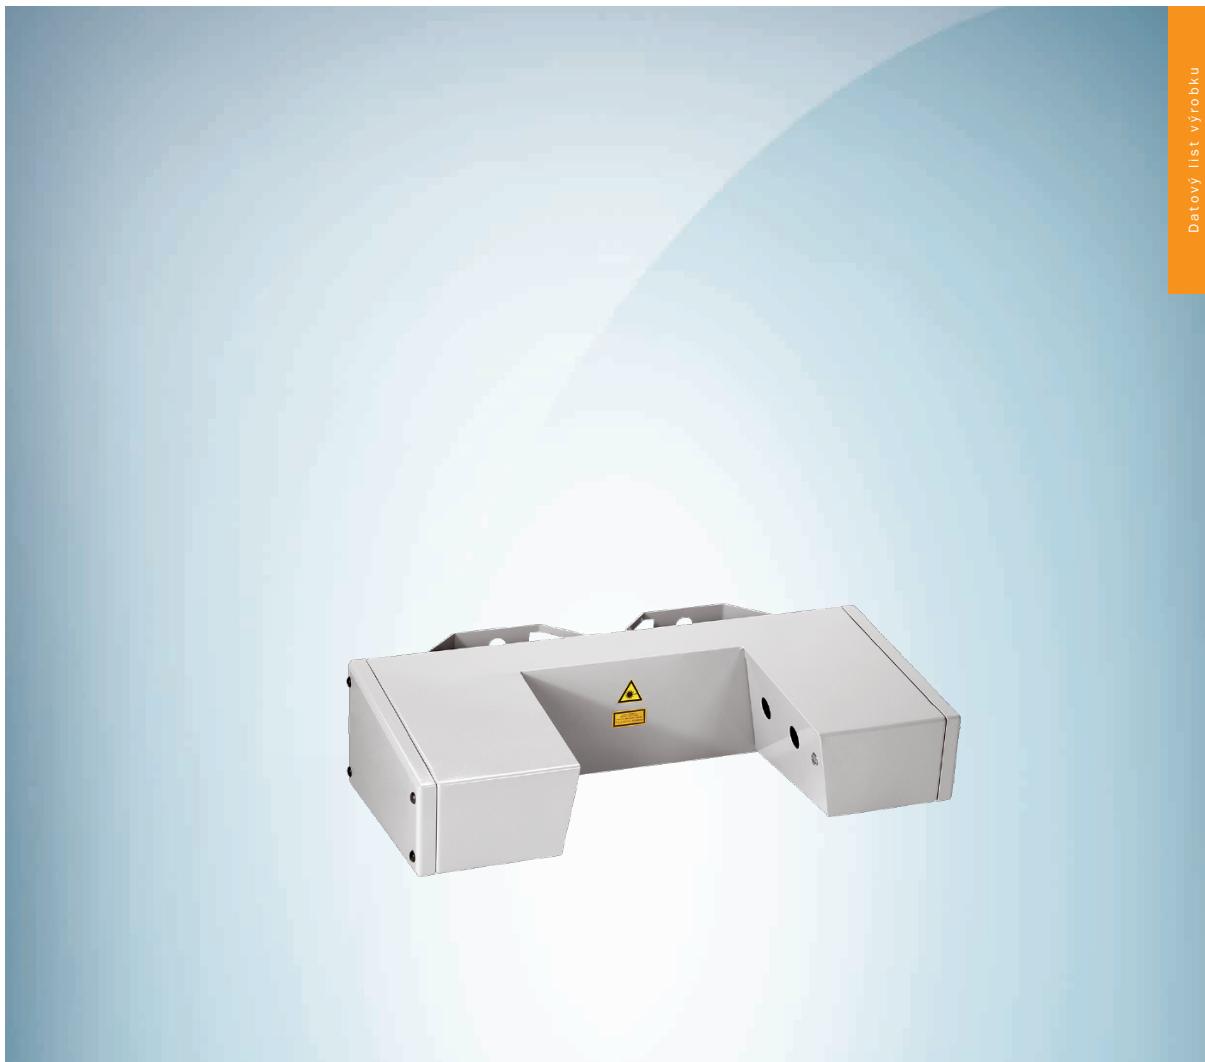

## VISIC620-1111

VISIC620

PŘÍSTROJE PRO MĚŘENÍ VIDITELNOSTI

**SICK**  
Sensor Intelligence.

**VISIC620-1111 | VISIC620**

PŘÍSTROJE PRO MĚŘENÍ VIDITELNOSTI

## Objednací informace



| Typ           | Výrobek č. |
|---------------|------------|
| VISIC620-1111 | 1040218    |

Při výběru vhodné konfigurace přístroje vás podpoří naše regionální odbytová organizace.

Další provedení přístroje a příslušenství → [www.sick.com/VISIC620](http://www.sick.com/VISIC620)

## Technická data v detailu

## Technické údaje

|   |  |
|---|--|
| <b>Popis</b>                                | Měřič dohledu<br>vč. pripojovacího kabelu, se zástrčkou, délka 5 m, s 1 analogovým výstupem a 2 reléovými kontakty                                 |
| <b>Měřené veličiny</b>                      | Normovaná viditelnost, Hodnota K   |
| <b>Maximální počet měřených veličin</b>     | 1  |
| <b>Principy měření</b>                      | Dopřední rozptyl světla  |
| <b>Spektrální rozsah</b>                    | 640 nm ... 660 nm<br>Laser, ochranná třída 2, výkon < 1 mW   |
| <b>Rozsahy měření</b>                       | Normovaná viditelnost 10 ... 500 m / 10 ... 16.000 m<br>Volně nastavitelný rozsah výstupu  |
| <b>Doba nastavení (<math>t_{90}</math>)</b> | 2 s ... 300 s  |
| <b>Přesnost</b>                             | ± 5 m<br>Při viditelnosti do 50 m<br>± 10 %<br>Měřené hodnoty při viditelnosti do 5 000 m<br>± 20 %<br>Měřené hodnoty při viditelnosti do 16 000 m |
| <b>Přesnost při opakování</b>               | ± 2 %: Při viditelnosti 200 m  |
| <b>Okolní teplota</b>                       | -30 °C ... +55 °C  |
| <b>Skladovací teplota</b>                   | -40 °C ... +75 °C  |
| <b>Okolní vlhkost</b>                       | 0 % ... 100 %  |
| <b>Elektrická bezpečnost</b>                | CE   |
| <b>Třída krytí</b>                          | IP69K  |
| <b>Analogové výstupy</b>                    | 1 Výstup:  |

## VISIC620-1111 | VISIC620

PŘÍSTROJE PRO MĚŘENÍ VIDITELNOSTI

|                            |   |
|----------------------------|---|
| <b>Digitální výstupy</b>   | 0 ... 20 mA, 500 Ω<br>2 Reléové kontakty:<br>48 V AC, 35 W / 48 V DC, 24 W  |
| <b>Sériový</b>             | Způsob integrace průmyslové sběrnice RS-232<br>Funkce Proprietární servisní rozhraní, Připojení k softwaru SOPAS ET |
| <b>Rozměry (Š x V x H)</b> | 479 mm x 117 mm x 261 mm (Podrobnosti viz rozměrové výkresy)  |
| <b>Hmotnost</b>            | 5,6 kg  |
| <b>Materiál</b>            | Nerezová ocel 1.4571, práškové lakování   |
| <b>Napájení energií</b>    | Napětí 24 V DC, ± 10 %<br>Príkon ≤ 10 W   |
| <b>Kontrolní funkce</b>    | Automatický vlastní test (znečištění, drift, LED, rušivé objekty)   |

## Klasifikace


|                       |          |
|-----------------------|----------|
| <b>eCl@ss 5.0</b>     | 27150305 |
| <b>eCl@ss 5.1.4</b>   | 27150305 |
| <b>eCl@ss 6.0</b>     | 27150305 |
| <b>eCl@ss 6.2</b>     | 27150305 |
| <b>eCl@ss 7.0</b>     | 27150305 |
| <b>eCl@ss 8.0</b>     | 27150305 |
| <b>eCl@ss 8.1</b>     | 27150305 |
| <b>eCl@ss 9.0</b>     | 27150305 |
| <b>eCl@ss 10.0</b>    | 27150305 |
| <b>eCl@ss 11.0</b>    | 27150305 |
| <b>eCl@ss 12.0</b>    | 27150305 |
| <b>ETIM 5.0</b>       | EC001190 |
| <b>ETIM 6.0</b>       | EC001190 |
| <b>ETIM 7.0</b>       | EC001190 |
| <b>ETIM 8.0</b>       | EC001190 |
| <b>UNSPSC 16.0901</b> | 41115406 |

**VISIC620-1111 | VISIC620**

PŘÍSTROJE PRO MĚŘENÍ VIDITELNOSTI

**Výkres** (Rozměry v mm)


Měřicí jednotka VISIC620

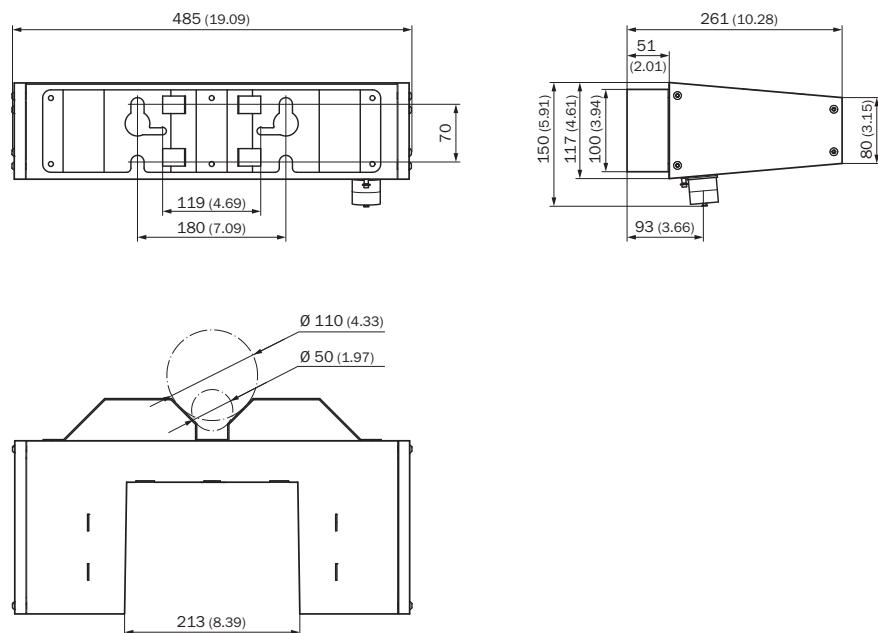

**VISIC620-1111 | VISIC620**

PŘÍSTROJE PRO MĚŘENÍ VIDITELNOSTI

Připojovací jednotka VISIC620

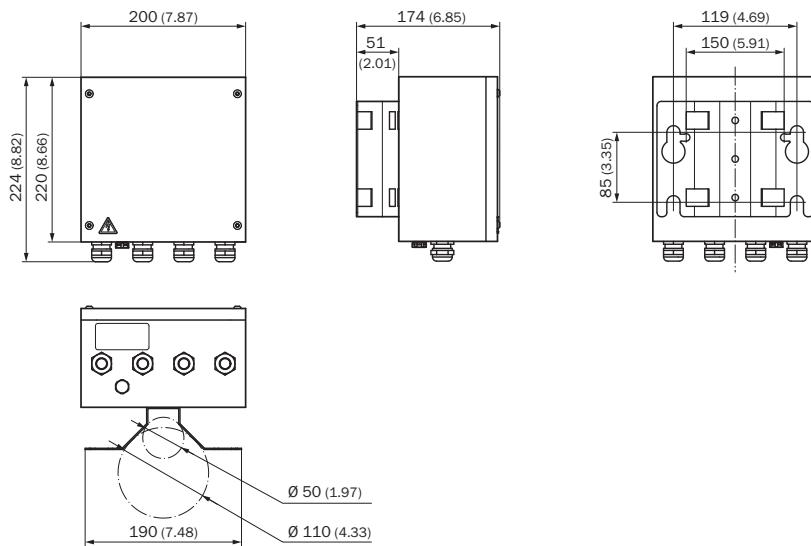

## STRUČNÝ PROFIL SPOLEČNOSTI SICK

Společnost SICK se řadí mezi přední výrobce inteligentních senzorů a senzorových řešení pro průmyslové využití. Jedinečné spektrum výrobků a služeb vytváří optimální základ pro bezpečné a efektivní řízení procesů, ochranu osob před úrazem a zamezení ekologickým škodám.

Získali jsme rozsáhlé zkušenosti v různých odvětvích a známe Vaše procesy a požadavky. Díky inteligentním senzorům jsme tak schopni nabídnout našim zákazníkům právě to, co potřebují. V aplikačních centrech v Evropě, Asii a Severní Americe jsou systémová řešení testována a optimalizována v souladu s požadavky zákazníků. To vše z nás dělá spolehlivého dodavatele a partnera v oblasti vývoje.

Naši nabídka doplňují rozsáhlé služby: SICK LifeTime Services poskytuje podporu během celého cyklu životnosti stroje a zajišťuje bezpečnost a produktivitu.

To je podstatou „Sensor Intelligence“.

## JSME VÁM NABLÍZKU KDEKOLIV NA SVĚTĚ:


Kontaktní osoba a další pobočky → [www.sick.com](http://www.sick.com)

OPERATING INSTRUCTIONS

## VISIC620

Visibility Measuring Device

**SICK**  
Sensor Intelligence.

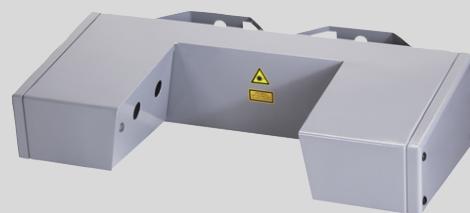

**Described Product**

Product name: VISIC620

**Manufacturer**

SICK AG  
Erwin-Sick-Str. 1  
D-79183 Waldkirch  
Germany

**Place of Manufacture**

SICK AG  
Gisela-Sick-Str. 1 · 79276 Reute · Germany

**Legal Information**

This work is protected by copyright. All rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, shortening or translation of this document is prohibited without the express written permission of SICK AG.  
The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

**Original document**

This document is an original document of SICK AG.



## CONTENTS

## Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>For your safety.....</b>   | <b>6</b>  |
| 1.1      | Symbols and document conventions .....                                      | 6         |
| 1.1.1    | Warning Symbols .....   | 6         |
| 1.1.2    | Warning levels and signal words.....  | 6         |
| 1.1.3    | Information Symbols.....  | 6         |
| 1.2      | Short summary of the most significant hazards.....                          | 7         |
| 1.3      | Basic information .....   | 7         |
| 1.3.1    | Detail level of these Operating Instructions .....                          | 7         |
| 1.3.2    | Scope of application and identification .....                               | 7         |
| 1.3.3    | Designated users.....   | 7         |
| 1.3.3.1  | Responsibility of user.....   | 8         |
| 1.3.4    | Intended use.....   | 8         |
| 1.3.5    | Further literature .....  | 8         |
| 1.3.5.1  | Other instructions .....  | 8         |
| 1.4      | Safety and warning devices on the device.....                               | 9         |
| 1.4.1    | Warning labels on the device .....  | 9         |
| <b>2</b> | <b>Product description .....</b>  | <b>10</b> |
| 2.1      | Functional principle .....  | 10        |
| 2.1.1    | Measurement.....  | 10        |
| 2.1.2    | Contamination measurement .....   | 11        |
| 2.2      | Device components/layout.....   | 12        |
| <b>3</b> | <b>Installation.....</b>  | <b>13</b> |
| 3.1      | Transport .....   | 13        |
| 3.2      | Measuring point selection .....   | 13        |
| 3.3      | Material needed for installation .....                                      | 14        |
| 3.4      | Assembly preparation .....  | 14        |
| 3.5      | Assembly .....  | 15        |
| 3.5.1    | Fitting on a mast with diameter 50 - 110 mm using a<br>fixing bar .....     | 15        |
| 3.5.2    | Fitting on a mast with diameter 50 - 140 mm using a<br>strap retainer ..... | 15        |
| 3.5.3    | Assembly on vertical plate .....  | 16        |
| 3.6      | Electrical installation.....  | 17        |
| 3.6.1    | Connection lines .....  | 17        |
| 3.6.2    | Cabling .....   | 18        |
| 3.6.3    | Setting of terminating resistors for bus wiring .....                       | 20        |

## CONTENTS

|          |   |           |
|----------|---|-----------|
| <b>4</b> | <b>Commissioning .....</b>  | <b>21</b> |
| 4.1      | Overview.....   | 21        |
| 4.2      | SOPAS ET operating software .....   | 21        |
| 4.2.1    | SOPAS ET operating software functions for VISIC620<br>(overview) .....                  | 21        |
| 4.2.2    | Installing and starting the operating software SOPAS ET.....                            | 21        |
| 4.2.3    | Basic setting for the SOPAS ET operating software.....                                  | 21        |
| 4.2.4    | Description of register tabs for commissioning .....                                    | 22        |
| 4.3      | Putting the VISIC620 into operation with SOPAS ET.....                                  | 25        |
| 4.3.1    | Creating a connection between VISIC620 and PC.....                                      | 25        |
| 4.3.1.1  | Connect data interfaces .....   | 25        |
| 4.3.2    | Setting the VISIC620 parameters.....  | 25        |
| 4.3.2.1  | Select user level .....   | 25        |
| 4.3.2.2  | Settings for commissioning .....  | 25        |
| 4.3.3    | Saving, displaying and printing the current parameter record ..                         | 26        |
| <b>5</b> | <b>Scheduled maintenance.....</b>   | <b>27</b> |
| 5.1      | Important information .....   | 27        |
| 5.2      | Cleaning .....  | 27        |
| 5.3      | Diagnostic maintenance.....   | 27        |
| 5.3.1    | Checking internal measured values .....   | 28        |
| 5.3.2    | Test measurements with a PC.....  | 29        |
| 5.3.2.1  | Prepare test measurements .....   | 30        |
| 5.3.2.2  | Test measurement with light scattering screen .....                                     | 32        |
| 5.3.2.3  | Test measurements with light scattering screen<br>and filter (= "Filter Test Run")..... | 33        |
| 5.4      | Test measurements without a PC .....  | 33        |
| <b>6</b> | <b>Troubleshooting .....</b>  | <b>34</b> |
| 6.1      | Important information .....   | 34        |
| 6.2      | Error messages.....   | 34        |
| 6.3      | Warning messages .....  | 36        |
| <b>7</b> | <b>Technical documentation.....</b>   | <b>38</b> |
| 7.1      | Operating data .....  | 38        |
| 7.2      | Dimensions .....  | 40        |
| 7.3      | Part numbers .....  | 41        |
| 7.3.1    | Type code.....  | 41        |
| 7.3.2    | Spare and expendable parts.....   | 42        |
| 7.3.3    | Accessories.....  | 42        |

## CONTENTS

|   |           |
|---|-----------|
| <b>8 Annex.....</b>                                     | <b>43</b> |
| 8.1 Protocols.....                                      | 43        |
| 8.1.1 Notation.....                                     | 43        |
| 8.1.2 Special characters.....                           | 43        |
| 8.1.3 Interface parameters.....                         | 43        |
| 8.1.4 Available protocols .....                         | 43        |
| 8.1.5 Coding .....                                      | 44        |
| 8.1.5      8 bits as 2 ASCII.....                       | 44        |
| 8.1.6 VISIC620 protocol.....                            | 44        |
| 8.1.6      Protocol framework.....                      | 44        |
| 8.1.6      Reading out device data with "SHOW AV" ..... | 44        |
| 8.1.7 Protocol based on WMO .....                       | 46        |
| 8.1.7      Example:.....                                | 47        |
| 8.1.8 Device status .....                               | 48        |
| 8.1.8      Byte 1: Error .....                          | 48        |
| 8.1.8      Byte 2: Error/warnings.....                  | 48        |
| 8.1.8      Byte 3: Warnings .....                       | 48        |
| 8.1.8      Byte 4: Device status .....                  | 49        |
| 8.1.8      Example:.....                                | 49        |
| 8.2 SITOS interface.....                                | 50        |
| 8.2.1 SOPAS .....                                       | 50        |
| 8.2.2 Telegram view .....                               | 50        |
| 8.2.3 Protocol .....                                    | 51        |

## **1 FOR YOUR SAFETY**

---

### **1 For your safety**

#### **1.1 Symbols and document conventions**

##### **1.1.1 Warning Symbols**

| Symbol | Significance                               |
|--------|--|
|        | Hazard (general)                           |
|        | Hazard by voltage                          |
|        | Hazard through laser beam                  |
|        | Hazard by high temperature or hot surfaces |

##### **1.1.2 Warning levels and signal words**

###### **DANGER**

Risk or hazardous situation which *will* result in severe personal injury or death.

###### **WARNING**

Risk or hazardous situation which *could* result in severe personal injury or death.

###### **CAUTION**

Hazard or unsafe practice which *could* result in less severe or minor injuries.

###### **NOTICE**

Hazard which *could* result in property damage.

##### **1.1.3 Information Symbols**

| Symbol | Significance  |
|--------|---|
|        | Important technical information for this product            |
|        | Important information on electrical or electronic functions |

FOR YOUR SAFETY **1****1.2 Short summary of the most significant hazards**

- Read and always observe the safety and warning information in these Operating Instructions.

**WARNING: Danger through defective device**

The VISIC620 is likely to be unsafe when it:

- Shows visible damage on the outside.
- Has been penetrated by moisture.
- Has been stored or operated under irregular conditions.

When safe operation is no longer possible:

- Put the VISIC620 out of operation, separate all connectors from the power supply and secure against unauthorized commissioning.

**WARNING: Hazard by laser radiation**

Risk of eye damage

- Never look directly into the laser beam.
- Avoid laser beam reflections.

**1.3 Basic information****1.3.1 Detail level of these Operating Instructions**

These Operating Instructions contain a fundamental description of the VISIC620 measuring system and serve as guide for installation, operation and scheduled maintenance.

They also contain information on safe operation of the VISIC320.

- Read and observe the corresponding Sections in these Operating Instructions.

**1.3.2 Scope of application and identification**

These Operating Instructions are applicable for:

- VISIC620 as from S/N 0640xxxx

The Identification number of the VISIC620 (type plate/device plate) is located on the outside next to the connector socket and on the side inside the receiver on the device floor.

**1.3.3 Designated users**

The VISIC620 should only be installed and operated by skilled technicians who, based on their technical training and knowledge as well as knowledge of the relevant regulations, can assess the tasks given and recognize the hazards involved.

## 1 FOR YOUR SAFETY

---

### 1.3.3.1 Responsibility of user

- Pay attention to the safety markings attached to the VISIC620 (see “Safety and warning devices on the device”, page 9).
- Only operate the VISIC620 according to the intended use (see “Intended use”, page 8).
- Follow all specifications in these Operating Instructions and only operate the VISIC620 as described in these Operating Instructions.  
Contact your local SICK representative before performing any work described where the information in these Operating Instructions is inadequate or capable of being misunderstood.
- Keep these Operating Instructions for future use.
- Pass these Operating Instructions on to a new owner.
- Pay attention to the prescribed maintenance work.
- Do not change any settings on or in the device and do not modify any components when such changes are not described in these Operating Instructions.
- In addition to the Operating Instructions, follow local laws, regulations and operating directives applicable at the respective installation location.

### 1.3.4 Intended use

The VISIC620 only serves to measure visibility on roads, in weather observation stations or on sea routes.

### 1.3.5 Further literature

#### 1.3.5.1 Other instructions

- SOPAS ET Operating Software Manual

FOR YOUR SAFETY **1****1.4 Safety and warning devices on the device****1.4.1 Warning labels on the device**

| Warning label | Location on device  |
|---------------|---|
|               | On the frontside in the center                                    |
|               | On the frontside in the center                                    |
|               | On the optional junction box on the frontside, at the bottom left |

## 2 PRODUCT DESCRIPTION


### 2 Product description

#### 2.1 Functional principle

##### 2.1.1 Measurement

The VISIC620 is a sensor system for continuous visibility measurement. The measuring principle is based on the diffusion of light by particles in a defined measuring volume. A laser beam is rayed into this measuring volume. The laser beam is scattered by the particles (drops of fog or dust) in the measuring volume. The amount of light scattered in a certain angle ( $30^\circ$  here) is measured and serves as measure for particle density in the measuring volume.

Fig. 1: Measurement functional principle

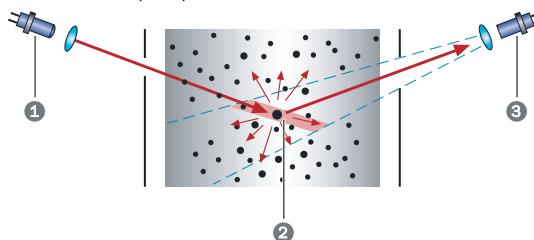


|   |                      |
|---|----------------------|
| 1 | Laser diode (sender) |
| 2 | Measuring volume     |
| 3 | Receiver             |

A calibration function determines visibility using the measured signal. It is assumed that visibility conditions within a distance of 16 km are the same as in the measuring volume. The visibility determined in this manner is a standard value based on technical calculations and can differ considerably from the subjective visibility.

### 2.1.2 Contamination measurement

A control cycle is performed regularly for automatic contamination measurement of the VISIC620. A shutter opposite the laser diode is opened so that the laser beam passes through a transmission optic and reaches a fibre optic cable. The laser beam is redirected via this fibre optic cable and sent back directly to the receiver. The amount of light received is measured there and compared against a standard value (transmission measurement). This method checks the complete optical beam path for contamination or obstructions.

Fig. 2: Control cycle functional principle

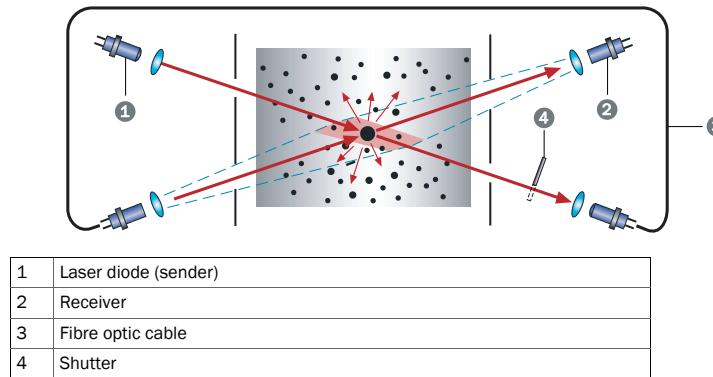


The control cycle lasts 2 seconds and can be time-triggered in fixed intervals and/or started using a PC with SOPAS ET (see "SOPAS ET operating software", page 21). The last measured value is output during the control cycle.

The signal of a precipitation detector can be read in as option on versions with a digital input and output via the associated serial interface.

## 2 PRODUCT DESCRIPTION

### 2.2 Device components/layout

Fig. 3: Device components

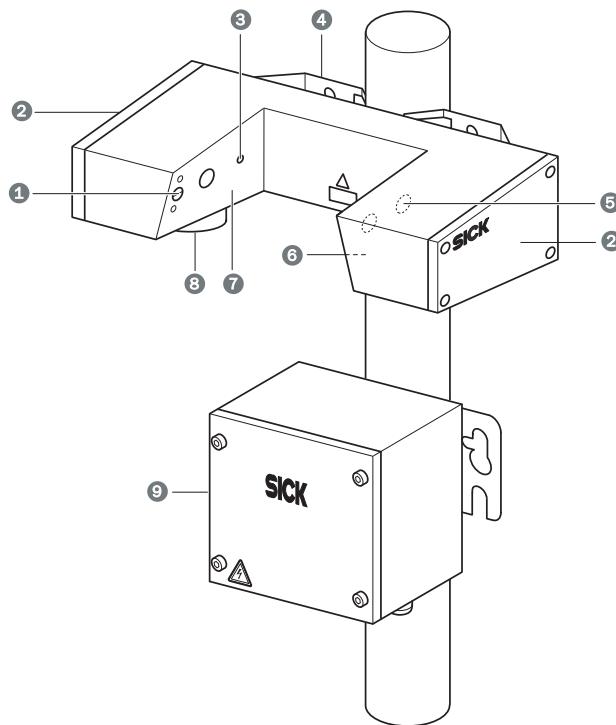

|   |                                  |
|---|----------------------------------|
| 1 | Aperture lock                    |
| 2 | Housing cover                    |
| 3 | Opening for laser diode (sender) |
| 4 | Mounting bracket                 |
| 5 | Opening for receiver             |
| 6 | Aperture strut, right            |
| 7 | Aperture strut, left             |
| 8 | Connector socket                 |
| 9 | Junction box (optional)          |

### **3** Installation

#### 3.1 Transport




Only use the packing provided by SICK to transport the VISIC620. Warranty claims are void when this is not observed.  
 The packing can be obtained from SICK free of charge when required.

#### 3.2 Measuring point selection

Observe the following criteria when selecting measuring points:

- The measuring point must be easily accessible. Any hazards for technicians when accessing measuring points (for example by road traffic) must be avoided as far as possible.
- Fit the VISIC620 at a height of at least 2.2 m. The higher it is fitted, the lower the contamination.
- Do not fit the VISIC620 near buildings or trees because these can influence the number and particle size distribution of fog droplets in the measuring volume which means measured values will no longer be representative. Maintain the following minimum clearance when possible to achieve representative measured values:

Fig. 4: Clearance required

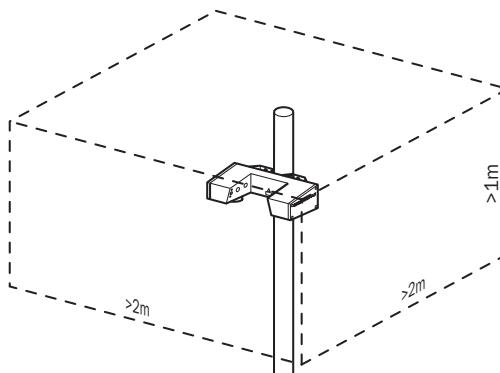


The VISIC620 also measures visibility in the measuring volume even when this clearance is not maintained. In this case though, the measured values are probably no longer representative for the surroundings.

- The VISIC620 can be fitted on a mast with diameter 50 to 140 mm or on a vertical plate.
- If a precipitation sensor is fitted on the same mast, this should be fitted above the VISIC620 and point in the opposite direction so that snow and icicles that can form on the sensor cannot drop or melt into the measuring volume of the VISIC620 (see Fig. 5, page 14).

### 3 INSTALLATION

Fig. 5: Arrangement of the VISIC620 and precipitation sensor on a mast

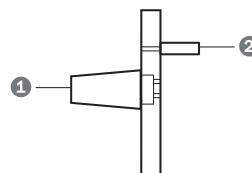

|   |                      |
|---|----------------------|
| 1 | VISIC620             |
| 2 | Precipitation sensor |

► Do not install any other devices above the VISIC620.

#### 3.3 Material needed for installation

Material needed for installation (not included in scope of delivery):

- Connection lines (see “Connection lines”, page 17)
- Fastening material (only for mast fitting):
  - For mast diameters 50 to 70 mm: Fixing bar with standard screws
  - For mast diameters 70 to 110 mm: Fixing bar with extra long M8 x 120 mm screws
  - For mast diameters 50 to 140 mm: Strap retainers
- Junction box, power supply unit, overvoltage protector as required
- Standard tools

#### 3.4 Assembly preparation

- Secure the place of work.
- Provide power.
- Provide jack lift or stable ladder.

### 3.5 Assembly

Assembly work must only be performed by skilled persons familiar with assembly work.


There are three ways to fit the VISIC620:

- With a fixing bar on masts with diameters between 50 and 110 mm
- With strap retainers on masts with diameters between 50 and 140 mm
- With the built-in wall holder on vertical plates

#### 3.5.1 Fitting on a mast with diameter 50 - 110 mm using a fixing bar

- 1 Retain the VISIC620 on the mast so that the U-shaped opening points in traffic movement direction.
- 2 Screw the fixing bar on from the rear using the enclosed M8 screws and washers as shown in [see Fig. 6, page 15](#). Use 120 mm long screws to fix the fixing set when the mast diameter is larger than 75 mm.

*Fig. 6: Assembly with fixing bar*

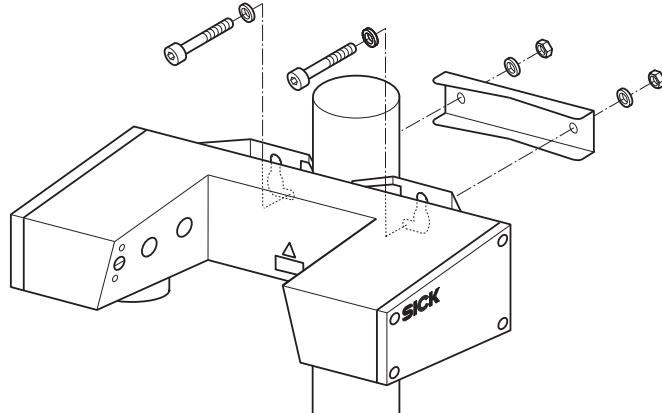

#### 3.5.2 Fitting on a mast with diameter 50 - 140 mm using a strap retainer

- 1 Retain the VISIC620 on the mast so that the U-shaped opening points in traffic movement direction.
- 2 Thread the strap retainer through the wall holder, around the mast and into the tightener.
- 3 Turn the tightener screw to tension the strap retainer.

### 3 INSTALLATION


#### 3.5.3 Assembly on vertical plate



The VISIC620 can be fitted on a vertical plate using two or four screws. Use the two upper holes when only using two screws.

- 1 Drill openings for the wall holder according to the drilling plan ( see Fig. 7, page 16).

Fig. 7: Assembly drilling plan for wall holder

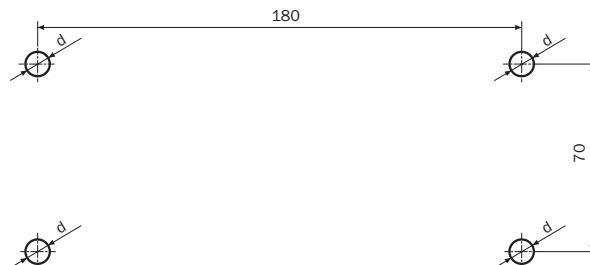

d Hole diameter (depending on fixing material used)

- 2 Align the installation plate so that the U-shaped opening points in traffic movement direction.
- 3 Screw in four M12 screws with washers until they still protrude approx. 3 mm.
- 4 Hang the VISIC620 onto the screws with the wall holder.
- 5 Tighten screws completely.

### 3.6 Electrical installation


**WARNING: Danger through electrical voltage.**

- Only allow an authorized electrician to work on the electric system.
  - Observe the relevant safety regulations during all installation work.
  - Take suitable protective measures against local risks and those arising from the plant.
  - During installation and maintenance work, it must be ensured that the protective grounding to the devices and/or lines involved is effective in accordance with EN 61010-1
- Electrical accidents can occur when the specifications of a replacement for a removable power line have not been adequately observed.
- Always observe the exact specifications in the Operating Instructions when replacing a removable power line.

#### 3.6.1 Connection lines

The following connection lines may be used:

| For                           | Line/type                     | Max. length                             | Cross-section                                |
|-------------------------------|-------------------------------|---|--|
| Digital input                 | A2Y(L)2Y                      | Depending on cable resistance           | One pair of wires, 2 x 0.75 mm <sup>2</sup>  |
| Relay outputs                 | A2Y(L)2Y                      | Depending on cable resistance           | Two pairs of wires, 2 x 0.75 mm <sup>2</sup> |
| Modem                         | A2Y(L)2Y                      | Depending on cable resistance           | Two pairs of wires                           |
| CAN bus                       | Li12YC11(TP) [1]              | 1000 m                                  | Two pairs of wires                           |
| Analog output:<br>0 ... 20 mA | Screened and twisted in pairs | Depending on cable resistance (500 Ohm) | One pair of wires, 2 x 0.75 mm <sup>2</sup>  |
| RS485                         | Screened and twisted in pairs | 1200 m                                  | Three pairs of wires                         |

[1] Unitronic LiHCH(TP) or equivalent cables can also be used



Warranty claims are void when you use cables not released by SICK for use with the VISIC620.


**WARNING: Endangerment for electrical safety through heat damage to lines**

When planning the lines, take into account that the connection unit can reach a temperature >60°C due to self-heating at maximum ambient temperature.

- Only use lines specified for temperatures >80°C.

### 3 INSTALLATION

#### 3.6.2 Cabling

- 1 Connect the cables to the corresponding terminals in the junction box according to the following Table (depending on the interface used):

| Cable assignment | Analog (possibly with GSM/GPRS module) | RS 485 (2/4 wires)           | CAN                          | Modem                        | Pin |
|------------------|--|------------------------------|------------------------------|------------------------------|-----|
| White            | Relay 2                                | RD-/A                        | CAN-GND                      | a2                           | 1   |
| Brown            | Relay 2                                | RD+/B                        | -                            | b2                           | 2   |
| Green            | Relay 1                                | TD-                          | CAN-L                        | a1                           | 3   |
| Yellow           | Relay 1                                | TD+                          | CAN-H                        | B1                           | 4   |
| Grey             | GND                                    | GND                          | GND                          | GND                          | 5   |
| Pink             | +24 V                                  | +24 V                        | +24 V                        | +24 V                        | 6   |
| Blue             | Analog output (-)                      | Binary input (precipitation) | Binary input (precipitation) | Binary input (precipitation) | 7   |
| Red              | Analog output (+)                      | Binary input (precipitation) | Binary input (precipitation) | Binary input (precipitation) | 8   |
| Cable shield     | PE                                     | PE                           | PE                           | PE                           | PE  |

Connect the 24 V to the corresponding terminals when using the GSM/GPRS module variant.

- 2 Connect cable shield to PE.
- 3 Install overvoltage protection for the following components when these are wired permanently:
  - RS485 (2 or 4 wires)
  - Modem
  - Analog interface
  - CAN bus
  - 24 V connection
 Create a low-impedance potential equalization on protective conductor PE when using overvoltage protector modules (equipment-specific).
- 4 Connect the signal lines in a junction box via terminals when using a precipitation sensor. (Junction box available from SICK, see "Accessories", page 42).
- 5 Plug the connection cable between junction box and VISIC620 into the socket of the VISIC620.

INSTALLATION **3**

| Relay/connection | Explanation   |
|------------------|---|
| Relay 1          | Closed (triggered) when the device is running trouble-free in measuring operation.<br>Open after fault, in Maintenance mode or Test mode during test measurements.  |
| Relay 2          | Closed (triggered) according to parameter settings (see “ <a href="#">Description of register tabs for commissioning</a> ”, page 22) when either the current visibility measured is under the limit set as parameter or a maintenance demand (cleaning) is pending. |
| Analog output    | Outputs either visibility or scattered light intensity (live zero to 20 mA); see “ <a href="#">Description of register tabs for commissioning</a> ”, page 22 for parameter settings.  |
| RS485            | See Annex for protocols   |
| CAN              | Proprietary protocol - only in connection with the SICK Sensor Control Unit SCU.  |
| Modem            | See Annex for protocols   |

### 3 INSTALLATION

#### 3.6.3 Setting of terminating resistors for bus wiring

When VISIC620 is wired via a bus (RS485 or CAN) pay attention to the following:


- 1 On the devices at the end of the bus, activate the terminating resistor (see Fig. 8, page 20).
- 2 On all other devices, deactivate the terminating resistor.



The terminating resistors are activated at the factory.

The respective LEDs light when the terminating resistors have been deactivated.

Fig. 8: Terminating resistors

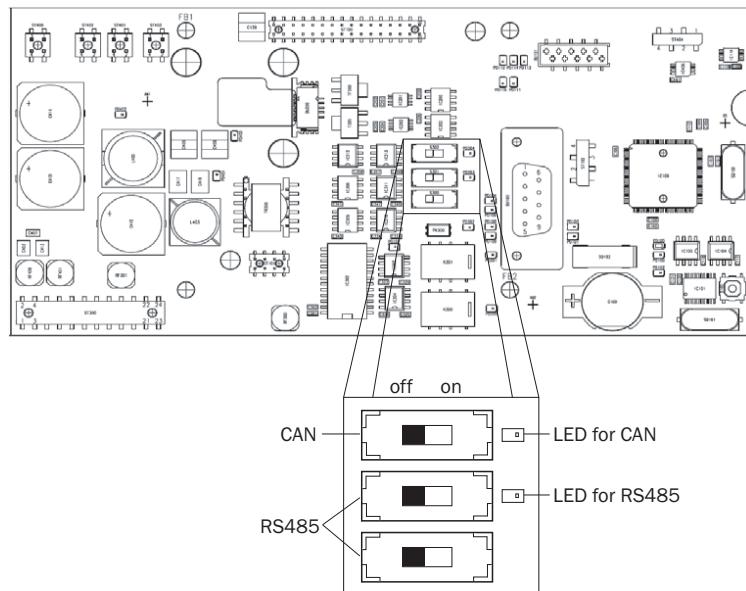

## 4 Commissioning

### 4.1 Overview

The VISIC620 may only be put into operation by competent persons who, based on their training on the device and knowledge of the device as well as knowledge of the relevant regulations, can assess the tasks given and recognize the dangers involved.

The SOPAS ET operating software serves to set the VISIC620 parameters.

### 4.2 SOPAS ET operating software

The SOPAS ET operating software can be used to save and archive the VISIC620 parameter as Project file on a PC. Measured values can also be read out.

#### 4.2.1 SOPAS ET operating software functions for VISIC620 (overview)

The Online Help of the SOPAS ET operating software (Help menu) describes the general functions of the software and how to use it.

- Menu language selection (German, English)
- Setting up communication with the VISIC620
- Password protected configuration for different operator levels
- Output current measured values
- System diagnostics

#### 4.2.2 Installing and starting the operating software SOPAS ET

- 1 Start the PC and insert the Installation CD.
- 2 Call up start.html or start.pdf directly from the CD when installation does not start automatically.
- 3 Select the Menu item in the start file and follow the relevant instructions.

#### 4.2.3 Basic setting for the SOPAS ET operating software

| Parameter                                 | Value                                       |
|---|---|
| Operating interface language              | English <sup>[1]</sup>                      |
| Unit of measure for lengths               | Metric                                      |
| User level                                | Maintenance technician                      |
| Download parameters when modified         | Immediate, fail-safe in the VISIC620 EEPROM |
| Upload parameters after switching on-line | Automatic                                   |
| Screen split                              | 3 (project tree, help, workarea)            |


[1] The software must be restarted after changes

## 4 COMMISSIONING

### 4.2.4 Description of register tabs for commissioning

Various register tabs serve to set parameters. The register tabs required for normal commissioning are described in the following. The Service Manual contains details of more complex start-ups, e.g., with switchover of the bus address or output of a protocol similar to WMO.

Fig. 9: VISIC620/Measured Values/Measured Values

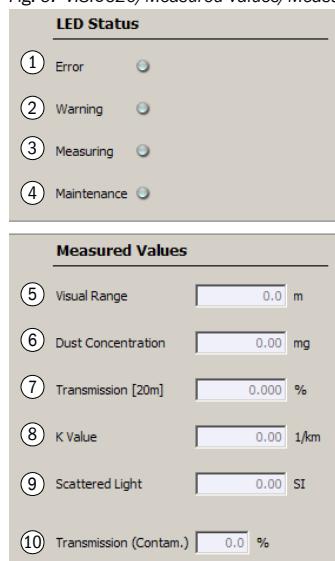

|    |   |
|----|---|
| 1  | Error message<br>Red when an error is present.  |
| 2  | Warning message<br>Yellow when a warning message is present (see "Warning messages", page 36).  |
| 3  | Measuring operation<br>Green when the VISIC620 runs in measuring operation.   |
| 4  | Maintenance mode<br>Yellow when the VISIC620 runs in Maintenance mode.  |
| 5  | Visibility calculated in m  |
| 6  | Indicates the dust concentration measured in the tunnel atmosphere. It is calculated on the basis of a calibration performed gravimetrically in real tunnels. |
| 7  | Indicates the measured transmission value which would be acquired by a transmissometer with an optical path length of 20 m.                                   |
| 8  | Indicates the measured extinction coefficient (usual value in road tunnels).  |
| 9  | Scattered light calculated in (0 ... 65536)   |
| 10 | Transmission value calculated during the last control cycle (0 ... 100%; values over 100% indicate soiled windows during device adjustment).                  |

Fig. 10: VISIC620/Measured Values/Errors/Warnings




|   |  |
|---|--|
| 1 | Number of error messages and error messages currently active.  |
| 2 | Number of warning messages and warning messages currently active.<br>List of all error and warning messages, see "Troubleshooting", page 34. |

Fig. 11: VISIC620/Parameter/Averaging



|   |   |
|---|---|
| 1 | Setting the averaging time in s (2 ... 300 s; default 180 s). Averaging time is the time after which most of the measured value changes (to 90%) are displayed (= t <sub>90</sub> -time). |
|---|---|


Fig. 12: VISIC620/Parameter/Limit Value

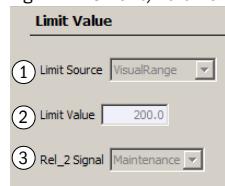

|   |  |
|---|--|
| 1 | Measured variable to which the limit value below refers.   |
| 2 | Limit value at which the relay should trigger (only effective when LIMITVALUE has been selected in REL_2 SIGNAL). The units shown in the "Measuring Values" register tab are applicable.   |
| 3 | Output selection on relay 2<br>Maintenance: Relay triggers when the value is below the set WARNING LIMITS during transmission measurement. This indicates that the optical interfaces must be cleaned (see "Cleaning", page 27).<br>LimitValue: Relay triggers when the limit value entered above has been underflowed (in visibility or transmission measurement) or overflowed (in heat transmission coefficient, dust or scattered light measurements). A hysteresis of 10% of the limit value is applicable. |

#### 4 COMMISSIONING

Fig. 13: VISIC620/Parameter/Analog Output

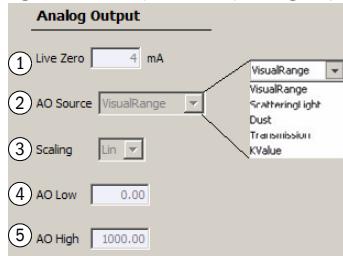

|   |   |
|---|---|
| 1 | Analog output zero value (0; 2; 4 mA)   |
| 2 | Value to be output via the analog output:<br>VisualRange = visual range<br>ScatteringLight = scattering light value<br>Dust = dust concentration in mg/m <sup>3</sup> , according to standard calibration<br>Transmission = transmission measured by a transmissometer with an optical path length of 20 m<br>K value = extinction coefficient "heat transmission coefficient" in 1/km (usual in tunnels) |
| 3 | Setting whether analog output activation is linear or logarithmic. <sup>1</sup>   |
| 4 | Lower limit of output range.  |
| 5 | Upper limit of output range.  |

1) Valid for linear:

$$\text{Meas.value} = \frac{I - LZ}{20mA - LZ} \cdot (AO_{High} - AO_{Low}) + AO_{Low} \quad \text{or} \quad I = (\text{Meas.value} - AO_{Low}) \cdot \frac{20mA - LZ}{AO_{High} - AO_{Low}} + LZ$$

Valid for logarithmic:

$$\text{Meas.value} = \left( \frac{AO_{High}}{AO_{Low}} \right)^{\frac{I-LZ}{20mA-LZ}} \cdot AO_{Low} \quad \text{or} \quad I = \log \left( \frac{\text{Meas.value}}{AO_{Low}} \right) \cdot \frac{20mA - LZ}{\log \left( \frac{AO_{High}}{AO_{Low}} \right)} + LZ$$


whereby

I = current at analog output

LZ = Live Zero

AO<sub>Low</sub>/AO<sub>High</sub> = lower/upper output range limits (when AO<sub>Low</sub> is set to 0 m for logarithmic output, the internal calculation uses value 1 m to avoid division by zero.)

Fig. 14: VISIC620/Parameter/System Time

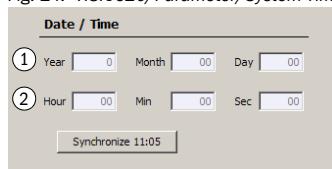

|   |   |
|---|---|
| 1 | Date and time display.  |
| 2 | Button to set the VISIC620 clock to the time of the connected PC. |

### 4.3 Putting the VISIC620 into operation with SOPAS ET

#### 4.3.1 Creating a connection between VISIC620 and PC

##### 4.3.1.1 Connect data interfaces

- ▶ Connect the PC (RS232 interface) and VISIC620 via an RS232 line.
- ▶ Insert the CD-ROM and call up start.html or start.pdf.
- ▶ Select the language.
- ▶ Select "Description of Communication" and continue to proceed accordingly.

#### 4.3.2 Setting the VISIC620 parameters

##### 4.3.2.1 Select user level

The SOPAS ET operating software runs in the user level MAINTENANCE TECHNICIAN after commissioning and parameters can only be read. Switch first to user level SERVICE in order to set device parameters using the SOPAS ET operating software.

- 1 Select the LOGIN ON DEVICE command in the TOOLS menu.
  - 2 Select SERVICE in the USER LEVEL dialog screen, enter the password "visic620service" and click on LOGIN.
- Further register tabs appear in the PROJECT TREE.

##### 4.3.2.2 Settings for commissioning.



Double-click the name on a register tab to activate the respective register tab within the project tree.  
Use the right mouse button to open context boxes showing minimum, maximum and default values for entry boxes.

Various parameters must be set in order to put the VISIC620 into operation. These parameters are located in different register tabs. In the following, the folder in the project tree and the register tab are first shown and the data to be entered there.

- 1 MAINTENANCE -> OPERATING STATUS: Click on MAINTENANCE MODE to switch the VISIC620 into Maintenance mode so that no values are output on the analog output or relays.
- 2 PARAMETER -> INTEGRATION: Enter the desired integration time (60 ... 300 s; values below 60 s are only useful for service work and tests) in INTEGRATION.
- 3 If a second relay is used: PARAMETER -> LIMIT VALUE: Enter the limit value to trigger the relay or select MAINTENANCE CALL when this relay is to output a maintenance request.
- 4 If the analog output is used: PARAMETER -> ANALOG OUTPUT: Enter the desired parameter corresponding to the usage of the analog output (see "VISIC620/Parameter/Analog Output", page 24).
- 5 If the WMO protocol is used: PARAMETER -> SERIAL INTERFACE: Select the WMO protocol interface(s) in INTERFACE.
- 6 PARAMETER -> SYSTEM TIME: Click on SYNCHRONIZE to synchronize to the date and time on the connected PC.
- 7 DIAGNOSIS -> DEVICE ID: Enter the location of the VISIC620 in LOCATION NAME (optional).
- 8 MAINTENANCE -> TRANSMISSION MEASUREMENT: Check the values for WARNING LIMIT and ERROR LIMIT and correct when necessary.
- 9 MAINTENANCE -> TRANSMISSION MEASUREMENT: Click on START TRANSMISSION MEASUREMENT to perform a transmission measurement.  
If the measured transmission is greater than or marginally lower than 100%, click on SAVE AS 100 % to save the value as reference value.  
If the measured transmission is much lower than 100%, check the optical path, clean the windows (see "Cleaning", page 27) and repeat the transmission measurement.
- 10 MAINTENANCE -> OPERATING STATUS: Click on MEASURING MODE to switch the VISIC620 back into Measuring mode.

## 4 COMMISSIONING

- 11 MEASURING VALUES -> ERRORS/WARNINGS: Check error and warning messages and clear the cause when necessary (see "Troubleshooting", page 34).
- 12 MEASURING VALUES -> MEASURING VALUES: Check plausibility of measured values.
- 13 To save all the parameters, select the EXPORT DEVICE command in the PROJECT menu.

### 4.3.3 Saving, displaying and printing the current parameter record

When archiving parameters, it is recommended to print the file contents as well as saving the project file.

- 1 To save the current parameter set, select the SAVE PROJECT AS command in the PROJECT menu.
- 2 Enter a file name in the dialog window and confirm with SAVE.  
The SOPAS ET operating software stores the current settings in an SPR file.
- 3 To print the current parameter set, select the PRINT/PRINT PREVIEW command in the PROJECT menu.  
The SOPAS ET operating software displays a preview of the tabular list of all parameter values.
- 4 Select the PRINT command in the FILE menu dialog window.  
The PRINT dialog window opens to configure the printer.
- 5 Edit the settings as required and confirm with OK.  
The current project settings are printed in tabular form over several pages.

SCHEDULED MAINTENANCE **5****5 Scheduled maintenance****5.1 Important information****WARNING: Laser radiation**

Laser radiation might increase due to a (rare) hardware defect. Classify the laser in Class 3B in this case.

- Avoid exposure to laser beam.

**5.2 Cleaning**

Clean the protective windows in front of the sender and receiver when soiled.

**CAUTION: Incorrect measured values caused by hands or tools in the measuring volume or by missing apertures (risk of multiple reflection)**

- Put the VISIC620 out of operation before cleaning.

- 1 Disconnect the VISIC620 connection plug.
- 2 Rotate the aperture lock half a turn counterclockwise.
- 3 Take aperture off.
- 4 Clean protective windows with following cleaning agents:
  - Clean optical system cloths, SICK Part No. 4 003 353
  - Screen cleaner (0.2 l spray), SICK Part No. 5 600 986
  - Possibly isopropyl, pure, for optical applications
- 5 Clean aperture struts.
- 6 Insert aperture and rotate shutter back.
- 7 Plug connection plug in.



The apertures must always be fitted when the VISIC620 is in operation otherwise multiple reflections can cause lower visibility values.

**5.3 Diagnostic maintenance**

A Service technician should perform a diagnostic maintenance at least every five years.  
This has two parts:

- Checking internal measured values
- Test measurements

The measured values must be compared against the nominal values here. If measured values are outside tolerances or malfunctions occur, see "Troubleshooting", page 34.

Test measurements can be performed with or without a PC. Several control values can be checked during test measurements using a PC and SOPAS ET operating software (see "Test measurements with a PC", page 29); only one value can be checked during test measurements without a PC (see "Test measurements without a PC", page 33).


## 5 SCHEDULED MAINTENANCE

### 5.3.1 Checking internal measured values

Prerequisite: The VISIC620 is connected to a PC with the SOPAS ET operating software installed.

- 1 Start the SOPAS ET operating software on the PC (see “Putting the VISIC620 into operation with SOPAS ET”, page 25).
- 2 Select the LOGIN ON DEVICE command in the TOOLS menu.
- 3 Select SERVICE in the USER LEVEL dialog screen, enter the password "visic620service" and click on LOGIN.
- 4 Select register tab DIAG. VALUES in folder DIAGNOSIS in the project tree (from Service level).

Fig. 15: VISIC620/Diagnosis/Diag. Values

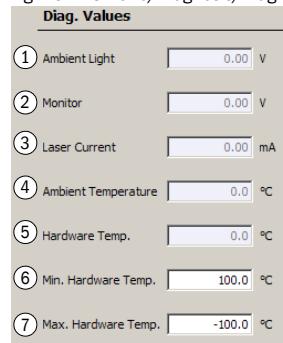


- 5 Check following values:

|   |  |
|---|--|
| 1 | Ambient light (0 ... 3.9 V)<br>Values above 3.9 V indicate a malfunction.  |
| 2 | Laser beam brightness (2 ... 4.5 V)<br>Values above 4.5 V indicate a device malfunction and the VISIC620 must be repaired.<br>Values below 2 V indicate that the laser is too old and must be exchanged by SICK. |
| 3 | Laser current<br>A warning is shown for values above 70 mA and the laser must be exchanged.  |
| 5 | Current hardware temperature.  |
| 6 | Lowest hardware temperature since the VISIC620 was started   |
| 7 | Highest hardware temperature since the VISIC620 was started  |

SCHEDULED MAINTENANCE **5****5.3.2 Test measurements with a PC**

Test measurements are performed using a test tool.

*Fig. 16: Test tool layout*

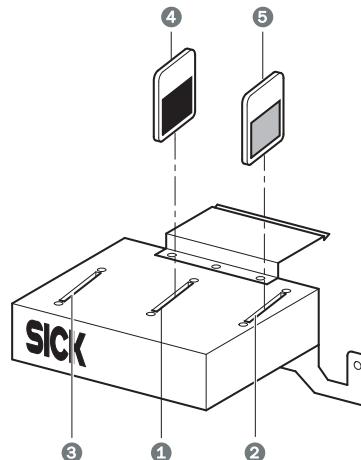

|   |  |
|---|--|
| 1 | Filter slot for the light scattering screen                                    |
| 2 | Filter slot for the transmission filter  |
| 3 | Filter slot for internal factory purposes (not required for test measurements) |
| 4 | Light scattering screen  |
| 5 | Transmission filter  |



The test tool is a test device that must be handled carefully for correct testing.

- Protect optical surfaces from dust and moisture.
- Always keep the test tool in the case provided when not in use.
- Have the test tool checked every two years by either SICK or a Test Institute (transmission values of the grey glass filters at 650 nm).

Prerequisites for test measurement with a PC:

- The VISIC620 is connected to a PC with the SOPAS ET operating software installed to be able to read out measured values.
- The air in the measuring volume is so clear that the measured value remains above 2000 m.
- The VISIC620 windows are clean.

Test measurements comprise the following tasks:

- Prepare test measurements
- Perform test measurement with light scattering screen (measurement of a low visibility with a light scattering screen in filter slot 1)
- Test measurement with light scattering screen and filter (measurement of further, higher visibility values with a light scattering screen in filter slot 1 and a transmission filter in filter slot 2; "Filter Test Run")

## 5 SCHEDULED MAINTENANCE

### 5.3.2.1 Prepare test measurements




**CAUTION: Faulty operation during traffic management or similar actions possible**

- Make sure the values measured during the test are not used actively for traffic management or similar actions.

- 1 Clean the VISIC620 (see “Cleaning”, page 27)
- 2 Start the SOPAS ET operating software on the PC (see “Putting the VISIC620 into operation with SOPAS ET”, page 25).
- 3 Select the LOGIN ON DEVICE command in the Tools menu.
- 4 Select SERVICE in the USER LEVEL dialog screen, enter the password and click on LOGIN.
- 5 Activate the OPERATING STATUS register tab in folder MAINTENANCE in the project tree.
- 6 Click on MEASURING MODE to switch the VISIC620 to Measuring mode.
- 7 Activate the MEASURING VALUES register tab in folder MEASURING VALUES.
- 8 Make sure the MEASURING control lamp in the DEVICE STATUS dialog box is green.
- 9 Activate the TEST MEASUREMENT register tab in folder MAINTENANCE
- 10 Click on TESTMODE On to select suppressing measured value output during the test.  
The malfunction relay is released and the outputs remain at 16000 m or the limit value set for the analog output (= 20 mA).
- 11 Click on TESTMODE OFF to select measured value output during the test.  
The malfunction is triggered, when no other fault is present. The outputs run as normal.
- 12 Take the test tool out of the transport case. Take all filters and the light scattering screen out of the filter slots and store safely (for example in the transport case).
- 13 Connect the test tool, see Fig. 17, page 30, to the VISIC620. At the same time, position the test tool so that the VISIC620 guide bolts seat in the test tool guide holes and the spring steel sheet has completely locked in.

Fig. 17: Fitting test tool on the VISIC620

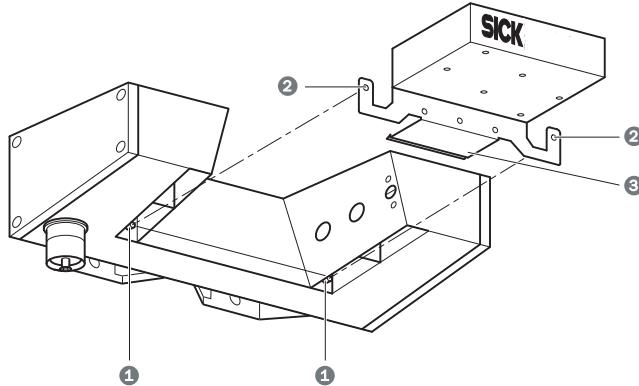


|   |  |
|---|--|
| 1 | Guide bolts                              |
| 2 | Guide holes                              |
| 3 | Spring steel sheet to lock the test tool |

## SCHEDULED MAINTENANCE 5

**+i** Use of the test tool is restricted when fog or vapor in the measuring volume cause measured values under 2000 m. The visibility test values must be clearly below this limit. Visibility tolerances defined in the Technical Data (see "Operating data", page 38) are applicable for test measurements.


The following register tabs are used during test measurements:

Fig. 18: VISIC620/Maintenance/Transmission Measurement

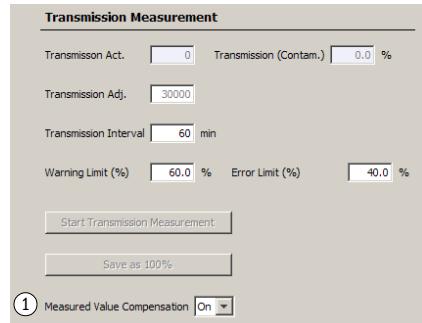

1 Set this parameter to OFF before a test measurement. After the test measurement, the parameter must be set back to the original set value.

Fig. 19: VISIC620/Maintenance/Test Measurement

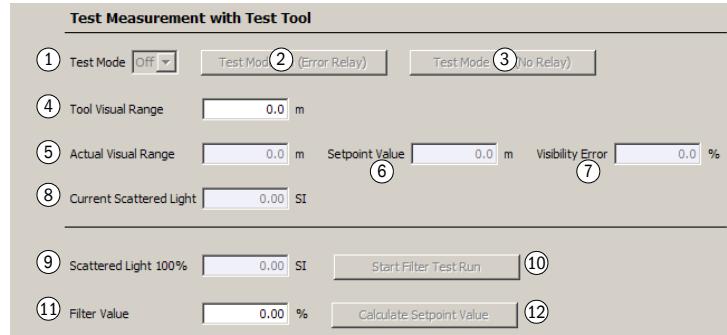

|   |   |
|---|---|
| 1 | Selection box for Test mode (ON or OFF)<br>When Test mode is switched on, the malfunction relay reports a malfunction and "maximum visibility" is reported on the outputs to prevent the test causing faulty operation in the traffic management system or other hosting system. The outputs and the malfunction relay operate normally when Test mode is switched off. |
| 2 | Button to activate Test mode  |
| 3 | Button to deactivate Test mode  |
| 4 | Entry box for VIS nominal value for the light scattering screen used  |
| 5 | Actual measured visibility  |
| 6 | Computed nominal value (is used in field 4). It is calculated from the transmission value (field 12) and the scattering light 100% value (field 9) for test measurements with transmission filters (= "Filter Test Run").   |

## 5 SCHEDULED MAINTENANCE

|    |   |
|----|---|
| 7  | Deviation between nominal and actual value  |
| 8  | Actual measured scattering light  |
| 9  | Recorded scattering light measured value (clicking on START FILTER TEST RUN copies this value from field 8)   |
| 10 | Button to copy the value from field 8 to field 9 where it serves as constant when calculating further visibility nominal values. This is necessary for test measurements with transmission filters (= "Filter Test Run"). |
| 11 | Button to calculate a new nominal value from the transmission value (field 12) and the scattering light 100% value (field 9).   |
| 12 | Entry box for transmission value of the filter used   |

### 5.3.2.2 Test measurement with light scattering screen

- 1 Activate the TEST MEASUREMENT register tab in the MAINTENANCE folder.
- 2 Insert the light scattering screen to the stop in the middle filter slot with the dark side to the right ([see Fig. 16](#)).
- 3 Enter the VIS value noted on the light scattering screen in SOPAS ET in VISUAL RANGE OF TOOL (field 4 in [see Fig. 18](#)).  
The value is copied to SET VALUE (field 6).
- 4 Wait until the integration time (up to 6 minutes) has elapsed at least twice.  
The deviation between measured visibility value and nominal value is displayed in % in DEVIATION (field 7). Values SET VALUE and ACTUAL VALUE can be compared.

### 5.3.2.3 Test measurements with light scattering screen and filter (= "Filter Test Run")

Prerequisite: The value SCATTERING LIGHT 100% (field 9) is stable, this means the integration time has elapsed at least twice since the last modification on the test tool.

- 1 Click on START FILTER TEST RUN.  
The value SCATTERING LIGHT 100% is taken from the current measurement and used as basis for the further measurements.
- 2 Enter the % value noted on the transmission filter in FILTER VALUE (field 12).
- 3 Click on CALCULATE SET VALUE.  
The new visibility nominal value is calculated and displayed in SET VALUE (field 6).
- 4 Insert a transmission filter to the stop in the right filter slot (position 2 in [see Fig. 16](#)).
- 5 Wait until the integration time (up to 6 minutes) has elapsed at least twice.  
The deviation between measured visibility value and nominal value is displayed in % in DEVIATION (field 7). Values SET VALUE and ACTUAL VALUE can be compared.
- 6 Remove the transmission filter and insert the other transmission filter to the stop in the right filter slot (position 2 in [see Fig. 16](#)).
- 7 Enter the % value noted on the transmission filter in FILTER VALUE (field 12) and click on CALCULATE SET VALUE.  
The deviation between measured visibility value and nominal value is displayed in % in DEVIATION (field 7). Values SET VALUE and ACTUAL VALUE can be compared.
- 8 Wait until the integration time (up to 6 minutes) has elapsed at least twice.  
The deviation between measured visibility value and nominal value is displayed in % in DEVIATION (field 7). Values SET VALUE and ACTUAL VALUE can be compared.
- 9 After the end of the test measurements, set the COMPENSATION MEASUREMENT VALUE parameter in the TRANSMISSION MEASUREMENT register tab to ON again if it was set to ON before this measurement.

## 5.4 Test measurements without a PC



### CAUTION: Faulty operation during traffic management or similar actions possible

- Make sure the values measured during the test are not used actively for traffic management or similar actions.

Prerequisites for test measurement without a PC:

- The air in the measuring volume is so clear that the measured value remains above 2000 m.
  - The VISIC620 windows are clean.
- 1 Connect the test tool, [see Fig. 17](#), to the VISIC620. At the same time, position the test tool so that the VISIC620 guide bolts seat in the test tool guide holes and the spring steel sheet has completely locked in.
  - 2 Insert the light scattering screen to the stop in the middle filter slot with the dark side to the right ([see Fig. 16](#)).
  - 3 Read off the resulting measured value at a suitable location on the customer's plant.

## 6 TROUBLESHOOTING

### 6 Troubleshooting

#### 6.1 Important information



##### WARNING: Laser radiation

Laser radiation might increase due to a (rare) hardware defect. Classify the laser in Class 3B in this case.

- Avoid exposure to laser beam.

#### 6.2 Error messages

| Message     | Description/cause   | Clearance   |
|-------------|---|---|
| EEPROM def. | Hardware fault in EEPROM<br><br>It is possible that no parameter set was loaded during a software update.   | <ul style="list-style-type: none"><li>► Repair by SICK necessary.</li><li>► Click RESET PARAMETER in register tab RESET In SOPAS.</li></ul>   |
| Shutter     | The shutter failed during the last transmission measurement.  | <ul style="list-style-type: none"><li>► Repair by SICK.</li></ul>   |
| Heater Wh   | Defect on the window heating connected with white leads on the printed board (fibre optic cable).   |   |
| Heater Bn   | Defect on the window heating connected with brown leads on the printed board (laser).   |   |
| Heater Gy   | Defect on the window heating connected with gray leads on the printed board (shutter).  |   |
| Heater Pk   | Defect on the window heating connected with pink leads on the printed board (receiver).   |   |
| Heater Bk   | Defect on the window heating connected with black leads on the printed board (housing on receiver side).  |   |
| Low Transm. | The value determined during the last transmission measurement is below the ERROR LIMIT entered in the MAINTENANCE -> TRANSMISSION MEASUREMENT register tab.<br><br>Possible causes: <ul style="list-style-type: none"><li>- Contamination or object in optical path</li><li>- Laser line cannot be readjusted further</li></ul> | <ul style="list-style-type: none"><li>► Clear window contamination or objects in optical path.</li><li>► Check LASER CURRENT and MONITOR values in DIAGNOSIS -&gt; DIAG. VALUES register tab (see "Checking internal measured values", page 28) and request repair by SICK when necessary (exchange laser).</li></ul> |
| Mon range   | Monitor out of range (2.0 V - 4.5 V)<br><br>Possible causes: <ul style="list-style-type: none"><li>- Laser degradation</li><li>- Laser defective</li></ul>  | <ul style="list-style-type: none"><li>► Request SICK to exchange the laser.</li></ul>   |

TROUBLESHOOTING **6**

| Message    | Description/cause  | Clearance                                |
|------------|--|--|
| Amb. light | Ambient light (> 800 Dig./ 3.9 V after gain)<br><b>Possible causes:</b> <ul style="list-style-type: none"><li>- Device subjected to strong, direct light sources. Strong sunshine on the device side opposite the receiver can also cause this fault.</li><li>- Device defective</li></ul> | ► Align device to shut out direct light. |

## 6 TROUBLESHOOTING


### 6.3 Warning messages

| Message     | Description/cause   |  |
|-------------|---|--|
| Vis. Limit  | Visibility limit value underflow  |  |
| Low Transm. | The value determined during the last transmission measurement is below the WARNING LIMIT entered in the MAINTENANCE -> TRANSMISSION MEASUREMENT register tab.<br>Possible causes:<br>- Contamination or object in optical path  | ► Clean limit surfaces.<br>► Check optical path and remove any objects.  |
| Laser Cur.  | Laser current is outside permissible range.<br>Possible cause:<br>- Aging<br>- ESD damage   | ► Exchange laser soon. If the message "Mon range" occurs at the same time, exchange laser immediately (repair by SICK).  |
| V input min | Supply voltage lower than 17 V  | ► Check lines and cross-sections, change when necessary.<br>► Check lines and voltages of power supply unit used, exchange when necessary.   |
| AO Status   | Output value measured internally on the analog output does not match the nominal value determined internally.<br>Possible cause:<br>- Wiring error<br>- Resistance in output current loop (load resistance) > 500 Ohm<br>- On variants without analog output: Shorting jumper for analog output not connected<br>- Hardware defective | ► Check analog output wiring<br>► On variants without analog output: Check whether shorting jumper connected (see "Shorting jumper slot for variant without analog output", page 37)<br>► Repair by SICK |

The last 8 status messages of the VISIC620 can be viewed in SOPAS ET in Menu item "Diagnosis/Logbook".

TROUBLESHOOTING **6**

Fig. 20: Shorting jumper slot for variant without analog output

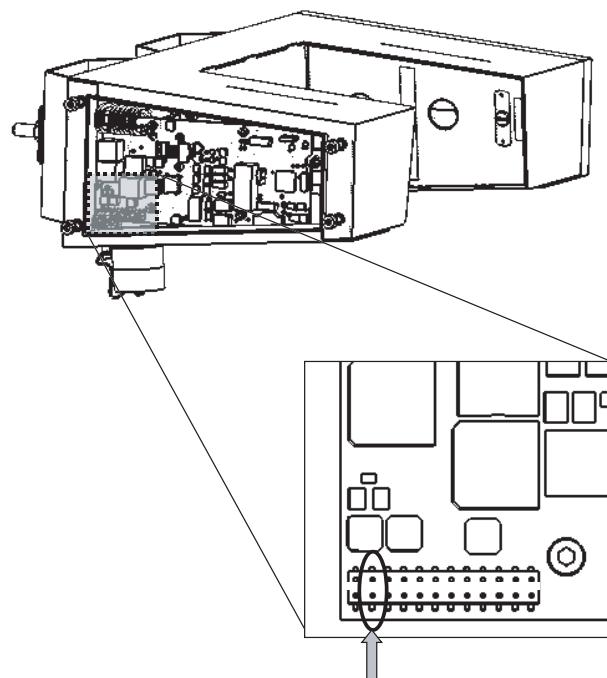

## 7 TECHNICAL DOCUMENTATION

### 7 Technical documentation

#### 7.1 Operating data

| Measured value recording       |   |
|--------------------------------|---|
| Measured variable:             | Visibility  |
| Measuring range:               | 10...16.000 m<br>Output range on analog output parameters can be set as required  |
| Accuracy:                      | ±5 m for visibility ≤ 50 m<br>±10% of measured value for visibility ≤ 5000 m<br>±20% of measured value for visibility ≤ 16000 m |
| Reproducibility:               | ±2% for visibility = 200 m  |
| Setting time T <sub>90</sub> : | 2 ... 300 s   |

| Device features    |   |
|--------------------|---|
| Materials:         | Housing made of stainless steel (1.4571), powder coated |
| Device dimensions: | (see "Dimensions")                                      |
| Weight:            | 5.6 kg  |
| Housing color:     | RAL 7042 (Traffic grey A)                               |

| Ambient conditions                    |                                  |
|---------------------------------------|----------------------------------|
| Ambient temperature during operation: | -30 ... +55 °C (-22 ... +131 °F) |
| Ambient temperature during storage:   | -40 ... +75 °C (-40 ... +167 °F) |
| Humidity exposure                     | 0 ... 100 %                      |
| Degree of protection:                 | IP 69K <sup>[1]</sup>            |

[1] EN 60529

| Interfaces and Signals          |  |   |         |                         |                                |
|---------------------------------|--|---|---------|-------------------------|--------------------------------|
| VISIC620-                       | -1xxxx                                   | -2xxxx  | -3xxxx  | -4xxxx                  |                                |
| Service interface               | RS232 for Service                        |   |         |                         |                                |
| Signals on connector contact    |  |   |         |                         |                                |
| - Analog output                 | 1x0 ... 20 mA,<br>Load 500 Ω             |   | -       | -                       | -                              |
| - Relay output                  | 2x48 V;<br>DC max. 24 W;<br>AC max 35 VA |   |         |                         |                                |
| - Digital input                 | -  | 1xfor potential-free contact<br>(load 4 V/4.5 mA) |         |                         |                                |
| Interfaces on connector contact | -  | RS485<br>(4 wires or 2 wires)                     | CAN bus | Modem, cable connection |                                |
| VISIC620-                       | -14xxx                                   |   |         | -42xxx                  | -43xxx                         |
| Modem                           | Radio modem<br>GSM/GPRS                  |   |         | Analog, 56k, standard   | Analog, 56k, further countries |

| Electrical Data |               |
|-----------------|---------------|
| Supply voltage: | 24 V DC ± 10% |
| Power input:    |               |
| - System:       | Max. 7 W      |
| - With modem:   | Max. 10 W     |

| Electric isolation                      |          |
|---|----------|
| Relay contact <-> PE 230 V AC           | 230 V AC |
| Relay contact <-> relay contact 230V AC | 230 V AC |
| Relay contact <-> actuation 368V AC     | 368 V AC |

| Optical data  |   |
|---------------|---|
| Light source: | Laser diode<br>Wave length approx. 650 nm |
| Laser:        | Class 2, according to IEC60825-1:2015-07  |
| Receiver:     | Photodiode<br>Diffusion angle 30°         |

## 7 TECHNICAL DOCUMENTATION

### 7.2 Dimensions

Fig. 21: VISIC620 dimensions


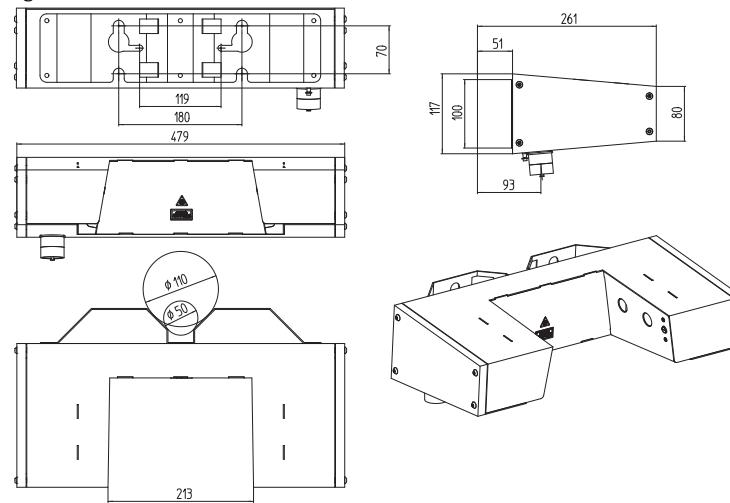


Fig. 22: Junction box dimensions

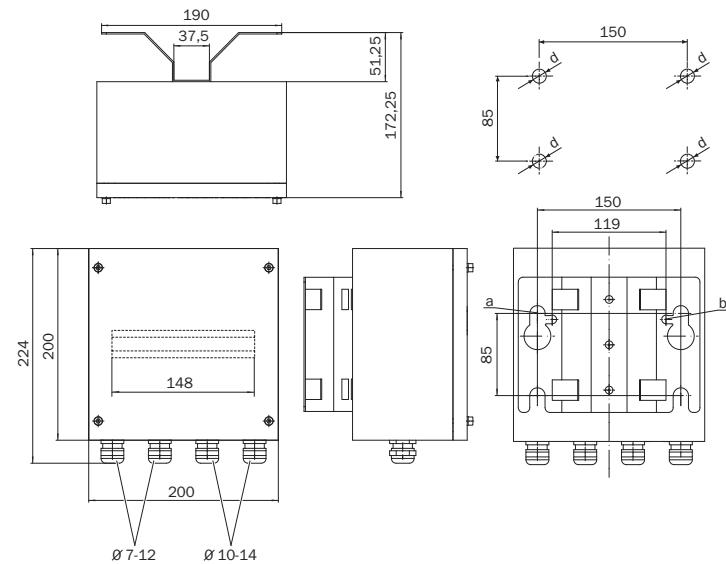


|   |   |
|---|---|
| a | For wall mounting with M12                        |
| b | For mast mounting with M8                         |
| d | Hole diameter (depending on fixing material used) |

### 7.3 Part numbers

#### 7.3.1 Type code

Fig. 23: Type code

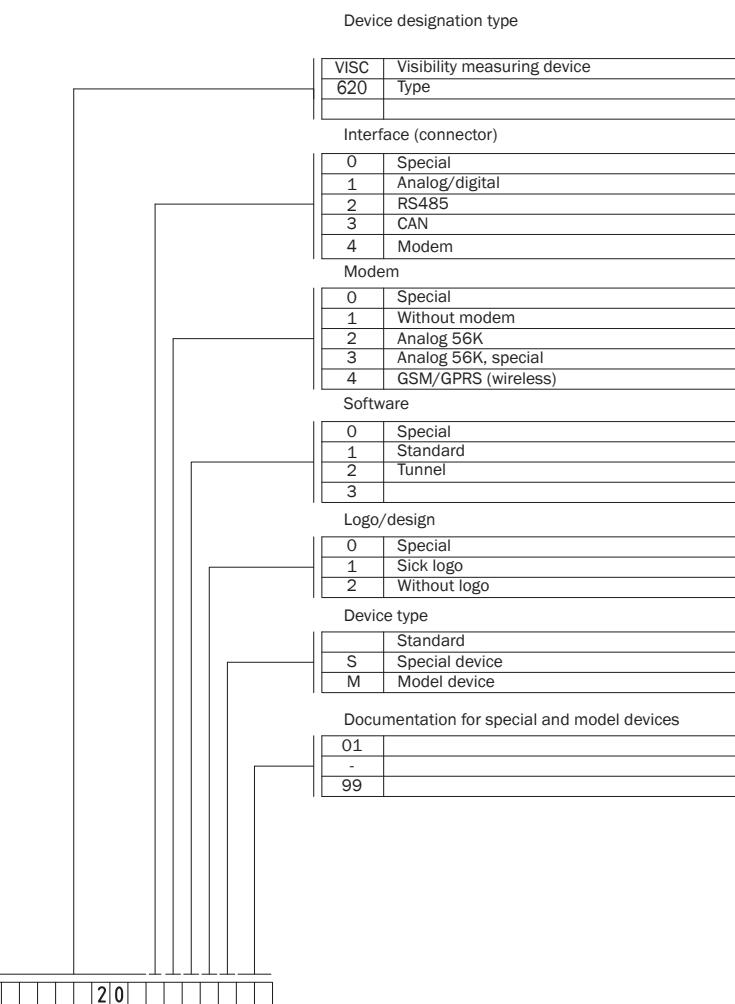

## 7 TECHNICAL DOCUMENTATION

---

### 7.3.2 Spare and expendable parts

| Part number | Designation                           |
|-------------|---------------------------------------|
| 2034985     | Aperture, left, complete              |
| 2034986     | Aperture, right, complete             |
| 5312881     | Pressure compensation element         |
| 6032682     | Protective cap C16-3 for power socket |
| 2039652     | Subassembly: Power socket, fitting    |
| 6027624     | Battery, CR1225                       |
| 2034984     | Housing cover                         |

### 7.3.3 Accessories

| Part number | Designation   |
|-------------|---|
| 2040230     | Assembly kit for mast assembly with strap retainer and lock                                       |
| 2040231     | Assembly kit for mast assembly with bar (50 ... 75 mm)  |
| 2041942     | Assembly kit for mast assembly with bar (70 ... 110 mm)   |
| 2039664     | Line with plug, rd., male plug/stranded cords 2m, 8-poles   |
| 2040224     | Line with plug, rd., male plug/stranded cords 5m, 8-poles   |
| 2039369     | Junction box, stainless steel 1.4571, with integrated mast/wall holder                            |
| 2040232     | Test set for VISIC620 in transport case with light scattering screen and two transmission filters |
| 2049939     | Modem, I-module GSM/GPRS  |
| 6011809     | Precipitation sensor, IR  |
| 7028789     | Power supply unit, Class II, 100...240VAC/24V DC/50W  |

## **8 Annex**

### **8.1 Protocols**

#### **8.1.1 Notation**

The protocol description shows the individual bytes. Each byte is shown in square brackets <>. Contents can be:

- Abbreviation such as <CS> for "CheckSum" or <ADR> for address
- Single ASCII characters such as < ASCII 64> or <'@>
- Consecutive ASCII characters such as <'SHOW AV>
- Digit sequences as ASCII character sequence such as <nnn> for a three digit number
- Hexadecimal value prefixed with "0x" such as <0x80>

The bits in bytes, words and doublewords are shown with bit 0 as the least significant bit.

#### **8.1.2 Special characters**

| Special characters | ASCII code of the character |
|--------------------|-----------------------------|
| <STX>              | ASCII 02                    |
| <ETX>              | ASCII 03                    |
| <ENQ>              | ASCII 05                    |

All these characters are reserved for framing or handshakes.

#### **8.1.3 Interface parameters**

- 9600 baud
- 8 bits/character
- 1 stop bit
- Start bit
- No parity
- No XON/XOFF handshake
- No CTS/RTS handshake
- No DTR/DTS signals

#### **8.1.4 Available protocols**

The serial interfaces of the VISIC620 can use various protocols:

- Protocol based on the WMO recommendations where data are output spontaneously from the sensor to the interface (without polling)
- Proprietary VISIC620 protocol where data are only transferred on request (polling)

## 8 ANNEX

### 8.1.5 Coding

The normal ASCII code (7-bit) is generally used. The following method is used to convert a number contained in a byte to ASCII characters:

#### **8 bits as 2 ASCII**

This method examines a byte from left to right from the most significant to the least significant bit, converts it into two 4-bit numbers and shows these numbers as the ASCII code for the respective hexadecimal number. Example:

|         | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|---------|-------|-------|-------|-------|-------|-------|-------|-------|
| Example | 0     | 1     | 1     | 0     | 1     | 1     | 1     | 0     |



### 8.1.6 VISIC620 protocol

#### **Protocol framework**

The VISIC620 is polled using a certain protocol framework that the VISIC620 can also comply with (see Table). The VISIC620 can however also be activated without framing over the RS232 Service interface and then does not return this either.

| Byte index | Contents                        | Coding | Description   |
|------------|---------------------------------|--------|---|
| 0          | <STX>                           | ASCII  | Start character   |
| 1          | <ADR <sub>H</sub> > (high byte) | ASCII  | Address; For example, "03" is sent in polling (this means the device with address 3), the VISIC620 always replies with "00" |
| 2          | <ADR <sub>L</sub> > (low byte)  | ASCII  |   |
| 3...n      | <Data string>                   | ASCII  | Polling command (for example, "m" or "SHOW AV") or demanded VISIC620 data   |
| n+1        | <ETX>                           | ASCII  | Character for data end  |
| n+2        | <CS <sub>1</sub> >              | Byte   | Checksum 1st byte = (check byte [1]) AND 0x0F) OR 0x30  |
| n+3        | <CS <sub>2</sub> >              | Byte   | Checksum 2nd byte = (check byte [1]) AND 0x0F) >> 4) OR 0x30  |
| n+4        | <ENQ>                           | ASCII  | Character for telegram end  |

[1]Check byte = XOR on address and data string

#### **Reading out device data with "SHOW AV"**

Polling normally runs with the "SHOW AV" command as data string. This command creates a reply telegram (see description below) containing all the relevant device information so that no further commands are necessary.

The reply is split into 7 sections that are transferred together. Each starts with a letter identifier followed by data.

Request string:

<STX><ADR<sub>H</sub>><ADR<sub>L</sub>><'SHOW AV'><ETX><CS<sub>1</sub>><CS<sub>2</sub>><ENQ>

Reply string

| Id. | Contents | Coding                       | Description   |
|-----|----------|------------------------------|---|
| 1   | <STX>    | ASCII                        | Start character   |
| 2   | <'0'>    | ASCII                        | Address "00"; This address value is also used when a different address is set on the sensor.  |
| 3   | <'0'>    | ASCII                        |   |
| 4   | <'S'>    | ASCII                        | Identifier for Section 1 "Operational states"   |
| 5   | <n>      | ASCII                        | "1" = Measuring operation<br>"5" = Maintenance operation  |
| 6   | <'0'>    | ASCII                        | Fixed, only present for compatibility to previous products  |
| 7   | <'MA'>   | ASCII                        | Identifier for Section 2 "Error status"   |
| 8   | <nn>     | 8 bits as 2 ASCII characters | Bit 0: Error due to contamination<br>Bit 1: Monitor diode outside permissible range<br>Bit 2: Constant light too bright or shutter error<br>Bit 3: Heater "wh" defective <sup>[1]</sup><br>Bit 4: Heater "bn" defective 1<br>Bit 5: Heater "gy" defective 1<br>Bit 6: Heater "pk" defective 1<br>Bit 7: Housing heating defective |
| 9   | <'WA'>   | ASCII                        | Identifier for Section 3 "Warnings"   |
| 10  | <nn>     | 8 bits as 2 ASCII characters | Bit 0: Warning due to contamination<br>Bit 1: Precipitation   |
| 11  | <'ST'>   | ASCII                        | Identifier for Section 4 "Status code"  |
| 12  | <nn>     | 8 bits as 2 ASCII characters | Bit 0: Limit value underflow<br>Bit 5: Gain switchover active   |
| 13  | <'M1'>   | ASCII                        | Measured value index 1: Scattered light in scattered light units (0 to 2 <sup>16</sup> )  |
| 14  | <nnnn.n> | ASCII                        | Scattered light measured value (in scattered light units)   |
| 15  | <'M2'>   | ASCII                        | Measured value index 2: Visibility  |
| 16  | <nnnnnn> | ASCII                        | Visibility in m   |
| 17  | <'M3'>   | ASCII                        | Measured value index 3: No measured value [2]   |
| 18  | <'0.0'>  | ASCII                        | Fixed value 2   |
| 19  | <'M4'>   | ASCII                        | Measured value index 4: Brightness  |
| 20  | <nn>     | ASCII                        | Brightness measured value in V  |
| 21  | <'P1'>   | ASCII                        | Parameter index 1: No significance 2  |
| 22  | <'0.0'>  | ASCII                        | Fixed value 2   |
| 23  | <'P2'>   | ASCII                        | Parameter index 2: No significance 2  |
| 24  | <'0.0'>  | ASCII                        | Fixed value 2   |
| 25  | <'P3'>   | ASCII                        | Parameter index 4: Transmission (contamination)   |
| 26  | <n.nn>   | ASCII                        | Measured value - transmission (0 corresponds to 0%, 1 corresponds to 100%)  |
| 27  | <'P4'>   | ASCII                        | Parameter index 4: Device temperature   |
| 28  | <nn.n>   | ASCII                        | Measured value of device temperature in °C  |
| 29  | <'DI'>   | ASCII                        | Identifier for Section 7: "Binary inputs"   |
| 30  | <nn>     | 8 bits as 2 ASCII characters | Bit 0: Binary input state (normally for precipitation detection; 0= closed, 1=open)   |
| 31  | <ETX>    | ASCII                        | Character for data end  |

## 8 ANNEX

| Id. | Contents | Coding | Description  |
|-----|----------|--------|--|
| 32  | <CS1>    | Byte   | Checksum 1st byte<br>(Check byte [3]) AND 0x0F) OR 0x30      |
| 33  | <CS2>    | Byte   | Checksum 2nd byte<br>(Check byte [3] AND 0x0F) >> 4) OR 0x30 |
| 34  | <ENQ>    | ASCII  | Character for telegram end                                   |

[1]Assignment see "Error messages", page 34

[2]Only required for compatibility to previous products

[3]Check byte = XOR on address and data string

### 8.1.7 Protocol based on WMO

The data are coded based on SYNOP and METAR. One measuring value is output in each telegram. This telegram is output automatically once per minute. The measured value in the METAR protocol is replaced by "?????" when a sensor error occurs. The data are separated by ";" . The telegram is terminated with CRLF.

| Pos. | Contents     | Coding | Description   |
|------|--------------|--------|---|
| 1    | <\$>         | ASCII  | Start character   |
| 2    | <'VISIC620'> | ASCII  | Device type   |
| 3    | <;>          | ASCII  | Separation character  |
| 4    | <nnnnnnn>    | ASCII  | Device serial number  |
| 5    | <;>          | ASCII  | Separation character  |
| 6    | <nn>         | ASCII  | Measured value coded according to SYNOP code (see below)  |
| 7    | <;>          | ASCII  | Separation character  |
| 8    | <METAR>      | ASCII  | Visibility measured value classified according to METAR:<br><'+FG'> Thick fog; 0 ... 200 m<br><'FG'> Fog; 200 m ... 500 m<br><'-FG'> Light fog 500 m ... 1000 m<br><` `> Over 1000 m                            |
| 9    | <;>          | ASCII  | Separation character  |
| 10   | <nn>         | ASCII  | Identical to field 6  |
| 11   | <;>          | ASCII  | Separation character  |
| 12   | <METAR>      | ASCII  | Identical to field 8  |
| 13   | <;>          | ASCII  | Separation character  |
| 14   | <nnnn>       | ASCII  | Visibility in m with the integration time set in the device (five digits with leading zeros)  |
| 15   | <;>          | ASCII  | Separation character  |
| 16   | <nn/n/n>     | ASCII  | Date as yy/mm/dd  |
| 17   | <;>          | ASCII  | Separation character  |
| 18   | <nn:nn>      | ASCII  | Time as hh:ss   |
| 19   | <;>          | ASCII  | Separation character  |
| 20   | <nnnnnnn>    | ASCII  | Device status (see "Device status", page 48);<br>Note: If the device status displays an error, the measured values (including the coded or classified) are padded with the appropriate number of question marks |

**Example:**

- Example 130 m (thick fog)  
`$VISIC620;1234567;01;+FG;01;+FG;00130;06/09/07;10:15,00000000`
- Example 360 m  
`$VISIC620;1234567;03; FG;03; FG;00360;06/09/07;11:15,00000000`
- Example 800 m (light fog)  
`$VISIC620;1234567;08;FG;08;FG;00800;06/09/07;13:15,00000000`
- Example 2600 m  
`$VISIC620;1234567;26;+FG;26;+FG;02600;06/09/07,10:15,00000000`
- Example 11000 m  
`$VISIC620;1234567;61; ;61; ;11000;06/09/07,10:15,00000000`
- Example sensor error active  
`$VISIC620;1234567;??;??;??;??;16000;06/09/07,10:15,00004400`

| Code | Km   | M    | Code | Km  | M    | Code | Km  | M    | Code | Km       |
|------|------|------|------|-----|------|------|-----|------|------|----------|
| 00   | <0.1 | <100 | 17   | 1.7 | 1700 | 34   | 3.4 | 3400 | 51   | Not used |
| 01   | 0.1  | 100  | 18   | 1.8 | 1800 | 35   | 3.5 | 3500 | 52   | Not used |
| 02   | 0.2  | 200  | 19   | 1.9 | 1900 | 36   | 3.6 | 3600 | 53   | Not used |
| 03   | 0.3  | 300  | 20   | 2.0 | 2000 | 37   | 3.7 | 3700 | 54   | Not used |
| 04   | 0.4  | 400  | 21   | 2.1 | 2100 | 38   | 3.8 | 3800 | 55   | Not used |
| 05   | 0.5  | 500  | 22   | 2.2 | 2200 | 39   | 3.9 | 3900 | 56   | 6        |
| 06   | 0.6  | 600  | 23   | 2.3 | 2300 | 40   | 4.0 | 4000 | 57   | 7        |
| 07   | 0.7  | 700  | 24   | 2.4 | 2400 | 41   | 4.1 | 4100 | 58   | 8        |
| 08   | 0.8  | 800  | 25   | 2.5 | 2500 | 42   | 4.2 | 4200 | 59   | 9        |
| 09   | 0.9  | 900  | 26   | 2.6 | 2600 | 43   | 4.3 | 4300 | 60   | 10       |
| 10   | 1.0  | 1000 | 27   | 2.7 | 2700 | 44   | 4.4 | 4400 | 61   | 11       |
| 11   | 1.1  | 1100 | 28   | 2.8 | 2800 | 45   | 4.5 | 4500 | 62   | 12       |
| 12   | 1.2  | 1200 | 29   | 2.9 | 2900 | 46   | 4.6 | 4600 | 63   | 13       |
| 13   | 1.3  | 1300 | 30   | 3.0 | 3000 | 47   | 4.7 | 4700 | 64   | 14       |
| 14   | 1.4  | 1400 | 31   | 3.1 | 3100 | 48   | 4.8 | 4800 | 65   | 15       |
| 15   | 1.5  | 1500 | 32   | 3.2 | 3200 | 49   | 4.9 | 4900 | 66   | 16       |
| 16   | 1.6  | 1600 | 33   | 3.3 | 3300 | 50   | 5.0 | 5000 | 67   | 17       |

Note: The highest code value below the respective current measured value is used.


## 8 ANNEX

### 8.1.8 Device status


The device status comprises 4 \* 8 bits with the significance shown below.

|         |        |        |        |        |
|---------|--------|--------|--------|--------|
| Status: | Byte 4 | Byte 3 | Byte 2 | Byte 1 |
|---------|--------|--------|--------|--------|


#### Byte 1: Error

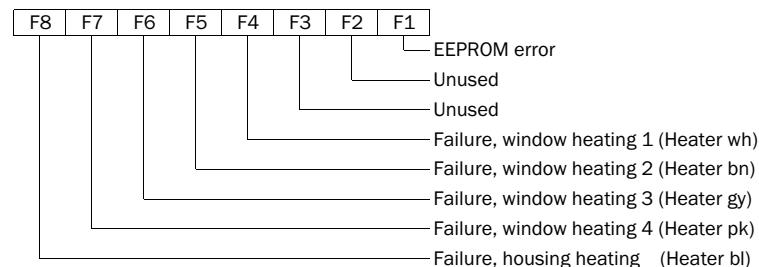


#### Byte 2: Error/warnings

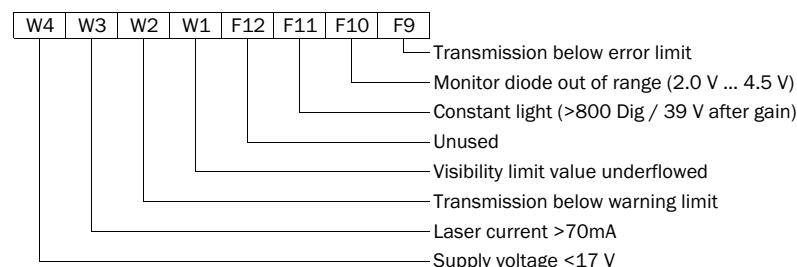

#### Byte 3: Warnings

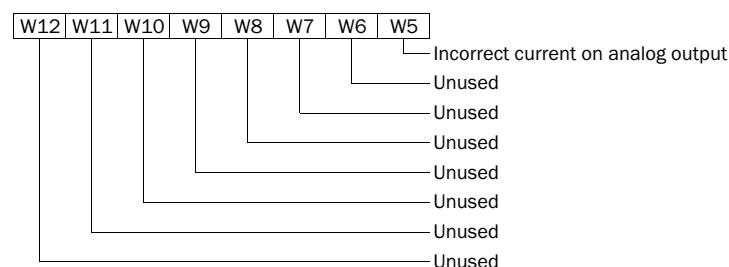

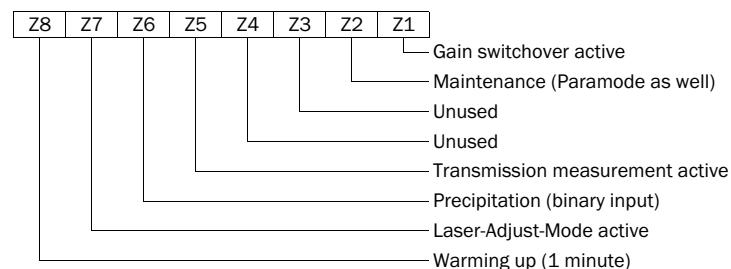**Byte 4: Device status****Example:**

Status: 01 00 11 40

| Byte       | Significance  |
|------------|---|
| Byte 1: 40 | Error, window heating 4 failure (heater pk)                           |
| Byte 2: 11 | Error, transmission too low, warning visibility limit value underflow |
| Byte 3: 00 |   |
| Byte 4: 01 | Gain switchover active  |

## 8 ANNEX


### 8.2 SITOS interface

As from version Y138, the Visic620 allows a Sitos connection according to the data field specification (AK 3.2.1).

#### 8.2.1 SOPAS

- Set the address and the Sitos mode in SOPAS.  
 The Service Mode must be activated (Password: visic620service).

Fig. 24: Sitos Mode

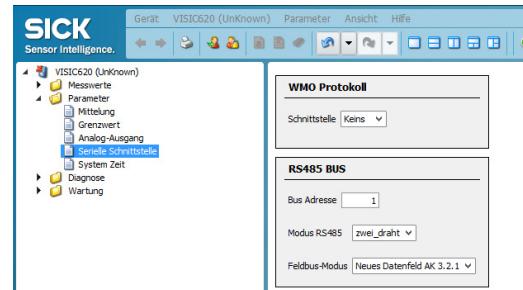

#### 8.2.2 Telegram view

Example for Sitos telegram assignment:

Request: 10 78 **02** 7a 16

Reply:

68 12 12 68 00 **02** 3c **00** **80** 03 **7f** **3e** 00 00 **00** **00** **00** **80** 00 00 00 00 fe 16

|   |             |               |                     |                                |         |  |
|---|-------------|---------------|---------------------|--------------------------------|---------|--|
|   |             |               | -                   | -----                          | -----   |  |
|   |             |               |                     |                                | v       |  |
|   |             |               |                     | v                              | Reserve |  |
|   |             |               |                     | Sick status byte 1 - 4         |         |  |
|   |             |               | v                   | corresponds to SICK definition |         |  |
|   |             | v             | Visibility (16 bit) |                                |         |  |
|   | v           | SITOS warning |                     |                                |         |  |
| v | SITOS error |               |                     |                                |         |  |

Address (example)

Measured value in meters (max. 16000)


### 8.2.3 Protocol

Protocol: 9600 baud, 8 data bit, parity even


#### Mapping for field bus (SITOS)

The 32 bits of the device status are split as follows to 8 bits each for errors and warnings:

Field bus (SITOS) error status:

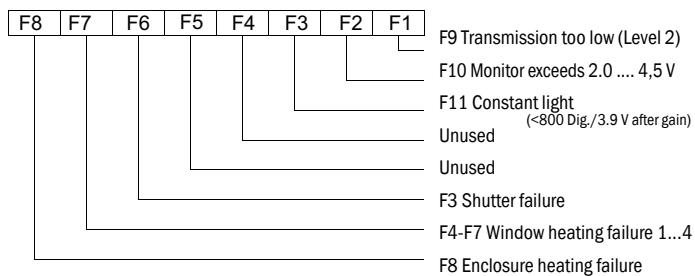

Field bus (SITOS) warnings:

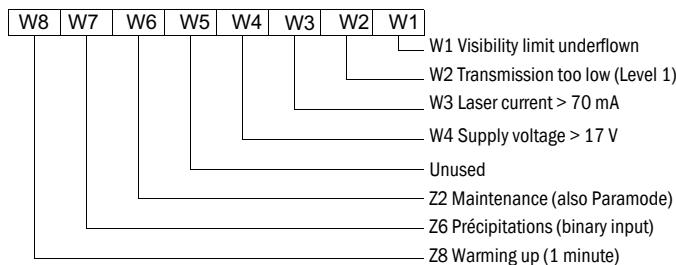

|   |  |   |
|---|--|---|
| <b>Australia</b><br>Phone +61 (3) 9457 0600<br>1800 33 48 02 – tollfree<br>E-Mail sales@sick.com.au | <b>Hungary</b><br>Phone +36 1 371 2680<br>E-Mail ertekeles@sick.hu                               | <b>Slovakia</b><br>Phone +421 482 901 201<br>E-Mail mail@sick-sk.sk                 |
| <b>Austria</b><br>Phone +43 (0) 2236 62288-0<br>E-Mail office@sick.at                               | <b>India</b><br>Phone +91-22-6119 8900<br>E-Mail info@sick-india.com                             | <b>Slovenia</b><br>Phone +386 591 78849<br>E-Mail office@sick.si                    |
| <b>Belgium/Luxembourg</b><br>Phone +32 (0) 2 466 55 66<br>E-Mail info@sick.be                       | <b>Israel</b><br>Phone +972 97110 11<br>E-Mail info@sick-sensors.com                             | <b>South Africa</b><br>Phone +27 10 060 0550<br>E-Mail info@sickautomation.co.za    |
| <b>Brazil</b><br>Phone +55 11 3215-4900<br>E-Mail comercial@sick.com.br                             | <b>Italy</b><br>Phone +39 02 27 43 41<br>E-Mail info@sick.it                                     | <b>South Korea</b><br>Phone +82 2 786 6321/4<br>E-Mail infokorea@sick.com           |
| <b>Canada</b><br>Phone +1 905.771.1444<br>E-Mail cs.canada@sick.com                                 | <b>Japan</b><br>Phone +81 3 5309 2112<br>E-Mail support@sick.jp                                  | <b>Spain</b><br>Phone +34 93 480 31 00<br>E-Mail info@sick.es                       |
| <b>Czech Republic</b><br>Phone +420 234 719 500<br>E-Mail sick@sick.cz                              | <b>Malaysia</b><br>Phone +603-8080 7425<br>E-Mail enquiry.my@sick.com                            | <b>Sweden</b><br>Phone +46 10 110 10 00<br>E-Mail info@sick.se                      |
| <b>Chile</b><br>Phone +56 (2) 2274 7430<br>E-Mail chile@sick.com                                    | <b>Mexico</b><br>Phone +52 (472) 748 9451<br>E-Mail mexico@sick.com                              | <b>Switzerland</b><br>Phone +41 41 619 29 39<br>E-Mail contact@sick.ch              |
| <b>China</b><br>Phone +86 20 2882 3600<br>E-Mail info.china@sick.net.cn                             | <b>Netherlands</b><br>Phone +31 (0) 30 229 25 44<br>E-Mail info@sick.nl                          | <b>Taiwan</b><br>Phone +886-2-2375-6288<br>E-Mail sales@sick.com.tw                 |
| <b>Denmark</b><br>Phone +45 45 82 64 00<br>E-Mail sick@sick.dk                                      | <b>New Zealand</b><br>Phone +64 9 415 0459<br>0800 222 278 – tollfree<br>E-Mail sales@sick.co.nz | <b>Thailand</b><br>Phone +66 2 645 0009<br>E-Mail marcom.th@sick.com                |
| <b>Finland</b><br>Phone +358-9-25 15 800<br>E-Mail sick@sick.fi                                     | <b>Norway</b><br>Phone +47 67 81 50 00<br>E-Mail sick@sick.no                                    | <b>Turkey</b><br>Phone +90 (216) 528 50 00<br>E-Mail info@sick.com.tr               |
| <b>France</b><br>Phone +33 1 64 62 35 00<br>E-Mail info@sick.fr                                     | <b>Poland</b><br>Phone +48 22 539 41 00<br>E-Mail info@sick.pl                                   | <b>United Arab Emirates</b><br>Phone +971 (0) 4 88 65 878<br>E-Mail contact@sick.ae |
| <b>Germany</b><br>Phone +49 (0) 2 11 53 010<br>E-Mail info@sick.de                                  | <b>Romania</b><br>Phone +40 356-17 11 20<br>E-Mail office@sick.ro                                | <b>United Kingdom</b><br>Phone +44 (0)17278 31121<br>E-Mail info@sick.co.uk         |
| <b>Greece</b><br>Phone +30 210 6825100<br>E-Mail office@sick.com.gr                                 | <b>Russia</b><br>Phone +7 495 283 09 90<br>E-Mail info@sick.ru                                   | <b>USA</b><br>Phone +1 800.325.7425<br>E-Mail info@sick.com                         |
| <b>Hong Kong</b><br>Phone +852 2153 6300<br>E-Mail ghk@sick.com.hk                                  | <b>Singapore</b><br>Phone +65 6744 3732<br>E-Mail sales.gsg@sick.com                             | <b>Vietnam</b><br>Phone +65 6744 3732<br>E-Mail sales.gsg@sick.com                  |

Detailed addresses and further locations at [www.sick.com](http://www.sick.com)