

Université de Technologie de Compiègne

MI11

Rapport des TPs linux embarqué

Clément BLANQUET et Rafik CHENNOUF

Sommaire

1	Rapport 7	TP 1 - Linux embarqué 5
	Exercice 1:	Prise en main de la carte DevKit8600 5
	1.1	Question 1.1
	1.2	Question 1.2
	1.3	Question 1.3
	1.4	Question 1.4
	1.5	Question 1.5
	Exercice 2	
	2.1	Question 2.1
	2.2	Question 2.2
	2.3	Question 2.3
	Exercice 3	
	3.1	Question 3.1
	3.2	Question 3.2
	3.3	Question 3.3
	3.4	Question 3.4
	3.5	Question 3.5
	Exercice 4:	Ajout de paquets
	4.1	Question 4.1
	4.2	Question 4.2
	4.3	Question 4.3
	4.4	Question 4.4
	Exercice 5:	Compilation manuelle du noyau
	5.1	Question 5.1
	5.2	Question 5.2
	5.3	Question 5.3
	5.4	Question 5.4
	5.5	Question 5.5
	5.6	Question 5.6
	5.7	Question 5.7
2	Rapport T	ΓP 2 - Linux embarqué 20
		Boutons poussoirs
	1.1	Question 3.1

Clément BLANQUET et Rafik CHENNOUF						
	1.2	Question 3.2			20	
	1.3	Question 3.3			20	
	1.4	Question 3.4			21	
	Exercice 4:	Charge CPU			23	
	2.1	Question 4.1			23	
	2.2	Question 4.2			24	
\mathbf{A}	Messages	de sortie du terminal entre l'allumage de la cible ϵ	et	le		

prompt de login

26

Table des figures

1.1	Dossier image
1.2	Mise en évidence du port série dans /proc/devices
1.3	Mise en évidence du port série dans /dev
1.4	Dossier ipk
1.5	Dossier $ipk/devkit800$
1.6	Dossier $ipk/armv7a-vfp-neon$
1.7	Dossier $/usr/lib$
1.8	Configurations par défaut de devkit8600
1.9	Activation du driver pour les LEDs
1.10	Logs de démarrage
1.11	Logs du kernel
2.1	Résultat du evtest sur /dev/input/event1

Rapport TP 1 - Linux embarqué

Exercice 1 : Prise en main de la carte DevKit8600

1.1 Question 1.1

La DevKit8600 est basée sur les processeurs AM3359 de Texas Instrument. Elle possède un ARM Cortex-A8 cadencé à 720 MHz avec un boot ROM On-Chip de 176KB. Elle possède un certain nombre d'interfaces comme un port LAN, une entrée/sortie audio, des USB, une interface JTAG... etc.

1.2 Question 1.2

A FAIRE

1.3 Question 1.3

Nous avons utilisé une liaison série pour nous connecter avec l'application cutecom.

Voici les paramètres que l'on a utilisés :

- 1. Bits per second: 115200
- 2. Data bits: 8
- 3. Parity: None
- 4. Stop bits: 1
- 5. Flow Control: None

1.4 Question 1.4

On constate qu'il y a une erreur au démarrage.

```
TFTP error: 'File not found' (1)

ERROR: can't get kernel image!
```

La cible ne peut donc pas démarrer. Le fichier manquant est l'image du kernel, appelé **uImage**. Il faudrait la placer dans le dossier /tftpboot sur notre PC, puisque la cible nous indique au démarrage qu'elle va cherche l'image à cet endroit.

1.5 Question 1.5

Même si l'image était présente, la cible ne pourrait pas démarrer car il manque un rootfs (système de fichier racine).

Exercice 2

2.1 Question 2.1

Le dossier /home/mi11/poky/build/conf contient les fichiers de configurations de poky qui permettent donc de configurer l'image selon nos besoins :

- bblayers.conf
- local.conf
- sanity info
- templateconf.cfg

Le dossier /home/mi11/devkit8600/meta-devkit8600 contient les fichiers spécifiques à notre cible qui vont permettre de construire une image qui lui est adaptée.

2.2 Question 2.2

Nous avons ajouté une ligne dans le fichier bblayers.conf :

```
BBLAYERS ?= " \
    /home/mi11/poky-dizzy -12.0.3/meta \
    /home/mi11/poky-dizzy -12.0.3/meta-yocto \
    /home/mi11/poky-dizzy -12.0.3/meta-yocto-bsp \
    /home/mi11/devkit8600/meta-devkit8600 \ // CELLE LA
```

De plus, à la ligne 36 du fichier local.conf, nous avons inscrit:

```
MACHINE ??= "devkit8600"
```

Le nom "devkit8600" est en fait le nom du fichier de configuration du même nom situé ici : /home/mi11/devkit8600/meta-devkit8600/conf/machine, ce qui fait donc le lien entre la génération de l'image et les paramètres de la cible.

Figure 1.1 – Dossier image

2.3 Question 2.3

Voici ce qu'on obtient dans le dossier /home/mi11/poky/build/tmp/deploy/images après la compilation :

On obtient notre image kernel uImage qui est en fait un lien symbolique vers le fichier uImage-3.1.0-r0-devkit8600-20170410160636.bin.

On voit également le système de fichier nommé *rootfs* qui est compressé dans une archive bzip2.

Si on compare la taille des fichiers qui viennent d'être générés avec ceux de notre VM sous Linux Mint :

- CIBLE:
 - Taille image: 3,2 MBTaille rootfs: 1,8 MB
- HOTE :
 - Taille image: 6,6 MB (on le voit dans /boot)
 - Taille système de fichiers : environ 7 GB

On constate une bonne différence entre les deux images car l'image de la cible n'est faite que pour cette cible là, elle gère moins de choses et propose moins de fonctionnalités que celle de notre VM. Pour le système de fichiers, on constate une énorme différence car beaucoup plus de programmes sont installés sur notre VM par rapport à la cible sur laquelle rien ou presque n'est installé. La cible dispose en fait de la configuration minimale.

Exercice 3

3.1 Question 3.1

Comme nous l'avions indiqué dans le premier exercice, nous avons copié uI-mage dans le dossier /tftpboot, comme c'est indiqué dans le fichier de configuration /etc/xinetd.d/tftp. Le rootfs, lui, est copié dans le dossier /tftpboot/rootfs

3.2 Question 3.2

Messages de sortie du terminal entre l'allumage de la cible et le prompt de login : voir annexe A.1.

A FINIR

3.3 Question 3.3

L'IP de la cible est 192.168.1.6. On peut voir cette adresse sur les messages de sortie du boot : "IP-Config : Got DHCP answer from 192.168.1.1, my address is 192.168.1.6 (sortie du boot)"

3.4 Question 3.4

proc/devices contient les périphériques (dans la première section) ainsi que les stockages (dans la deuxième section).

Le numéro en début de ligne dans le fichier /proc/devices correspond au numéro mineur, qui indique si les périphériques sont gérés par le même driver.

```
Terminal
root@devkit8600:~#
root@devkit8600:~# cat /proc/devices
Character devices:
 1 mem
  4 /dev/vc/0
  4 tty
  4 ttyS
  5 /dev/tty
  5 /dev/console
5 /dev/ptmx
 10 misc
13 input
29 fb
 81 video4linux
 89 i2c
 90 mtd
116 alsa
128 ptm
136 pts
180 usb
189 usb device
216 rfcomm
252 ttySDIO
253 ttyO
254 rtc
Block devices:
 1 ramdisk
259 blkext
 7 loop
8 sd
 31 mtdblock
 65 sd
 66 sd
67 sd
 68 sd
 69 sd
 70 sd
71 sd
128 sd
129 sd
130 sd
131 sd
132 sd
133 sd
134 sd
135 sd
179 mmc
root@devkit8600:~#
```

FIGURE 1.2 – Mise en évidence du port série dans /proc/devices



Figure 1.3 – Mise en évidence du port série dans /dev

3.5 Question 3.5

A FAIRE

Exercice 4: Ajout de paquets

4.1 Question 4.1

Figure 1.4 – Dossier ipk

Le dossier /home/mi11/poky/build/tmp/deploy/ipk est organisé par architectures (x86/x64, devkit8600, armv7a, etc.).

```
mill@mill-VirtualBox ~/poky/build/tmp/deploy/ipk/devkit8600 $ ll
total 36764
 drwxr-xr-x 2
                                                                     4096 avril 14 15:30 ../
4046 avril 14 15:08 base-files_3.0.14-r89_devkit8600.ipk
                           6 mill mill
1 mill mill
drwxr-xr-x 6
                                                                       840 avril 14 15:08 base-files-dbg_3.0.14-r89_devkit8600.ipk
872 avril 14 15:08 base-files-dev_3.0.14-r89_devkit8600.ipk
922 avril 14 15:08 base-files-doc_3.0.14-r89_devkit8600.ipk
                           1 mill mill
1 mill mill
   rw-r--r--
                                                                      1072 avril 14 15:07 depmodwrapper-cross_1.0-r0_devkit8600.ipk
                                                                       704 avril 14 15:07 depmodwrapper-cross-dbg 1.0-r0 devkit8600.ipk
736 avril 14 15:07 depmodwrapper-cross-dev_1.0-r0_devkit8600.ipk
                            1 mill mill
1 mill mill
                          1 mill mill 2722 avril 14 15:07 kernel-3.1.0-r0 devkit8600.ipk

1 mill mill 678 avril 14 15:07 kernel-3.1.0-r0 devkit8600.ipk

1 mill mill 30265112 avril 14 15:07 kernel-dev_3.1.0-r0_devkit8600.ipk
                                                             3195112 avril 14 15:07 kernet-dev 3.1.0-10 devkit8600.ipk
3195142 avril 14 15:07 kernel-image-3.1.0 3.1.0-r0 devkit8600.ipk
702 avril 14 15:07 kernel-modules 3.1.0-r0 devkit8600.ipk
1922 avril 14 15:07 kernel-module-csi-wait-scan 3.1.0-r0 devkit8600.ipk
19494 avril 14 15:07 kernel-module-usbserial 3.1.0-r0 devkit8600.ipk
3939110 avril 14 15:08 opkg-config-base-dbg 1.0-r1 devkit8600.ipk
682 avril 14 15:08 opkg-config-base-dbg 1.0-r1 devkit8600.ipk
   rw-r--r-- 1 mill mill
  rw-r--r-- 1 mill mill
rw-r--r-- 1 mill mill
                                mill mill mill mill
                                                                       826 avril 14 15:08 opkg-config-base_dbg_l.0-rl_devkit8600.ipk
682 avril 14 15:08 opkg-config-base-dbg_l.0-rl_devkit8600.ipk
714 avril 14 15:08 opkg-config-base-dby_l.0-rl_devkit8600.ipk
776 avril 14 15:07 packagegroup-base_l.0-r83_devkit8600.ipk
692 avril 14 15:07 packagegroup-base-3g_l.0-r83_devkit8600.ipk
726 avril 14 15:07 packagegroup-base-bluetooth I.0-r83_devkit8600.ipk
790 avril 14 15:07 packagegroup-base-dbg_l.0-r83_devkit8600.ipk
822 avril 14 15:07 packagegroup-base-dbg_l.0-r83_devkit8600.ipk
600 avril 14 15:07 packagegroup-base-dbg_dd_l.0-r83_devkit8600.ipk
                                mil1 mil1
                                mill mill mill mill
                                mil1 mil1
                                mill mill mill mill
                                                                       660 avril 14 15:07 packagegroup-base-extended 1.0-r83 devkit8600.ipk
668 avril 14 15:07 packagegroup-base-ipv6_1.0-r83_devkit8600.ipk
                                mi11 mi11
                                 mill mill
                                                                       688 avril 14 15:07 packagegroup-base-nfc 1.0-r83 devkit8600.ipk
690 avril 14 15:07 packagegroup-base-nfs_1.0-r83_devkit8600.ipk
712 avril 14 15:07 packagegroup-base-usbgadget_1.0-r83_devkit8600.ipk
                                mi11 mi11
                                 mi11 mi11
                                                                        742 avril 14 15:07 packagegroup-base-usbhost_1.0-r83_devkit8600.ip
                                                                       712 avril 14 15:07 packagegroup-base-vfat 1.0-r83 devkit8600.ipk
772 avril 14 15:07 packagegroup-base-wifi_1.0-r83_devkit8600.ipk
                                mi11 mi11
                                 mi11 mi11
                                                                       680 avril 14 15:07 packagegroup-base-zeroconf 1.0-r83 devkit8600.ipk
734 avril 14 15:07 packagegroup-core-boot 1.0-r17_devkit8600.ipk
804 avril 14 15:07 packagegroup-core-boot-dbg_1.0-r17_devkit8600.ipk
                                mi11 mi11
                                 mill mill
                                                                  832 avril 14 15:07 packagegroup-core-boot-duy_1.0-r17_devkit8600.ipk
684 avril 14 15:07 packagegroup-distro-base_1.0-r83_devkit8600.ipk
722 avril 14 15:07 packagegroup-machine-base_1.0-r83_devkit8600.ipk
26783 avril 14 15:29 Packages
4259 avril 14 15:29 Packages
                                mi11 mi11
                                mill mill
                            1 mill mill
1 mill mill
                                                                      2558 avril 14
                                                                                                         15:29 Packages.stamps
                                                                      868 avril 14 15:07 poky-feed-config-opkg_1.0-r2_devkit8600.ipk
684 avril 14 15:07 poky-feed-config-opkg-dbg_1.0-r2_devkit8600.ipk
714 avril 14 15:07 poky-feed-config-opkg-dev_1.0-r2_devkit8600.ipk
1450 avril 14 15:09 shadow-securetty_4.2.1-r3_devkit8600.ipk
690 avril 14 15:09 shadow-securetty-dbg_4.2.1-r3_devkit8600.ipk
                           1 mill mill
1 mill mill
  rw-r--r-- 1 mill mill
rw-r--r-- 1 mill mill
rw-r--r-- 1 mill mill
   🔟 Menu 🥅 🐉 🔁 🚞 🕟 Terminal
                                                                                                                                                                                                                                                                    👤 💉 🕪 🧹 16:44
                                                                                                                                                                                                                 🔯 💿 🗗 🤌 급 🗐 🖫 🔘 🚫 🛂 CTRL DROITE
```

FIGURE 1.5 – Dossier ipk/devkit800

Les sous-dossiers contiennent des paquets d'extension .ipk. Le noyau se trouve dans le sous-dossier devkit8600 comme nous pouvons le voir sur la copie d'écran ci-dessus. Quant au paquet libxml2, il se trouve dans le sous-dossier armv7a-vfp-neon.

4.2 Question 4.2

Les différents paquets relatifs à *libxml2* sont visibles sur la copie d'écran suivante.

Figure 1.6 – Dossier ipk/armv7a-vfp-neon

Nous avons ensuite copié le fichier

```
libxml2_2.9.1-r0_armv7a-vfp-neon.ipk
```

dans le système de fichiers de la cible et nous avons installé le paquet avec la commande suivante :

opkg install libxml2_2.9.1-r0_armv7a-vfp-neon.ipk

4.3 Question 4.3

La première méthode pour copier le fichier dans le système de fichiers de la cible consiste à utiliser directement la commande cp comme suit :

```
sudo cp libxml2 2.9.1-r0 armv7a-vfp-neon.ipk /tftpboot/rootfs/home/root/
```

La deuxième méthode consiste à copier le fichier à distance via la commande scp qui se base sur ssh comme suit :

scp libxml2_2.9.1-r0_armv7a-vfp-neon.ipk root@192.168.1.6:/home/root/

4.4 Question 4.4

Les fichiers de libxml2 installés par le gestionnaire de paquets se trouvent dans le dossier /usr/lib de notre cible.

```
root@devkit8600:~# ls /usr/lib/
                                              libgio-2.0.so.0.4000.0
dbus/
                                                                                           libnl-genl-3.so.200.20.0
libnl-nf-3.so.200
gio/
libX11.so.6
                                             libglib-2.0.so.0
libglib-2.0.so.0.4000.0
                                              libgmodule-2.0.so.0
libgmodule-2.0.so.0.4000.0
 ibX11.so.6.3.0
                                                                                            libnl-nf-3.so.200.20.0
libXau.so.6
                                                                                            libnl-route-3.so.200
libXau.so.6.0.0
                                                                                            libnl-route-3.so.200.20.0
                                              libgmp.so.10
                                                                                           libnroute-3.50.200.20.0
libopkg.so.1
libopkg.so.1.0.0
libpyglib-2.0-python.so.0
libpyglib-2.0-python.so.0.0.0
libpython2.7.so.1.0
libreadline.so.6
                                             libgmp.so.10.2.0
libgnutls.so.28
 ibXdmcp.so.6
libXdmcp.so.6.0.0
libavahi-common.so.3
                                              libgnutls.so.28.38.0
                                             libgobject-2.0.so.0
libgobject-2.0.so.0.4000.0
libgpg-error.so.0
libavahi-common.so.3.5.3
 libavahi-core.so.7
 ibavahi-core.so.7.0.2
                                              libgpg-error.so.0.10.0
libbluetooth.so.3
                                                                                            libreadline.so.6.3
                                             libgthread-2.0.so.0
libgthread-2.0.so.0.4000.0
libhistory.so.6
libbluetooth.so.3.13.0
                                                                                            libssl.so.1.0.0
libdaemon.so.0
libdaemon.so.0.5.0
                                                                                           libtirpc.so.1
                                                                                            libtirpc.so.1.0.10
libdbus-1.so.3
                                              libhistory.so.6.3
                                                                                            libxcb.so.1
                                                                                           libxcb.so.1.1.0
libxml2.so.2
libdbus-1.so.3.8.4
libdbus-glib-1.so.2
libdbus-glib-1.so.2.2.2
                                             libhogweed.so.2
libhogweed.so.2.5
libkmod.so.2
                                                                                            libxml2.so.2.9.1
                                              libkmod.so.2.2.8
 libexpat.so.1
                                             libnettle.so.4
libnettle.so.4.7
libexpat.so.1.6.0
                                                                                           neard/
 ibffi.so.6
                                                                                           opka/
 ibffi.so.6.0.2
                                              libnl-3.so.200
libgcrypt.so.20
                                              libnl-3.so.200.20.0
 libgcrypt.so.20.0.1
libgio-2.0.so.0
                                              libnl-cli-3.so.200
```

FIGURE 1.7 – Dossier /usr/lib

Ce dossier contient des fichiers shared object (.so) qui sont des librairies/bibliothèques partagées dynamiques. Les .so sont des bibliothèques qui se chargent en mémoire au moment de l'exécution d'un programme qui les utilisent. Si plusieurs programmes les utilisant sont lancés en même temps, une seule instance de la bibliothèque dynamique réside en mémoire.

Exercice 5: Compilation manuelle du noyau

5.1 Question 5.1

La page 72 de la documentation nous dit qu'il est possible d'allumer et d'éteindre les LEDs via les commandes suivantes :

```
root@DevKit8600:~# echo 1 > /sys/class/leds/user_led/brightness
root@DevKit8600:~# echo 0 > /sys/class/leds/user_led/brightness
Comme le dossier
```

user_led

n'existe pas ce n'est pas opérationnel.

5.2 Question 5.2

Nous avons ensuite compiler manuellement le noyau via la chaîne de compilation croisée en exécutant le script suivant :

source /opt/poky/1.7.3/environment-setup-armv7a-vfp-neon-poky-linux-gnueabiunset LDFLAGS

Le fichier ci-dessus sert à mettre en place l'environnement de compilation de manière à avoir les bons préfixes pour une compilation croisée. Le préfixe la chaîne de compilation croisée est *arm-poky-linux-gnueabi-*.

5.3 Question 5.3

Pour obtenir la liste des configurations par défaut du noyau pour une architecture ARM, il faut utiliser la commande $make\ ARCH=arm\ help$. Les configurations par défaut possibles pour la carte devkit8600 sont visibles sur la copie d'écran ci-dessous :

Figure 1.8 – Configurations par défaut de devkit8600

Nous avons retenu uniquement la première configuration et nous l'avons mise en place via la commande suivante :

make devkit8600 defconfig

5.4 Question 5.4

Ensuite, nous avons lancé la personnalisation du noyau via la commande suivante : make ARCH=arm menuconfig. Le but étant d'ajouter un driver pour les LEDs connectées par GPIO. Pour cela, nous avons activé l'option LED Support for GPIO connected LEDs comme on peut le voir sur la copie d'écran suivante.

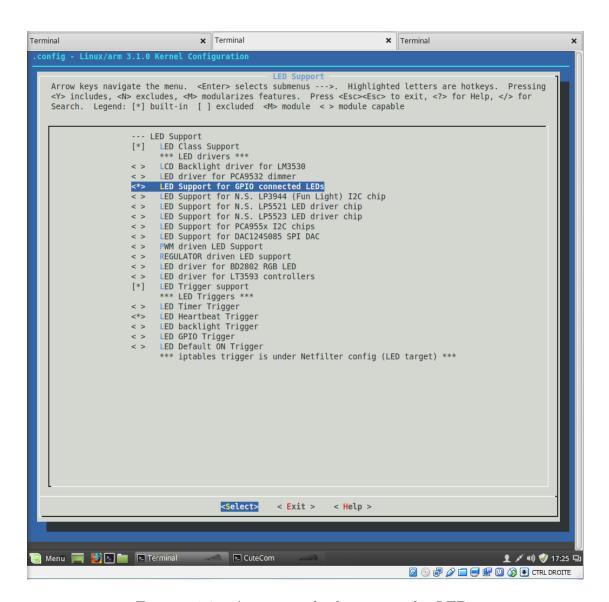


Figure 1.9 – Activation du driver pour les LEDs

Ce driver peut être activé via deux modes, modularizes features ou built-in. Le premier mode est utilisé si l'on souhaite ajouter un driver en tant que module qui sera chargé en mémoire uniquement en cas de besoin et déchargé lorsque le kernel n'en a pas plus besoin. Ceci est utile lorsque l'on souhaite avoir un kernel pas très lourd. Quant au deuxième mode, le driver sera directement intégré au kernel et il sera disponible tout le temps. Le kernel sera donc plus gros, plus lent et utilisera plus de mémoire. Dans notre cas, nous avons utilisé le mode built-in.

Nous avons ensuite compiler notre noyau avec la commande suivante : make

5.5 Question 5.5

Le résultat de la compilation se trouve dans arch/arm/boot/uImage.

Nous avons ensuite copier le fichier uImage dans /tftpboot pour qu'il soit utilisé par la cible puis nous l'avons démarré.

5.6 Question 5.6

Pour vérifier dans les logs de démarrage que le noyau utilisé est bien celui qui vient d'être compilé, il suffit de lire la date de compilation :

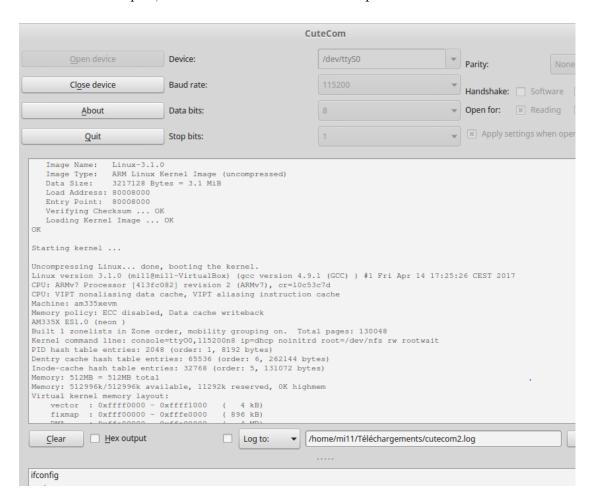


FIGURE 1.10 – Logs de démarrage

Nous pouvons lire sur la copie d'écran précédente la ligne suivante :

Linux version 3.1.0 (mil1@mil1-VirtualBox) (gcc version 4.9.1 (GCC)) #1 Fri Apr 14 1

La date de compilation pilé.	du noyau correspond	bien à celui qui vient	d'être com-
piic.			
\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.	Rannort des TPs lin	uur omborgerá	

5.7 Question **5.7**

Pour vérifier dans les logs de démarrage que la fonctionnalité ajoutée est bien présente, on peut utiliser la commande dmesg pour afficher les messages du kernel :

```
root@devkit8600:/sys/class/leds/user_led# dmesg | grep led
Memory policy: ECC disabled, Data cache writeback
Serial: 8250/16550 driver, 4 ports, IRQ sharing enabled
console [tty00] enabled
Registered led device: sys_led
Registered led device: user_led
sgtl5000 1-000a: Failed to add route HPLOUT->Headphone Jack
```

FIGURE 1.11 – Logs du kernel

Le driver a bien été ajouté et le dossier

used_led

a été crée.

Chapitre 2

Rapport TP 2 - Linux embarqué

Exercice 3: Boutons poussoirs

1.1 Question 3.1

La cible dispose de trois boutons utilisateur (HOME, BACK, MENU) et un bouton de reset. On y accède via le fichier "/dev/input/event1" dans lequel toutes les informations quant aux pressions et relâchement de ces boutons seront écrites.

1.2 Question 3.2

Pour tester en ligne de commande, on peut utiliser "evtest /dev/input/event1" (voir figure 2.1)

Les valeurs sont soit à 1 soit à 0 selon l'état du bouton : pressé ou relâché.

1.3 Question 3.3

La structure input_event est déclarée dans le fichier suivant :

"/opt/poky/1.7.3/sysroots/armv7a-vfp-neon-poky-linux-gnueabi/usr/include/linux/input.h" | figure for the poly-linux for the p

Au début de notre fichier C, on ajoute donc : "#include inux/input.h>". Voici le programme que nous avons codé. Celui-ci lit les événements indiqués dans le fichier "/dev/input/event1", affiche ces événements dans le terminal et allume :

```
root@devkit8600:-# evtest /dev/input/event1
Input driver version is 1.0.1
Input device 1D: bus 0x19 vendor 0x1 product 0x1 version 0x100
Input device name: "gpio-keys"
Supported events:
Event type 0 (EV_SYN)
Event type 1 (EV_KEY)
Event code 10 (KEY_ESC)
Event itime 1492179011.627030, type 1 (EV_KEY), code 1 (KEY_ESC), value 1
Event: time 1492179011.806361, type 1 (EV_KEY), code 1 (KEY_ESC), value 0
Event: time 149217902.838352, type 1 (EV_KEY), code 102 (KEY_HOME), value 1
Event: time 149217902.838356, SYN_REPORT
Event: time 149217902.838356, type 1 (EV_KEY), code 102 (KEY_HOME), value 0
Event: time 149217902.1034122, SYN_REPORT
Event: time 149217902.975093, type 1 (EV_KEY), code 50 (KEY_F1), value 1
Event: time 149217902.975091, SYN_REPORT
Event: time 149217902.975091, SYN_REPORT
Event: time 149217902.975091, SYN_REPORT
Event: time 149217902.372103, type 1 (EV_KEY), code 50 (KEY_F1), value 0
Event: time 149217902.372103, type 1 (EV_KEY), code 50 (KEY_F1), value 0
Event: time 149217902.372103, type 1 (EV_KEY), code 50 (KEY_F1), value 0
Event: time 149217902.372103, type 1 (EV_KEY), code 50 (KEY_F1), value 0
Event: time 149217902.372103, type 1 (EV_KEY), code 50 (KEY_F1), value 0
Event: time 149217902.372106, SYN_REPORT
```

FIGURE 2.1 – Résultat du evtest sur /dev/input/event1

- La sys_led en cas de pression sur le bouton MENU
- La user led en cas de pression sur le bouton BACK
- Les deux LEDs en cas de pression sur la touche HOME

1.4 Question 3.4

```
| #include < stdio.h>
  #include <unistd.h>
3 #include <fcntl.h>
  #include linux/input.h>
5 #include <sys/types.h>
  #include <sys/stat.h>
  int main()
9
    struct input_event event_buttons;
    int sys_led, user_led, buttons;
    buttons = open("/dev/input/event1", O_RDONLY);
13
    if (buttons == -1)
      perror("Erreur d'ouverture de l'un des fichiers");
17
      return 0;
19
    sys_led = open("/sys/class/leds/sys_led/brightness", O_RDWR);
21
    user_led = open("/sys/class/leds/user_led/brightness", O_RDWR);
23
    if(sys\_led == -1 \mid \mid user\_led == -1)
25
      perror("Erreur d'ouverture de l'un des fichiers");
      return 0;
27
29
    while (1)
      read(buttons, &event_buttons, sizeof(event_buttons));
33
      int code = (int)event_buttons.code;
35
      int value = (int)event_buttons.value;
      switch (code)
39
        case KEY_F1: // MENU
           if(value = 1)
```

MI11 - Rapport des TPs linux embarqué

```
printf("MENU PUSH\n");
43
             if (write (sys_led, "1", 1) == -1)
               perror("Erreur d'ecriture");
           }
           else
47
           {
             printf("MENU RELEASE\n");
             if(write(sys\_led, "0", 1) == -1)
               perror("Erreur d'ecriture");
           }
        break;
        case KEY_ESC: // BACK
           if(value == 1)
           {
57
             printf("BACK PUSH\n");
             if(write(user\_led, "1", 1) == -1)
               perror("Erreur d'ecriture");
61
           else
           {
63
             printf("BACK RELEASE\n");
             if(write(user\_led, "0", 1) == -1)
65
               perror("Erreur d'ecriture");
           }
67
        break;
69
        case KEY_HOME: // HOME
           if(value == 1)
           {
             printf("HOME PUSH\n");
             if(write(user\_led, "1", 1) == -1)
               perror("Erreur d'ecriture");
             if (write (sys_led, "1", 1) == -1)
               perror("Erreur d'ecriture");
77
           }
           else
             printf("HOME RELEASE\n");
81
             if(write(user\_led, "0", 1) == -1)
               perror("Erreur d'ecriture");
             if(write(sys\_led, "0", 1) == -1)
               perror("Erreur d'ecriture");
85
        break;
      }
89
    if(close(sys\_led) == -1)
      perror("Erreur de fermeture de l'un des fichiers");
91
```

MI11 - Rapport des TPs linux embarqué

```
if(close(user_led) == -1)
    perror("Erreur de fermeture de l'un des fichiers");
if(close(buttons) == -1)
    perror("Erreur de fermeture de l'un des fichiers");

return 0;
}
```

Exercice 4: Charge CPU

2.1 Question 4.1

Voici notre programme:

```
#include <stdio.h>
2 #include <unistd.h>
  #include <fcntl.h>
4 #include < sys/types.h>
 #include <sys/stat.h>
6 #include < sys / time . h>
8 #define TAILLE 10000
10 int main()
    int j = 0, tempstotal = 0;
    struct timeval debut, fin, res;
    gettimeofday(&debut, NULL);
    for (j = 0; j < TAILLE; j++)
      usleep (1000);
18
    gettimeofday(&fin, NULL);
    timersub(&fin, &debut, &res);
    int tempstotal = res.tv_sec* 1000000 + res.tv_usec;
22
    printf("Temps total : %d\n, tempstotal);
24
    return 0;
26
```

A COMPLETER

2.2 Question 4.2

Voici notre programme modifié:

```
#include <stdio.h>
2 #include <unistd.h>
 |#include <fcntl.h>
4 #include <sys/types.h>
  #include <sys/stat.h>
6 #include <sys/time.h>
8 #define TAILLE 10000
10 int main()
    int j = 0, min, max, moy = 0, tempstotal = 0;
    int tab [TAILLE];
    struct timeval debut, fin, res;
14
    for (j = 0; j < TAILLE; j++)
16
      gettimeofday(&debut, NULL);
18
      usleep (1000);
      gettimeofday(&fin , NULL);
      timersub(&fin, &debut, &res);
      tab[j] = res.tv_sec* 1000000 + res.tv_usec;
      moy += tab[j];
24
    moy = moy / TAILLE - 1000;
26
    \min = tab[0];
    \max = tab[0];
28
    for (j = 1; j < TAILLE; j++)
30
      if(min > tab[j])
32
        \min = tab[j];
      if(max < tab[j])
        \max = \text{tab}[j];
36
38
    \min_{} = 1000;
    max - = 1000;
40
    printf("Moyenne: %d\nMaximum: %d\nMinimum: %d\n", moy, max, min)
42
    return 0;
```

MI11 - Rapport des TPs linux embarqué

}

Voici les temps relevés :

— Sans stress :

Moyenne: 85 msMaximum: 772 msMinimum: 13 ms

— Avec stress:

Moyenne : 766 ms
 Maximum : 304397 ms
 Minimum : 27 ms

Chapitre 3 -

TP1 Xenomai

Annexe A

Messages de sortie du terminal entre l'allumage de la cible et le prompt de login

```
CCCCCCCC
 U-Boot SPL 2011.09 - \text{svn} (May 22\ 2012 - 11:19:00)
3 Texas Instruments Revision detection unimplemented
 Booting from NAND...
7 U-Boot 2011.09 - svn (May 22 2012 - 11:19:00)
9 I2C:
        ready
 DRAM:
        512 MiB
 WARNING: Caches not enabled
 Did not find a recognized configuration, assuming General purpose EVM
     in Profile 0 with Daughter board
13 NAND: HW ECC Hamming Code selected
 512~\mathrm{MiB}
15 MMC:
       OMAP SD/MMC: 0
 Net:
       cpsw
17 Hit any key to stop autoboot: 3 \sqrt{0x08}\sqrt{0x08} \sqrt{0x08}\sqrt{0x08}\sqrt{0x08}\sqrt{0x08}
    0x08 0x08 0x08 0
 Card did not respond to voltage select!
19 Booting from network ...
 miiphy read id fail
21 link up on port 0, speed 100, full duplex
 BOOTP broadcast 1
DHCP client bound to address 192.168.1.6
 Using cpsw device
25 TFTP from server 192.168.1.1; our IP address is 192.168.1.6
 Filename 'uImage'.
27 Load address: 0x82000000
 Loading: * \setminus 0 \times 08 \#
    _{29} \setminus 0 \times 09 \# \#
    31 \setminus 0 \times 09 \# \#
```

```
0x09 \#
    \0x09 ##
    0x09 \#
    0x09 \#
    0x09 \#
    Bytes transferred = 3215152 (310f30 hex)
 ## Booting kernel from Legacy Image at 82000000 ...
    Image Name: Linux - 3.1.0
    Image Type:
               ARM Linux Kernel Image (uncompressed)
    Data Size:
                3215088 \text{ Bytes} = 3.1 \text{ MiB}
43
    Load Address: 80008000
    Entry Point:
               80008000
    Verifying Checksum ... OK
    Loading Kernel Image ... OK
 OK
49
 Starting kernel ...
 Uncompressing Linux... done, booting the kernel.
 Linux version 3.1.0 (mil1@mil1-VirtualBox) (gcc version 4.9.1 (GCC) )
     #1 Mon Apr 10 18:15:11 CEST 2017
 CPU: ARMv7 Processor [413fc082] revision 2 (ARMv7), cr=10c53c7d
55 CPU: VIPT nonaliasing data cache, VIPT aliasing instruction cache
 Machine: am335xevm
 Memory policy: ECC disabled, Data cache writeback
 AM335X ES1.0 (neon )
 Built 1 zonelists in Zone order, mobility grouping on.
                                                Total pages:
    130048
 Kernel command line: console=ttyO0,115200n8 ip=dhcp noinitrd root=/
    dev/nfs rw rootwait
PID hash table entries: 2048 (order: 1, 8192 bytes)
 Dentry cache hash table entries: 65536 (order: 6, 262144 bytes)
 Inode-cache hash table entries: 32768 (order: 5, 131072 bytes)
 Memory: 512MB = 512MB \text{ total}
65 Memory: 512996k/512996k available, 11292k reserved, 0K highmem
 Virtual kernel memory layout:
     vector : 0 \times ffff0000 - 0 \times ffff1000
                                      4 kB)
67
     fixmap \quad : \ 0xfff00000 \ - \ 0xfffe0000
                                     896 kB)
           : 0xffa00000 - 0xffe00000
                                      4 MB)
69
     vmalloc : 0xe0800000 - 0xf8000000
                                     376 MB)
    lowmem : 0xc0000000 - 0xe0000000
                                     512 MB)
71
     modules : 0xbf000000 - 0xc00000000
                                     16 MB)
```

MI11 - Rapport des TPs linux embarqué

```
. text : 0xc0008000 - 0xc05c6000
                                            (5880 kB)
         .init : 0xc05c6000 - 0xc05ff000
                                              228 kB)
         . data : 0xc0600000 - 0xc065e618
                                              378 kB)
          .bss : 0xc065e63c - 0xc0699694
                                              237 kB)
77 NR IROS: 396
  IRQ: Found an INTC at 0xfa200000 (revision 5.0) with 128 interrupts
79 Total of 128 interrupts on 1 active controller
  OMAP clockevent source: GPTIMER1 at 25000000 Hz
_{\mbox{\scriptsize 81}}\mbox{\scriptsize |OMAP\ clocksource:} GPTIMER2 at 25000000 Hz
  sched_clock: 32 bits at 25MHz, resolution 40ns, wraps every 171798ms
83 Console: colour dummy device 80x30
  Calibrating delay loop... 718.02 BogoMIPS (lpj=3590144)
85 pid_max: default: 32768 minimum: 301
  Security Framework initialized
87 Mount-cache hash table entries: 512
  CPU: Testing write buffer coherency: ok
89 devtmpfs: initialized
  print_constraints: dummy:
91 NET: Registered protocol family 16
  GPMC revision 6.0
93 OMAP GPIO hardware version 0.1
  omap_l3_smx omap_l3_smx.0: couldn't find resource
95 omap_mux_init: Add partition: #1: core, flags: 0
   omap_i2c.1: alias fck already exists
The board is general purpose EVM in profile 0
   omap_hsmmc.0: alias fck already exists
omap hsmmc.2: alias fck already exists
  Configure Bluetooth Enable pin ...
error setting wl12xx data
   omap2_mcspi.1: alias fck already exists
   omap2_mcspi.2: alias fck already exists
  bio: create slab <bio-0> at 0
105 SCSI subsystem initialized
  usbcore: registered new interface driver usbfs
107 usbcore: registered new interface driver hub
  usbcore: registered new device driver usb
109 registerd cppi-dma Intr @ IRQ 17
  Cppi41 Init Done Qmgr-base (e083a000) dma-base (e0838000)
111 Cppi41 Init Done
  omap_i2c omap_i2c.1: bus 1 rev4.0 at 100 kHz
Advanced Linux Sound Architecture Driver Version 1.0.24.
  Bluetooth: Core ver 2.16
NET: Registered protocol family 31
  Bluetooth: HCI device and connection manager initialized
Bluetooth: HCI socket layer initialized
  Bluetooth: L2CAP socket layer initialized
Bluetooth: SCO socket layer initialized
  Switching to clocksource gp timer
Switched to NOHz mode on CPU #0
```

```
musb-hdrc: version 6.0, ?dma?, otg (peripheral+host)
musb-hdrc musb-hdrc.0: dma type: dma-cppi41
  musb-hdrc musb-hdrc.0: USB OTG mode controller at e080a000 using DMA,
musb-hdrc musb-hdrc.1: dma type: dma-cppi41
  musb-hdrc musb-hdrc.1: USB OTG mode controller at e080c800 using DMA,
      IRQ 19
NET: Registered protocol family 2
  IP route cache hash table entries: 4096 (order: 2, 16384 bytes)
TCP established hash table entries: 16384 (order: 5, 131072 bytes)
  TCP bind hash table entries: 16384 (order: 4, 65536 bytes)
TCP: Hash tables configured (established 16384 bind 16384)
  TCP reno registered
UDP hash table entries: 256 (order: 0, 4096 bytes)
  UDP-Lite hash table entries: 256 (order: 0, 4096 bytes)
NET: Registered protocol family 1
  RPC: Registered named UNIX socket transport module.
137 RPC: Registered udp transport module.
  RPC: Registered tcp transport module.
RPC: Registered tcp NFSv4.1 backchannel transport module.
  NetWinder Floating Point Emulator V0.97 (double precision)
141 VFS: Disk quotas dquot_6.5.2
  Dquot-cache hash table entries: 1024 (order 0, 4096 bytes)
Inc.
  msgmni has been set to 1001
145 io scheduler noop registered
  io scheduler deadline registered
147 io scheduler cfq registered (default)
  Could not set LED4 to fully on
  da8xx lcdc da8xx lcdc.0: GLCD: Found AT043TN24 panel
  Console: switching to colour frame buffer device 60x34
| Serial: 8250/16550 driver, 4 ports, IRQ sharing enabled
  omap_uart.0: ttyO0 at MMIO 0x44e09000 (irq = 72) is a OMAP UARTO
  console [ttyO0] enabled
  omap_uart.1: ttyO1 at MMIO 0x48022000 (irq = 73) is a OMAP UART1
omap_uart.2: ttyO2 at MMIO 0x48024000 (irq = 74) is a OMAP UART2
  omap_uart.3: ttyO3 at MMIO 0x481a6000 (irq = 44) is a OMAP UART3
omap_uart.4: ttyO4 at MMIO 0x481a8000 (irq = 45) is a OMAP UART4
  omap_uart.5: ttyO5 at MMIO 0x481aa000 (irq = 46) is a OMAP UART5
brd: module loaded
  loop: module loaded
161 i2c-core: driver [tsl2550] using legacy suspend method
  i2c-core: driver [tsl2550] using legacy resume method
mtdoops: mtd device (mtddev=name/number) must be supplied
  omap2-nand driver initializing
ONFI flash detected
  ONFI param page 0 valid
```

```
NAND device: Manufacturer ID: 0xad, Chip ID: 0xdc (Hynix H27U4G8F2DTR
  Creating 8 MID partitions on "omap2-nand.0":
0x000000020000-0x000000040000 : "SPL.backup1"
171 0x000000040000 -0x000000060000 : "SPL.backup2"
  0x000000060000-0x000000080000 : "SPL.backup3"
173 \mid 0 \times 0000000080000 - 0 \times 000000260000 :
                                   "U-Boot"
  0 \times 000000260000 - 0 \times 000000280000 : "U-Boot Env"
|0 \times 000000280000 - 0 \times 000000780000 : "Kernel"
  0x000000780000-0x000020000000 : "File System"
177 OneNAND driver initializing
  davinci_mdio davinci_mdio.0: davinci mdio revision 1.6
davinci_mdio davinci_mdio.0: detected phy mask ffffffef
  davinci mdio.0: probed
181 davinci_mdio davinci_mdio.0: phy[4]: device 0:04, driver unknown
  CAN device driver interface
CAN bus driver for Bosch D_CAN controller 1.0
  d_can d_can: d_can device registered (irq=55, irq_obj=56)
usbcore: registered new interface driver cdc ether
  usbcore: registered new interface driver cdc_subset
187 Initializing USB Mass Storage driver...
  usbcore: registered new interface driver usb-storage
189 USB Mass Storage support registered.
   gadget: using random self ethernet address
   gadget: using random host ethernet address
  usb0: MAC 06:50:55:8c:0c:93
193 usb0: HOST MAC 62:9a:93:a2:1e:53
   gadget: Ethernet Gadget, version: Memorial Day 2008
   gadget: g ether ready
  musb-hdrc musb-hdrc.0: MUSB HDRC host driver
musb-hdrc musb-hdrc.0: new USB bus registered, assigned bus number 1
  usb usb1: New USB device found, idVendor=1d6b, idProduct=0002
  usb usb1: New USB device strings: Mfr=3, Product=2, SerialNumber=1
  usb usb1: Product: MUSB HDRC host driver
usb usb1: Manufacturer: Linux 3.1.0 musb-hcd
  usb usb1: SerialNumber: musb-hdrc.0
203 hub 1-0:1.0: USB hub found
  hub 1-0:1.0: 1 port detected
205 musb-hdrc musb-hdrc.1: MUSB HDRC host driver
  musb-hdrc musb-hdrc.1: new USB bus registered, assigned bus number 2
usb usb2: New USB device found, idVendor=1d6b, idProduct=0002
  usb usb2: New USB device strings: Mfr=3, Product=2, SerialNumber=1
209 usb usb2: Product: MUSB HDRC host driver
  usb usb2: Manufacturer: Linux 3.1.0 musb-hcd
  usb usb2: SerialNumber: musb-hdrc.1
  hub 2-0:1.0: USB hub found
hub 2-0:1.0: 1 port detected
  mousedev: PS/2 mouse device common for all mice
```

```
input: ti-tsc-adcc as /devices/platform/tsc/input/input0
     omap_rtc omap_rtc: rtc core: registered omap_rtc as rtc0
217 i2c /dev entries driver
     Linux video capture interface: v2.00
219 usbcore: registered new interface driver uvcvideo
     USB Video Class driver (1.1.1)
OMAP Watchdog Timer Rev 0x01: initial timeout 60 sec
     Bluetooth: HCI UART driver ver 2.2
     Bluetooth: HCI H4 protocol initialized
     Bluetooth: HCI BCSP protocol initialized
     Bluetooth: HCILL protocol initialized
     Bluetooth: HCIATH3K protocol initialized
     cpuidle: using governor ladder
     cpuidle: using governor menu
     usbcore: registered new interface driver usbhid
     usbhid: USB HID core driver
     usbcore: registered new interface driver snd-usb-audio
     _regulator_get: 1-000a supply VDDA not found, using dummy regulator
_regulator_get: 1-000a supply VDDIO not found, using dummy regulator
     _regulator_get: 1-000a supply VDDD not found, using dummy regulator
||sgt|| ||sst|| ||ss
     print_constraints: 1-000a: 850 <--> 1600 mV at 1200 mV normal
     _regulator_get: 1-000a supply VDDA not found, using dummy regulator
     _regulator_get: 1-000a supply VDDIO not found, using dummy regulator
sgtl5000 1-000a: Using internal LDO instead of VDDD
     mmc1: card claims to support voltages below the defined range. These
            will be ignored.
sgtl5000 1-000a: Failed to add route HPLOUT->Headphone Jack
     sgt15000 1-000a: dapm: unknown pin MONO_LOUT
     sgtl5000 1-000a: dapm: unknown pin HPLCOM
     sgt15000 1-000a: dapm: unknown pin HPRCOM
     asoc: sgtl5000 <-> davinci-mcasp.0 mapping ok
     ALSA device list:
       #0: AM335X EVM
     oprofile: hardware counters not available
oprofile: using timer interrupt.
     nf_conntrack version 0.5.0 (8015 buckets, 32060 max)
251 ip_tables: (C) 2000-2006 Netfilter Core Team
     TCP cubic registered
NET: Registered protocol family 17
     can: controller area network core (rev 20090105 abi 8)
255 NET: Registered protocol family 29
     can: raw protocol (rev 20090105)
257 can: broadcast manager protocol (rev 20090105 t)
     Bluetooth: RFCOMM TTY layer initialized
     Bluetooth: RFCOMM socket layer initialized
     Bluetooth: RFCOMM ver 1.11
261 Bluetooth: BNEP (Ethernet Emulation) ver 1.3
    Bluetooth: BNEP filters: protocol multicast
```

```
Bluetooth: HIDP (Human Interface Emulation) ver 1.2
  Registering the dns_resolver key type
VFP support v0.3: implementor 41 architecture 3 part 30 variant c rev
  ThumbEE CPU extension supported.
  _regulator_get: mpu.0 supply mpu not found, using dummy regulator
  =1260000) on vddmpu
269 omap2_set_init_voltage: unable to set vdd_mpu
  Detected MACID=0:18:30:fe:7b:f6
271 input: gpio-keys as /devices/platform/gpio-keys/input/input1
  omap_rtc omap_rtc: setting system clock to 2000-01-01 00:00:00 UTC
      (946684800)
mmc1: queuing unknown CIS tuple 0x91 (3 bytes)
_{275} CPSW phy found : id is : 0x4dd072
  PHY 0:01 not found
277 mmc1: new SDIO card at address 0001
  PHY: 0:04 - \text{Link is Up} - 100/\text{Full}
279 Sending DHCP requests ., OK
  IP-Config: Got DHCP answer from 192.168.1.1, my address is
      192.168.1.6
281 IP-Config: Complete:
       device=eth0, addr=192.168.1.6, mask=255.255.255.0, gw
      =255.255.255.255,
       host = 192.168.1.6, domain = nis - domain = (none),
283
       bootserver = 192.168.1.1, rootserver = 192.168.1.1, rootpath = /
      tftpboot/rootfs
285 VFS: Mounted root (nfs filesystem) on device 0:15.
  devtmpfs: mounted
287 Freeing init memory: 228K
289 INIT: version 2.88 booting
  Starting udev
  udevd[718]: starting version 182
bootlogd: cannot allocate pseudo tty: No such file or directory
  Populating dev cache
295 Fri Apr 14 13:12:58 UTC 2017
297 INIT: Entering runlevel: 5
299 Configuring network interfaces ... if up skipped for nfsroot interface
      eth0
  run-parts: /etc/network/if-pre-up.d/nfsroot exited with code 1
  Starting system message bus: dbus.
  Starting Dropbear SSH server: Generating key, this may take a while
303 Public key portion is:
```

```
{\rm ssh-rsa} \ \ AAAAB3NzaC1yc2EAAAADAQABAAABAQDHQW67zEKPRIeKx6VZxLER0R/2HThSN}
      SWD3fMk23eXy9j3PudyVMJfjGBF258qnZNicoMsK0Mx5JrpV124XKCzvKTAYsMjLc67WdqcX73zSzt
      +Dq16Nld2ZuhfGDidLPvrSqOfRaUYRH6048XV/
      E7penoQ8oP2tJV0kiGnXRQMoqSyLyZFWW/0xNzatB/Wr6o+
      I7Iboc2KWDyOu8caJxP4fxrV/4zEjyTvSQCBCzwuv2RSFPJV7lleMD2XkKN+
      QOGCgG1Eq8TgrNDU0Jps+RelENrtkj+lgVJF2odabmPMtmsB+8
      lhtgdgk8wth0dbjQzedRFt root@devkit8600
  Fingerprint: md5 a7:0c:a2:b1:07:9a:77:98:01:7e:31:13:10:02:42:2c
  dropbear.
  Starting rpcbind daemon...rpcbind: cannot create socket for udp6
  rpcbind: cannot create socket for tcp6
  done.
  Starting syslogd/klogd: done
   * Starting Avahi mDNS/DNS-SD Daemon: avahi-daemon
      \dots done.
  Starting Telephony daemon
  Starting Linux NFC daemon
  /etc/rc5.d/S64neard: line 26: /usr/lib/neard/nfc/neard: No such file
      or directory
319
  Poky (Yocto Project Reference Distro) 1.7.3 devkit8600 /dev/ttyO0
323
  devkit8600 login: root
  root@devkit8600:~#
```

Listing A.1 – Messages de sortie du terminal entre l'allumage de la cible et le prompt de login