

Positive and negative sequence currents to improve voltages during unbalanced faults

Josep Fanals

02/2021

1 Introduction

Grid faults constitute a group of unfortunate events that cause severe perturbations in the grid. The voltages can take values below the established minimum, or on the contrary, exceed the maximum in non-faulted phases. The currents are also susceptible to vary considerably. Traditional power systems based on synchronous generators could encounter currents surpassing the nominal values, and therefore, the fault could be clearly detected. However, the increasing integration of renewables [1] supposes a change of paradigm, in which currents can be controlled but are limited so as not to damage the Isolated-Gate Bipolar Transistors (IGBT) found in the Voltage Source Converter (VSC) [2].

Transmission System Operators (TSO) are responsible for imposing requirements related to the operation under voltage sags to generators and converters [3, 4]. Such requirements are gathered in the respective grid codes. There seems to be no clear consensus on how to restore the voltage. In this sense, even if for instance the Low Voltage Ride Through (LVRT) profiles present similarities [5], analysis aimed at determining analytically the optimal injection of positive and negative sequence currents are not numerous. As far as the author is aware, only Camacho et al. offer an optimal solution regarding the injection of active and reactive powers [6].

Consequently, this work focuses on finding the most convenient positive and negative sequence currents (and not powers) to raise the voltage at the point of common coupling. First, a simple model is discussed, and then, the results are shown together with the corresponding discussion. The challenge to solve the optimization problem in a closed-form is specially described.

2 Model

Given a simplistic three-wire system formed by two buses, it can be studied separately employing the concept of symmetrical components. Figure 1 shows the positive and negative sequence equivalent circuits. Note that no homopolar component is considered here since they are non-existent in a system without neutral [7, 8].

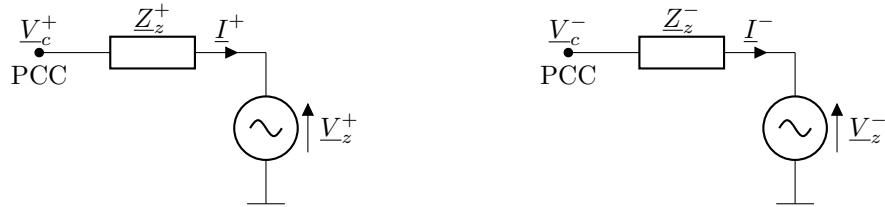


Figure 1: Positive and negative sequence separated representations of the two-bus system

The point of common coupling (PCC) is where the VSC together with its filter would be connected. There are two restrictions to take into account in a VSC, one related to the maximum current and another to the voltage. The current limitation is likely the most relevant when operating under faults. Since the current is limited and the filter used to connect the VSC to the PCC takes rather low values, we can expect the voltage drop to not be substantial. Because of that, and taking into consideration the voltage sag at the grid side, the voltage limit is hardly ever surpassed. Thus, in the analysis that follows, we only impose the current restriction. As future work, we could also add the voltage limitations as a constraint, although probably the conclusions will not vary from the ones extracted here.

Considering that voltages \underline{V}_z^+ and \underline{V}_z^- are given in order to model the fault suffered at the grid, the first step is to express the voltages at the PCC (\underline{V}_c^+ and \underline{V}_c^-) as a function of the injected currents \underline{I}^+ and \underline{I}^- . These currents are provided by the VSC with the objective of raising the positive sequence voltage and reducing the negative sequence voltage. The strategy to use can take many forms. For instance, in [6], three strategies are detailed. One consists of increasing the positive sequence voltage as much as possible, another tried to reduce the negative sequence voltage, and a third one was concerned with obtaining the maximum difference between the positive and the negative sequence voltages. Even though this last one seems the most interesting one, we could improve its flexibility. We will soon see what this means in the Lagrangian formulation.

Before developing the expressions, some intuition can be provided. We will assume the impedances \underline{Z}_z^+ and \underline{Z}_z^- to be equal, with a small R/X ratio. We can also expect that the voltages present a small phase. Hence, to boost the positive sequence voltage at the PCC, the converter should inject a delayed reactive current with respect to the voltage. So in all likelihood, the imaginary part of the current ought to take a negative value. When it comes to the negative sequence voltage, the reactive current should be positive. This way, there is a negative voltage drop so that \underline{V}_c^- becomes smaller than \underline{V}_z^- in magnitude.

For convenience, the currents are expressed as:

$$\begin{cases} \underline{I}^+ = I_{re}^+ - jI_{im}^+, \\ \underline{I}^- = I_{re}^- + jI_{im}^-. \end{cases} \quad (1)$$

Notice the difference in signs in the imaginary part, as we expect I_{im}^+ and I_{im}^- to take positive values. In any case, these definitions could be expressed the other way around without loss of generality. By Kirchoff's law, the absolute value of the voltages at the PCC becomes:

$$\begin{cases} V_c^+ = RI_{re}^+ + XI_{im}^+ + \sqrt{|V_z^+|^2 - (XI_{re}^+ - RI_{im}^+)^2}, \\ V_c^- = RI_{re}^- - XI_{im}^- + \sqrt{|V_z^-|^2 - (XI_{re}^- + RI_{im}^-)^2}, \end{cases} \quad (2)$$

where R and X are the real and imaginary part of \underline{Z}_z respectively (both for positive and negative sequence). As expected, the positive sequence voltage only depends on the positive sequence current, and the same applies for the negative sequences. Despite not finding a coupling between sequences in Equation 2, there is indeed a trade-off situation. The challenge comes when having to choose the currents under the restriction that none of the abc currents can surpass the maximum imposed by the IGBTs. For instance, using a null negative sequence current means we can increase the positive sequence voltage, but unfortunately, the negative sequence voltage will be the same as in the grid. Maybe it is more appropriate to balance the currents, so some of the VSC capacity is used to increase the positive sequence voltage, and another part to diminish the negative sequence voltage. As it will be shown in the results, this balanced situation becomes the most sound option.

There are at least a couple of ways to find the optimal currents. One way is rely on brute force. That is, to calculate multiple combinations of I_{re}^+ , I_{im}^+ , I_{re}^- and I_{im}^- values in order to obtain solution in which the difference between positive and negative sequence voltage is maximized. Opting for this possibility can become time-consuming. Besides, we can only pick the solutions where the current limit is not met.

A neat way to approach the optimization problem under constraints is to define a Lagrangian. This is based on the one hand on the objective function

$$f(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-) = \lambda_+ V_c^+(I_{re}^+, I_{im}^+) - \lambda_- V_c^-(I_{re}^-, I_{im}^-), \quad (3)$$

where λ_+ and $\lambda_- \in \mathbb{R}$. In principle, both parameters take positive values if the goal is to increase the positive sequence voltage and reduce the negative sequence one. In any case, this formulation allows us to be flexible, in a way that we can prioritize one voltage over the other by the factor we desire.

On the other hand, in this particular case the Lagrangian takes into account the constraint

$$g(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-) = \max(I_a(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-), I_b(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-), I_c(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-)). \quad (4)$$

The *abc* currents are related to the real and imaginary parts of the positive and negative sequence by Fortescue's transformation:

$$\begin{bmatrix} \underline{I}_a \\ \underline{I}_b \\ \underline{I}_c \end{bmatrix} = \begin{bmatrix} 1 & 1 & 1 \\ 1 & a^2 & a \\ 1 & a & a^2 \end{bmatrix} \begin{bmatrix} 0 \\ I_{re}^+ - jI_{im}^+ \\ I_{re}^- + jI_{im}^- \end{bmatrix}, \quad (5)$$

where $a = e^{j2\pi/3}$. By developing this, the absolute value of the currents result in

$$\begin{cases} |\underline{I}_a|^2 = I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} + 2I_{re}^+I_{re}^- - 2I_{im}^+I_{im}^-, \\ |\underline{I}_b|^2 = I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} - I_{re}^+I_{re}^- + \sqrt{3}I_{re}^+I_{im}^+ + \sqrt{3}I_{re}^-I_{im}^- + I_{im}^+I_{im}^-, \\ |\underline{I}_c|^2 = I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} - I_{re}^+I_{re}^- - \sqrt{3}I_{re}^+I_{im}^- - \sqrt{3}I_{re}^-I_{im}^+ + I_{im}^+I_{im}^-. \end{cases} \quad (6)$$

The Lagrangian takes the generic form as follows:

$$\mathcal{L}(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-, \lambda) = f(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-) - \lambda g(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-), \quad (7)$$

where λ is the Langrange multiplier and has nothing to do with λ_+ or λ_- . The optimal solution comes from computing the gradient and setting it equal to the null vector:

$$\nabla \mathcal{L}(I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-, \lambda) = \left(\frac{\partial \mathcal{L}}{\partial I_{re}^+}, \frac{\partial \mathcal{L}}{\partial I_{im}^+}, \frac{\partial \mathcal{L}}{\partial I_{re}^-}, \frac{\partial \mathcal{L}}{\partial I_{im}^-}, \frac{\partial \mathcal{L}}{\partial \lambda} \right)^T = \mathbf{0}. \quad (8)$$

For now, I have not been able to solve in closed form the solutions to Equation 8. Even though they probably have a solution, first of all they are non-linear, and even if we linearize them and iterate, the matrix of the system becomes ill-conditioned. Due to this, the equations regarding the Lagrangian are expanded in the annex A but they will not be used to compute the results. Anyway, it would be interesting to check if the results match with either methodology.

3 Results and discussion

The following results are computed with brute force. The four unknown currents take multiple values and we have to evaluate the objective function for every combination. As discussed, this objective function can take many forms but for now it will be $V_c^+ - V_c^-$.

The solution is expected to vary depending on the voltages at the grid and its impedance, as Equation 2 would suggest. Thus, to get a general picture of the influence of the optimal injected currents, diverse values for V_z^+ and V_z^- will be taken, and the same applies to R and X . Unless otherwise indicated, $V^+ = 0.8$, $V^- = 0.1$, $R = 0.01$, $X = 0.1$ and $I_{max} = 1$. To have representative results, six tables are shown (from Table 1 to Table 6). They describe what the optimal $[I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-]$ vector is according to several combinations. Currents vary in intervals of 0.05. These intervals could be smaller, but the computational time would increase dramatically. Therefore, it serves the purpose to provide us with an approximate idea of the optimal solution.

Table 1: Optimal currents $[I_{re}^+, I_{im}^+, I_{re}^-, I_{im}^-]$ with variations in V_z^+ and V_z^-

V_z^+ \ V_z^-	0.05	0.1	0.15	0.3
0.4	0.00;0.65;0.00;0.50	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65
0.6	0.00;0.65;0.00;0.50	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65
0.8	0.00;0.65;0.00;0.50	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65
0.9	0.00;0.65;0.00;0.50	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65

Table 2: Optimal currents $[I_{re}^+; I_{im}^+; I_{re}^-; I_{im}^-]$ with variations in R and X

R \ X	0.03	0.06	0.1	0.2
0.01	0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65
0.02	0.30;0.40;-0.40;0.50	0.20;0.45;-0.25;0.60	0.15;0.55;-0.15;0.55	0.00;0.65;0.00;0.50
0.05	0.40;0.30;-0.50;0.40	0.40;0.50;-0.30;0.40	0.20;0.45;-0.25;0.60	0.15;0.65;-0.10;0.45
0.1	0.40;0.10;-0.70;0.15	0.40;0.30;-0.50;0.40	0.30;0.40;-0.40;0.50	0.25;0.65;-0.15;0.40

Table 3: Optimal currents $[I_{re}^+; I_{im}^+; I_{re}^-; I_{im}^-]$ with variations in V_z^+ and R

V_z^+ \ R	0.01	0.02	0.05	0.1
0.4	0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50
0.6	0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50
0.8	0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50
0.9	0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50

Table 4: Optimal currents $[I_{re}^+; I_{im}^+; I_{re}^-; I_{im}^-]$ with variations in V_z^+ and X

V_z^+ \ X	0.03	0.06	0.1	0.2
0.4	0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50
0.6	0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50
0.8	0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50
0.9	0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50

Table 5: Optimal currents $[I_{re}^+; I_{im}^+; I_{re}^-; I_{im}^-]$ with variations in V_z^- and R

$\begin{array}{c} \diagdown \\ V_z^- \end{array}$	R	0.01	0.02	0.05	0.1
0.05		0.00;0.65;0.00;0.50	0.15;0.70;-0.10;0.40	0.25;0.65;-0.15;0.40	0.45;0.60;-0.20;0.30
0.1		0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50
0.15		0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50
0.3		0.00;0.50;0.00;0.65	0.15;0.55;-0.15;0.55	0.20;0.45;-0.25;0.60	0.30;0.40;-0.40;0.50

 Table 6: Optimal currents $[I_{re}^+; I_{im}^+; I_{re}^-; I_{im}^-]$ with variations in V_z^- and X

$\begin{array}{c} \diagdown \\ V_z^- \end{array}$	X	0.03	0.06	0.1	0.2
0.05		0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50	0.00;0.85;0.00;0.25
0.1		0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.65;0.00;0.50
0.15		0.25;0.60;-0.20;0.45	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65
0.3		0.20;0.45;-0.25;0.60	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65	0.00;0.50;0.00;0.65

The results suggest that the optimal currents do not vary much when the voltages at the grid change. Even though only a small subset of voltages have been studied, it can be foreseen that the optimality in currents may not be strongly linked to the fault. Substantial variations take place when the impedance of the grid is altered. When it becomes mainly resistive, real positive and negative sequence currents have to be injected. In fact, real positive sequence currents become positive to cause a positive voltage drop and increase V_c^+ , whereas the real positive negative sequence currents turn out to be negative in order to decrease V_c^- . Once the impedance is more inductive, imaginary positive and negative sequence currents have to be injected. Notice that I_{im}^+ is greater than 0 due to the way it has been defined in Equation 1; so in reality, it becomes negative. The I_{im}^- current takes positive values, which makes sense considering that it has to produce a negative voltage drop to decrease the negative sequence voltage at the PCC.

It is valuable to plot the evolution of currents against the R/X ratio, or rather, leave R constant at 0.1 and vary X from 0.01 to 0.4 in steps of 0.01. The result is plotted in Figure 2.

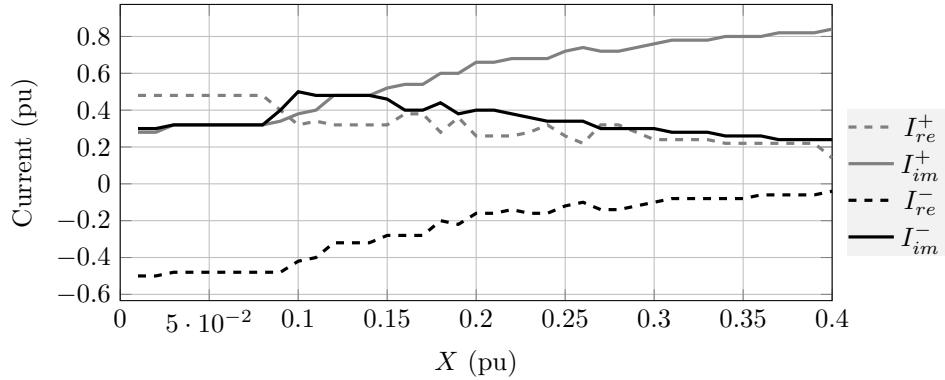

 Figure 2: Evolution of currents depending on X for $R = 0.1$, $V_z^+ = 0.8$ and $V_z^- = 0.1$

Figure 2 reveals the somewhat chaotic profile of the currents. The plots suggest that the rudimentary optimization technique may not be the best choice, as currents do not follow constant trends. Take for instance I_{im}^- ; for small values of X it grows, and then, the trend is reversed. Employing an optimization methodology like the presented Lagrangian could probably generate finer results. Figure 2 also suggests that I_{im}^+ ought to take considerably higher values than I_{im}^- , even though in the previous analysis (shown in Tables from 1 to 6) they were more balanced. The only difference is that now $R = 0.1$.

In any case, a similar pattern as before is discovered. The real positive sequence current takes positive values but it approaches zero when $X \gg R$. On the other side, initially the real negative sequence current becomes smaller than zero. As it has been discussed, the signs make sense when taking into account the objective function to increase the positive sequence voltage while decreasing the negative sequence one. For the imaginary part of the currents, only the positive sequence grows. The other, remains more or less constant at around 0.3.

The final study we carry has to do with varying the negative sequence voltage. We have observed that when the negative sequence voltage tends to grow, both imaginary positive and negative sequence currents have to be injected in a more or less balanced way, while the real parts come close to zero. However, when the negative sequence voltage remains close to zero, this is not exactly the case. Figure 3 shows the evolution of the currents when modifying V_z^- .

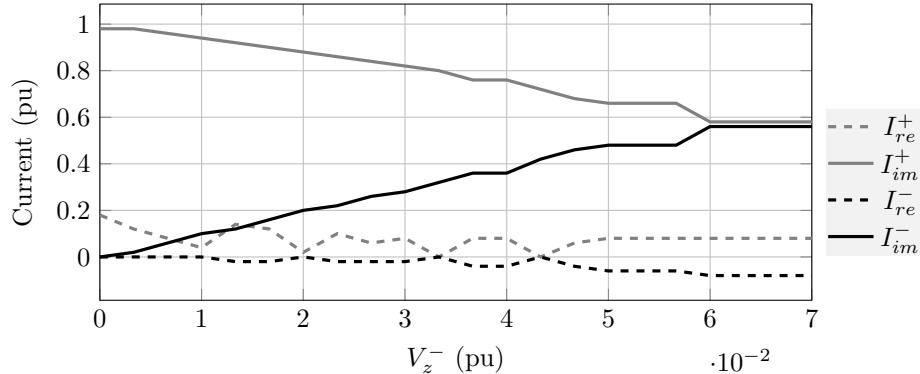


Figure 3: Evolution of currents depending on V_z^- for $R = 0.01$, $X = 0.1$ and $V_z^+ = 0.5$

When the negative sequence voltage is practically null, the most convenient strategy is to increase the positive sequence voltage at the PCC with I_{im}^+ . There is no point in reducing the negative sequence voltage because it is already small. Once this tends to increase, the real part of the currents remain close to zero. However, the imaginary part of both the positive and negative sequence currents evolves towards an equilibrium, where $I_{im}^+ \approx I_{im}^-$.

4 Conclusions

The theoretical side of this work has shown that the optimization problem poses some challenges, mainly because of the maximum current limitation. A Lagrangian has been developed, although the equations involved remain to be solved in closed form. Computing the results in a brute force manner shows that the solutions are likely to be more well refined if they had been computed by other means, but despite that, some interesting observations can be made.

One of them is that both positive and negative sequence currents are convenient when trying to maximize the difference between positive and negative sequence voltages. More concretely, the imaginary parts of these currents tend to be larger than their real part. In addition to that, the signs of the currents make sense, meaning that the real part of the positive sequence current becomes positive, its imaginary part negative (although it has been defined initially as positive); on the other hand, the real part of the negative sequence current is usually close to zero but negative, while its imaginary part takes positive values.

Future work regarding the computation of the solution with some optimization techniques will probably be able to generate slightly more satisfactory results obtained much faster. The Lagrangian may be an appropriate pick. Also, a further step could deal with defining active and reactive powers as a function of voltages and currents. Once this is accomplished, I believe we could proceed towards a real case scenario.

A Lagrangian

It is not straightforward to know beforehand which abc current will be the maximum. Therefore, I see no other option than to develop the Lagrangian for all three cases, that is, assuming that either I_a or I_b or I_c is the maximum.

If I_a is the maximum current:

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^+} &= \lambda_+ R + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2X^2 I_{re}^+ + 2XRI_{im}^+) \\ &\quad + \lambda (-2I_{re}^+ - 2I_{re}^-), \end{aligned} \quad (9)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^+} &= \lambda_+ X + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2R^2 I_{im}^+ + 2XRI_{re}^+) \\ &\quad + \lambda (-2I_{im}^+ + 2I_{im}^-), \end{aligned} \quad (10)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^-} &= -\lambda_- R - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2X^2 I_{re}^- - 2XRI_{im}^-) \\ &\quad + \lambda (-2I_{re}^- - 2I_{re}^+), \end{aligned} \quad (11)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^-} &= \lambda_- X - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2R^2 I_{im}^- - 2XRI_{re}^-) \\ &\quad + \lambda (-2I_{im}^- + 2I_{im}^+), \end{aligned} \quad (12)$$

$$\frac{\partial \mathcal{L}}{\partial \lambda} = -(I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} + 2I_{re}^+ I_{re}^- - 2I_{im}^+ I_{im}^-) + I_{max}^2. \quad (13)$$

If I_b is the maximum current:

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^+} &= \lambda_+ R + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2X^2 I_{re}^+ + 2XRI_{im}^+) \\ &\quad + \lambda (-2I_{re}^+ + I_{re}^- - \sqrt{3}I_{im}^-), \end{aligned} \quad (14)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^+} &= \lambda_+ X + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2R^2 I_{im}^+ + 2XRI_{re}^+) \\ &\quad + \lambda (-2I_{im}^+ - \sqrt{3}I_{re}^- - I_{im}^-), \end{aligned} \quad (15)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^-} &= -\lambda_- R - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2X^2 I_{re}^- - 2XRI_{im}^-) \\ &\quad + \lambda (-2I_{re}^- + I_{re}^+ - \sqrt{3}I_{im}^+), \end{aligned} \quad (16)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^-} &= \lambda_- X - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2R^2 I_{im}^- - 2XRI_{re}^-) \\ &\quad + \lambda (-2I_{im}^- - \sqrt{3}I_{re}^+ - I_{im}^+), \end{aligned} \quad (17)$$

$$\frac{\partial \mathcal{L}}{\partial \lambda} = -(I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} - I_{re}^+ I_{re}^- + \sqrt{3}I_{re}^+ I_{im}^- + \sqrt{3}I_{re}^- I_{im}^+ + I_{im}^+ I_{im}^-) + I_{max}^2. \quad (18)$$

If I_c is the maximum current:

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^+} &= \lambda_+ R + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2X^2 I_{re}^+ + 2XRI_{im}^+) \\ &\quad + \lambda (-2I_{re}^+ + I_{re}^- + \sqrt{3}I_{im}^-), \end{aligned} \quad (19)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^+} &= \lambda_+ X + \lambda_+ \frac{1}{2} (V_z^{+2} - X^2 I_{re}^{+2} - R^2 I_{im}^{+2} + 2XRI_{re}^+ I_{im}^+)^{1/2} (-2R^2 I_{im}^+ + 2XRI_{re}^+) \\ &\quad + \lambda (-2I_{im}^+ + \sqrt{3}I_{re}^- - I_{im}^-), \end{aligned} \quad (20)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{re}^-} &= -\lambda_- R - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2X^2 I_{re}^- - 2XRI_{im}^-) \\ &\quad + \lambda (-2I_{re}^- + I_{re}^+ + \sqrt{3}I_{im}^+), \end{aligned} \quad (21)$$

$$\begin{aligned} \frac{\partial \mathcal{L}}{\partial I_{im}^-} &= \lambda_- X - \lambda_- \frac{1}{2} (V_z^{-2} - R^2 I_{im}^{-2} - X^2 I_{re}^{-2} - 2RXI_{re}^- I_{im}^-)^{1/2} (-2R^2 I_{im}^- - 2XRI_{re}^-) \\ &\quad + \lambda (-2I_{im}^- + \sqrt{3}I_{re}^+ - I_{im}^+), \end{aligned} \quad (22)$$

$$\frac{\partial \mathcal{L}}{\partial \lambda} = -(I_{re}^{2+} + I_{re}^{2-} + I_{im}^{2+} + I_{im}^{2-} - I_{re}^+ I_{re}^- - \sqrt{3}I_{re}^+ I_{im}^- - \sqrt{3}I_{re}^- I_{im}^+ + I_{im}^+ I_{im}^-) + I_{max}^2. \quad (23)$$

Setting all them to zero results in a system of five equations with five unknowns that has to be solved. As of now, I still have not find a way to solve it.

References

- [1] Ahmed Sharique Anees. "Grid integration of renewable energy sources: Challenges, issues and possible solutions". In: *2012 IEEE 5th India International Conference on Power Electronics (IICPE)*. IEEE. 2012, pp. 1–6.
- [2] AF Abdou, Ahmed Abu-Siada, and HR Pota. "Improving the low voltage ride through of doubly fed induction generator during intermittent voltage source converter faults". In: *Journal of Renewable and Sustainable Energy* 5.4 (2013), p. 043110.
- [3] Marina Tsili and S Papathanassiou. "A review of grid code technical requirements for wind farms". In: *IET Renewable power generation* 3.3 (2009), pp. 308–332.
- [4] Florin Iov et al. "Mapping of grid faults and grid codes". In: (2007).
- [5] JF Conroy and R Watson. "Low-voltage ride-through of a full converter wind turbine with permanent magnet generator". In: *IET Renewable power generation* 1.3 (2007), pp. 182–189.
- [6] Antonio Camacho et al. "Positive and negative sequence control strategies to maximize the voltage support in resistive-inductive grids during grid faults". In: *IEEE Transactions on Power Electronics* 33.6 (2017), pp. 5362–5373.
- [7] Pedro Rodriguez et al. "Independent PQ control for distributed power generation systems under grid faults". In: *IECON 2006-32nd Annual Conference on IEEE Industrial Electronics*. IEEE. 2006, pp. 5185–5190.
- [8] Antonio Camacho et al. "Flexible voltage support control for three-phase distributed generation inverters under grid fault". In: *IEEE transactions on industrial electronics* 60.4 (2012), pp. 1429–1441.