

Optimal Control of SOEC's and sensitivity towards degradation




Analysis of the optimal control of SOEC's, where the modelling physical modelling of degradation is included, using finite volume method

Author:

Oliver Mohr (s214703)

s214703@dtu.dk

olmo@dynelectro.com

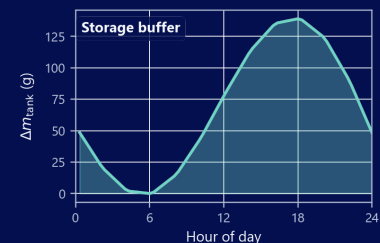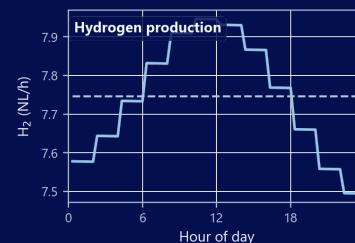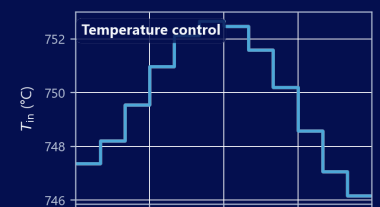

Supervisors:

DTU Energy: Henrik Lund Frandsen (henlf@dtu.dk)
Rafael Nogueira Nakashima (rafnn@dtu.dk)

DTU Compute: Tobias Kasper Skovborg Ritschel (tobk@dtu.dk)

Dynelectro: Thomas Erik Lyck Smitschusen (thomas@dynelectro.dk)

Contents

1	Abstract	7
2	Introduction	9
2.1	A Simple Example of Control Freedom	9
3	Physical Modelling	11
3.1	Modelling governing SOEC equations	11
3.1.1	Introduction	11
3.1.2	Basics of SOEC	11
3.1.3	Energy Balance	17
3.2	Modelling degradation	20
3.2.1	Introduction	20
3.2.2	Nickel migration	20
3.2.3	Interconnect Oxidation	21
3.2.4	Nickel Agglomeration	22
3.3	Assumptions	24
3.3.1	Geometry, flow, and thermodynamics	24
3.3.2	Electrochemistry and degradation	24
3.3.3	Quasi-steady coupling and time integration	24
4	Optimal Control and Solution Method	25
4.1	Optimal Control Problem	25
4.1.1	Introduction	25
4.1.2	Revenue	26
4.1.3	Salvation	26
4.1.4	H ₂ storage and delivery agreement	27
4.1.5	Economic assumptions	30
4.2	Building the numerical solver	30
4.2.1	Introduction	30
4.2.2	Finite volume method (FVM)	30
4.2.3	FVM model validation and Grid independence	32
4.2.4	Implicit Euler method (ODE solver)	33
4.2.5	Validation of the ODE solver	35

4.2.6	Solving the Optimal Control Problem	36
5	Results and Findings	39
5.1	Introduction	39
5.2	Baseline optimization result	40
5.2.1	Allowing more control freedom	41
5.3	Constant delivery rate	42
5.3.1	Freedom on all controls	42
5.4	24-hour cycle with varying power price	43
5.4.1	Summary	44
6	Discussion and Conclusion	49
6.1	Introduction	49
6.2	Interpretation of optimal operating strategies	49
6.2.1	Baseline without delivery obligations	49
6.2.2	Effect of a fixed delivery contract	50
6.2.3	Temperature jumps and implementability	50
6.3	Implied lifetime and proximity to break limits	50
6.3.1	Revenue–salvation balance in the objective	50
6.4	Justification of project-specific settings	51
6.4.1	Delivery setup	51
6.4.2	Cyclic setup	52
6.5	Model and numerical limitations	52
6.5.1	Physical scope and mechanism coverage	52
6.5.2	Spatial and temporal discretization	53
6.5.3	Nonlinear programming and solution quality	53
6.6	Conclusions	53
6.7	Use of generative AI tools	54
7	Future Work	55
7.1	Modelling and degradation	55
7.2	Objectives and economics	55
7.3	Control parametrization	55
7.4	AC:DC Optimization [17]	56
	Appendix	56
A1	Deriving PDEs for species balances	59
A1.1	Unit check (H_2O)	60
A2	Deriving PDEs for energy balances	61
A2.1	Source term	61
A2.2	Steady-state limit	62
A3	Computing the finite-volume discretization	63

A3.1 Species balances	63
A3.2 Energy balance	64
A3.2.1 Steady state	64
A3.2.2 Transient term	64
A4 Relevant gradients for the numerical solver	67
A4.1 Molar balance	67
A4.1.1 Nernst Equation	67
A4.1.2 Activation overpotential	67
A4.2 Degradation	68
A4.2.1 Ohmic degradation	68
A4.3 Temperature equations	68
A4.3.1 Specific heat	69
A4.3.2 Thermoneutral voltage	69
A5 NLP Gradients	71
A5.1 Discrete chain rule for the stage model	71
A5.2 Gradient with respect to cell voltage: $\nabla_u i$	72
A5.3 Gradient with respect to degradation: $\nabla_d i$	72
A5.4 Sensitivity of the spatial FVM discretization	72
A5.5 Sensitivity of the ODE system	73
A6 Squared continuity penalty	77
A7 Gradient verification plots	79
A7.1 End-to-end NLP objective	79
A7.2 Spatial FVM Jacobian	79
A7.3 Electrochemical coupling	79
A7.4 Instantaneous economic rate	79
Literature	87

List of Figures

2.1	Sketch of the optimization problem: the aim is to hit as close to Thomas as possible	10
2.2	Optimal angle when only α can be chosen and $v = v_0$ is fixed.	10
2.3	Optimal aim when v is fixed (angle varies) versus when v can also be chosen (angle stays at 45° , speed varies).	10
3.1	A sketch of the scales: the three different scales mentioned in this paper from smallest (left) to largest (right)	11
3.2	A sketch of a unit cell: the basic principles of an SOEC cell are illustrated. The cathode pulls apart the hydrogen and oxygen in the water. The oxygen is transferred through the electrolyte, then formed to dioxygen in the anode, all due to an applied current.	12
3.3	Schematic illustration of channel discretization for modeling local behavior along the fuel side of a SOEC. The channel is divided into N segments of length Δz , showing the flow of steam over the cathode.	14
3.4	For a cell without degradation (Left), nickel migration has not occurred and $d_{\text{Ni-mi}} = 0$ at the layer between the nickel-filled electrode and the electrolyte. Over time the nickel-filled part of the electrode creeps away from the electrolyte (Right), giving rise to resistance induced by the raw electrode on the traveling species.	21
4.1	CAPTION	27
4.2	A sketch of the finite volume method. A large volume, corresponding to the air and gas channel, is split into smaller volumes. The greater volume is divided into N volumes, each represented by the midpoint, yielding a 1D system instead of 3D. Integration over the densities in each small volume gives the mass in that volume. The figure also introduces z_k (midpoint), Ω_k (small volume), and Δz (length of the volume).	31
4.3	Model validation by comparing to an IV-curve from experimental data. The simulated current–voltage curve is compared to the experimental curve on the left. On the right, the error in current is shown as a function of voltage, on both logarithmic and linear scales. The experimental data is from [14], Fig. 2.	33
4.4	Grid-independence study of the steady-state FVM solver. The number of cells N is doubled repeatedly (5, 10, ...) at fixed inlet conditions and three cell voltages ($U = 1.0, 1.1$, and 1.2 V). Solid markers show the maximum relative change in hydrogen and oxygen chemical potentials and temperature between successive refinements; dashed markers show the same quantity at the channel outlet. All curves fall approximately as $O(N^{-1})$ (grey reference). At $N \approx 200$ the error reaches $\sim 10^{-3}$; the thesis adopts $N = 50$, for which the error is $\sim 10^{-2}$	34

-
- 4.5 Potentiostatic validation of ASR for (a) interconnect oxidation and (b) nickel migration. Black line: implicit-Euler simulation. Open markers: digitized reference data from [2]. 35
- 4.6 Overview of the single-shooting discretization. The horizon is divided into intervals of length Δt (vertical axis). At each interval a piecewise-constant control $\mathbf{u}_i$ drives a steady-state FVM solve of the cell equations (spatial cells along the stack, dashed box). The resulting fields and degradation state feed the running objective rate $R(\mathbf{u}, \mathbf{d})$, whose contribution $R \Delta t$ is accumulated forward to give the total objective φ 37
- 5.1 Effect of the salvation penalty sharpness parameter α_Ψ in Equation 4.4 for a single degradation variable. For $\alpha_\Psi = 1$ (blue, linear) all degradation is penalized equally, while lower α_Ψ (red, green) create a steeper penalty as end of life is approached, with near-zero penalty until close to the critical threshold. The value $\alpha_\Psi = 0.5$ (green) is chosen as a compromise. . . . 41
- 5.2 Baseline potentiostatic–isothermal optimum with no delivery contract ($N_t = 5$; settings in Table 5.1). The optimizer returns a single pair of controls, $U^* \approx 1.29$ V and $T_{\text{in}}^* \approx 758^\circ\text{C}$, broadcast unchanged over the full 200-day horizon (top panels). Operation sits near the thermoneutral point: P_{heat} remains small and T_{out} stays close to T_{in} , so degradation rates are spatially uniform. As nickel migration and interconnect oxidation accumulate (right panels, from 0.75 to $\approx 3.7 \mu\text{m}$ and from 1.5 to $\approx 3.1 \mu\text{m}$, respectively), potentiostatic control lets current density, cell power, and $\dot{n}_{\text{H}_2, \text{prod}}$ decline steadily from about 0.86 A/cm², 22 W, and 7.3 NL/h toward 0.73 A/cm², 18 W, and 6.1 NL/h. Integrated running revenue is 18.99 EUR and terminal salvation 1.45 EUR (net economy 18.53 EUR for the 20 cm² cell). The same flat schedule remains optimal when segment-wise control freedom is restored (Section 5.2). . . . 45
- 5.3 Constant-delivery optimum with free voltage and temperature controls ($N_t = 20$; settings in Table 5.2). One conner case of a continuum of numerically equivalent local minima: after an initial potentiostatic–isothermal phase at the baseline optimum (Section 5.2), inlet temperature is raised in steps so that production tracks the contractual rate $\dot{n}_{\text{H}_2, \text{agreement}} = 8.25$ NL/h (dashed pink line) while U remains fixed near 1.28 V. The tank inventory (left panel) builds to about 0.016 kg by day 40 and is then drawn down only in the final segment, when operation reverts to potentiostatic–isothermal and production falls below the agreement rate. Between these pot-iso bookends, current density and $\dot{n}_{\text{H}_2, \text{prod}}$ oscillate segment-wise around the target—the signature of galvanostatic scheduling achieved through temperature modulation. Nickel migration and interconnect oxidation (right panels) accumulate steadily over the 200-day horizon. Running revenue and terminal salvation match the alternative minimum in Figure 5.4 (15.87 and 1.21 EUR, respectively). 46
- 5.4 Alternative constant-delivery local minimum with the same objective value as Figure 5.3. The optimizer again holds U constant near 1.28 V, but defers galvanostatic scheduling until the tank is exhausted: potentiostatic–isothermal operation continues with fixed $T_{\text{in}} \approx 757^\circ\text{C}$ while degradation lowers $\dot{n}_{\text{H}_2, \text{prod}}$ below $\dot{n}_{\text{H}_2, \text{agreement}}$ and the inventory peak (left panel, ≈ 0.015 kg around day 30) is fully consumed by day 60. At that point both temperature and current jump abruptly to galvanostatic tracking of the agreement rate for the remainder of the horizon, with further stepwise increases in T_{in} compensating degradation. After the switch the tank carries only a small oscillating surplus. Economics are identical to Figure 5.3, but the late, discontinuous mode change makes this trajectory less attractive in practice than maintaining a reserve and reverting to gentler pot-iso operation before the horizon ends. 47
-

5.5	24-hour cyclic optimum under a diurnal power price ($N_t = 12$; settings in Table 5.3). Voltage is held potentiostatic near 1.28 V ($w_U = 10$), and inlet temperature is the primary free control ($w_T = 10^{-3}$). The piecewise-constant electricity price $c_{P,k}$ (bottom-left panel) follows a single cosine cycle with its minimum at midday and maximum at midnight; the corresponding hydrogen revenue rate c_{H_2P} mirrors this pattern. In response, T_{in} is raised in steps through the cheap midday segments, lifting current density and $\dot{n}_{H_2,prod}$ to a peak of about 7.95 NL/h while production is throttled to ≈ 7.5 NL/h overnight. The contractual rate $\dot{n}_{H_2,agreement}$ (dashed red line) is met on average via the tank: inventory (top-left panel) is drawn down in the morning, rebuilt during low-price production, and returned to its initial level at $t = 24$ h ($\kappa_{sell} = 0$). Degradation over one day is negligible (right panels). Integrated running revenue is 0.07 EUR and terminal salvation 1.91 EUR.	48
A7.1	Single-shooting NLP gradient check at $N_t = 100$: objective $f = -(\phi + \psi)$ and its derivatives w.r.t. uniform cell voltage U (top) and inlet temperature T_{in} (bottom). Solid lines: adjoint; dashed: central FD with all segment controls perturbed together.	80
A7.2	Steady-state FVM residual Jacobian vs. secant FD for the three residual components r_0, r_1, r_2 and inputs μ_{H_2}, μ_{O_2} , and T . Dashed: numerical secant; solid: analytical steady-state Jacobian.	81
A7.3	Analytical vs. numerical gradient of cell current density w.r.t. cell voltage U	82
A7.4	Analytical vs. numerical gradient of cell current density w.r.t. local degradation state d	83
A7.5	Fuel-side Butler–Volmer current $i(x, T, \eta)$ and gradients w.r.t. T, x_{H_2} , and activation overpotential η . Left column: i ; right column: analytical (solid) vs. numerical (dashed) partial derivatives.	84
A7.6	Analytical vs. numerical gradients of the instantaneous economic rate w.r.t. outlet species chemical potentials and the last-node temperature T	85

List of Tables

1	Roman symbols (1/5): geometry and discretization.	2
2	Roman symbols (2/5): species, flow, and thermodynamics.	2
3	Roman symbols (3/5): electrochemistry.	3
4	Roman symbols (4/5): degradation, optimal control, and numerics.	4
5	Greek symbols (5/5). Parameter values follow Table 3.1 and Table 3.2 unless stated otherwise.	5
3.1	Overview of model equations (Here without degradation which is in Section 3.2.1).	19
3.2	Overview of degradation mechanisms (ohmic contributions and slow-state dynamics). The base cell equations are summarized in Table 3.1.	23
4.1	Overview of the optimal control formulation (objective, revenue, terminal value, and power bookkeeping). The underlying cell equations are summarized in Table 3.1; degradation is treated in Section 3.2.1. Optional tank economics (Section 4.1.4) add contract revenue and inventory dynamics; end-of-horizon inventory is closed either by terminal liquidation (alternative A) or by a cyclic constraint with a minimum-inventory penalty (alternative B).	29
5.1	Baseline numerical settings for the optimization results in this chapter (unless a subsection states otherwise).	40
5.2	Tank and delivery-agreement settings for the constant-delivery results (in addition to Table 5.1). Updating N_t to be finer to allow for better galvanostatic controll	42
5.3	Updated model settings for the 24-hour cyclic scenario. No terminal sale of hydrogen is allowed ($\kappa_{\text{sell}} = 0$), and the initial tank content is enforced as a periodic boundary. Twelve control segments are used for the day. The piecewise-constant power price on segment k follows a single cosine cycle over 24 h, with h_k the hour-of-day at the segment midpoint; the minimum $c_{P,k} = \bar{c}_P(1 - a)$ occurs at midday ($h_k = 12$ h) and the maximum $\bar{c}_P(1 + a)$ at midnight, modelling lower prices when solar supply is high. The continuity weights w_U and w_T enter the soft penalty Appendix A6; with potentiostatic voltage only w_T is effective.	43

List of Symbols

Symbol	Unit	Description
<i>Geometry, discretization, and time</i>		
A_{cell}	m^2	Active electrode area
A_{int}	m^2	Flow-channel cross-sectional area
d	m	Cell thickness (channel height)
L	m	Channel length
w	m	Channel width
z	m	Axial coordinate along the channel
N	—	Number of axial channel segments
N_{cell}	—	Number of FVM control volumes along z
N_t	—	Number of control / time segments in the NLP
Δz	m	FVM mesh spacing
z_k	m	Centre of FVM cell k
Ω_k, V_k	m^3	FVM cell k and its volume
t	s	Time
T	s or days	Optimization horizon
Δt_k	s	Duration of control interval k

Table 1: Roman symbols (1/5): geometry and discretization.

Symbol	Unit	Description
<i>Species, flow, and thermodynamics</i>		
$\mathcal{S}$	—	Gas species $\{\text{H}_2\text{O}, \text{H}_2, \text{O}_2\}$
$\mathcal{S}_\zeta$	—	Species on side $\zeta \in \{a, f\}$ (anode / fuel)
$\mathcal{M}$	—	Species index set for mass fractions y_k
c_i, μ_i	mol/m^3	Molar concentration; μ_i along channel (state)
x_i, y_k	—	Molar / mass fraction of species i or k
$N_i, N_{c,i}$	$\text{mol}/(\text{m}^2 \cdot \text{s})$	Molar flux; electrochemical source flux
$\dot{n}_i, \dot{V}_\zeta$	$\text{mol}/\text{s}, \text{m}^3/\text{s}$	Molar flow rate; volumetric flow on side ζ
$v_{\text{fuel}}, v_{\text{air}}$	m/s	Gas velocity on fuel / air side
p_i, P	Pa	Partial / total pressure
$p_{\text{ref}}, p_{\text{air}}$	Pa	Reference and air-side pressures
ρ	kg/m^3	Gas density
$c_{p,i}, c_p, C_p$	$\text{J}/(\text{mol} \cdot \text{K}), \text{J}/(\text{K} \cdot \text{m}^3)$	Species, mixture, and volumetric heat capacity
$h_i(T), \Delta h$	J/mol	Species enthalpy; reaction enthalpy change
Q_T	W/m^3	Volumetric heat source

Table 2: Roman symbols (2/5): species, flow, and thermodynamics.

Symbol	Unit	Description
<i>Electrochemistry</i>		
F	C/mol	Faraday constant
n_e	—	Electrons per reaction ($n_e = 2$)
ν_i	—	Stoichiometric coefficient of species i
i	A/m ²	Current density
I, I_{cell}	A	Total cell current
U	V	Applied cell voltage (control)
U_{th}	V	Thermal (reversible) cell voltage
η_{cell}	V	Cell overpotential ($\eta_{\text{cell}} = U$)
$\eta_{\text{nernst}}, \eta_{\text{act}}, \eta_{\text{ohm}}$	V	Nernst, activation, and ohmic overpotentials
$\eta_{\text{act}}^{\zeta}$	V	Activation overpotential on side ζ
i_0^{ζ}	A/m ²	Exchange current density on side ζ
$R_{\text{deg}}, R_{\text{ohm}}$	$\Omega \cdot \text{m}^2$	Degradation and total ohmic resistance
R_{contact}	$\Omega \cdot \text{m}^2$	Contact resistance
B_{ohm}	$\Omega \cdot \text{m}^2/\text{K}$	Base factor in intrinsic ohmic term
$E_{\text{act}}^{\text{ohm}}$	J/mol	Activation energy in intrinsic ohmic term
ΔG	J/mol	Gibbs free energy change

Table 3: Roman symbols (3/5): electrochemistry.

Symbol	Unit	Description
<i>Degradation</i>		
$\mathcal{D}$	—	Set of slow degradation mechanisms
$\mathcal{D}_{\text{ohm}}$	—	Subset in R_{ohm} (Ni-mi, IC-ox)
$\mathbf{d}, d_i$	—	Degradation state vector and component i
$h_{\text{Ni-mi}}, h_{\text{IC-ox}}$	m	Ni-migration gap; interconnect oxide thickness
$s_{\text{IC-ox}}$	m ²	Squared IC-oxide thickness (ODE state)
$d_{i,\text{critical}}$	m	End-of-life limit for mechanism i
$R_{\text{Ni-mi}}, R_{\text{IC-ox}}$	$\Omega \cdot \text{m}^2$	Ohmic contributions from Ni-mi and IC-ox
$\sigma_{\text{elec}}, \sigma_{\text{elec},0}$	S/m	Electrode conductivity and pre-factor
$\sigma_{\text{IC-ox}}$	S/m	Oxide-layer conductivity
$E_{a,\text{elec}}, E_{a,\text{ox}}, E_{\text{el}}$	J/mol	Activation energies (electrode, IC ox., IC cond.)
$c_1, \dots, c_4$	various	Fitted Ni-mi growth-rate coefficients
$k_{\text{mg}}, k_{\text{ox}}$	various	IC-oxidation rate and conductivity prefactors
ε, τ	—	Electrode porosity and tortuosity
<i>Optimal control and economics</i>		
$\mathbf{u}(t), \mathcal{U}$	—	Control vector (U, T_{in}); admissible set
$T_{\text{in}}, T_{\text{out}}, T_{\text{loss}}$	K	Inlet (control), outlet, and thermal recovery loss
$R(\mathbf{u}, \mathbf{d}), R_{\text{tank}}$	EUR/s	Revenue rate; contract rate with tank
$P_{\text{cell}}, P_{\text{heat}}$	W	Stack power; auxiliary sensible heating
$\varphi, \Psi(\mathbf{d}), \Psi_{\text{tank}}$	EUR	Integrated revenue; salvation; tank liquidation
$c_{\text{H}_2}, c_P, c_{P,k}$	EUR/kg, EUR/kWh	Hydrogen and power prices
$\bar{c}_P, a$	—	Mean diurnal power price and relative swing
c_{cell}	EUR/m ²	Cell capital cost in Ψ
$\alpha(t), \alpha_{\Psi}$	—	Schematic weight; salvation exponent
$\kappa_{\text{buy}}, \kappa_{\text{sell}}$	—	Spot-purchase penalty; liquidation multiplier
$m_{\text{tank}}, n_{\text{purchase},k}$	mol, kg	Tank inventory; shortfall purchase
$\dot{n}_{\text{H}_2,\text{agreement}}, \dot{n}_{\text{prod}}, \dot{n}_{\text{purchase}}$	mol/s	Delivery, production, and purchase rates
$\Delta \dot{n}_{\text{H}_2}$	mol/s	Net H ₂ production in R
<i>PDE / FVM notation</i>		
u, Q_u, F_u	various	Generic FVM field; source and flux terms
m_k	kg	Gas mass in FVM volume k

Table 4: Roman symbols (4/5): degradation, optimal control, and numerics.

Symbol	Unit	Description
R	J/(mol·K)	Universal gas constant
α_ζ	—	Butler–Volmer symmetry factor; $\alpha_a = 0.65$, $\alpha_f = 0.59$ [@Leonide2009]
γ_ζ	A/m ²	Exchange-current pre-factor; $\gamma_a = 1.515 \times 10^8$, $\gamma_f = 7.666 \times 10^5$
E_{act}^ζ	J/mol	Electrode activation energy; $E_{\text{act}}^a = 1.40 \times 10^5$, $E_{\text{act}}^f = 1.05 \times 10^5$
m_i	—	Species exponent in i_0^ζ ; $m_{\text{H}_2\text{O}} = 0.33$, $m_{\text{H}_2} = -0.1$, $m_{\text{O}_2} = 0.22$
λ_a, λ_c	—	Exchange-current multipliers ($\lambda_a = 1$; $\lambda_c \approx 0.55$)
λ_T	W/(m·K)	Thermal conductivity (neglected)
Ω	m	Spatial domain
x_0	—	Reference molar-fraction scale ($p_{\text{ref}}/p_{\text{air}}$)

Table 5: Greek symbols (5/5). Parameter values follow Table 3.1 and Table 3.2 unless stated otherwise.

1 Abstract

The abstract is given below. A reference [14]

Home pc setup ready

2 Introduction

This project aims to do the following:

The thesis studies the sensitivity of the optimal control for a solid oxide electrolysis cell (SOEC) over its lifetime, with the goal of minimizing degradation to prolong lifetime.

Starting by defining the optimal control problem. In loose terms, the objective maximizes revenue while penalizing degradation. A rough formulation is:

$$\max_u \left\{ \alpha(t) \int_0^T \text{revenue} \, dt - (1 - \alpha(t)) \text{degradation} \right\} \quad (2.1)$$

The weighting function $\alpha(t)$ balances the importance of production versus degradation, and can be directly linked to real market prices. The details of how the overall optimization problem is formulated are provided later; at this stage, this serves as a broad overview. The core focus is to examine the optimal control $u^*(t)$ (the set of control choices that maximize the objective) and to see what happens as we give the controller more freedom, and lesser fixation. Before diving into the technical setup, the basic idea of giving more freedom will be demonstrated using a simple example.

2.1 A Simple Example of Control Freedom

Consider a simple example: a water gun at a fixed spot that shoots with constant muzzle speed v_0 . The only thing we can control is the angle α . The angle sets how far the water goes; the maximum range is at 45° , so restrict α to $[0^\circ, 45^\circ]$ and call the range at 45° simply $L_{\max}$ [20].

The setup is illustrated below:

Thomas (a co-supervisor) stands somewhere on the field at L_T . The goal is to hit him, or get as close as possible. In symbols, something like $\min_{\alpha} |L(\alpha) - L_T|$.

If L_T is within range, pick the angle that lands on him. If he is too far away, shoot at 45° and accept the miss. The optimal angle as a function of where Thomas stands can be sketched as in Figure 2.2.



Figure 2.2: Optimal angle when only α can be chosen and $v = v_0$ is fixed.



Figure 2.3: Optimal aim when v is fixed (angle varies) versus when v can also be chosen (angle stays at 45° , speed varies).

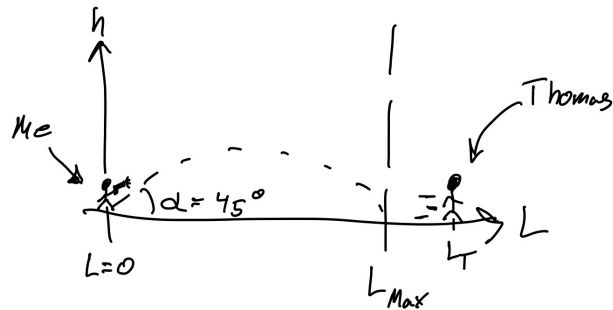


Figure 2.1: Sketch of the optimization problem: the aim is to hit as close to Thomas as possible.

Suppose we can also choose the muzzle speed v , not only the angle. Then the picture flips: instead of carefully tuning α for every L_T , it is natural to leave the gun at 45° (maximum range for a given speed) and adjust v until the water reaches Thomas. Targets that were out of range before can be reached by turning up the pressure; targets that were already in range can still be hit, but the optimizer no longer needs to lean on the angle the way it did when v was fixed.

Figure 2.3 sketches the contrast: one curve for the old case (angle does the work), one for the new case (angle stays near 45° , speed does the work).

The takeaway is loose but important: giving the optimizer more freedom does not just add options — it can change what the first control variable is asked to do.

The same idea carries over to the cell problem in Equation 2.1. If only the cell voltage U is free and the inlet temperature T_{in} is fixed, the optimizer works mainly through U . Once T_{in} is also a decision variable (as in Equation 4.1), the optimal voltage profile can look quite different — just as the water gun stops fiddling with the angle once the pump

pressure is on the table. The full setup is spelled out later in the optimal-control chapter.

3 Physical Modelling

3.1 Modelling governing SOEC equations

3.1.1 Introduction

In this chapter the aspects of solid oxide electrolysis cell's (SEOC's) will be introduced. Briefly visiting different scales of operation, before a more detailed description of how the mole flow is modelled, rounding it up with the energy balance that determines the behavior of temperature flow.

The basics are presented so that readers with a background in applied mathematics can follow the system. Derivations throughout the chapter therefore assume familiarity with standard intermediate steps; lengthier or less routine derivations are given in the main text or in an appendix. Readers who wish to proceed directly to the governing equations will find them summarized in Table 3.1.

The three different scales of SOEC discussed in this paper are defined as follows. The first and smallest scale is the unit cell, where the focus is only on the dynamics occurring within a single SOEC cell. We will spend the majority of the Thesis on this scale.

Next is the stack. At this level, multiple unit cells are stacked together, which naturally introduces more complexity to the system. Figure 3.1 is a quick visualization of the different scales.

Finally, the largest scale considered is at facility scale. At this level, multiple SOEC stacks are connected together; the facility operates much like an electrical circuit, with each stack behaving as its own component with distinct characteristics. However as stated, we will be focusing on the cell scale. And might be relating this to the operation of other scales.

To draw a parallel with the earlier water gun example: in this chapter, we begin constructing the “water gun” of our model, step by step, laying out its fundamental mechanics and underlying principles.

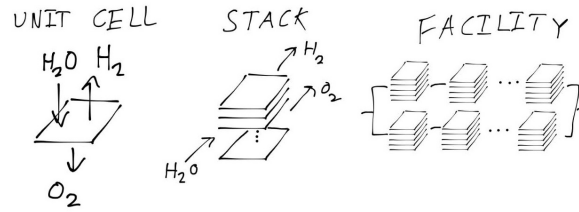


Figure 3.1: A sketch of the scales: the three different scales mentioned in this paper from smallest (left) to largest (right)

3.1.2 Basics of SOEC

The “water gun” also known as the unit cell, can in simple terms be described by Figure 3.2, here it is visible what happens at the small scales.

The unit cell is composed of three main components: the **cathode**, the **electrolyte**, and the **anode**. At the cathode, water molecules are split into dihydrogen (H_2) and oxide ions (O^{--}). This process is only possible due to the presence of electrons provided by an external electric current: these electrons participate directly in the reaction at the cathode, facilitating the reduction of water.

The newly-formed oxide ions then migrate through the solid **electrolyte**, propelled by the electric field generated by the applied voltage, highlighting the central role of electrons and electrical energy in driving the overall process. Once the oxide ions reach the **anode**, they release their excess electrons and recombine to form dioxygen (O_2). The electrons that are released here travel through the external circuit, closing the electrical loop.

Summing up, the operation of the SOEC is fundamentally tied to the movement of electrons, both in the chemical reactions at the electrodes and in sustaining the ionic and electronic currents through the device. This is captured in the overall reaction, $2H_2O + 4e^- \rightarrow 2H_2 + 2O^{--} \rightarrow 2H_2 + O_2 + 4e^-$, where the electrons facilitate water splitting at the cathode and are recovered at the anode. For modeling purposes, and since the focus will generally not be on the internal mechanisms, the model simplifies to the absolute global equation (eq. 3.1).



To clarify some terminology. The upper side of the unit cell—where water is supplied and dihydrogen (H_2) is produced—is called the **fuel side**. This is because water acts as the “fuel” for the process, supplying the reactant that gets split. The lower side—where dioxygen (O_2) is released—is called the **air side**, since atmospheric air is usually introduced here as the inlet. These terms, “fuel side” and “air side,” are commonly used throughout SOEC literature to describe the two compartments of the cell.

3.1.2.1 The chemical flow in a unit cell

The equation in 3.1 treats the reaction as strictly one-way, but in reality, some produced hydrogen and oxygen can recombine to form water again, especially as the system approaches equilibrium based on its electrical state. This reverse reaction is rare at the start but becomes more significant near equilibrium. Yielding equation 3.2.

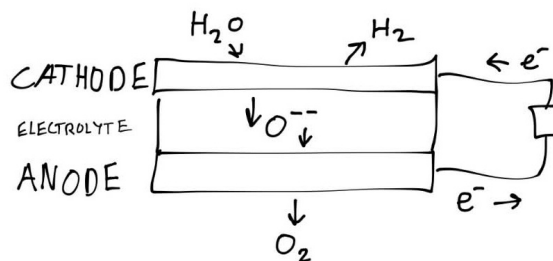


Figure 3.2: A sketch of a unit cell: the basic principles of an SOEC cell are illustrated. The cathode pulls apart the hydrogen and oxygen in the water. The oxygen is transferred through the electrolyte, then formed to dioxygen in the anode, all due to an applied current.

Here, p_l stands for the transition probability that two hydrogen and one oxygen molecule will combine and turn back into water (going from right state $\rightarrow$ left state), while p_r is the probability for splitting water into hydrogen and oxygen (left state $\rightarrow$ right state).

From these probabilities, the production rate of H_2O at every point in the cell can be determined (assuming concentrations and probabilities are known everywhere). The difference between how much H_2O is produced versus how much is consumed is taken. Keeping in mind that this is calculated per unit volume of the cell, it has the unit $\frac{\text{mol}}{\text{s} \cdot \text{m}^3}$:

$$R_{H_2O} = p_r c_{H_2O}^2 - p_l c_{H_2}^2 c_{O_2}$$

Where c_x is the concentration $\left(\frac{\text{mol}}{\text{s} \cdot \text{m}^3}\right)$ of molecule x

To obtain the production rate for the whole cell (the global rate), this quantity is integrated over the thickness (height) of the cell. Which gives the total rate N_{c,H_2O} (later this will be treated as a local source, but for now it is kept global):

$$N_{c,H_2O} = \int_0^d R_{H_2O}$$

This gives the average production rate per area of the cell, which is a useful parameter to work with. But realistically, calculating this from scratch could get a bit complicated. Thankfully, Faraday already did the heavy lifting here. By Faraday's law [18], the rate per cell area can be written as in equation 3.3:

$$N_{c,H_2O} = \frac{i}{2F} \quad (3.3)$$

Where i is the current, F is Faraday's constant, and the 2 comes from the number of electrons involved in the chemical equation.

For now, equation 3.3 is kept as it is, since the formulation is still at the global level; hence the current in the equation is the global current. Later, when making all this local, the current must be computed using the Nernst equation. More about that later. First, a form that describes the system locally is introduced.

3.1.2.2 Behavior through a channel over the cell

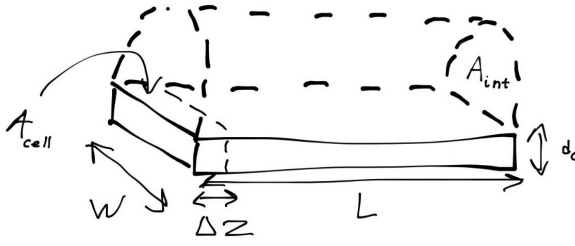


Figure 3.3: Schematic illustration of channel discretization for modeling local behavior along the fuel side of a SOEC. The channel is divided into N segments of length Δz , showing the flow of steam over the cathode.

To describe the system locally, figure 3.3 is used. The fuel side is modeled as a channel (the upper section in the figure), where the steam (H_2O) flows over the cathode. The width of the channel is w and the length is L , with the channel extending from the inlet at $z = 0$ to the outlet at $z = L$ (where L is the length of the cell). The gas flows through a constant cross-sectional area A_{int} .

For any control volume within this channel, mass conservation dictates that the accumulation of water over time equals the flow in plus the production of the cell reaction minus the flow out. Following the formulation by Primdahl and Mogensen [14] for a continuously stirred tank reactor (CSTR), the

mass balance for the water molar fraction $x_{\text{H}_2\text{O}}$ is:

$$\frac{PV}{RT} \frac{\partial x_{\text{H}_2\text{O}}}{\partial t} = A_{int} N_{in, \text{H}_2\text{O}} - A_{int} N_{out, \text{H}_2\text{O}} + A_{cell} N_{c, \text{H}_2\text{O}} \quad (3.4)$$

Where V is the volume of the gas in the reactor, N_i is the molar flux for species i , and A_{cell} is the active electrode area.

To obtain the local behavior along the channel, discretization along the channel length is required, meaning the length is split into sections. This is also illustrated in figure 3.3. Hence $z_i - z_{i-1} = \Delta z$ for all $i = 1, \dots, N$, with $z_0 = 0$ and $z_N = L$, giving a sequence:

$$z_0 < z_1 < \dots < z_N$$

Each section $z \in (z_{i-1}, z_i)$ can then be viewed as its own cell, where the inlet flow at z_{i-1} is the outlet flow of the previous interval. Letting $\Delta z \rightarrow 0$ and inserting the definition of $N_{c, \text{H}_2\text{O}}$ (equation 3.3), and the PDE in equation 3.5 pops right out. (Appendix A1)

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{int}} N_{c, \text{H}_2\text{O}} - \frac{\partial N_{\text{H}_2\text{O}}}{\partial z} \quad (3.5)$$

Where $N_{\text{H}_2\text{O}} = v_{fuel} \mu_{\text{H}_2\text{O}}$ and $N_{c, \text{H}_2\text{O}} = \nu_{\text{H}_2\text{O}} \frac{i}{n_e F}$, with n_e the number of electrons in the reaction being 2.


By similar computations for H_2 and O_2 the following equations will appear:

$$\frac{\partial \mu_{\text{H}_2}}{\partial t} = \frac{w}{A_{int}} N_{c, \text{H}_2} - \frac{\partial N_{\text{H}_2}}{\partial z} \quad (3.6)$$

$$\frac{\partial \mu_{O_2}}{\partial t} = \frac{w}{A_{int}} N_{c,O_2} - \frac{\partial N_{O_2}}{\partial z} \quad (3.7)$$

Where $N_{H_2} = v_{fuel} \mu_{H_2}$ and $N_{O_2} = v_{air} \mu_{O_2}$, with ν_i the stoichiometric coefficient for species i , μ_i the molar concentration of species i , and $v_{fuel/air}$ the corresponding velocity. And $N_{c,i} = \nu_i \frac{i}{n_e F}$.

From the chemical equation of the reaction:



The stoichiometric coefficients are determined as $\nu_{H_2O} = -\nu_{H_2} = -2\nu_{O_2} = 1$.

This equation describes the local evolution of the species concentration. As noted earlier, the current i is no longer a global current. To determine it, the Nernst equation and more is required; this will be explained shortly.

3.1.2.3 Introducing the overpotentials

From the equation stated in 3.5 only the current density i remains to be determined. The control variable is the voltage U , which equals the overpotential of the whole cell (η_{cell}) or cell voltage.

The cell voltage can be written as the sum of all overpotentials over the cell as in equation 3.8. Concentration overpotentials that appear when accounting for diffusion are neglected here, and the concentration is assumed to be the same everywhere on each side of the cell. (??)

$$\eta_{cell} = \eta_{nernst} + \eta_{act} + \eta_{ohm} \quad (3.8)$$

$$\eta_{nernst} = \frac{\Delta G}{n_e F} + \frac{RT}{n_e F} \log \left(\frac{x_{H_2} \sqrt{x_{O_2}}}{x_{H_2O} \sqrt{x_0}} \right), \quad (3.9)$$

Where $x_0 = p_{ref}/p_{air} \approx 1$, ΔG is Gibbs free energy approximated by the polynomial $\Delta G = -0.0031 T^2 - 49.119 T + 244778$. [4]

$$\eta_{ohm} = i R_{deg} \quad (3.10)$$

Where R_{deg} is the resistance induce from degradation mechanisms.

$$\eta_{act} = \eta_{act}^a + \eta_{act}^c \quad (3.11)$$

Where η_{nernst} is the Nernst overpotential, representing the voltage generated by the electrochemical reaction, and η_{act} is the activation overpotential, which accounts for the energy barrier that must be overcome for the reaction to proceed, η_{ohm} is the Ohmic resistance, which accounts for resistance that is active due to degradative mechanisms. [4]

The Ohmic overpotential is essentially Ohm's law with some resistance; but it is in this resistance we get the degradation, or in terms of the water gun problem, we find where Thomas is standing within the ohmic resistance. The Nernst overpotential describes the willingness of the reaction to proceed. When there is a lot of H_2O and very little H_2 and O_2 , the Nernst overpotential is large in absolute value but negative. This drives the reaction away from the high concentration in H_2O and closer to equilibrium. Away from the Gibbs term and the other overpotentials, the *equilibrium* occurs where the fraction is 1. The Nernst overpotential can therefore be viewed as the *force* that pulls the concentrations towards equilibrium.

The activation overpotential is probably the most difficult part to compute. The governing equations are listed first; their meaning is explained afterwards.

The overpotentials for the anode and cathode arise by solving Equation 3.12, also known as the Butler-Volmer equation.

$$i = i_0^\zeta \left(\exp \left[\alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[-(1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right), \quad \zeta \in \{a, f\}. \quad (3.12)$$

Where α_ζ is the symmetry factor for the corresponding side, and i_0^ζ is the exchange current for the respective side, with $\alpha_a = 0.65$ and $\alpha_c = 0.59$. [13]

The exchange current is computed as in Equation 3.13.

$$i_0^\zeta = \lambda_\zeta \gamma_\zeta \exp \left[-\frac{E_{act}^\zeta}{RT} \right] \prod_{i \in \text{Species}_\zeta} \left(\frac{x_i}{x_0} \right)^{m_i}, \quad \zeta \in \{a, f\}. \quad (3.13)$$

Where $\text{Species}_a = \{O_2\}$ and $\text{Species}_c = \{H_2O, H_2\}$. $\lambda_a = 1$ (in principle it does not appear in the equation) and λ_c is also determined by degradation mechanisms, discussed later. γ_ζ is the pre-exponential factor for the respective side with values $\gamma_a = 1.515 \cdot 10^8$ and $\gamma_f = 7.666 \cdot 10^5$. E_{act}^ζ is the activation energy, with $E_{act}^a = 1.40 \cdot 10^5$ and $E_{act}^f = 1.05 \cdot 10^5$. And $m_{H_2O} = 0.33$, $m_{H_2} = -0.1$ and $m_{O_2} = 0.22$. [13]

This describes the electrical energy required to overcome the energy barrier for the reaction. Somewhat similar to how water does not necessarily freeze at $0^\circ C$. There is some discussion in the field about whether the Butler-Volmer equations are adequate for this phenomenon; but for this project the Butler-Volmer model is taken as a sufficient approximation.

3.1.2.4 Computing the current i

With the overpotentials introduced, it is clear that some of them depend on the current i , which is the missing piece in 3.3 needed to complete the coupled differential equations 3.5, 3.6 and 3.7.

The current is obtained by solving Equation 3.8, with $\eta_{cell} = U$, and i defined as in Equation 3.14

$$i = \underset{i}{\text{Solve}} [U - \eta_{nernst} = \eta_{ohm}(i) + \eta_{act}(i)] \quad (3.14)$$

Using various simplifications this equation can be solved in different ways; for now it is solved numerically, using a root solver from the python library Scipy [19].

With the equations for mole transport in place, the temperature behavior is treated next, before all equations are summarized in a table.

3.1.3 Energy Balance

To derive the energy balances, the derivation starts at the thermal energy equation given by Equation 3.15 [11]. A number of simplifications are then applied to obtain Equation 3.16.

$$\rho \frac{\partial h}{\partial t} = \frac{\partial p}{\partial t} + \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (h_i N_i) + Q_T \quad (3.15)$$

where ρ is density, h specific enthalpy, λ_T thermal conductivity, h_k and N_k the specific enthalpy and flux of species k , and Q_T the volumetric heat source (e.g. electrochemical heating).

Starting with Equation 3.15, essentially stating how much energy a volume accumulates, in enthalpy per unit volume (left-hand side). Is equal to the compression (The change in pressure) plus the energy added by heat conduction (Second order differential term in temperature) and the transportation of enthalpy by species (H_2O , H_2 , O_2), and lastly adding the reaction heat Φ .

The first simplifications is to neglect the energy accumulation due to heat conduction ($\nabla \cdot (\lambda \nabla T) = 0$). Also assuming constant pressure, $h \approx c_p T$ and $\partial_t p = 0$, which yields:

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i \frac{\partial T \mu_i}{\partial z} c_{p,i} + Q_T \quad (3.16)$$

Where $c_p = \sum_{e \in \mathcal{M}} c_{p,k} y_k$, with y_k being the mass fractions (Not the molar fraction), for further information look at Appendix A2

It remains to define the source term, which follows from the power expression in Equation 3.17. Power is the energy per unit time, hence the energy added to the system.

$$Q_T = \frac{i w}{A_{int}} U \quad (3.17)$$

3.1.3.1 At steady state

At steady state the expression for the molar progression can be used to simplify the equations further, yielding Equation 3.18.

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z} \quad (3.18)$$

Where $U_{th} = \frac{\Delta h}{n_e F}$ with $\Delta h = h_{\text{H}_2\text{O}} - h_{\text{H}_2} - \frac{h_{\text{O}_2}}{2}$, (Appendix A2).

With the energy balance, or temperature differential equation, in place, the cell model is complete. The following section takes a deep dive into “Thomas’s position” and “how he moves” also known as the degradation mechanisms.

Description	Equation	Ref.
Faraday's law	$N_{c,i} = \nu_i \frac{i}{2F}$	Equation 3.3
Molar concentration DEs	$\frac{\partial \mu_i}{\partial t} = \frac{w}{A_{int}} N_{c,i} - \frac{\partial N_i}{\partial z}$	Eqs. 3.5, 3.6, 3.7
Cell voltage	$\eta_{cell} = \eta_{nernst} + \eta_{ohm} + \eta_{act}^a + \eta_{act}^c$	Equation 3.8
Ohmic overpotential	$\eta_{ohm} = i R_{deg}$	Equation 3.10
Nernst overpotential	$\eta_{nernst} = \frac{\Delta G}{n_e F} + \frac{RT}{n_e F} \log \left(\frac{x_{H_2} \sqrt{x_{O_2}}}{x_{H_2O} \sqrt{x_0}} \right)$	Equation 3.9
Butler–Volmer	$i = i_0^{a/f} \left(\exp[\alpha_{a/f} \frac{n_e F}{RT} \eta_{act}^{a/f}] - \exp[-(1 - \alpha_{a/f}) \frac{n_e F}{RT} \eta_{act}^{a/f}] \right)$	Equation 3.12
Exchange current	$i_0^{a/f} = \lambda_{a/f} \gamma_{a/f} T \exp \left[-\frac{E_{act}^{a/f}}{RT} \right] \prod_{i \in \mathcal{S}_{a/f}} (x_i/x_0)^{m_i}$	Equation 3.13
Gibbs free energy	$\Delta G \approx -0.0031T^2 - 49.119T + 244778$	
Energy balance	$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i \frac{\partial T \mu_i}{\partial z} c_{p,i} + \frac{i w}{A_{int}} U$	Eqs. 3.16, 3.17

Table 3.1: Overview of model equations (Here without degradation which is in Section 3.2.1).

3.2 Modelling degradation

3.2.1 Introduction

This section examines the two components R_{ohm} that appears in Equation 3.10 and λ_c which appears in Equation 3.13. The latter is more complicated, so the Ohmic resistance is treated first. Below an equation is set up, which describes how the degradation plays a role on the ohmic resistance.

$$R_{ohm} = \frac{T}{B_{ohm}} \exp \left\{ \frac{E_{act}^{ohm}}{RT} \right\} + R_{contact} + \sum_{d \in \mathcal{D}_{ohm}} R_d$$

Here, the first two terms are time-invariant and depend only on the present conditions of the cell. In contrast, the degradation terms, represented by the summation, evolve and increase as the cell ages. The first degradation mechanism considered is the resistance arising from nickel migration.

3.2.2 Nickel migration

Nickel migration is a simple phenomenon to understand. Essentially the electrode is saturated with nickel, but as time goes by the saturated part of the cell will shrink, hence we will have a gap in the electrode where there are no nickel. Since the nickel plays a huge part in transporting the oxygen ions fast and smoothly, the absence of nickel will induce an added travel resistance for the ions. Now the resistance can be represented by Equation 3.19.

$$R_{Ni-mi} = \frac{h_{Ni-mi}}{\left(\frac{\epsilon}{\tau} \sigma_{elec}\right)} \quad (3.19)$$

Where d_{Ni-mi} is the thickness of nickel absence layer, which develops over time, σ_{elec} is the electrode conductivity, ϵ is the zirconia fraction and τ is the tortuosity of the zirconia fraction [4]

The sketch in Figure 3.4 illustrates how the nickel migration develops over time, and the impact it has.

The conductivity of the electrode is given by Equation 3.20. This conductivity is in reality the reduction in conductivity due to the creep of the nickel part of the electrode.

$$\sigma_{elec} = \frac{\sigma_{elec,o}}{T} \exp \left(-\frac{E_{a,elec}}{RT} \right) \quad (3.20)$$

Javid Beyrami et al. [4] describe the development of nickel migration by the following differential equation, where c_1 and c_2 are negative and c_3 and c_4 are positive. For high values of current and temperature, migration increases; if either T or i is too small or too large, migration also increases.

$$\frac{\partial h_{Ni-mi}}{\partial t} = c_1 T + c_2 i + c_3 iT + c_0$$

Where c_k is fitted to experimental data.

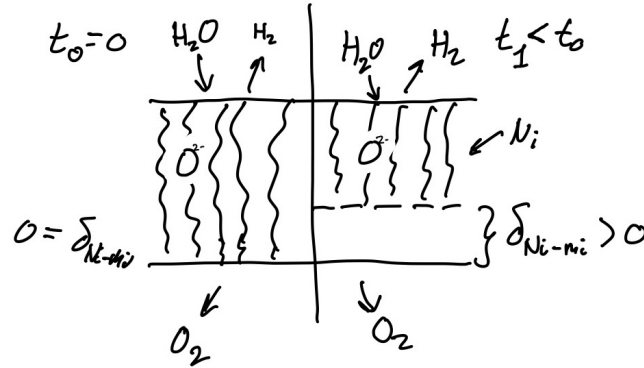


Figure 3.4: For a cell without degradation (Left), nickel migration has not occurred and $d_{\text{Ni-mi}} = 0$ at the layer between the nickel-filled electrode and the electrolyte. Over time the nickel-filled part of the electrode creeps away from the electrolyte (Right), giving rise to resistance induced by the raw electrode on the traveling species.

3.2.3 Interconnect Oxidation

Another important degradation mechanism to consider is interconnect oxidation. This process also contributes to the overall ohmic resistance, and is relatively straightforward to understand: it occurs when the metallic interconnect undergoes oxidation, in other words, when the metal effectively “rusts.”

The resistance resulting from interconnect oxidation is in structure much like that of nickel migration. Specifically, it is determined by the thickness of the oxidized layer divided by its (reduced) electrical conductivity, as shown in Equation 3.21 [4], [12], [5].

$$R_{\text{IC-ox}} = \frac{h_{\text{IC-ox}}}{\sigma_{\text{IC-ox}}} \quad (3.21)$$

Where the oxidized interconnect conductivity is given as a function of temperature in Equation 3.22.

$$\sigma_{\text{IC-ox}} = \frac{k_{\text{ox}}}{T} \exp \left\{ -\frac{E_{\text{el}}}{RT} \right\} \quad (3.22)$$

Beyrami et al. [4] describe the growth of the oxide layer by the following rate law.

$$\frac{dh_{\text{IC-ox}}^2}{dt} = k_{\text{mg}} \exp \left\{ -\frac{E_{a,\text{ox}}}{RT} \right\} \quad (3.23)$$

The squared-thickness form in Equation 3.23 reflects parabolic oxidation kinetics: layer growth follows a square-root-of-time law, and the rate depends on local temperature alone through the Arrhenius term. Unlike nickel migration, interconnect oxidation is therefore not sensitive to current density. As $h_{\text{IC-ox}}$ increases, the contribution $R_{\text{IC-ox}}$ in Equation 3.21 rises and adds to the degradation summation in the total ohmic resistance. The constants k_{mg} and $E_{a,\text{ox}}$ are fitted to experimental data [4], [5]. Together with nickel migration, this completes the ohmic degradation terms; the remaining mechanism acts on the cathode exchange

current and is discussed next.

3.2.4 Nickel Agglomeration

A further degradation mechanism affecting the cathode exchange current is nickel agglomeration. Unlike the ohmic contributions discussed above, it is typically modelled not as a resistance but as a multiplier on λ_c , the normalized triple phase boundary [4]. Whether the underlying process is nickel migration or another phenomenon remains debated, and the mechanistic details are therefore not pursued here. Because agglomeration develops on a relatively short timescale, λ_c is assumed to have reached its asymptotic value of approximately 0.55 [4].

Description	Equation	Ref.
Total ohmic resistance	$R_{\text{ohm}} = \frac{T}{B_{\text{ohm}}} \exp \left\{ \frac{E_{\text{act}}^{\text{ohm}}}{RT} \right\} + R_{\text{contact}} + \sum_{k \in \mathcal{D}_{\text{ohm}}} R_k$	
Nickel-migration resistance	$R_{\text{Ni-mi}} = \frac{d_{\text{Ni-mi}}}{\left(\frac{\varepsilon}{\tau} \sigma_{\text{elec}} \right)}$	Equation 3.19
Electrode conductivity	$\sigma_{\text{elec}} = \frac{\sigma_{\text{elec},0}}{T} \exp \left(-\frac{E_{a,\text{elec}}}{RT} \right)$	Equation 3.20
Nickel thickness rate	$\frac{\partial d_{\text{Ni-mi}}}{\partial t} = c_1 T + c_2 i + c_3 iT + c_4$	
Interconnect oxidation resistance	$R_{\text{IC-ox}} = \frac{d_{\text{IC-ox}}}{\sigma_{\text{IC-ox}}}$	Equation 3.21
IC oxide conductivity	$\sigma_{\text{IC-ox}} = \frac{k_{\text{ox}}}{T} \exp \left\{ -\frac{E_{\text{el}}}{RT} \right\}$	Equation 3.22
IC oxidation rate	$\frac{dd_{\text{IC-ox}}^2}{dt} = k_{\text{mg}} \exp \left\{ -\frac{E_{a,\text{ox}}}{RT} \right\}$	Equation 3.23
Normalized triple phase boundary	$\lambda_c = 0.55$	[@BEYRAMI2024100653]

Table 3.2: Overview of degradation mechanisms (ohmic contributions and slow-state dynamics). The base cell equations are summarized in Table 3.1.

3.3 Assumptions

3.3.1 Geometry, flow, and thermodynamics

1. **Constant channel area.** The cross-sectional area A_{int} is uniform along the channel.
2. **One-dimensional flow.** Properties vary only in the axial direction z ; width w and height d enter as geometric scalars.
3. **Ideal gas.** Gas mixtures obey the ideal-gas law.
4. **Negligible concentration overpotential.** Mass-transport limitations at the electrodes are not resolved; molar fractions on each electrode side are taken as uniform (Equation 3.8).
5. **Negligible heat conduction.** The conductive term $\nabla \cdot (\lambda_T \nabla T)$ is dropped in the energy balance (Equation 3.16).
6. **Constant pressure.** $\partial_t p \approx 0$ and $h \approx c_p T$ in the enthalpy formulation.
7. **Prescribed inlet flows.** Fuel and air volumetric flow rates are inputs, not optimized.

3.3.2 Electrochemistry and degradation

8. **Butler–Volmer kinetics.** Anodic and fuel-side (cathode) activation overpotentials follow Equation 3.12 with parameters from [13].
9. **Two dynamic ohmic degradation mechanisms.** Nickel migration and interconnect oxidation evolve via Table 3.2; other ageing paths are not modelled dynamically.
10. **Nickel agglomeration at steady state.** Because agglomeration develops on a short timescale relative to the optimization horizon, the cathode multiplier λ_c is fixed at ≈ 0.55 [4] rather than solved as an additional state.
11. **Spatially resolved degradation.** Slow states are stored per FVM cell ($\mathbf{d}_{\text{Ni-mi},i}, \mathbf{s}_{\text{IC-ox},i} \in \mathbb{R}^{N_{\text{cell}}}$); interconnect oxidation is advanced in squared-thickness form (Equation 4.18).

3.3.3 Quasi-steady coupling and time integration

12. **Quasi-steady cell physics.** At each time step the FVM steady-state problem (molar fractions and temperature along z) is solved for the current controls and degradation state before the slow ODEs are updated.
13. **Implicit Euler in time.** Degradation states are advanced with the implicit Euler scheme on a uniform grid (Equation 4.16).

4 Optimal Control and Solution Method

4.1 Optimal Control Problem

4.1.1 Introduction

With the cell model in place, and a nice degradation setup. Operation can be simulated for any admissible inlet conditions and cell voltage (within a reasonable range). What remains is to specify an economic objective and formulate the corresponding optimal control problem. Once again, related to the water gun problem, in this chapter, the objective of “hitting Thomas” is formulated.

Following discussions with Dynelectro and DTU Energy, and a review of how the objective is set in most literature [9],[3],[6], the general structure adopted is to maximize running revenue (hydrogen production while minimizing production cost) and to minimize degradation.

$$\begin{aligned} \max_{\mathbf{u} \in \mathcal{U}} \quad & \int_0^T R \, dt + \Psi \\ \text{s.t.} \quad & \frac{\partial n_i}{\partial t} \text{ satisfies Table 3.1,} \quad \text{for } i \in \mathcal{S} \\ & \frac{\partial d_i}{\partial t} \text{ satisfies Section 3.2.1,} \quad \text{for } i \in \mathcal{D} \end{aligned} \tag{4.1}$$

Here $\mathbf{u}(t)$ collects the control inputs, that is the applied voltage $U(t)$ and the inlet temperature $T_{\text{in}}(t)$ that can be chosen as functions of time, and $\mathbf{d}$ collects the degradation state variables;

$$\mathbf{d} = [d_i(t)]_{i \in \mathcal{D}}.$$

Looking at Equation 4.1, the integrand $R(\mathbf{u}, \mathbf{d})$ is the **revenue rate**; maximizing its time integral corresponds to maximizing operating income over $[0, T]$. The term $\Psi(\mathbf{d})$ is the **salvation** contribution: a scalar that rewards the optimizer for how much useful life remains in the cell at the end of the horizon.

It is worth noting that minimizing degradation is in its core, a part of minimizing production cost: when a cell degrades the resistance rises, leading to higher power for the same hydrogen output, and in the worst case degradation leads to a malfunctioning cell, requiring replacement of the cell or, at facility scale, a stack. It should also be noted that using terminal degradation is a modeling choice; using the running degradation rate inside the integral would have been equally valid and may be simpler to implement.

4.1.2 Revenue

The revenue rate is taken in the explicit form shown in Equation 4.2.

$$\begin{aligned} R &= c_{\text{H}_2} \Delta \dot{n}_{\text{H}_2} - c_P P \\ \Delta \frac{\partial n_{\text{H}_2}}{\partial t} &= A_{\text{int}} N_{\text{out}, \text{H}_2} - \frac{\partial n_{\text{in}, \text{H}_2}}{\partial t} \\ P &= P_{\text{cell}} + P_{\text{heat}} \end{aligned} \quad (4.2)$$

Here $\frac{\partial n_{\text{in}, \text{H}_2}}{\partial t}$ is specified as an input (part of $\mathbf{u}$), P is the total electrical power, P_{cell} the power supplied to the stack, and P_{heat} the auxiliary sensible heating power.

Thus, R is the value of net hydrogen production (outlet minus inlet, in appropriate units) minus the cost of power. All quantities in Equation 4.2 follow from the cell model summarized in Table 3.1.

From the model data the power of the cell is computed by $P_{\text{cell}} = I_{\text{cell}} U$ with:

$$I_{\text{cell}} \approx \frac{A_{\text{cell}}}{N_{\text{cell}}} \sum_{k=1}^{N_{\text{cell}}} i_k.$$

The heating power is the **sensible** auxiliary preheat duty: for each stream, the enthalpy difference between the **inlet** composition at the target inlet temperature T_{in} and the same composition at the recovered outlet temperature $T_{\text{out}} - T_{\text{loss}}$. Composition enthalpy of the electrochemical conversion is excluded from P_{heat} and is accounted for via P_{cell} . Positive P_{heat} means external preheat is required ($T_{\text{in}} > T_{\text{out}} - T_{\text{loss}}$); negative values are recovery credits.

$$P_{\text{heat}} = \sum_{\zeta \in \{a, f\}} \dot{V}_{\zeta} A_{\text{int}} \left(\sum_{i \in \mathcal{S}_{\zeta}} \mu_{i, \text{in}} h_i(T_{\text{in}}) - \sum_{i \in \mathcal{S}_{\zeta}} \mu_{i, \text{in}} h_i(T_{\text{out}} - T_{\text{loss}}) \right) \quad (4.3)$$

Where outlet thermal energy is assumed recoverable toward the inlet stream with an absolute loss T_{loss} , and $\mu_{i, \text{in}}$ denotes inlet molar concentrations.

With that the running revenue or integrand is settled, hence we can look at the salvation.

4.1.3 Salvation

After operating up to time T , the running profit captures cash flow from hydrogen sales net of power cost. A salvation term is included, with the objective in mind, that the cell shouldn't be overused leading to, a cell which cannot gain its own cost in revenue. The idea is to measure, in a simple aggregate way, how close the cell is to end-of-life limits across degradation mechanisms that can cause failure.

Equal weight is assigned to each index in $\mathcal{D}$, leading to

$$\Psi = \frac{c_{\text{cell}}}{|\mathcal{D}|} \sum_{i \in \mathcal{D}} \left(1 - \frac{d_i}{d_{i, \text{critical}}} \right)^{\alpha_{\Psi}} \quad (4.4)$$

Here c_{cell} scales the reward to the capital cost of the cell, and $\mathcal{D}$ is the set of degradation. Initially $\alpha_\Psi = 1$

For each i , the factor $\max\{0, 1 - d_i/d_{i,critical}\}$ is the unused fraction of the margin to the critical level at stop time T . Averaging over $\mathcal{D}_{fail}$ and scaling by c_{cell} yields a terminal value that increases when the cell stops farther from those limits.

4.1.3.1 Extra note on Salvation

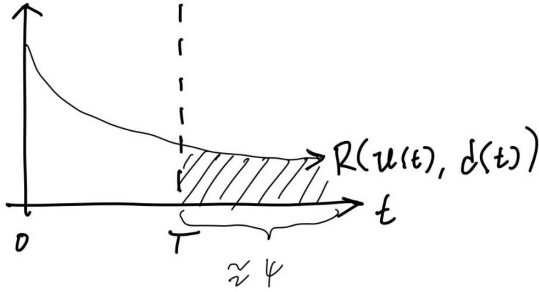


Figure 4.1: CAPTION

The ideal aim would be to extract the most value from a cell over its lifetime, which would correspond to optimizing the integral in Equation 4.1 with $\Psi = 0$ and T a conditioned variable equal to the lifetime. That horizon is not practical, since degradation and prices cannot be predicted that far ahead. Instead, the objective optimizes value over a short future horizon while retaining potential revenue. This is illustrated in Figure 4.1.

The objective is essentially the area under the revenue-rate curve. The formulation used here approximates maximization of that area over the full

lifetime, but only up to the finite horizon T .

4.1.4 H₂ storage and delivery agreement

Beyond the simple revenue model in Equation 4.2, a contract-style extension adds buffer storage and a fixed hydrogen delivery obligation. The cell and degradation equations are unchanged; only the economic layer is extended. The contractual offtake is represented by a constant delivery rate $\dot{n}_{H_2, \text{agreement}}$. In practice, delivery may occur in batches; here it is approximated as a continuous flow over $[0, T]$. Shortfalls relative to production are met from inventory or, if the tank is empty, from spot purchases at rate $\dot{n}_{\text{purchase}}$, penalized in the revenue at $\kappa_{\text{buy}} c_{H_2}$. The resulting revenue rate is given in Equation 4.5.

$$R_{\text{tank}} = c_{H_2} \dot{n}_{H_2, \text{agreement}} - c_P P - \kappa_{\text{buy}} c_{H_2} \dot{n}_{\text{purchase}}. \quad (4.5)$$

Inventory is modelled as a lumped storage tank. The net production surplus $\Delta \dot{n}$ is the difference between stack output and the agreement rate. Inventory increases only when production exceeds delivery; spot purchases activate only when production falls short. This gives Equation 4.6 and Equation 4.7.

$$\Delta \dot{n} = \dot{n}_{\text{prod}} - \dot{n}_{H_2, \text{agreement}}$$

$$\dot{n}_{\text{tank}} = \max(0, \Delta \dot{n}) \quad (4.6)$$

$$\dot{n}_{\text{purchase}} = \max(0, -\Delta \dot{n}). \quad (4.7)$$

At the end of the horizon the tank may still hold inventory. Two terminal treatments are used in the results.

In the first, remaining hydrogen is valued as liquidation on the open market, giving the additional term in Equation 4.8.

$$\Psi_{\text{tank}} = \kappa_{\text{sell}} c_{\text{H}_2} m_{\text{tank}}(T), \quad (4.8)$$

where $\kappa_{\text{sell}} \approx \frac{1}{8}$ when end-of-horizon stock must compete with *black* hydrogen. In the second, a cyclic inventory constraint replaces terminal liquidation:

$$m_{\text{tank}}(0) = m_{\text{tank}}(T), \quad (4.9)$$

which is natural when the operating window is meant to repeat periodically.

Under Equation 4.9, the objective is invariant to a uniform upward shift of the inventory trajectory: if $m_{\text{tank}}(0) = m_{\text{tank}}(T) = m_0$ is feasible, so is $m_{\text{tank}}(0) = m_{\text{tank}}(T) = m_0 + a$ for any $a > 0$, provided the shifted trajectory remains admissible. To select the trajectory with the smallest inventory, a penalty term is subtracted from the objective:

$$- \min_t m_{\text{tank}}(t).$$

When the inventory stays strictly positive over $[0, T]$, this term equals the minimum inventory level and removes the shift degeneracy.

4.1.4.1 Full objective (tank mode)

When tank mode is active, the optimizer solves

$$\begin{aligned} \max_u \quad & \int_0^T R_{\text{tank}} dt + \Psi(\mathbf{d}(T)) + \Psi_{\text{tank}}(m_{\text{tank}}(T)) \\ \text{s.t.} \quad & m_{\text{tank}}(0) = 0 \end{aligned} \quad (4.10)$$

or

$$\begin{aligned} \max_u \quad & \int_0^T R_{\text{tank}} dt + \Psi(\mathbf{d}(T)) - \min_t m_{\text{tank}}(t) \\ \text{s.t.} \quad & m_{\text{tank}}(0) = m_{\text{tank}}(T) \end{aligned} \quad (4.11)$$

instead of Equation 4.1 with Equation 4.2. Fixed delivery revenue decouples cash flow from instantaneous production: the optimizer minimizes power cost and spot purchases while building inventory when production is favourable, subject to the usual salvation trade-off on degradation.

An overview of all relevant equations for the optimal control problem is stated in Table 4.1.

Description	Equation	Ref.
General objective function	$\int_0^T R, dt + \Psi$	Equation 4.1
Revenue	$R = c_{H_2} \Delta \dot{n}_{H_2} - c_P P$	Equation 4.2
Salvation	$\Psi = \frac{c_{cell}}{ \mathcal{D} } \sum_{i \in \mathcal{D}} \left(1 - \frac{d_i}{d_{i,critical}}\right)^{\alpha_\Psi}$	Equation 4.4
Tank balance	$\dot{n}_{\text{tank}} = \max(0, \dot{n}_{\text{prod}} - \dot{n}_{H_2, \text{agreement}})$	Equation 4.6
Spot purchase	$\dot{n}_{\text{purchase}} = \max(0, \dot{n}_{H_2, \text{agreement}} - \dot{n}_{\text{prod}})$	Equation 4.7
Contract revenue	$R_{\text{tank}} = c_{H_2} \dot{n}_{H_2, \text{agreement}} - c_P P - \kappa_{\text{buy}} c_{H_2} \dot{n}_{\text{purchase}}$	Equation 4.5
Terminal liquidation (alternative A)	$\Psi_{\text{tank}} = \kappa_{\text{sell}} c_{H_2} m_{\text{tank}}(T)$	Equation 4.8
Cyclic inventory constraint (alternative B)	$m_{\text{tank}}(0) = m_{\text{tank}}(T)$	Equation 4.9
Minimum-inventory penalty (with alternative B)	$-\min_t m_{\text{tank}}(t)$	Equation 4.11
Cell Power	$P_{\text{cell}} = I_{\text{cell}} U$	
Heating Power	$P_{\text{heat}} = \sum_{\zeta \in \{a, f\}} \dot{n}_\zeta \left(\sum_{i \in \mathcal{S}_\zeta} x_i h_i(T_{in}) - \sum_{i \in \mathcal{S}_\zeta} x_i h_i(T_{out} - T_{loss}) \right)$	

Table 4.1: Overview of the optimal control formulation (objective, revenue, terminal value, and power bookkeeping). The underlying cell equations are summarized in Table 3.1; degradation is treated in Section 3.2.1. Optional tank economics (Section 4.1.4) add contract revenue and inventory dynamics; end-of-horizon inventory is closed either by terminal liquidation (alternative A) or by a cyclic constraint with a minimum-inventory penalty (alternative B).

4.1.5 Economic assumptions

1. **Piecewise-constant controls.** U and T_{in} are constant on each of the N_t control intervals (Section 4.2.6).
2. **Recoverable outlet enthalpy.** Auxiliary heating power P_{heat} credits recovery of outlet sensible heat toward the inlet stream, minus a fixed loss T_{loss} (Equation 4.2).
3. **Finite rolling horizon.** The objective maximizes revenue and salvation over a chosen horizon T , not the full stochastic stack lifetime (Figure 4.1).
4. **Tank scenarios (when active).** Buffer storage is unlimited; contractual delivery $\dot{n}_{\text{H}_2, \text{agreement}}$ is constant; shortfalls are covered by inventory or spot purchase at $\kappa_{\text{buy}} c_{\text{H}_2}$ (Section 4.1.4).

4.2 Building the numerical solver

4.2.1 Introduction

This chapter presents the construction of numerical tools required to determine the optimal control $\mathbf{u}^*(t)$ for the system. Unlike simple textbook examples, where a Wikipedia lookup was sufficient, the problem considered here is more complex and necessitates a structured, step-by-step methodology. The central question addressed is: What tools and methods are needed to solve the optimal control problem outlined in Section 4.1.1?

The overall strategy is as follows:

1. **Steady-state cell equations:**

As the focus is on long-term behavior, it is assumed that the dynamics described by the differential equations in Table 3.1 occur much faster than the overall optimization timescale, treating them as instant. This allows for replacement with a set of steady-state equations, which are simpler to solve. The Finite Volume Method (FVM) is used to solve these equations numerically.

2. **Degradation dynamics:**

With the steady-state cell solver established, its outputs serve as algebraic inputs to the degradation model (Table 3.2). This model captures the system's degradation over time through differential equations, which are solved numerically using the implicit Euler method.

3. **Objective and optimal control:**

The optimal control objective (Table 4.1) is addressed by discretizing the control input with the single shooting method. In this approach, both the revenue and degradation equations are integrated forward in time as a system of differential equations.

Structuring the problem in these three parts (steady-state solution, degradation modeling, and control optimization) enables a systematic approach to the full optimal control challenge.

4.2.2 Finite volume method (FVM)

With the descriptive equations in place (Table 3.1, Section 3.2.1, and Section 4.1.1), a numerical solution method is required. All equations can be written in the general form

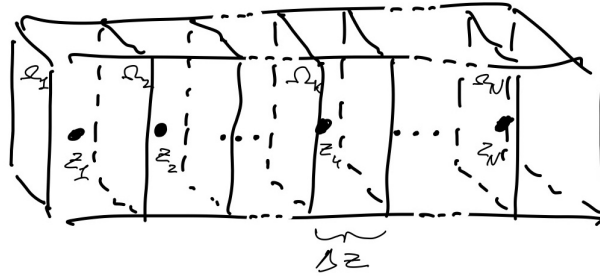


Figure 4.2: A sketch of the finite volume method. A large volume, corresponding to the air and gas channel, is split into smaller volumes. The greater volume is divided into N volumes, each represented by the midpoint, yielding a 1D system instead of 3D. Integration over the densities in each small volume gives the mass in that volume. The figure also introduces z_k (midpoint), Ω_k (small volume), and Δz (length of the volume).

$$\frac{\partial u}{\partial t} = Q_u - \frac{\partial F_u}{\partial z} \quad (4.12)$$

where Q_u denotes the source term and F_u the flow term; both can be computed directly from the state. For now only the steady-state solution is of interest, which simplifies the problem considerably and yields the following *boundary value problem*:

$$0 = Q_u + \frac{\partial F_u}{\partial z}$$

The *finite volume method* is used to solve this steady-state BVP [8].

As shown in Figure 4.2, the domain is split into smaller subdomains coupled by flux from one volume into the next. Integration of the density u over a small volume Ω_k of volume V_k proceeds as follows.

$$\int_{\Omega_k} \frac{\partial u}{\partial t} dV = \int_{\Omega_k} Q_u dV - \int_{\Omega_k} \frac{\partial F_u}{\partial z} dV$$

The source term is approximated by a rectangle (midpoint rule): $\int_{\Omega_k} Q_u \approx Q_u(z_k) A_{int} \Delta z$. For the flux term, the fundamental theorem of calculus is used to evaluate the antiderivative in the z -direction, with the assumption that the concentration is constant perpendicular to z , giving:

$$\int_{\Omega_k} \frac{\partial F_u}{\partial z} dV = A_{int} F_u \Big|_{\partial \Omega_k} = A_{int} \left(F_u(z_{k+\frac{1}{2}}) - F_u(z_{k-\frac{1}{2}}) \right)$$

The boundary values $F_u(z_{k-\frac{1}{2}})$ are approximated by the value in the previous cell, consistent with the flow direction of the system (in cell k there is no information from cell $k+1$, but there is from cell $k-1$). The integral is therefore approximated as:

$$\int_{\Omega_k} \frac{\partial F_u}{\partial z} \approx \left(F_u(z_k) - F_u(z_{k-1}) \right) A_{int}$$

Combining the source and flux approximations gives the discrete equation Equation 4.13.

$$\frac{\partial}{\partial t} \int_{\Omega_k} u dV = Q_u(z_k) A_{int} \Delta z - \left(F_u(z_k) - F_u(z_{k-1}) \right) A_{int} \quad (4.13)$$

or at steady state:

$$0 = Q_u(z_k) A_{int} \Delta z - \left(F_u(z_k) - F_u(z_{k-1}) \right) A_{int}$$

4.2.2.1 Applying boundary conditions

The problem has two boundary conditions. The first is a Dirichlet condition at the inlet, imposed by defining the first flux as:

$$F_u(z_{-1}) = F_u(z_{inlet})$$

For the Neumann condition at the outlet, no change is made to the equations, since the upstream flux in the FVM makes it possible to neglect a Neumann boundary term at the end.

4.2.2.2 FVM on specific equations

Applying the FVM to the governing equations yields the following discretization; see Appendix A3 for derivations.

$$|\Omega_k| \frac{\partial \mu_i}{\partial t}(z_k) \approx w N_{c,i} \Delta z - A_{int} (N_i(z_k) - N_i(z_{k-1})), \quad (4.14)$$

And

$$m_k c_p \frac{\partial T}{\partial t}(z_k) \approx Q_T A_{int} \Delta z - A_{int} \sum_{i \in \mathcal{S}} v_i c_{p,i} \left(T(z_k) \mu_i(z_k) - T(z_{k-1}) \mu_i(z_{k-1}) \right) \quad (4.15)$$

4.2.3 FVM model validation and Grid independence

4.2.3.1 IV-curve validation

After implementing all the equations given in Table 3.1, the model was validated against an IV-curve from experimental data [16]. The error is below 10^{-2} except at quite high voltage/current, where the error is larger. Figure 4.3 compares the model with the data.

This level of agreement is sufficient for the intended operating range, as very high voltages are not relevant for typical operation. The main variable of interest is the change in moles across the cell, which exhibits similar

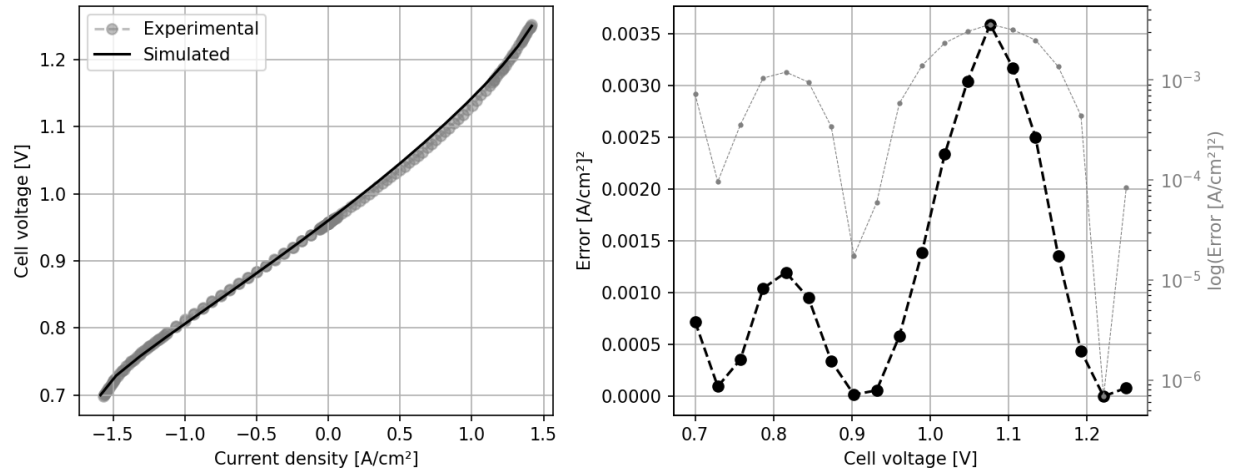


Figure 4.3: Model validation by comparing to an IV-curve from experimental data. The simulated current–voltage curve is compared to the experimental curve on the left. On the right, the error in current is shown as a function of voltage, on both logarithmic and linear scales. The experimental data is from [14], Fig. 2.

trends; at high voltage or current, the error in molar change decreases further, since the molar fractions approach their extrema (0 or 1), making relative errors negligible.

4.2.3.2 Grid independence

Grid refinement was used to assess how much the states change when the mesh is refined, and thereby to estimate the resolution required for reliable simulations later. The steady-state solver was run while doubling the number of grid points each time. Figure 4.4 indicates that if a relative error target of approximately 10^{-3} was the target. The amount of volumes needed would be around 200. But for this thesis, the amount of volumes will be 50, meaning that a relative error of around 10^{-2} will have to suffice.

But nonetheless the Steady-state equations can be solved to a rather fine precision. Leading to the next step: Solving the ODE's using the outputs of the output of the FVM.

4.2.4 Implicit Euler method (ODE solver)

As stated in the introduction to this chapter, the FVM gives the algebraic outputs needed to solve the differential equations that define degradation (Table 3.2). Those ODEs are advanced with the implicit Euler method on a uniform time grid [10].

4.2.4.1 General form

Take the ODE: $\dot{\mathbf{x}} = \mathbf{f}(t, \mathbf{x})$. Discretize time on $t \in [0, T]$ into N_t steps with $\mathbf{x}_i = \mathbf{x}(t_i)$, $t_i = t_{i-1} + \Delta t_i$, $t_0 = 0$, and $t_{N_t} = T$. Given an initial state $\mathbf{x}_0$, the implicit Euler update is

$$\mathbf{x}_i = \mathbf{x}_{i-1} + \Delta t_i \mathbf{f}(t_i, \mathbf{x}_i), \quad i = 1, \dots, N_t. \quad (4.16)$$

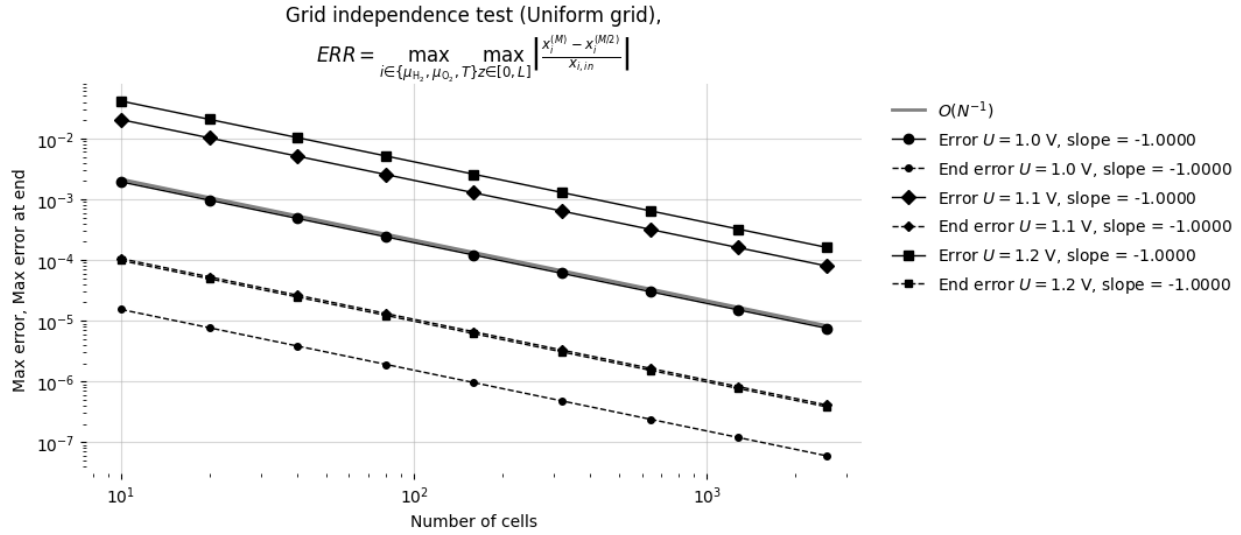


Figure 4.4: Grid-independence study of the steady-state FVM solver. The number of cells N is doubled repeatedly (5, 10, ...) at fixed inlet conditions and three cell voltages ($U = 1.0$, 1.1, and 1.2 V). Solid markers show the maximum relative change in hydrogen and oxygen chemical potentials and temperature between successive refinements; dashed markers show the same quantity at the channel outlet. All curves fall approximately as $O(N^{-1})$ (grey reference). At $N \approx 200$ the error reaches $\sim 10^{-3}$; the thesis adopts $N = 50$, for which the error is $\sim 10^{-2}$.

Because $\mathbf{x}_i$ appears on both sides, Equation 4.16 is a fixed-point equation at each step. Damped fixed-point iteration is therefore a natural solver. The update is also Markovian: step i depends only on $\mathbf{x}_{i-1}$ and the control on $[t_{i-1}, t_i)$, so the integration can proceed one time step at a time.

4.2.4.2 Specific ODE setup


For this thesis the vector field $\mathbf{f}$ is expensive: evaluating $\dot{\mathbf{d}}$ requires converged FVM fields (temperature and current density along the stack), which themselves depend on the degradation state. The degradation state advanced at each control interval is

$$\mathbf{d}_i = \begin{bmatrix} \mathbf{d}_{\text{Ni-mi},i} \\ \mathbf{s}_{\text{IC-ox},i} \end{bmatrix}, \quad (4.17)$$

where $\mathbf{d}_{\text{Ni-mi},i}, \mathbf{s}_{\text{IC-ox},i} \in \mathbb{R}^{N_{\text{cell}}}$ collect the per-cell slow states at time t_i , with $\mathbf{s}_{\text{IC-ox},i} = \mathbf{d}_{\text{IC-ox},i}^2$. Nickel migration stores layer thickness $d_{\text{Ni-mi}}$ directly; interconnect oxidation stores squared oxide thickness $s_{\text{IC-ox}} = d_{\text{IC-ox}}^2$, consistent with Equation 3.23 and $R_{\text{IC-ox}} = d_{\text{IC-ox}}/\sigma_{\text{IC-ox}}$ with $d_{\text{IC-ox}} = \sqrt{s_{\text{IC-ox}}}$.

With piecewise-constant controls $\mathbf{u}_i$ on $[t_{i-1}, t_i)$, implicit Euler gives

$$\begin{aligned} \mathbf{d}_{\text{Ni-mi},i} &= \mathbf{d}_{\text{Ni-mi},i-1} + \Delta t_i \dot{\mathbf{d}}_{\text{Ni-mi}}(\mathbf{d}_i, \mathbf{u}_i), \\ \mathbf{s}_{\text{IC-ox},i} &= \mathbf{s}_{\text{IC-ox},i-1} + \Delta t_i \dot{\mathbf{s}}_{\text{IC-ox}}(\mathbf{d}_i, \mathbf{u}_i), \end{aligned} \quad i = 1, \dots, N_t, \quad (4.18)$$

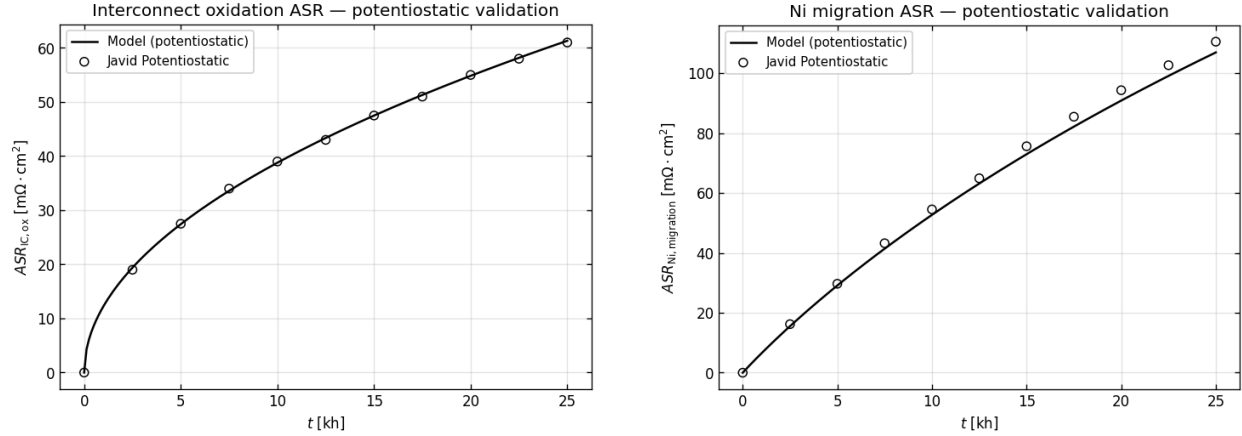

(a) Interconnect oxidation. At $t = 25$ kh: model $61.3 \text{ m}\Omega \cdot \text{cm}^2$, reference $61.0 \text{ m}\Omega \cdot \text{cm}^2$. RMSE = $0.26 \text{ m}\Omega \cdot \text{cm}^2$.

(b) Nickel migration. At $t = 25$ kh: model $106.9 \text{ m}\Omega \cdot \text{cm}^2$, reference $110.5 \text{ m}\Omega \cdot \text{cm}^2$. RMSE = $2.45 \text{ m}\Omega \cdot \text{cm}^2$.

Figure 4.5: Potentiostatic validation of ASR for (a) interconnect oxidation and (b) nickel migration. Black line: implicit-Euler simulation. Open markers: digitized reference data from [2].

where $\mathbf{d}_i$ stacks all per-cell degradation components at time t_i . The rates follow Table 3.2: $\dot{d}_{\text{Ni-mi},k} = c_1 T_k + c_2 i_k + c_3 T_k i_k + c_4$ depends on local temperature T_k and current density i_k , while $\dot{s}_{\text{IC-ox},k} = k_{\text{mg}} \exp\{-E_{a,\text{ox}}/(RT_k)\}$ depends on T_k only.

Those FVM outputs are not explicit inputs to the ODE; they are obtained by running the steady-state FVM solver with control $\mathbf{u}_i$ and degradation state $\mathbf{d}_i$. Because $\mathbf{d}_i$ appears inside that solve, each time step is a coupled fixed-point problem: guess $\mathbf{d}_i$, run FVM, evaluate the rates in Equation 4.18, update $\mathbf{d}_i$, and iterate until convergence. Giving us the heavy computation of solving the steady state for each fixed-point iteration, leading to a large computational time.

In general, the problem can be viewed on a two-dimensional grid: each spatial row (FVM cell) must be resolved repeatedly within a time step before advancing to the next column (time index).

4.2.5 Validation of the ODE solver

With the steady-state FVM validated in the previous section, the next step is to check that the coupled degradation integrator in Equation 4.18 reproduces expected long-term behaviour.

The reference case follows the potentiostatic traces reported by Beyrami et al. [4] (Fig. 8): fixed cell voltage $U = 1.285 \text{ V}$, inlet temperature $T_{\text{in}} = 750^\circ\text{C}$, and fuel composition 10 % H_2 / 90 % H_2O . At each time knot the FVM steady-state problem is solved, the degradation rates from Table 3.2 are evaluated, and the states are updated with implicit Euler (Equation 4.16) until $t = 25$ kh. This produces a history of how the degradation mechanisms develop over time. From these quantities, the area-specific resistances (ASR) can be computed and compared with the traces from Beyrami et al. in Figure 4.5.

The interconnect-oxidation agreement is very good over the full 25 kh horizon. Nickel migration follows the same trend but sits slightly below the reference curve. Given the digitization uncertainty and the simplified inlet specification relative to the original study, this level of agreement is considered sufficient for the

degradation model to be used in the optimal-control setup in Section 4.2.6.

4.2.6 Solving the Optimal Control Problem

The optimal control problem (Equation 4.1) is solved using a nonlinear programming (NLP) solver. The problem is set up for single shooting so that an NLP solver can find the optimum. The control function $\mathbf{u}$ is taken to be piecewise constant (as would also be the case in real applications).

$$\mathbf{u}^{(k)}(t) = \begin{cases} \mathbf{u}_i^{(k)} & t \in [t_i, t_{i+1}) \end{cases}$$

The problem is split into N_t subproblems, each with constant control input. From Equation 4.1 the objective φ can be rewritten as:

$$\begin{aligned} \varphi &= \int_0^T R(\mathbf{u}, \mathbf{d}) \, dt + \Psi(\mathbf{d}) \\ \Rightarrow \dot{\varphi} &= R(\mathbf{u}, \mathbf{d}) \end{aligned} \tag{4.19}$$

Thus φ is obtained by solving the auxiliary differential equation with initial condition $\varphi(0) = 0$ (numerical integration), concurrently with the state equations, and adding $\Psi(\mathbf{d})$ at the final time when the degradation at $t = T$ is known.

For the constraints in Equation 4.1, which are equality constraints, they are used directly to compute degradation and molar flows, leaving only $\mathbf{u}$ as a decision variable for the optimizer. The NLP solver also requires the gradient $\nabla_{\mathbf{u}}\varphi$; adjoint gradient methods are used [15], [7]. Further details are in Appendix A5; here it suffices that $\nabla_{\mathbf{u}}\varphi$ is available.

4.2.6.1 The full setup

The discretized problem solved is:

$$\begin{aligned} \max_{\mathbf{u}} \quad & \varphi_N + \Psi(\mathbf{d}_N) \\ \text{s.t.} \quad & \varphi_{i+1} = \varphi_i + \dot{\varphi}(\mathbf{u}_{i+1}, \mathbf{d}_{i+1}) \cdot \Delta t_i \quad \text{for } i = 1 \dots N-1 \\ & \mathbf{d}_{i+1} = \mathbf{d}_i + \dot{\mathbf{d}}(\mathbf{u}_{i+1}, \mathbf{d}_{i+1}) \cdot \Delta t_i \quad \text{for } i = 1 \dots N-1 \\ & \varphi_1 = 0, \\ & \mathbf{d}_1 = \mathbf{o}. \end{aligned} \tag{4.20}$$

as a single shooting problem, with $\mathbf{d}$ computed from the constraint equations. A convex programming algorithm is used to find the optimal u ; the problem is generally convex. For this project the trust-constr method from SciPy is used [19], a trust-region method that employs the computed gradient of φ .

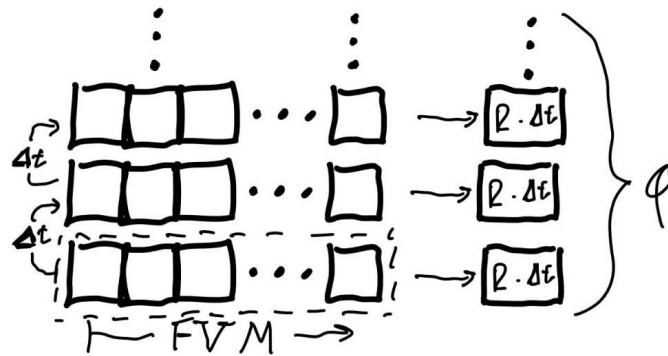


Figure 4.6: Overview of the single-shooting discretization. The horizon is divided into intervals of length Δt (vertical axis). At each interval a piecewise-constant control $\mathbf{u}_i$ drives a steady-state FVM solve of the cell equations (spatial cells along the stack, dashed box). The resulting fields and degradation state feed the running objective rate $R(\mathbf{u}, \mathbf{d})$, whose contribution $R \Delta t$ is accumulated forward to give the total objective ϕ .

5 Results and Findings

5.1 Introduction

With the full machinery in place, it was time to put it to work. The preceding chapters set up the model, the objective, and the solver; what was still missing before any results could be discussed was a single list of the **numerical settings** actually used in the optimization runs. Those defaults are collected here. Later sections vary individual knobs; this section is the common baseline they all share unless stated otherwise.

The objective itself is unchanged from Equation 4.1: maximize integrated revenue plus terminal salvation over a finite horizon. The prices and break levels are the concrete numbers plugged into that formulation. Unless stated otherwise, the runs use the settings in Table 5.1. Literature values for stack geometry and flows [16], end-of-life limits [2], cell cost [3], and energy prices [1] are indicated in the reference column; entries marked *Chosen* are project defaults.

Several entries in Table 5.1 are marked as chosen rather than taken from the literature. Brief rationale is given here; fuller discussion of all *Chosen* settings across the results chapter is in Section 6.4. The voltage and inlet-temperature bounds keep the optimizer within a range of physically plausible operating conditions for the stack model. The number of FVM cells N_{cell} and the control segments N_t were set by the computational budget of the project: finer discretizations were possible in principle, but the selected values keep each forward solve and outer iteration within tractable run times on the available hardware.

The 200-day horizon is chosen for the same practical reason. It is long enough that a change in the optimal control profile can show up within the optimization window, without extending T so far that run times and degradation forecasts dominate the workflow.

The parameter α_ψ in Equation 4.4 controls the sharpness of the terminal penalty as the cell approaches its end-of-life degradation threshold. A value of $\alpha_\psi = 0.5$ is chosen here, making the penalty function relatively gentle when the stack is healthy, but causing it to increase steeply as degradation nears its critical limit. This ensures the optimizer is sensitive to imminent failure while still allowing for some degradation earlier in the lifetime. Now to illustrate this the salvation for only a single degradation parameter is plotted in Figure 5.1, for different values of $\alpha_{\text{salvation}}$. Here we see that in $\alpha_{\text{salvation}} = 1$, we simply have a linear function. And as $\alpha_{\text{salvation}} \rightarrow 0$ we get a function that tends to zero loss, besides in the point where it hits the breaking point, where it has full loss. Here it was assessed that $\alpha_{\text{salvation}} = 0.5$ is a good compromise, between weighing all degradation while having that the degradation close to failure is of most importance.

Now through this we run 3 scenarios and analyze every scenario individually afterward generating further 3 results from sensitivity analysis.

Setting	Baseline value	Unit	Reference
Horizon T	200	days	Chosen
Control segments N_t	5	—	Chosen
U bounds	[0.8, 1.5]	V	Chosen
T_{in} bounds	[700, 900]	°C	Chosen
FVM cells N_{cell}	20	—	Chosen
Fuel / air flows	24 / 50	NL/h	[14]
Initial $h_{\text{Ni-mi}} / h_{\text{IC-ox}}$	0.75 / 1.5	μm	Values after 200 hours simulation
Break $h_{\text{Ni-mi}} / h_{\text{IC-ox}}$	5 / 10	μm	[18]
c_{H_2}	7.44	EUR/kg	[19]
c_P	0.079	EUR/kWh	[19]
c_{cell}	1000	EUR/m ²	[14], [1]
α_Ψ	0.5	—	Chosen
Optimization solver	SLSQP/Trust-Constr	—	—

Table 5.1: Baseline numerical settings for the optimization results in this chapter (unless a subsection states otherwise).

Scenario	Description	Key Parameter Varied
1	Baseline run	—
2	Constant delivery rate and Tank storage	Temperature T
3	24 hour cyclic power price	

5.2 Baseline optimization result

As announced in Section 5.1, the first result is a baseline in which both controls are held constant over the full horizon: a single cell voltage U and a single inlet temperature T_{in} , broadcast to all $N_t = 5$ segments. The optimizer is run in **potentiostatic–isothermal** (pot-iso) mode, i.e. with fixed voltage and inlet temperature on every segment. This is the most restricted operating mode considered (U and T_{in} each collapse to one scalar decision variable), analogous to fixing both aim and pump pressure in the water-gun example from Section 2.1.

All other settings follow Table 5.1. The NLP returns

$$U^* \approx 1.29 \text{ V}, \quad T_{\text{in}}^* \approx 758 \text{ °C (1031 K)}.$$

Figure 5.2 shows the replayed trajectory at these controls. Nickel-migration thickness grows from 0.75 μm to about 3.7 μm ; interconnect oxidation from 1.5 μm to about 3.1 μm . Running revenue accumulates over the 200-day window while degradation approaches the break limits enforced in the solver.

The accumulated revenue is 18.985 EUR and the terminal salvation term is 1.452 EUR, meaning the cell has lost 0.548 EUR of salvage value over the horizon. Due to the initial conditions, 0.089 EUR had already been lost at $t = 0$, leaving a loss within the control domain of 0.459 EUR and a net economy of 18.526 EUR from a 20 cm² cell over 200 days of operation.

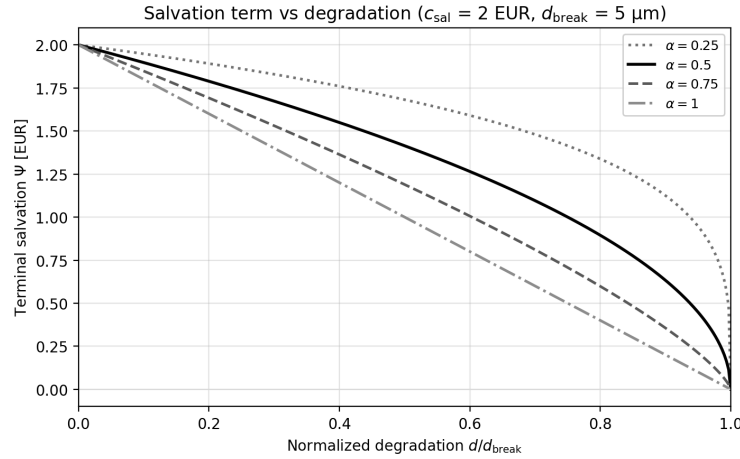


Figure 5.1: Effect of the salvation penalty sharpness parameter α_Ψ in Equation 4.4 for a single degradation variable. For $\alpha_\Psi = 1$ (blue, linear) all degradation is penalized equally, while lower α_Ψ (red, green) create a steeper penalty as end of life is approached, with near-zero penalty until close to the critical threshold. The value $\alpha_\Psi = 0.5$ (green) is chosen as a compromise.

The optimal voltage lies near the thermoneutral point, where electrolytic efficiency is highest. At this operating condition, heat generation and losses balance, so the temperature profile along the cell remains nearly uniform. Both nickel-migration and interconnect-oxidation rates depend on local temperature; with a flat temperature field, these rates are therefore similar at every spatial location. Degradation accumulates evenly along the cell rather than being concentrated in a local hot spot that would accelerate failure at one point.

5.2.1 Allowing more control freedom

The natural next step is to remove the pot-iso constraints and let the optimizer choose U_k and $T_{in,k}$ independently on each of the $N_t = 5$ control intervals. No delivery obligation is imposed in this baseline, so the objective is still $\int_0^T R dt + \Psi$ from Equation 4.1 alone.

Even with this extra freedom, **pot-iso operation remains optimal**. The best schedule coincides with the restricted solution above; flat $U_k \equiv U^*$ and $T_{in,k} \equiv T_{in}^*$ on every segment, with the same economics ($J \approx 20.44$ EUR, net economy 18.53 EUR). The additional decision variables are therefore redundant for the unrestricted baseline: segment-wise scheduling offers no benefit when revenue and salvation are maximized without a delivery contract.

Figure 5.2 illustrates this optimum. The control panels show U and T_{in} constant over the full 200-day horizon; degradation and revenue accumulate on the corresponding pot-iso replay. Operation sits near the thermoneutral point, where electrolytic efficiency is highest and potentiostatic control is gentler than galvanostatic alternatives. The result serves as a sanity check for the full model and establishes pot-iso as the reference mode before contractual delivery is introduced in Section 4.1.4.

Setting	Value	Unit	Reference
Contractual delivery $\dot{n}_{\text{H}_2, \text{agreement}}$	8.25	NL/h	Chosen
Initial tank inventory $m_{\text{tank},0}$	0	kg	Chosen
Spot purchase penalty κ_{buy}	1.5	—	Chosen
Terminal liquidation credit κ_{sell}	$\frac{1}{8}$	—	Chosen
Updated Variables	Value	Unit	Reference
Control segments N_t	20	—	Chosen

Table 5.2: Tank and delivery-agreement settings for the constant-delivery results (in addition to Table 5.1). Updating N_t to be finer to allow for better galvaniostatic controll

5.3 Constant delivery rate

The next result uses the storage-tank implementation from Section 4.1.4 with a fixed contractual delivery rate. All other settings follow Table 5.1; the additional tank parameters are listed in Table 5.2.

Meaning that we have a contract that we need to deliver what would average to 7.5 normal liters an hour for one cell. Which would be equivalent to a productional setup of two stacks each having about 150 cells each. These two stack should then produce 5kg of hydrogen combined each day to live up to the customer agreement. Then κ_{buy} , means that if we don't live up to the agreement with the customer. Means that a producer is fined by 50% of the hydrogen price for the hydrogen not delivered. And lastly κ_{sell} , means that if the hydrogen storage tank have additional hydrogen left in the tank at the end of the period, this is assumed to be sellable to 12.5% of the agreement price on an open marked, assuming that it has to compete with “black” hydrogen.

5.3.1 Freedom on all controls

Now for the most interesting case we look at what happens if we let both voltage and temperature vary through time. Here we end up having that we keep at the optimal control conditions found in Section 5.2. But then we end up two local minima, that have the same objective value, if we take the numerical precision into account. One where once we hit the agreement rate we start tuning the temperature to hit galvanotactic operation. Once the optimizer hit a point where it is possible to switch back to isothermal and potentiostatic operation and the tank will have enough content to make up for the difference between production rate and agreement rate. Once it hit this point it will prefer this to save the cell rather than sell on the free marked, this operation mode can be seen in Figure 5.3.

The other option is to run at isothermal and potentiostatic until the tank runs dry, and the switch to galvanotactic operation mode for the rest of the operation window, and can be seen in Figure 5.4.

We must assume that these two minima are the two extreme points on a continuum of minima. Although the modes along this continuum are equivalent with regard to the implemented objective function, one is clearly more favorable than the other, since in production it would be much nicer to run with a spare reserve; hence the best practical solution is the first. Another benefit is that we continuously control both temperature and current, whereas in the second control option we have a large jump in both when the tank runs dry. When piecewise controls are optimized, abrupt segment-to-segment changes can be discouraged by the optional

Setting	Value	Unit	Reference
Temperature squared continuity penalty w_T	10^{-3}	—	Chosen (Appendix A6)
Voltage squared continuity penalty w_U	10	—	Chosen (Appendix A6)
Updated Variables	Value	Unit	Reference
Horizon T	24	h	Chosen
Control segments N_t	12	—	Chosen
Terminal liquidation credit κ_{sell}	0	—	Chosen
Initial tank inventory $m_{\text{tank},0}$	$m_{\text{tank},T}$	—	Periodic boundary (??)
Power price $c_{P,k}$	$\bar{c}_P \left(1 - a \cos \left(2\pi \frac{h_k - 12 \text{ h}}{24 \text{ h}} \right) \right)$	EUR/(W·s)	Chosen
Mean power price $\bar{c}_P$	0.079	EUR/kWh	[19]
Relative price swing a	0.5	—	Chosen

Table 5.3: Updated model settings for the 24-hour cyclic scenario. No terminal sale of hydrogen is allowed ($\kappa_{\text{sell}} = 0$), and the initial tank content is enforced as a periodic boundary. Twelve control segments are used for the day. The piecewise-constant power price on segment k follows a single cosine cycle over 24 h, with h_k the hour-of-day at the segment midpoint; the minimum $c_{P,k} = \bar{c}_P(1 - a)$ occurs at midday ($h_k = 12 \text{ h}$) and the maximum $\bar{c}_P(1 + a)$ at midnight, modelling lower prices when solar supply is high. The continuity weights w_U and w_T enter the soft penalty Appendix A6; with potentiostatic voltage only w_T is effective.

squared continuity soft penalty defined in Appendix A6; it was not activated in the constant-delivery runs reported here ($w_U = w_T = 0$).

In both cases the running revenue is the same add 15.87 EUR. And the final salvation is 1.21 EUR, leading to a loss in cell-value of 0.7 EUR. And in both cases the tank has as little hydrogen left, such that the influence on the final objective can be neglected. But And the final net-revenue ends up at 15.10 EUR.

5.4 24-hour cycle with varying power price

The final scenario shortens the horizon to one day and replaces the flat power price with a time-varying profile. The cosine form in Table 5.3 is a stylized stand-in for solar-driven day–night spreads: electricity is cheapest around midday and most expensive around midnight. Together with the contractual delivery setup from Section 5.3, this case tests whether the optimizer shifts production toward low-price periods while still meeting the agreement.

Terminal liquidation is disabled ($\kappa_{\text{sell}} = 0$), and the cyclic inventory constraint Equation 4.9 is enforced so that $m_{\text{tank}}(0) = m_{\text{tank}}(T)$. The day can therefore be studied as a repeating operating window without end-of-horizon sell-off. The updated settings are listed in Table 5.3.

Voltage is held potentiostatic and a large weight w_U discourages segment-to-segment voltage changes; temperature remains the primary free control. The optimal trajectory is shown in Figure 5.5. Production is highest when the power price is low and reduced when prices rise at night. The response is qualitatively as expected for load shifting, but the profile is simple: the optimizer modulates inlet temperature rather than exploiting both voltage and temperature.

The economic decomposition of the optimized run is as follows. Integrated running revenue over the 24-h window is 0.074 EUR and the terminal salvation term is 1.91 EUR, giving a total objective of 1.98 EUR. Degradation over a single day is negligible (salvage loss $\lesssim 0.01$ EUR), so the net economy from operation is effectively 0.07 EUR for the 20 cm² cell.

Two modelling choices shape this outcome strongly. The cyclic tank constraint removes any terminal credit for leftover inventory and, together with the delivery obligation, forces production and storage to balance over the day rather than deferring output indefinitely. The continuity penalties bias the solution toward smooth temperature profiles and, through $w_U \gg w_T$, toward an effectively fixed voltage. In exploratory runs, increasing w_T pushes the optimizer back toward near-isothermal operation, whereas smaller values allow sharper concentration of production in the cheapest price windows.

5.4.1 Summary

This 24-hour case closes the results sequence begun in Section 5.2 and Section 5.3. Where the long-horizon baseline favours steady potentiostatic–isothermal operation and the delivery case exposes degenerate optima tied to tank use, the 24-hour cyclic run shows that time-varying electricity prices alone can induce deliberate scheduling—here through inlet temperature—while contractual delivery and periodic inventory are satisfied. Economically, almost all of the reported objective value sits in terminal salvation rather than the one-day cash flow (1.98 EUR total versus 0.07 EUR net operating economy), which is expected for a short horizon with little degradation.

The pattern is economically sensible but not surprising: shift electrolysis toward cheap power and lean on the tank to bridge expensive intervals. That simplicity is still informative, because it confirms that the revenue, storage, and price models are coupled as intended. At the same time, the result should not be over-interpreted: a single-harmonic price curve, fixed continuity weights, and the cyclic boundary are strong structural assumptions. Real markets exhibit ramps, negative prices, and correlation with renewable output that this stylized setup does not capture; the sensitivity to w_T , w_U , and the tank closure rule noted above underlines that operational conclusions from this scenario depend on those choices. A natural next step would be to test alternative terminal treatments, finer temporal resolution, or measured price series before drawing firm scheduling recommendations.

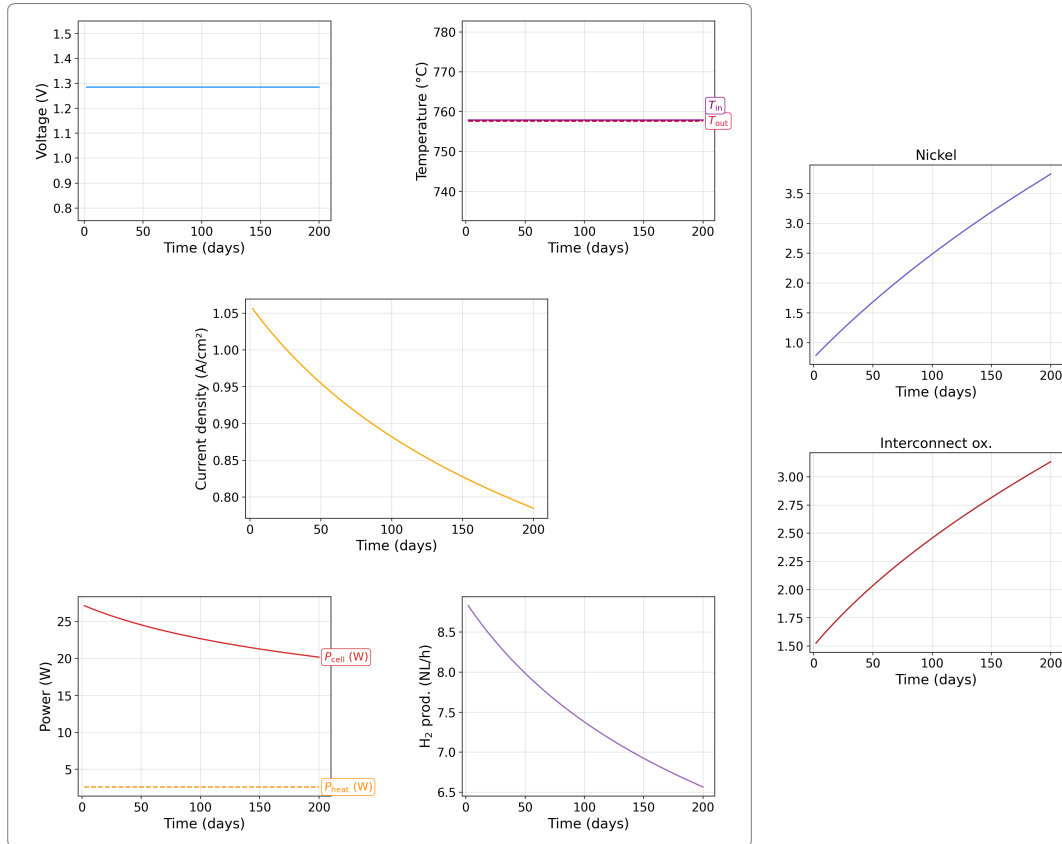


Figure 5.2: Baseline potentiostatic–isothermal optimum with no delivery contract ($N_t = 5$; settings in Table 5.1). The optimizer returns a single pair of controls, $U^* \approx 1.29$ V and $T_{in}^* \approx 758$ °C, broadcast unchanged over the full 200-day horizon (top panels). Operation sits near the thermoneutral point: P_{heat} remains small and T_{out} stays close to T_{in} , so degradation rates are spatially uniform. As nickel migration and interconnect oxidation accumulate (right panels, from 0.75 to ≈ 3.7 μm and from 1.5 to ≈ 3.1 μm , respectively), potentiostatic control lets current density, cell power, and $\dot{n}_{H_2, \text{prod}}$ decline steadily from about 0.86 A/cm², 22 W, and 7.3 NL/h toward 0.73 A/cm², 18 W, and 6.1 NL/h. Integrated running revenue is 18.99 EUR and terminal salivation 1.45 EUR (net economy 18.53 EUR for the 20 cm² cell). The same flat schedule remains optimal when segment-wise control freedom is restored (Section 5.2).

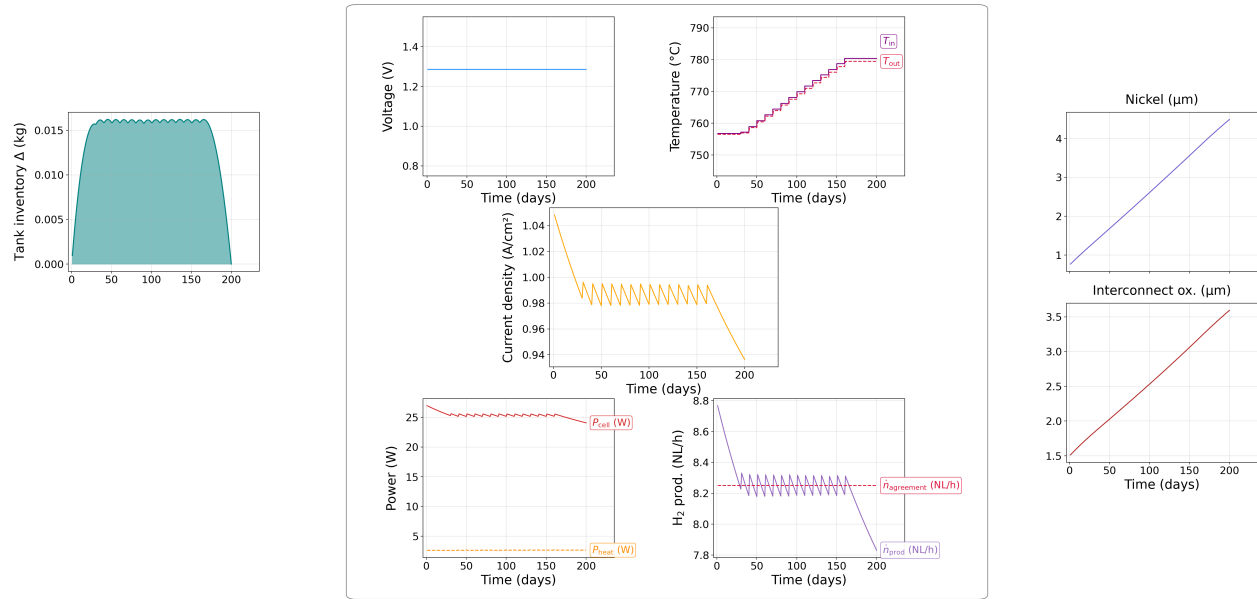


Figure 5.3: Constant-delivery optimum with free voltage and temperature controls ($N_t = 20$; settings in Table 5.2). One corner case of a continuum of numerically equivalent local minima: after an initial potentiostatic-isothermal phase at the baseline optimum (Section 5.2), inlet temperature is raised in steps so that production tracks the contractual rate $\dot{n}_{\text{H}_2, \text{agreement}} = 8.25 \text{ NL/h}$ (dashed pink line) while U remains fixed near 1.28 V. The tank inventory (left panel) builds to about 0.016 kg by day 40 and is then drawn down only in the final segment, when operation reverts to potentiostatic-isothermal and production falls below the agreement rate. Between these pot-iso bookends, current density and $\dot{n}_{\text{H}_2, \text{prod}}$ oscillate segment-wise around the target—the signature of galvanostatic scheduling achieved through temperature modulation. Nickel migration and interconnect oxidation (right panels) accumulate steadily over the 200-day horizon. Running revenue and terminal salvation match the alternative minimum in Figure 5.4 (15.87 and 1.21 EUR, respectively).

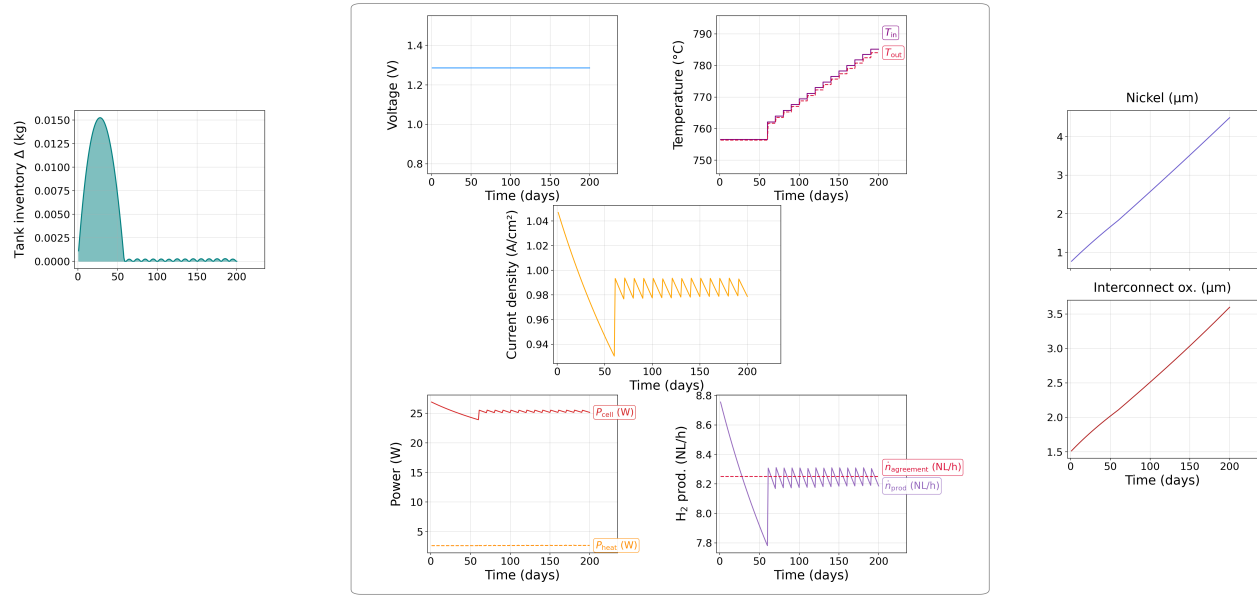


Figure 5.4: Alternative constant-delivery local minimum with the same objective value as Figure 5.3. The optimizer again holds U constant near 1.28 V, but defers galvanostatic scheduling until the tank is exhausted: potentiostatic–isothermal operation continues with fixed $T_{\text{in}} \approx 757^\circ\text{C}$ while degradation lowers $\dot{n}_{\text{H}_2, \text{prod}}$ below $\dot{n}_{\text{H}_2, \text{agreement}}$ and the inventory peak (left panel, ≈ 0.015 kg around day 30) is fully consumed by day 60. At that point both temperature and current jump abruptly to galvanostatic tracking of the agreement rate for the remainder of the horizon, with further stepwise increases in T_{in} compensating degradation. After the switch the tank carries only a small oscillating surplus. Economics are identical to Figure 5.3, but the late, discontinuous mode change makes this trajectory less attractive in practice than maintaining a reserve and reverting to gentler pot-iso operation before the horizon ends.

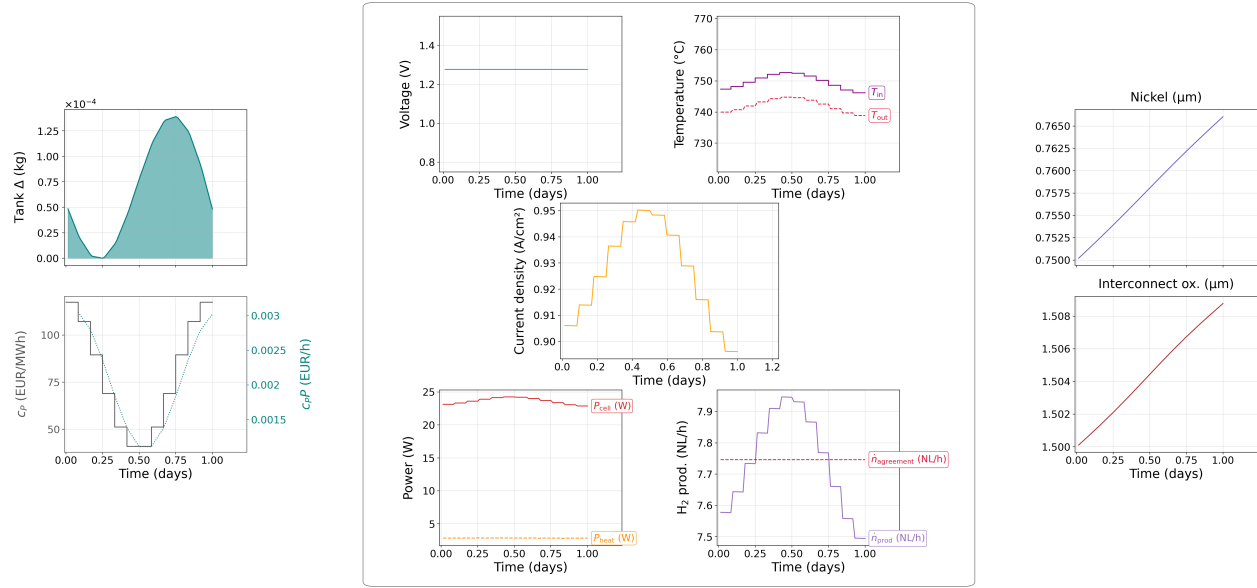


Figure 5.5: 24-hour cyclic optimum under a diurnal power price ($N_t = 12$; settings in Table 5.3). Voltage is held potentiostatic near 1.28 V ($w_U = 10$), and inlet temperature is the primary free control ($w_T = 10^{-3}$). The piecewise-constant electricity price $c_{P,k}$ (bottom-left panel) follows a single cosine cycle with its minimum at midday and maximum at midnight; the corresponding hydrogen revenue rate $c_{H_2}P$ mirrors this pattern. In response, T_{in} is raised in steps through the cheap midday segments, lifting current density and $\dot{n}_{H_2,prod}$ to a peak of about 7.95 NL/h while production is throttled to ≈ 7.5 NL/h overnight. The contractual rate $\dot{n}_{H_2,agreement}$ (dashed red line) is met on average via the tank: inventory (top-left panel) is drawn down in the morning, rebuilt during low-price production, and returned to its initial level at $t = 24$ h ($\kappa_{sell} = 0$). Degradation over one day is negligible (right panels). Integrated running revenue is 0.07 EUR and terminal salvation 1.91 EUR.

6 Discussion and Conclusion

6.1 Introduction

The results in Section 5.1–Section 5.4 suggest that potentiostatic-isothermal operation is preferred. The optimizer seeks to get as close to this operational state as possible when contracted delivery is introduced, adjusting only the temperature to avoid penalties for under-delivery. Similarly, in the daily varying price scenario, adjustments are made in temperature to maintain thermoneutral operation. If it were not for the salvation term that penalizes degradation, the solution temperature would likely rise to the upper bound, this is particularly true in the first result (Section 5.2). In the other two cases, however, control is dominated by the delivery contract and the price profile; the salvation term changes little over those horizons, so Ψ has limited influence on the optimal trajectory. But what does this mean? Section 6.2 and Section 6.3 interpret how the controls are used and whether the trajectories are plausible; Section 6.4 reviews the project-specific numerical defaults marked *Chosen* in the results tables; and Section 6.5 states which modelling and discretization choices bound how far those conclusions can be extrapolated. ?? collects extensions that follow from these findings.

6.2 Interpretation of optimal operating strategies

Taken together, the results indicate that extra control freedom is used only when contractual delivery or time-varying prices force a departure from potentiostatic-isothermal operation. The subsections below follow that logic.

6.2.1 Baseline without delivery obligations

The first question is how much of the available control freedom is actually used. For the unrestricted baseline (Section 5.2), the answer is very little: without a delivery floor, maximizing $\int R \, dt + \Psi$ favours steady efficient production, and the optimal mode remains potentiostatic-isothermal. The additional decision variables are largely redundant in this scenario.

Thermoneutral efficiency also pins voltage. Because operation near the thermoneutral point is optimal for revenue, U is effectively constant across all cases considered. A repeat study with voltage fixed potentiostatic and only one remaining degree of freedom, either piecewise galvanostatic current with inferred temperature, or piecewise isothermal T_{in} with inferred current, would likely reproduce the same qualitative conclusions while reducing the decision space.

6.2.2 Effect of a fixed delivery contract

A second question concerns how controls are parametrized within each segment. Here, both U and T_{in} are held constant on every control interval because the NLP is set up that way (Section 4.2.6). In the delivery case (Section 5.3), production often fluctuates around the agreement rate; in those intervals, holding galvanostatic current fixed would be the more natural mode. Allowing the optimizer to choose the operating mode—potentiostatic, galvanostatic, or isothermal, within each interval would be a direct extension. Even without that choice, the results still show where galvanostatic operation arises and how tank inventory mediates the switch.

6.2.3 Temperature jumps and implementability

Piecewise-constant optimal controls can imply large instantaneous changes in T_{in} between segments. Such jumps are difficult to implement on hardware and are not charged directly in the base formulation. In the 24-hour run, a squared continuity soft penalty was added retrospectively (Appendix A6, Appendix A6). A more physical alternative would be to include the auxiliary preheat power required to move from one inlet set-point to the next within a segment duration, or to model thermal cycling as an additional degradation driver.

6.3 Implied lifetime and proximity to break limits

Across the long-horizon runs, current densities are relatively high and the modelled degradation states approach the chosen break limits within 200 days (Table 5.1). That window is far shorter than stack lifetimes reported in the SOEC literature. Beyrami et al. predict lifetimes above 50,000 h at 0.6 A cm^{-2} when component failure criteria are enforced [2], and later embed stack lifetimes of 4–5 years into plant-scale economic optimization [3]. Giridhar et al. obtain replacement schedules on the order of 2–5 years depending on electricity price and operating mode [9].

The gap is partly expected: this thesis maximizes revenue plus salvation over a fixed 200-day horizon rather than full lifetime, and the delivery scenarios include galvanostatic periods that accelerate the modelled degradation mechanisms. It nevertheless suggests that one or more modelling choices may be too permissive. The fitted nickel-migration rate law (Section 3.2.2) is a simple empirical relation and may overpredict thickness growth at the currents seen in optimization.

6.3.1 Revenue–salvation balance in the objective

A complementary explanation lies in the scalar objective itself. The weighting between running revenue and terminal salvation may be misaligned: if c_{cell} or α_{Ψ} in Equation 4.4 understate the cost of approaching end-of-life, the optimizer can accept aggressive temperature and current profiles that literature-scale lifetime studies would reject. Ohmic losses grow linearly with the resistances induced by nickel migration and interconnect oxidation, while the degradation rates themselves generally slow as the states evolve. A marginal increase in temperature therefore buys disproportionately more revenue for a given increment in resistance. The salvation term is bounded and does not rise sharply enough everywhere in state space to offset that trend unless α_{Ψ} is chosen very large.

One alternative is to replace the hard break limits used here with a failure probability that scales revenue at each instant. A schematic form is

$$\int_0^T (1 - P_{\text{fail}}(U, T, I, \mathbf{x})) R \, dt + \mathbb{E}[\tau_{\text{life}} \mid \mathbf{x}_T] \mathbb{E}[R \mid \mathbf{x}], \quad (6.1)$$

where P_{fail} is the probability that the cell reaches a failure criterion given the controls and degradation state $\mathbf{x}$, and $\mathbb{E}[\tau_{\text{life}} \mid \mathbf{x}_0]$ is the expected remaining lifetime from the initial state.

Rather than stopping the simulation at a hard cap, revenue would be discounted by the instantaneous risk of failure, and the second term would reward expected production over life. In principle, P_{fail} could rise sharply once degradation states pass critical thresholds, giving a stronger, and nonlinear, penalty for operating too aggressively than the linear resistance increase combined with the bounded salvation term. Such a formulation would also ease the transition from cell-scale models to stack- and plant-scale objectives.

Such a model would require much more data than is currently available. However, an approximate model might be feasible with a comprehensive literature review on the probability of failure for each cell component, as this information is likely partially known. From there, it could be possible to construct a probabilistic model, though this would require substantial additional work. With such a model, it would then be possible to consider whether to optimize for expected revenue or for a different objective—such as a lower quantile of performance—depending on the desired risk tolerance.

6.4 Justification of project-specific settings

The results chapter marks several inputs as *Chosen* in Table 5.1, Table 5.2, and Table 5.3. Settings for the horizon, control segments, finite-volume mesh, operating bounds, and α_{Ψ} are already motivated in Section 5.1 and the grid-independence study (Section 4.2.3.2), which covers the baseline case (Table 5.1). The subsections below focus on the delivery and cyclic scenarios.

6.4.1 Delivery setup

Tank capacity is not listed in the tables because storage is modelled as unlimited. A finite capacity could be imposed, but its size would be another qualitative assumption; an uncapped tank isolates the delivery contract and penalty structure from inventory-cap effects.

The contractual delivery rate and the multipliers κ_{buy} and κ_{sell} are strongly coupled to the optimal control. Exploratory runs in Section 5.3 guide the reported values. If $\dot{n}_{\text{H}_2, \text{agreement}}$ is raised above the unconstrained production rate at the baseline optimum (Section 5.2), the solver eventually drives the cell to the break limits, because sustaining that throughput is too aggressive. Relaxing the break thresholds instead yields galvanostatic operation over essentially the full horizon. If the agreement rate is set below the baseline terminal production rate (Section 5.2), the solution depends mainly on κ_{sell} : with $\kappa_{\text{sell}} = 1$, the optimum coincides with the unrestricted baseline; with $\kappa_{\text{sell}} = 0$, inlet temperature is reduced so that $m_{\text{tank}}(T) = 0$. Intermediate values of κ_{sell} interpolate between these extremes.

write more + figure (kappa sell sweep)

The value $\kappa_{\text{sell}} = \frac{1}{8}$ used in Table 5.2 is intended as a rough market valuation: surplus hydrogen at the horizon is credited at 12.5% of the contract price, reflecting competition with lower-cost *black* hydrogen (Section 5.3). The spot-purchase penalty $\kappa_{\text{buy}} = 1.5$ makes under-production costly enough that the optimizer avoids sustained shortfalls.

Together, the entries in Table 5.2 were selected because they expose the most informative behaviour: galvanostatic intervals when production must track a relatively high agreement rate, together with a tendency to revert to gentler potentiostatic-isothermal operation whenever the tank allows it.

6.4.2 Cyclic setup

For the 24-hour case (Table 5.3), the horizon and N_t were scaled to one day with twelve two-hour segments. Terminal liquidation is set to $\kappa_{\text{sell}} = 0$ so that the periodic inventory constraint from Section 4.1.4 governs end-of-day inventory rather than a sell-off term.

The continuity weights were chosen so that a temperature step of roughly 5% of the bound window incurs a penalty on the order of 10% of the segment revenue; the voltage weight documents the potentiostatic setup (Section 5.4, Appendix A6). The cosine power-price profile provides a simple, interpretable day-night swing. Aside from the penalty weights, the cyclic parameters were not explored in a dedicated sensitivity study; qualitative scheduling patterns under those assumptions are reported in Section 5.4.

6.5 Model and numerical limitations

The results above are useful for qualitative comparison of operating modes, but several modelling and numerical choices bound how far the trajectories should be extrapolated. The subsections below separate physical scope from discretization and solver effects.

6.5.1 Physical scope and mechanism coverage

The stack model is a single one-dimensional channel with quasi-steady electrochemistry and temperature (??, Table 3.1). Flow rates, pressure, and geometry are fixed; only U and T_{in} are optimized. That scale is appropriate for asking how a representative cell responds to price and delivery incentives, but it does not resolve stack-to-stack thermal coupling, manifold maldistribution, or plant-level auxiliary loads.

Degradation is limited to nickel migration and interconnect oxidation (Table 3.2). Other ageing paths—cathode delamination, chromium poisoning, seal leakage—are not modelled dynamically. Nickel agglomeration enters only as a fixed multiplier $\lambda_c \approx 0.55$ on the exchange current (Section 3.2.1), so any further cathode loss at high current is not captured. Together with the fitted nickel-migration rate law (Section 3.2.2), this narrow mechanism set likely contributes to the short implied lifetimes discussed in Section 6.3.

Several simplifying assumptions from ?? also matter at the currents and temperatures seen in optimization: ideal-gas behaviour, negligible mass-transport overpotential, and dropped axial heat conduction. IV validation against experiment (Figure 4.3) is good in the intended range, but error grows at high voltage; because the optimizer often operates at elevated current density, local model error may be larger than the baseline replay suggests.

6.5.2 Spatial and temporal discretization

Spatial resolution and the scenario-dependent values of N_t , T , and the continuity weights are discussed in Section 6.4. In brief, grid-independence analysis (Figure 4.4) indicates that the budget-limited mesh in Table 5.1 accepts spatial error on the order of 10^{-2} , which is adequate for comparing control modes but not for quantitative lifetime forecasting.

In time, controls are piecewise constant on N_t segments (Section 4.2.6) and degradation is advanced with implicit Euler on the same grid. The segment count varies between scenarios, so finer horizons do not automatically use finer control resolution.

6.5.3 Nonlinear programming and solution quality

The optimal control problem is transcribed as a single-shooting NLP solved with SciPy’s trust-region method and adjoint gradients (Section 4.2.6, Appendix A5). Gradient checks support the implementation, but the problem is not guaranteed to be convex in practice. The delivery scenario (Section 5.3) returned two distinct local minima with equal objective value, which shows that reported trajectories need not be unique without extra constraints such as minimum inventory, continuity cost, or an operating-reserve preference.

Hard break limits on degradation states stop the forward integration when thresholds are reached. That keeps the solver well posed but introduces a non-smooth boundary that can interact with the bounded salvation term (Equation 4.4). Finally, the rolling horizon T is finite and scenario-dependent (200 days versus 24 hours), so terminal salvation can dominate short windows even when running revenue drives the qualitative scheduling pattern (Section 5.4).

6.6 Conclusions

1. **Control freedom is scenario-dependent.** Additional temporal freedom in U and T_{in} did not change the optimal operating mode for the unrestricted 200-day baseline: potentiostatic–isothermal operation near the thermoneutral point remained optimal. Freedom became economically relevant only when a fixed hydrogen delivery contract and buffer tank were introduced.
2. **Delivery contracts activate inventory-aware operation.** With contractual offtake, the optimizer alternates between gentle potentiostatic–isothermal periods and galvanostatic periods dictated by tank inventory and penalty prices. Multiple control trajectories can achieve the same objective, so uniqueness should not be assumed without further constraints.
3. **Degradation-aware objectives favour uniform, moderate operation.** Flat temperature profiles and operation away from aggressive current densities slow both modelled degradation mechanisms and align with the salvation term. This provides a consistent link between the physical degradation model and the economic optimum in the cases studied.
4. **The toolchain is fit for purpose at engineering fidelity.** IV validation, ODE replay against reference degradation data, and gradient checks support using the model for qualitative optimal-control studies, subject to the spatial-resolution and mechanism-scope limitations in Section 6.5.
5. **Objective choice shapes what “optimal” means.** The implemented form $\int_0^T R dt + \Psi$ differs

from the weighted schematic in Equation 2.1 and from LCOH- or efficiency-based objectives in the literature (Section 6.3). Several reported degeneracies—especially equivalent delivery trajectories—are artefacts of that scalar choice.

6.7 Use of generative AI tools

7 Future Work

The preceding chapters establish a cell-scale optimal-control toolchain and use it to compare baseline, contractual-delivery, and diurnal-price scenarios. The discussion in Section 6.1-Section 6.5 also highlights where the present model, objective, and solver stop short of plant-scale decision support. The items below are grouped by theme; they extend the work without repeating conclusions already drawn in ??.

7.1 Modelling and degradation

- Extend the degradation state beyond nickel migration and interconnect oxidation, or calibrate the fitted rate laws against long-duration experiments at the current densities seen in optimization.
- Replace the fixed agglomeration multiplier λ_c with a dynamic state when operating far from the calibration point.
- Include auxiliary preheat power or a thermal-cycling degradation term so that segment-to-segment temperature changes carry an explicit cost (Section 6.2).
- Move from a single channel to stack- or plant-scale models with shared thermal and gas-management constraints.

7.2 Objectives and economics

- Implement the risk-aware objective sketched in Equation 6.1, or compare the present $\int R dt + \Psi$ form directly with LCOH- and efficiency-based objectives from the literature (Section 6.3).
- Break objective degeneracies in the delivery case with a minimum-inventory penalty, reserve constraint, or preference for smoother tank utilisation.
- Test sensitivity to κ_{buy} , κ_{sell} , α_Ψ , and alternative terminal treatments for tank inventory (Section 5.4).

7.3 Control parametrization

- Repeat the scenario suite with voltage fixed potentiostatic and a single remaining degree of freedom, as suggested in Section 6.2.
- Allow the optimizer to select the operating mode per segment—potentiostatic, galvanostatic, or isothermal—rather than holding both U and T_{in} constant on every interval.
- Refine N_t and compare piecewise-constant schedules against measured day-ahead or intraday price series instead of the single-harmonic profile in Table 5.3.

7.4 AC:DC Optimization [17]

- Develop an objective function specifically designed for very short time horizon optimizations, in which the cell's mechanical and electrochemical responses cannot be assumed to be instantaneous. This would require accounting for the finite dynamic response of the cell, capturing any lag between input changes and their physical effects.
- Extend the degradation modelling framework to include not only irreversible but also reversible degradation mechanisms. By doing so, it becomes possible to study phenomena where the cell's performance may partially recover under certain operating conditions, enabling a more nuanced optimization of lifetime and efficiency.
- Formulate a single-period control trajectory that is completely unconstrained in shape, allowing the optimization procedure to discover non-standard or unexpected control profiles that might yield improved performance. This unconstrained formulation could help identify new strategies that would be otherwise overlooked under more restrictive parameterizations.
- Establish realistic constraints for the periodic control function in order to ensure that the resulting schedules are physically feasible and implementable in practice. These constraints could include bounds on ramp rates, limits on the magnitude of control variables, or conditions that enforce smooth transitions between periods, reflecting actual system limitations and safety requirements.

A1 Deriving PDEs for species balances

Following [14], eqs. [A-3]–[A-5]:

$$\frac{PV}{RT} \frac{\partial x_{\text{H}_2\text{O}}}{\partial t} = \underbrace{A_{int} N_{in, \text{H}_2\text{O}}}_{\text{Inlet}} + \underbrace{A_{cell} N_{a, \text{H}_2\text{O}}}_{\text{Cell contribution}} - \underbrace{A_{int} N_{out, \text{H}_2\text{O}}}_{\text{Outlet}}$$

$$N_{in/out, \text{H}_2\text{O}} = v_{fuel} \mu_{in/out, \text{H}_2\text{O}}$$

$$N_{a, \text{H}_2\text{O}} = \nu_{\text{H}_2\text{O}} \frac{i}{2F}$$

The equations are also required in terms of the concentration $\mu_{\text{H}_2\text{O}}$, defined by:

$$\mu_{\text{H}_2\text{O}} = \frac{n_{\text{H}_2\text{O}}}{V}$$

Substituting these relations and the ideal gas law, then discretizing, gives

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{A_{cell}}{V} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + \frac{A_{int}}{V} v_{fuel} (\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z))$$

With $A_{cell} = w\Delta z$ and $V = \Delta z A_{int}$, isolating the time derivative yields

$$\begin{aligned} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} &= \frac{w\Delta z}{A_{int}\Delta z} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + \frac{A_{int}}{A_{int}\Delta z} v_{fuel} (\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z)) \\ &= \frac{w}{A_{int}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} + v_{fuel} \frac{(\mu_{\text{H}_2\text{O}}(z - \Delta z) - \mu_{\text{H}_2\text{O}}(z))}{\Delta z} \end{aligned}$$

Letting $\Delta z \rightarrow 0$ yields

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{int}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} - v_{fuel} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$$

or, since $N_{\text{H}_2\text{O}} = v_{\text{fuel}} \mu_{\text{H}_2\text{O}}$,

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{\text{int}}} \nu_{\text{H}_2\text{O}} \frac{i}{2F} - \frac{\partial N_{\text{H}_2\text{O}}}{\partial z}$$

The same steps for H₂ and O₂ give

$$\frac{\partial \mu_i}{\partial t} = \frac{w}{A_{\text{int}}} \nu_i \frac{i}{2F} - \frac{\partial N_i}{\partial z}, \quad \text{for } i \in \{\text{H}_2\text{O}, \text{H}_2, \text{O}_2\}$$

with $\nu_i = (1, -1, -\frac{1}{2})^\top$.

A1.1 Unit check (H₂O)

A unit check on the H₂O equation gives

$$\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t} = \frac{w}{A_{\text{int}}} \frac{i}{2F} - v_{\text{fuel}} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$$

Left side units: - $\frac{\partial \mu_{\text{H}_2\text{O}}}{\partial t}$: $[\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$

Right side units: - $\nu_{\text{H}_2\text{O}} \frac{w}{A_{\text{int}}} \frac{i}{2F}$: - $\nu_{\text{H}_2\text{O}}$ is dimensionless. - $\frac{w}{A_{\text{int}}}$: $[m]/[m^2] = [m^{-1}]$ - $\frac{i}{2F}$: $[A \cdot \text{m}^{-2}]/[C \cdot \text{mol}^{-1}]$

$$[m^{-1}] \cdot [A \text{m}^{-2}]/[C \text{mol}^{-1}] = [A \text{m}^{-3}]/[C \text{mol}^{-1}]$$

Next, since $1 \text{ A} = 1 \text{ C/s}$:

$$= [C \text{s}^{-1} \text{m}^{-3}]/[C \text{mol}^{-1}] = [\text{mol} \text{s}^{-1} \text{m}^{-3}]$$

So the total units are $[\text{mol} \text{m}^{-3} \text{s}^{-1}]$

- $v_{\text{fuel}} \frac{\partial \mu_{\text{H}_2\text{O}}}{\partial z}$: $[m \cdot \text{s}^{-1}] \cdot \frac{[\text{mol} \cdot \text{m}^{-3}]}{[m]} = [\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$ (since $\partial \mu / \partial z$ has units concentration per length, i.e. $[\text{mol} \cdot \text{m}^{-3}]/[m] = [\text{mol} \cdot \text{m}^{-4}]$).

Both terms on the right match the left-hand side, $[\text{mol} \cdot \text{m}^{-3} \cdot \text{s}^{-1}]$.

A2 Deriving PDEs for energy balances

Starting from the thermal energy equation with $\mathcal{S} = \{\text{H}_2\text{O}, \text{O}_2, \text{H}_2\}$:

$$\rho \frac{\partial h}{\partial t} = \frac{\partial p}{\partial t} + \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (h_i N_i) + Q_T$$

With $\frac{\partial p}{\partial t} = \frac{\partial p}{\partial z} = 0$ and $h \approx c_p T$, this becomes

$$\rho c_p \frac{\partial T}{\partial t} = \nabla \cdot (\lambda_T \nabla T) - \sum_{i \in \mathcal{S}} \nabla \cdot (c_p T N_i) + Q_T$$

Neglecting thermal conductivity,

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} c_{p,i} \nabla \cdot (T N_i) + Q_T$$

In one dimension,

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} c_{p,i} \frac{\partial T N_i}{\partial z} + Q_T$$

With $N_i = v_i \mu_i$,

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \frac{\partial T \mu_i}{\partial z} + Q_T$$

A2.1 Source term

The volumetric source follows from the cell power,

$$P = i A_{\text{cell}} U,$$

which is the current times the cell voltage. Dividing by the volume gives Q_T :

$$Q_T = \frac{P}{V} = \frac{A_{cell}}{V} iU$$

With $A_{cell} = wdz$ and $V = A_{int}dz$,

$$Q_T = \frac{w}{A_{int}} iU$$

The full equation is therefore

$$\rho c_p \frac{\partial T}{\partial t} = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \frac{\partial T \mu_i}{\partial z} + \frac{w}{A_{int}} iU$$

A2.2 Steady-state limit

Expanding the advective term and setting $\partial_t T = 0$ gives

$$0 = - \sum_{i \in \mathcal{S}} v_i c_{p,i} \left(\frac{\partial T}{\partial z} \mu_i + T \frac{\partial \mu_i}{\partial z} \right) + \frac{w}{A_{int}} iU$$

Substituting $h_i = c_{p,i}T$ and the steady-state species balance $v_i \frac{\partial \mu_i}{\partial z} = \frac{w}{A_{int}} \nu_i \frac{i}{n_e F}$ yields

$$0 = - \sum_{i \in \mathcal{S}} \left(v_i c_{p,i} \frac{\partial T}{\partial z} \mu_i + \frac{w}{A_{int}} \frac{i}{n_e F} \nu_i h_i \right) + \frac{w}{A_{int}} iU$$

Factoring out the common terms,

$$0 = - \frac{\partial T}{\partial z} \sum_{i \in \mathcal{S}} v_i c_{p,i} \mu_i - i \frac{w}{A_{int}} \sum_{i \in \mathcal{S}} \nu_i h_i + i \frac{w}{A_{int}} U$$

With

$$\sum_{i \in \mathcal{S}} v_i c_{p,i} \mu_i = C_p, \quad U_{th} = \frac{1}{n_e F} \sum_{i \in \mathcal{S}} \nu_i h_i$$

this gives

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z}$$

A3 Computing the finite-volume discretization

A3.1 Species balances

From Equation 3.5, Equation 3.6 and Equation 3.7, integration over a cell volume gives

$$\int_{\Omega_k} \frac{\partial \mu_i}{\partial t} dV = \int_{\Omega_k} \frac{w}{A_{int}} N_{c,i} dV - \int_{\Omega_k} \frac{\partial N_i}{\partial z} dV$$

The time derivative can be taken outside the integral, and integrating the concentration over a volume gives the moles in that volume:

$$\int_{\Omega_k} \frac{\partial \mu_i}{\partial t} dV = \partial_t \int_{\Omega_k} \mu_i dV = \frac{\partial n_i}{\partial t} = \dot{n}_i$$

Using the approximation in Section 4.2.2 with $V_k = A_{int} \Delta z$,

$$\int_{\Omega_k} \frac{w}{A_{int}} N_{c,i} dV \approx \frac{w}{A_{int}} N_{c,i}(z_k) V_k = w N_{c,i}(z_k) \Delta z$$

For the flux term, integration over z is performed first, then over the cross-sectional area:

$$\begin{aligned} \int_{A_{int}} \int_{z_{k-\frac{1}{2}}}^{z_{k+\frac{1}{2}}} \frac{\partial N_i}{\partial z} dz dA &\approx \int_{A_{int}} \left(N_i(z_k) - N_i(z_{k-1}) \right) dA \\ &= \left(N_i(z_k) - N_i(z_{k-1}) \right) A_{int} \end{aligned}$$

Each cell therefore satisfies

$$|\Omega_k| \frac{\partial \mu_i}{\partial t}(z_k) = \dot{n}_i(z_k) \approx w N_{c,i} \Delta z - A_{int} (N_i(z_k) - N_i(z_{k-1}))$$

A3.2 Energy balance

The steady-state form is discretized first, then the transient term.

A3.2.1 Steady state

Starting from Equation 3.18:

$$0 = i \frac{w}{A_{int}} (U - U_{th}) - C_p \frac{\partial T}{\partial z}$$

The same procedure as for the species balances gives

$$0 = \int_{\Omega_k} i \frac{w}{A_{int}} (U - U_{th}) - \int_{\Omega_k} C_p \frac{\partial T}{\partial z}$$

As before,

$$\int_{\Omega_k} C_p \frac{\partial T}{\partial z} dV \approx C_p (T(z_k) - T(z_{k-1})) A_{int}$$

Collecting terms,

$$0 \approx iw(U - U_{th})\Delta z - C_p(T(z_k) - T(z_{k-1}))A_{int}$$

A3.2.2 Transient term

For the time derivative,

$$\int_{\Omega_k} \rho c_p \frac{\partial T}{\partial t} = \int_{\Omega_k} Q_T - v \sum_{i \in \mathcal{S}} \int_{\Omega_k} c_{p,i} \frac{\partial T \mu_i}{\partial z}$$

On the left-hand side, ρ integrated over the cell volume is the cell mass m_k , so

$$\int_{\Omega_k} \rho c_p \frac{\partial T}{\partial t} \approx m_k c_p \frac{\partial T}{\partial t}(z_k)$$

The source term follows the same pattern as above, $\int_{\Omega_k} Q_T = Q_T(z_k) A_{int} \Delta z$. For the advective flux, one species is shown explicitly; the others are analogous:

$$\int_{\Omega_k} c_{p,i} \frac{\partial T \mu_i}{\partial z} \approx c_{p,i} (T(z_k) \mu_i(z_k) - T(z_{k-1}) \mu_i(z_{k-1})) A_{int}$$

The discrete energy balance is therefore

$$m_k c_p \frac{\partial T}{\partial t}(z_k) \approx Q_T(z_k) A_{int} \Delta z - \sum_{i \in \mathcal{S}} v_i c_{p,i} \left(T(z_k) \mu_i(z_k) - T(z_{k-1}) \mu_i(z_{k-1}) \right) A_{int}$$

A4 Relevant gradients for the numerical solver

A4.1 Molar balance

$$\text{Jacobian}_\mu[x] = \begin{bmatrix} \frac{1}{\mu^f} & -\frac{1}{\mu^f} & 0 \\ -\frac{1}{\mu^f} & \frac{1}{\mu^f} & 0 \\ 0 & 0 & \frac{\mu_{in,N_2}}{(\mu_{in,N_2} + \mu_{O_2})} \end{bmatrix}$$

Then

$$\nabla_\mu f(x) = (\text{Jacobian}_\mu[x])^\top \nabla_x f$$

A4.1.1 Nernst Equation

A4.1.1.1 Gradient for molar fractions: ∇_x

$$\nabla_x \eta_{nernst} = \frac{RT}{2F} \begin{bmatrix} -\frac{1}{x_{H_2O}} \\ \frac{1}{x_{H_2}} \\ \frac{1}{2x_{O_2}} \end{bmatrix}$$

A4.1.1.2 Gradient for temperature: ∇_T

$$\nabla_T \eta_{nernst} = \frac{\nabla_T(\Delta G)}{2F} + \frac{R}{2F} \log \left\{ \frac{x_{H_2} \sqrt{x_{H_2}}}{x_{H_2O} \sqrt{x_0}} \right\}$$

$$\nabla_T(\Delta G) = -0.0062T + -49.119$$

A4.1.2 Activation overpotential

A4.1.2.1 Gradient for molar fractions: ∇_x

$$\nabla_x (\text{Butler-Volmer}_\zeta) = \nabla_x (i_0^\zeta) \left(\exp \left[\alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[- (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right)$$

$$\nabla_x(i_0^a) = \gamma_a T \exp \left\{ -\frac{E_{act}^a}{RT} \right\} \begin{bmatrix} 0 \\ 0 \\ m_{O_2} \left(\frac{x_{O_2}}{x_0} \right)^{m_{O_2}-1} \end{bmatrix}$$

$$\nabla_x(i_0^f) = \lambda_f \gamma_f T \exp \left\{ -\frac{E_{act}^f}{RT} \right\} \begin{bmatrix} m_{H_2} \left(\frac{x_{H_2O}}{x_0} \right)^{m_{H_2O}-1} \left(\frac{x_{H_2}}{x_0} \right)^{m_{H_2}} \\ m_{H_2O} \left(\frac{x_{H_2O}}{x_0} \right)^{m_{H_2O}} \left(\frac{x_{H_2}}{x_0} \right)^{m_{H_2}-1} \\ 0 \end{bmatrix}$$

A4.1.2.2 Gradient for temperature: ∇_T

$$\begin{aligned} \nabla_T(\text{Butler-Volmer}_\zeta) &= \nabla_T(i_0^\zeta) \left(\exp \left[\alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - \exp \left[- (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right) \\ &+ i_0^\zeta \left(-\alpha_\zeta \frac{n_e F}{RT^2} \eta_{act}^\zeta \exp \left[\alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] - (1 - \alpha_\zeta) \frac{n_e F}{RT^2} \eta_{act}^\zeta \exp \left[- (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right) \\ \nabla_T(i_0^\zeta) &= \left(1 - \frac{E_{act}^\zeta}{RT} \right) \lambda_\zeta \gamma_\zeta \exp \left\{ -\frac{E_{act}^\zeta}{RT} \right\} \prod_{i \in \mathcal{S}} \left(\frac{x_i}{x_0} \right)^{m_i} \end{aligned}$$

A4.1.2.3 Gradient for activation overpotential: $\nabla_{\eta_{act}^\zeta}$

$$\nabla_{\eta_{act}^\zeta}(\text{Butler-Volmer}_\zeta) = i_0^\zeta \left(\alpha_\zeta \frac{n_e F}{RT} \exp \left[\alpha_\zeta \frac{n_e F}{RT} \eta_{act}^\zeta \right] + (1 - \alpha_\zeta) \frac{n_e F}{RT} \exp \left[- (1 - \alpha_\zeta) \frac{n_e F}{RT} \eta_{act}^\zeta \right] \right)$$

A4.2 Degradation**A4.2.1 Ohmic degradation****A4.2.1.1 Gradient for molar fractions: ∇_x**

$$\nabla_x R_{ohm} = \mathbf{0}$$

A4.2.1.2 Gradient for temperature: ∇_T

$$\nabla_T R_{ohm} = \left(1 - \frac{E_{a,ohm}}{RT} \right) \frac{1}{B_{ohm}} \exp \left\{ \frac{E_{a,ohm}}{RT} \right\} + \sum_{d \in \mathcal{D}_{ohm}} \nabla_T R_d$$

$$\nabla_T R_{Ni-mi} = d_{Ni-mi} \frac{T - E_{act,elec}/R}{\sigma_{elec,0} T \exp \left\{ -\frac{E_{act,elec}}{RT} \right\}}$$

A4.3 Temperature equations

A4.3.1 Specific heat**A4.3.1.1 Gradient for molar fractions: ∇_μ**

$$\nabla_\mu C_p = \begin{bmatrix} c_{p,\text{H}_2\text{O}} \\ c_{p,\text{H}_2} \\ c_{p,\text{O}_2} \end{bmatrix}$$

A4.3.1.2 Gradient for temperature: ∇_T

$$\nabla_T C_p = \sum_{i \in \mathcal{S}} \mu_i \nabla_T c_{p,i}$$

A4.3.2 Thermaneutral voltage**A4.3.2.1 Gradient for molar fractions: ∇_μ**

$$\nabla_\mu U_{th} = \mathbf{0}$$

A4.3.2.2 Gradient for temperature: ∇_T

$$\nabla_T U_{th} = \frac{1}{n_e F} \sum_{i \in \mathcal{S}} \nu_i \nabla_T h_i$$

A5 NLP Gradients

This appendix collects the gradients used in the NLP formulation of Equation 4.1. The discrete chain rule for the stage model is stated first, followed by the partial derivatives that enter it and the linear systems for sensitivities of the spatial FVM model and the slow trajectory in time.

A5.1 Discrete chain rule for the stage model

Between shooting stages, the integrated objective contribution ϕ and the degradation variables d satisfy a discrete sensitivity chain. For a scalar stage index i and a control component u_k ,

$$\frac{d}{du_k} \phi_{i+1} = \nabla_{u_i} \dot{\phi} \cdot \nabla_{u_k} u_i + \nabla_{d_i} \dot{\phi} \frac{d}{du_k} d_i + \frac{d}{du_k} \phi_i,$$

with the analogous relation for the degradation state,

$$\frac{d}{du_k} d_{i+1} = (\nabla_{u_i} \dot{d}_i) \nabla_{u_k} u_i + (\nabla_{d_i} \dot{d}_i) \frac{d}{du_k} d_i + \dots,$$

where the trailing terms collect any additional dependence of the stage map on u_k (for example through implicit stage equations).

The partial gradients of the instantaneous rates are

$$\begin{aligned} \nabla_u \dot{\phi} &= c_{H_2} \nabla_u \frac{\partial n_{H_2}}{\partial t} - c_P (u \nabla_u I - I), \\ \nabla_d \dot{\phi} &= c_{H_2} \nabla_d \frac{\partial n_{H_2}}{\partial t} - c_P u \nabla_d I - \left[c_{i,\text{utilization}} \frac{1}{d_{i,\text{critical}}} \right]_{i \in \mathcal{D}_{\text{fail}}}, \\ \nabla_\phi \dot{\phi} &= 0, \\ \nabla_u \dot{d} &= c_2 \nabla_u i + c_3 \nabla_u T + c_4 (\nabla_u i T + i \nabla_u T), \\ \nabla_d \dot{d} &= c_2 \nabla_d i + c_3 \nabla_d T + c_4 (\nabla_d i T + i \nabla_d T), \\ \nabla_\phi \dot{d} &= 0. \end{aligned}$$

Note that $\nabla_\zeta I = \frac{A_{\text{cell}}}{N_{\text{cell}}} \sum_{j=1}^{N_{\text{cell}}} \nabla_\zeta i_j$ for $\zeta \in \{u, d, \phi, \dots\}$.

The remaining ingredients are the gradients of the current density with respect to cell voltage and local degradation state; these are given below. Further electrochemical partials are listed in Appendix A4.

A5.2 Gradient with respect to cell voltage: $\nabla_u i$

The current is expressed in terms of fuel- and air-side activation branches in the same notation as Appendix A4. With scalars $\nabla_{\eta_{\text{act}}^f}$ (Butler-Volmer_f) and $\nabla_{\eta_{\text{act}}^a}$ (Butler-Volmer_a) denoting $\partial i / \partial \eta_{\text{act}}^f$ and $\partial i / \partial \eta_{\text{act}}^a$ at the operating point,

$$\nabla_u i = \frac{1}{R_{\text{ohm}} + \frac{1}{\nabla_{\eta_{\text{act}}^f} (\text{Butler-Volmer}_f)} + \frac{1}{\nabla_{\eta_{\text{act}}^a} (\text{Butler-Volmer}_a)}}.$$

A5.3 Gradient with respect to degradation: $\nabla_d i$

Similarly, with $\nabla_d R_{\text{ohm}}$ the partial of the ohmic resistance with respect to the local degradation variable,

$$\nabla_d i = -i \frac{\nabla_d R_{\text{ohm}}}{R_{\text{ohm}} + \frac{1}{\nabla_{\eta_{\text{act}}^f} (\text{Butler-Volmer}_f)} + \frac{1}{\nabla_{\eta_{\text{act}}^a} (\text{Butler-Volmer}_a)}}.$$

A5.4 Sensitivity of the spatial FVM discretization

At each time level the converged spatial state satisfies a residual of flux form. With cell index k along the stack, let $Q(u_k)$ denote the cellwise source residual and $F(u_k)$ the numerical flux between neighbours. The source term is scaled by the cell thickness Δz and the flux difference by the interface area A_{int} , so the semi-discrete steady relation is

$$0 = \Delta z Q(u_k) - A_{\text{int}} (F(u_k) - F(u_{k-1})).$$

Differentiating with respect to a parameter p (a control coefficient, a boundary value, etc.) and writing $\partial u_k / \partial p$ for the sensitivity of the converged state gives the familiar block recursion

$$\begin{aligned} & \left(\Delta z \frac{\partial Q}{\partial u_k}(u_k) - A_{\text{int}} \frac{\partial F}{\partial u_k}(u_k) \right) \frac{\partial u_k}{\partial p} + A_{\text{int}} \frac{\partial F}{\partial u_{k-1}}(u_{k-1}) \frac{\partial u_{k-1}}{\partial p} \\ & = A_{\text{int}} \left(\frac{\partial F}{\partial p}(u_k) - \frac{\partial F}{\partial p}(u_{k-1}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_k). \end{aligned}$$

Stacking all cells, this is the linear system

$$J_{\text{fvm}} \frac{\partial \mathbf{u}}{\partial p} = b_{\text{fvm}}^{(p)},$$

with the block-lower-bidiagonal Jacobian and right-hand side

$$J_{\text{fvm}} = \begin{bmatrix} \Delta_1 & & & \\ A_{\text{int}} \frac{\partial F}{\partial u_1}(u_1) & \Delta_2 & & \\ & \ddots & \ddots & \\ & & A_{\text{int}} \frac{\partial F}{\partial u_{N-1}}(u_{N-1}) & \Delta_N \end{bmatrix},$$

with $\Delta_k = \Delta z \frac{\partial Q}{\partial u_k}(u_k) - A_{\text{int}} \frac{\partial F}{\partial u_k}(u_k)$,

$$b_{\text{fvm}}^{(p)} = \begin{bmatrix} A_{\text{int}} \left(\frac{\partial F}{\partial p}(u_1) - \frac{\partial F}{\partial p}(u_{\text{in}}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_1) \\ A_{\text{int}} \left(\frac{\partial F}{\partial p}(u_2) - \frac{\partial F}{\partial p}(u_1) \right) - \Delta z \frac{\partial Q}{\partial p}(u_2) \\ \vdots \\ A_{\text{int}} \left(\frac{\partial F}{\partial p}(u_N) - \frac{\partial F}{\partial p}(u_{N-1}) \right) - \Delta z \frac{\partial Q}{\partial p}(u_N) \end{bmatrix}$$

The same block structure matches the flux assembly used in Appendix A3.

A5.5 Sensitivity of the ODE system

For this section the problem is written in general form:

$$\begin{aligned} \max_u \quad & \left\{ \text{Objective} = \int_0^T \Phi(X, d, u) dt + \Psi(X, d, u) \right\} \\ \text{s.t.} \quad & 0 = R_{\text{fvm}}(X, d, u) \\ & \dot{d} = f(X, d, u) \end{aligned}$$

The method of adjoint gradients [15], [7] is used, with the following discretization ($t_0 = 0 < t_1 \dots t_i \dots t_N = T$):

$$\begin{aligned} X(t_i) &\approx X_i, \quad d(t_i) \approx d_i, \quad u(t_i) \approx u_i. \\ R_{\text{fvm},i} &= R_{\text{fvm}}(X_{i+1}, d_{i+1}, u_i), \\ D_i &= d_{i+1} - f(X_{i+1}, d_{i+1}, u_i) \Delta t - d_i \\ \Phi_i &= \Phi(X_{i+1}, d_{i+1}, u_i) \Delta t \approx \int_{t_i}^{t_{i+1}} \Phi(X, d, u) dt \end{aligned}$$

The combined residual for the FVM constraints and the ODE defect is then:

$$R_i = \begin{bmatrix} D_i \\ R_{\text{fvm},i} \end{bmatrix}$$

The state variables are combined as

$$w_i = \begin{bmatrix} X_i \\ d_i \end{bmatrix}$$

The Jacobian of the residual with respect to the internal and control variables is

$$\begin{aligned} \frac{\partial R_i}{\partial w_i} &= \begin{bmatrix} \mathbf{0} & \frac{\partial D_i}{\partial d_i} \\ \mathbf{0} & \mathbf{0} \end{bmatrix} & \frac{\partial R_i}{\partial w_{i+1}} &= \begin{bmatrix} \frac{\partial D_i}{\partial X_{i+1}} & \frac{\partial D_i}{\partial d_{i+1}} \\ \frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}} & \frac{\partial R_{\text{fvm},i}}{\partial d_{i+1}} \end{bmatrix} & \frac{\partial R_i}{\partial u_i} &= \begin{bmatrix} \frac{\partial D_i}{\partial u_i} \\ \frac{\partial R_{\text{fvm},i}}{\partial u_i} \end{bmatrix} \\ \frac{\partial \Phi_i}{\partial w_{i+1}} &= \begin{bmatrix} \frac{\partial \Phi_i}{\partial X_{i+1}} \\ \frac{\partial \Phi_i}{\partial d_{i+1}} \end{bmatrix} & \frac{\partial \Phi_i}{\partial u_i} & \end{aligned}$$

For implementation these blocks are spelled out in more detail:

$$\begin{aligned} \frac{\partial R_i}{\partial w_i} &= \begin{bmatrix} \mathbf{0} & -\mathbf{I} \\ \mathbf{0} & \mathbf{0} \end{bmatrix} \\ \frac{\partial R_i}{\partial w_{i+1}} &= \begin{bmatrix} -\Delta t \frac{\partial f}{\partial X_{i+1}}(X_{i+1}, d_{i+1}, u_i) & \mathbf{I} - \Delta t \frac{\partial f}{\partial d_{i+1}}(X_{i+1}, d_{i+1}, u_i) \\ \frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}}(X_{i+1}, d_{i+1}, u_i) & \frac{\partial R_{\text{fvm},i}}{\partial d_{i+1}}(X_{i+1}, d_{i+1}, u_i) \end{bmatrix} \\ \frac{\partial R_i}{\partial u_i} &= \begin{bmatrix} -\Delta t \frac{\partial f}{\partial u_i}(X_{i+1}, d_{i+1}, u_i) \\ \frac{\partial R_{\text{fvm},i}}{\partial u_i}(X_{i+1}, d_{i+1}, u_i) \end{bmatrix} \end{aligned}$$

The blocks $\partial R_{\text{fvm},i}/\partial X_{i+1}$ coincide with J_{fvm} from the spatial sensitivity section (same flux assembly). At each time level:

$$\frac{\partial R_{\text{fvm},i}}{\partial X_{i+1}} = J_{\text{fvm}} \quad \frac{\partial R_{\text{fvm},i}}{\partial u_i} = \begin{bmatrix} | & | \\ b_{\text{fvm}}^{(u_1^{(U)})} & b_{\text{fvm}}^{(u_i^{(T_0)})} \\ | & | \end{bmatrix} \quad \frac{\partial R_{\text{fvm},i}}{\partial d_i} = b_{\text{fvm}}^{(d)}$$

With these blocks, the objective gradient with respect to u_i is

$$\nabla_{u_i} \text{Objective} = \frac{\partial \Phi_i}{\partial u_i} + \left(\frac{\partial R_i}{\partial u_i} \right)^\top \lambda_{i+1} \quad \text{for } i = 1, \dots, N$$

The adjoint variables $\Lambda = (\lambda_k)_k$ satisfy

$$\begin{aligned} \left(\frac{\partial R_{N-1}}{\partial w_N} \right)^\top \lambda_N &= -\frac{\partial \Phi_{N-1}}{\partial w_N} - \frac{\partial \Psi}{\partial w_N}, \\ \left(\frac{\partial R_{i-1}}{\partial w_i} \right)^\top \lambda_i + \left(\frac{\partial R_i}{\partial w_i} \right)^\top \lambda_{i+1} &= -\frac{\partial \Phi_{i-1}}{\partial w_i}, \quad i = 1, \dots, N-1. \end{aligned}$$

Equivalently, one large block system can be assembled for Λ .

$$\begin{bmatrix} \frac{\partial R_0}{\partial w_1} & & & & \\ \frac{\partial R_1}{\partial w_1} & \frac{\partial R_1}{\partial w_2} & & & \\ & \ddots & \ddots & & \\ & & \frac{\partial R_{N-2}}{\partial w_{N-1}} & & \\ & & \frac{\partial R_{N-1}}{\partial w_{N-1}} & \frac{\partial R_{N-1}}{\partial w_N} & \end{bmatrix}^\top \Lambda = - \begin{bmatrix} \frac{\partial \Phi_0}{\partial w_1} \\ \frac{\partial \Phi_1}{\partial w_2} \\ \vdots \\ \frac{\partial \Phi_{N-2}}{\partial w_{N-1}} \\ \frac{\partial \Phi_{N-1}}{\partial w_N} + \frac{\partial \Psi}{\partial w_N} \end{bmatrix}$$

A6 Squared continuity penalty

Piecewise-constant controls on N_t segments can introduce jumps between adjacent intervals. When both voltage and inlet temperature are optimized segment-wise, the optimizer may exploit those jumps unless they are penalized. The implementation adds an optional soft penalty to the running objective, proportional to the sum of squared differences between neighbouring segment values.

For segment index $k = 0, \dots, N_t - 2$, let U_k and $T_{\text{in},k}$ denote the piecewise-constant controls on segment k . With non-negative weights w_U and w_T (CLI: `--continuity-weight-u`, `--continuity-weight-T`), the penalty is

$$P_{\text{cont}} = w_U \sum_{k=0}^{N_t-2} (U_{k+1} - U_k)^2 + w_T \sum_{k=0}^{N_t-2} (T_{\text{in},k+1} - T_{\text{in},k})^2.$$

It is added to the running economic cost before integration over the horizon. Setting $w_U = w_T = 0$ disables the term (the default in Table 5.1).

In **potentiostatic** operation ($U_k \equiv U$), voltage is a single decision variable rather than a length- N_t profile, so adjacent voltage differences vanish and the w_U term contributes nothing. Only the inlet-temperature sum is active in that mode.

The penalty is smooth and cheap to evaluate; its gradient with respect to the control knots is implemented analytically in the NLP (`code/src/scripts/nlp/continuity.py`). Saved run metadata reports P_{cont} , P_U , and $P_{T_{\text{in}}}$ as the two sums in Appendix A6.

A7 Gradient verification plots

The NLP solver uses adjoint gradients assembled from the partial derivatives in Appendix A4 and Appendix A5. Before running the optimization cases in Section 5.1–Section 5.4, analytical derivatives were checked against central finite-difference (FD) approximations. Standalone scripts in `code/src/standalone/` generate the figures below; additional component-level checks exist in `code/figures/testers/grad` but are omitted here.

A7.1 End-to-end NLP objective

Figure A7.1 sweeps uniform cell voltage and inlet temperature on a single-shooting problem with $N_t = 100$ time segments ($\Delta t = 4320$ s), exercising the full adjoint chain over a long horizon. The adjoint totals $\sum_j \partial f / \partial U_j$ and $\sum_j \partial f / \partial T_{in,j}$ match the FD curves over the operating range.

A7.2 Spatial FVM Jacobian

The steady-state cell residual $r(\mu_{H_2}, \mu_{O_2}, T)$ must be differentiated when assembling the block-bidiagonal system in Appendix A5. Figure A7.2 compares each Jacobian entry to a secant FD estimate; the curves agree on the test grid.

A7.3 Electrochemical coupling

Current density enters both the degradation rates and the economic objective. Figure A7.3 and Figure A7.4 verify $\nabla_U i$ and $\nabla_d i$ from Appendix A5. Figure A7.5 checks the fuel-side Butler–Volmer branch and its partials w.r.t. temperature, composition, and activation overpotential.

A7.4 Instantaneous economic rate

Figure A7.6 checks partial derivatives of the running economic rate $\dot{\phi}$ w.r.t. outlet chemical potentials and the stack-outlet temperature that feed the stage objective in Appendix A5.

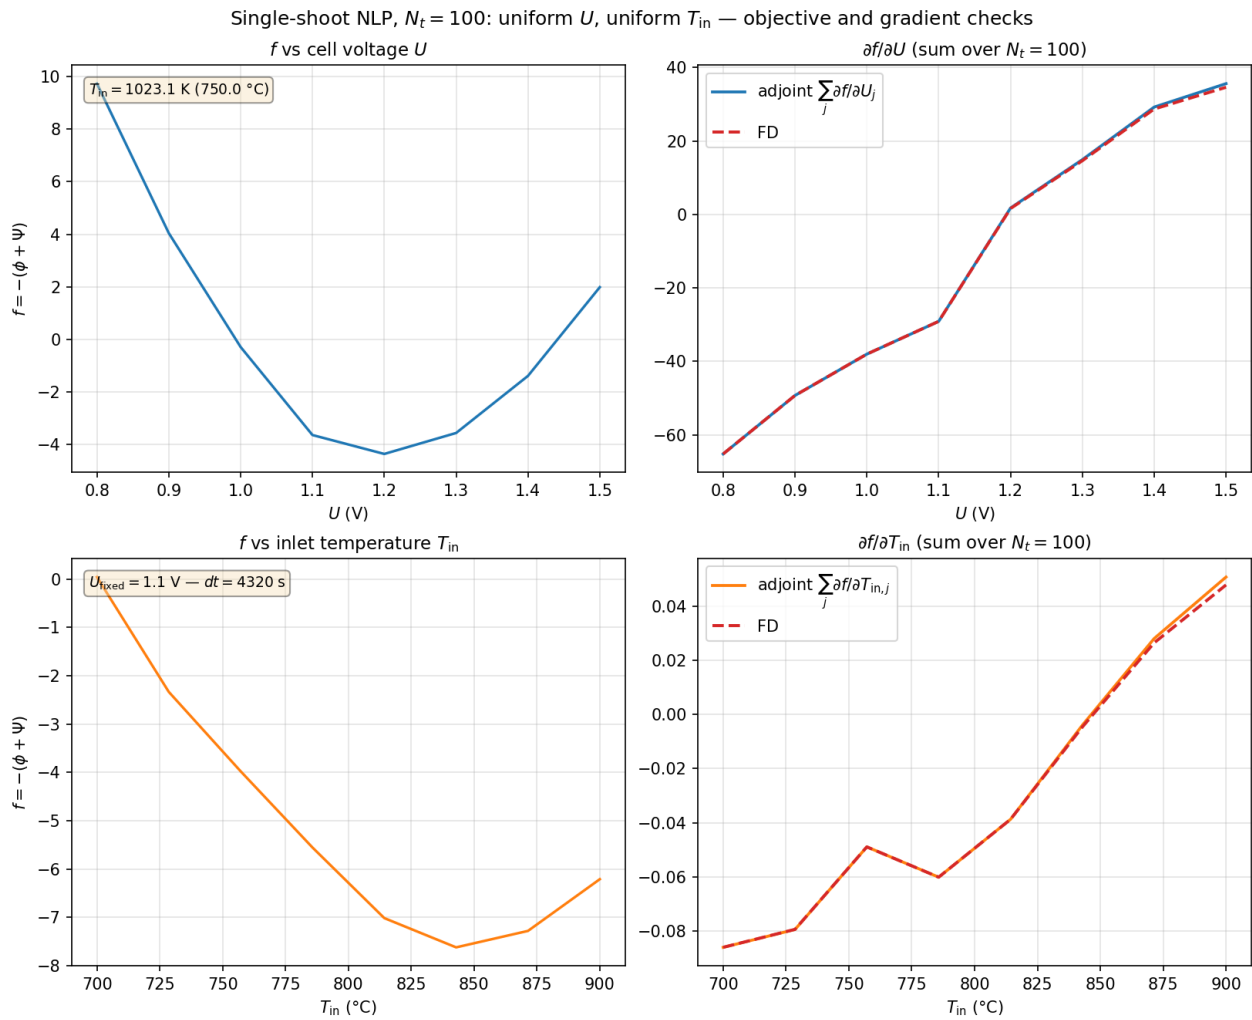


Figure A7.1: Single-shooting NLP gradient check at $N_t = 100$: objective $f = -(\phi + \psi)$ and its derivatives w.r.t. uniform cell voltage U (top) and inlet temperature T_{in} (bottom). Solid lines: adjoint; dashed: central FD with all segment controls perturbed together.

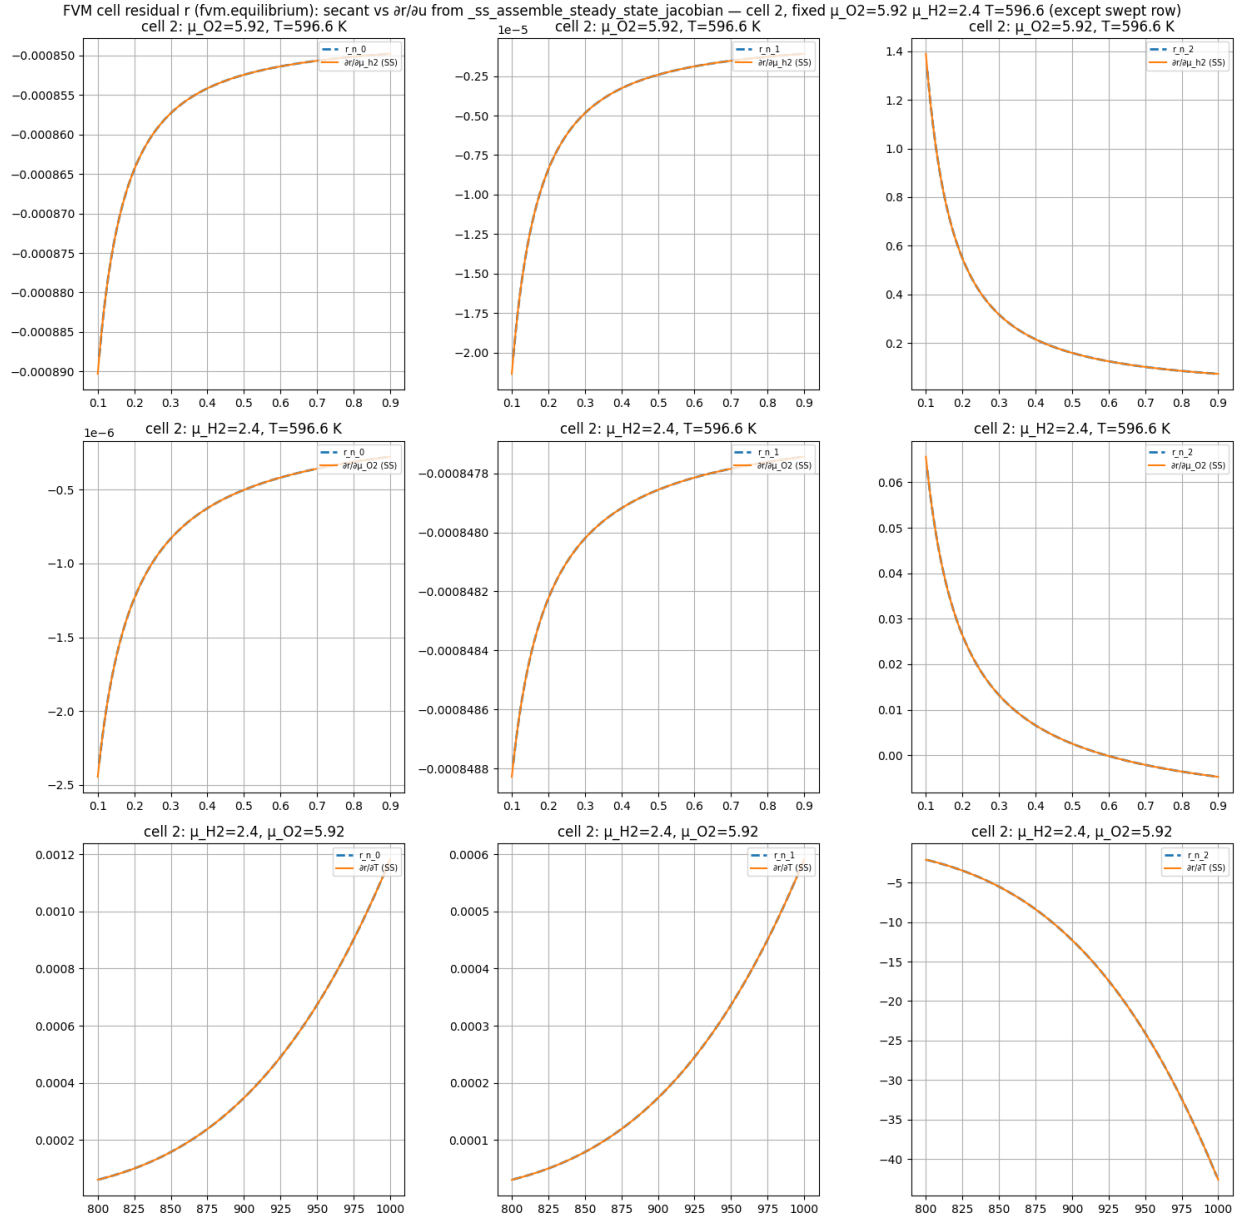


Figure A7.2: Steady-state FVM residual Jacobian vs. secant FD for the three residual components r_0 , r_1 , r_2 and inputs μ_{H_2} , μ_{O_2} , and T . Dashed: numerical secant; solid: analytical steady-state Jacobian.

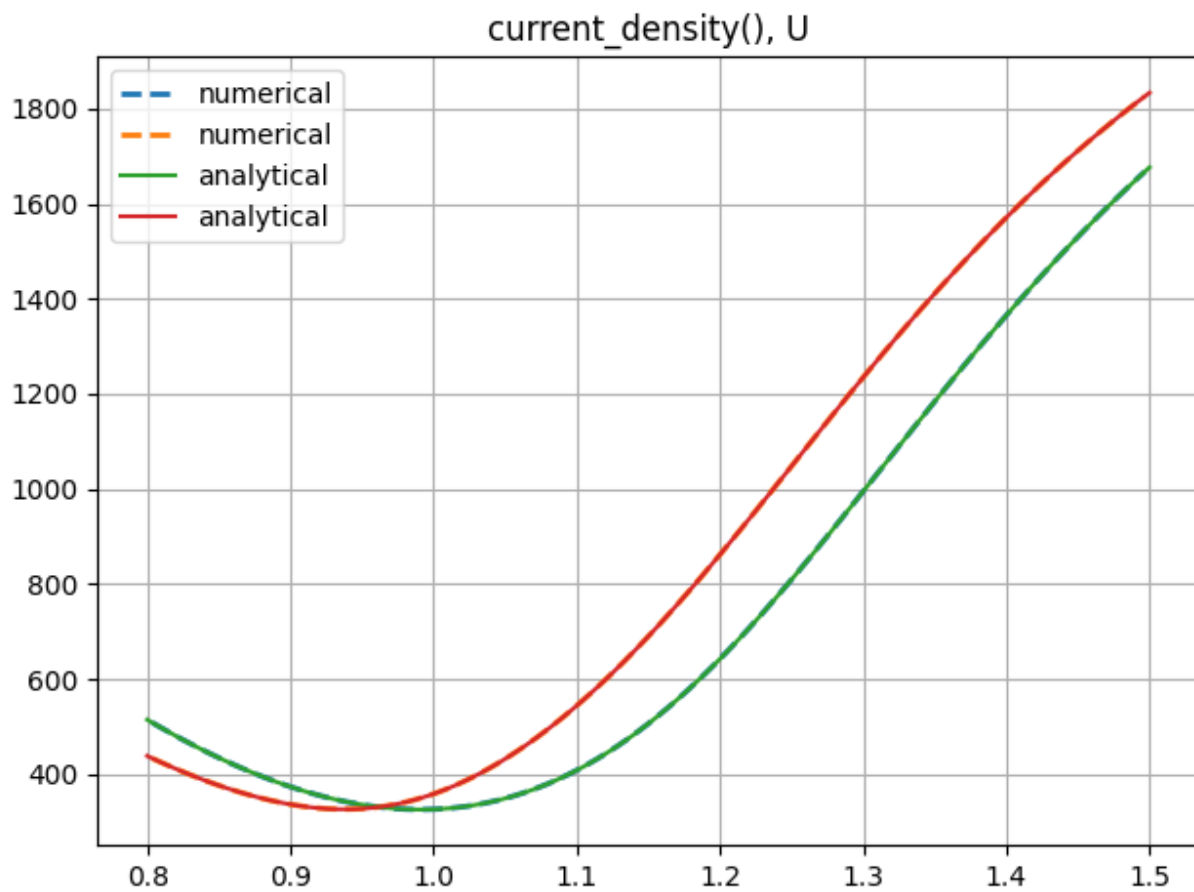


Figure A7.3: Analytical vs. numerical gradient of cell current density w.r.t. cell voltage U .

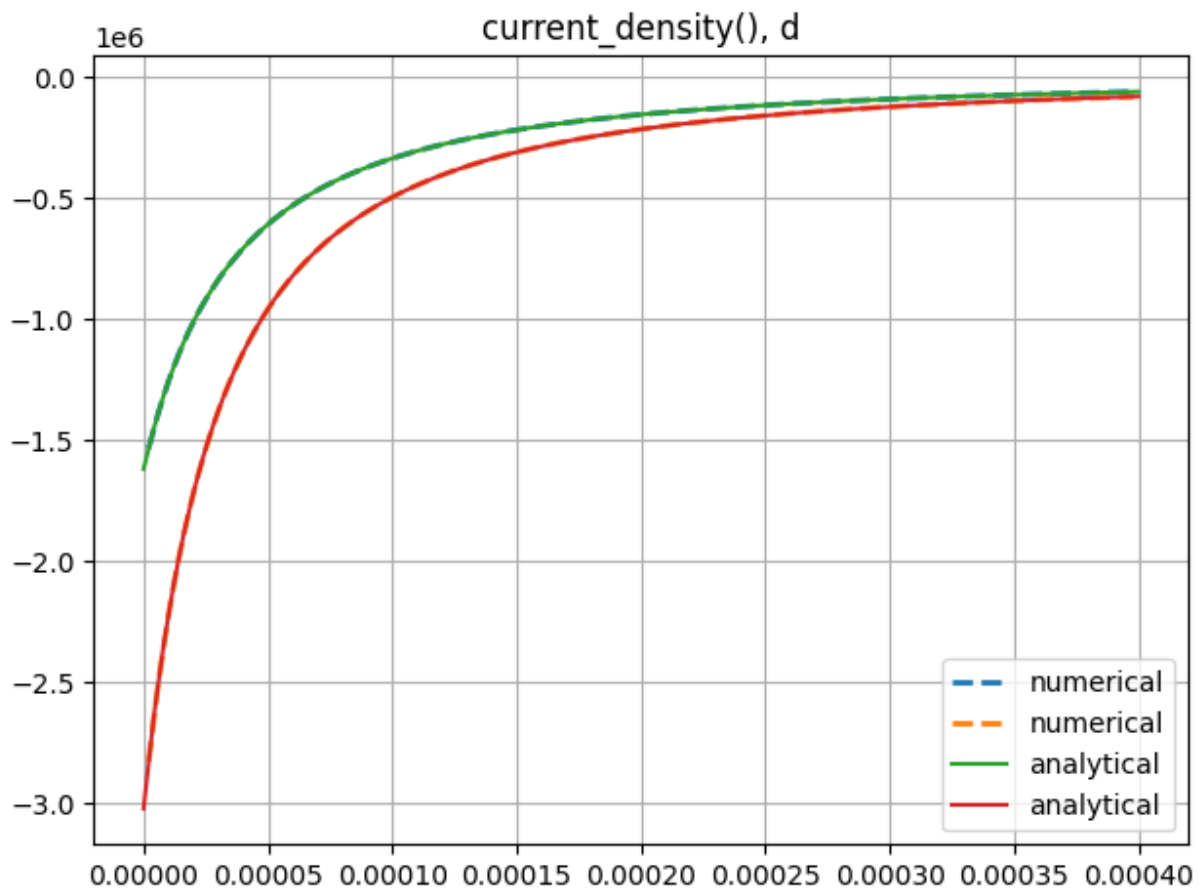


Figure A7.4: Analytical vs. numerical gradient of cell current density w.r.t. local degradation state d .

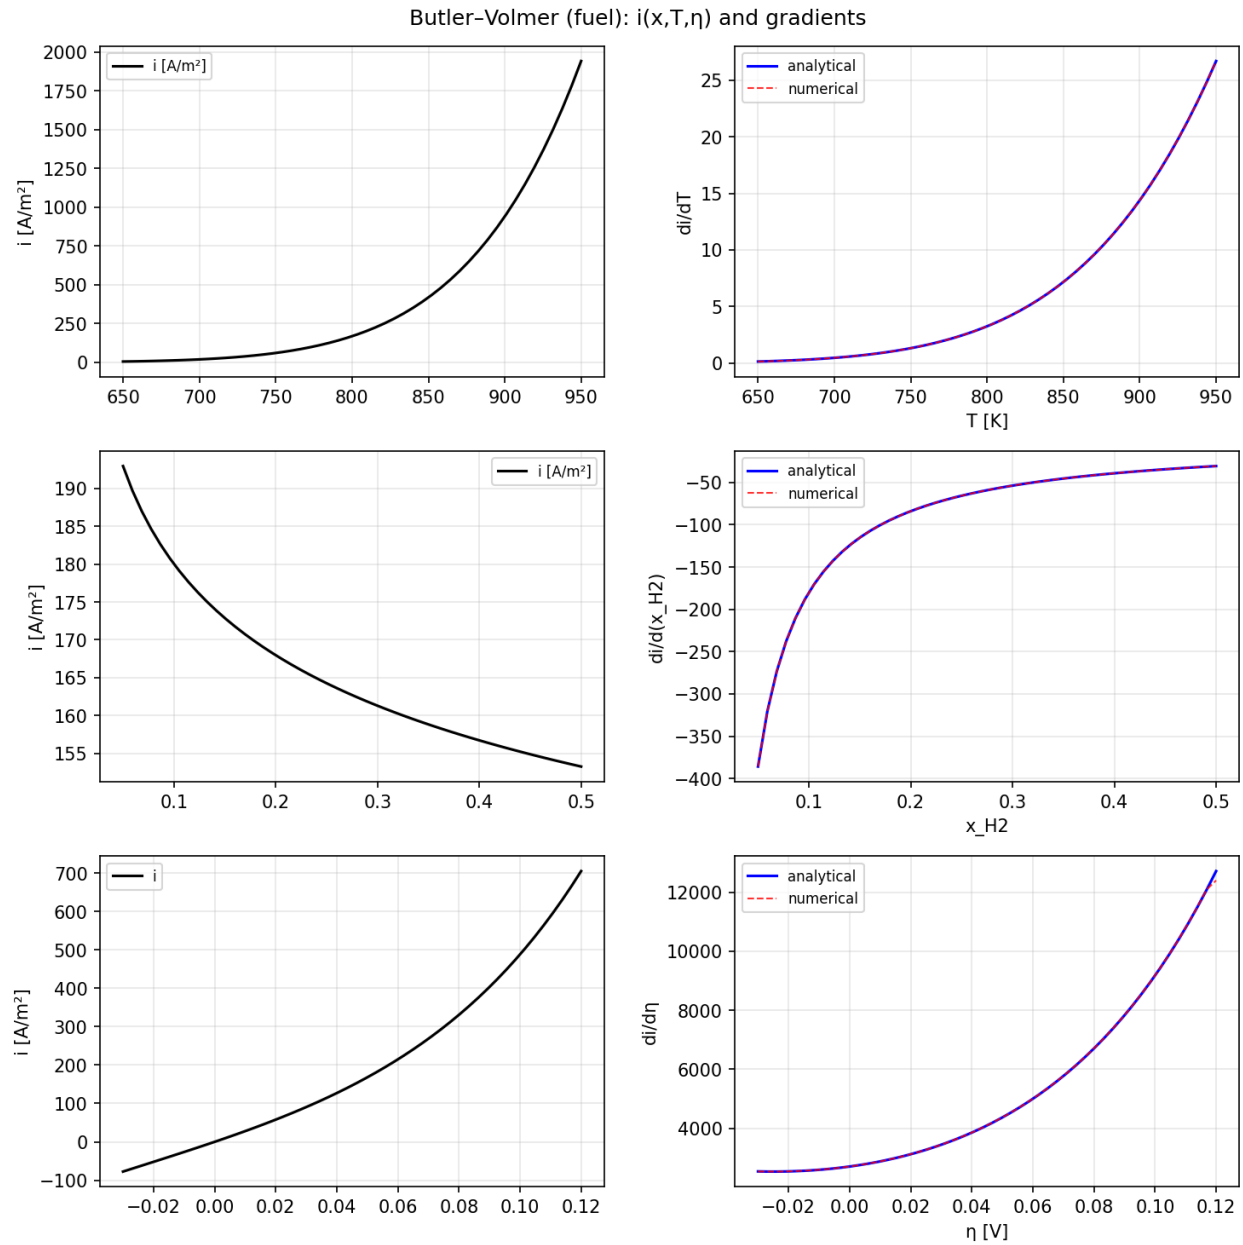


Figure A7.5: Fuel-side Butler–Volmer current $i(x, T, \eta)$ and gradients w.r.t. T , x_{H_2} , and activation overpotential η . Left column: i ; right column: analytical (solid) vs. numerical (dashed) partial derivatives.

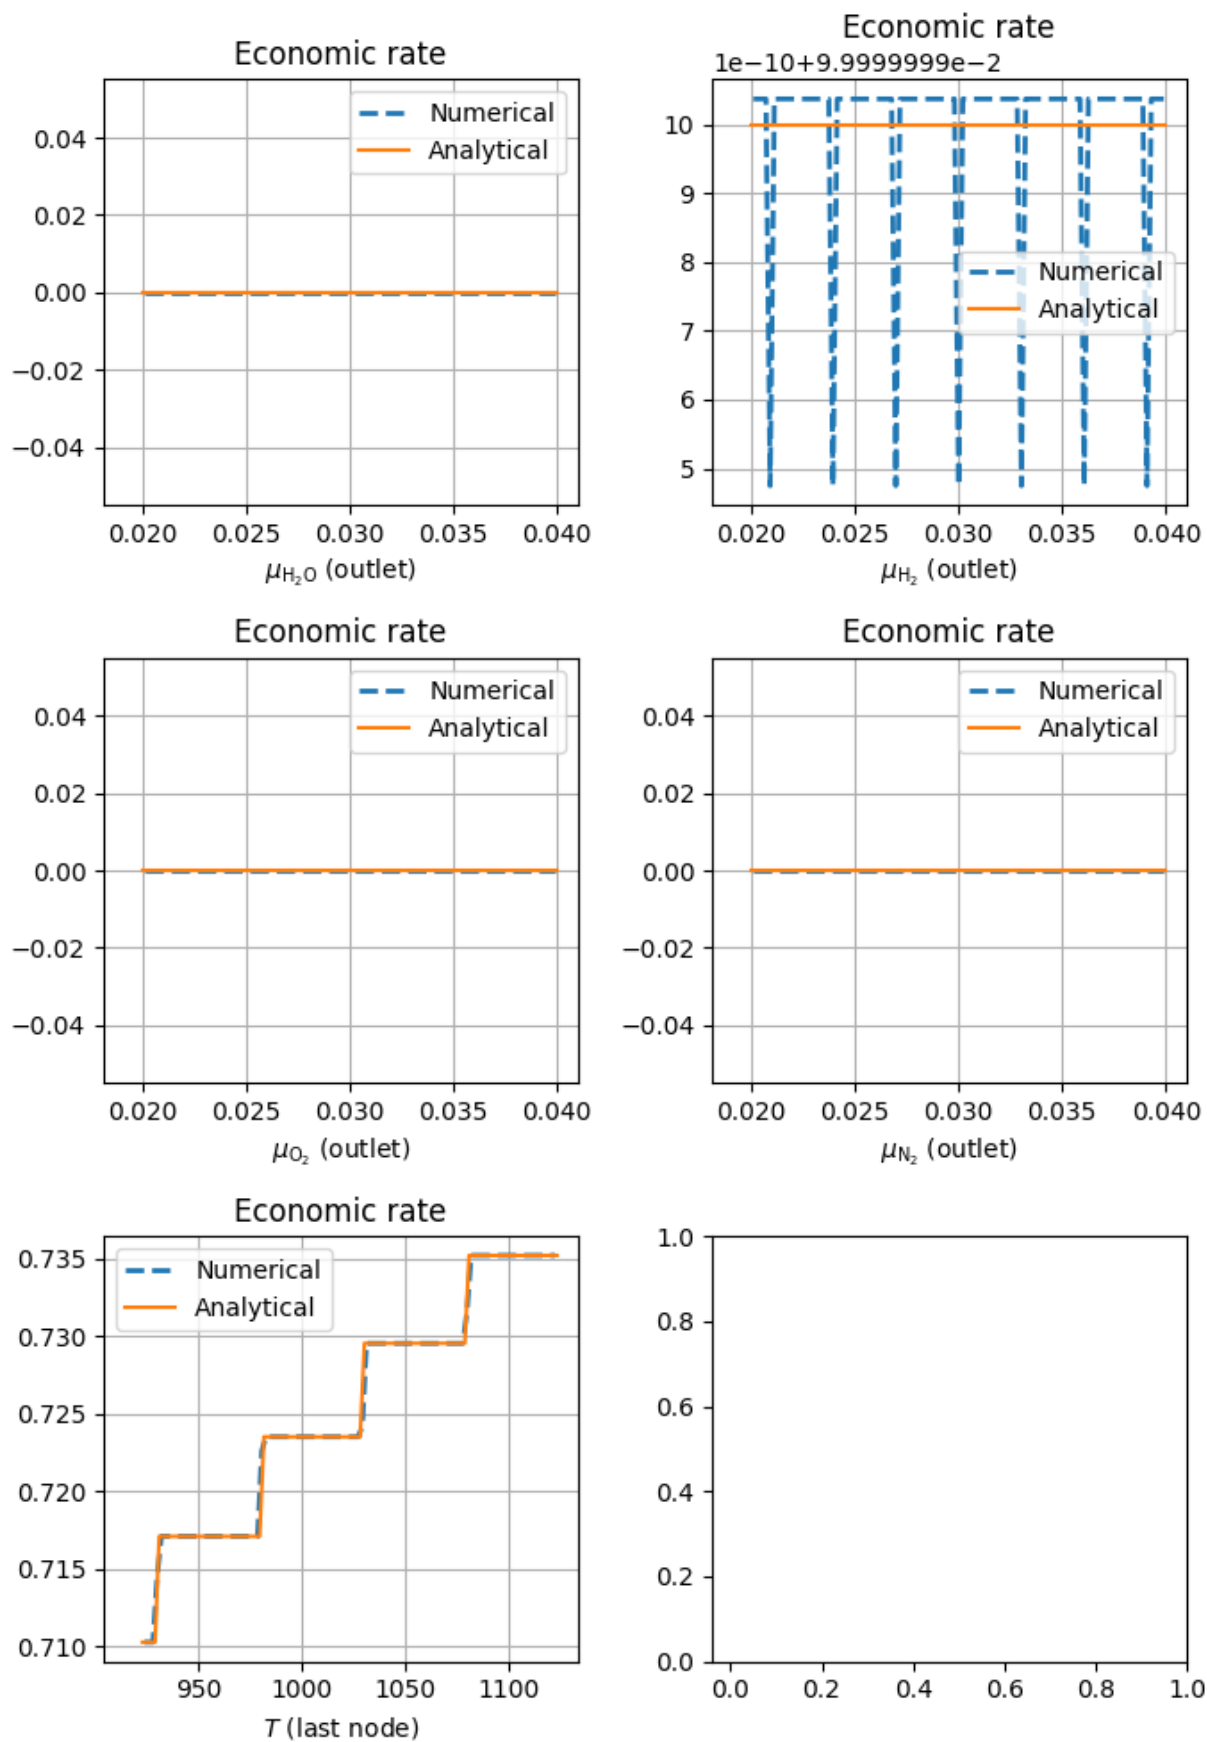


Figure A7.6: Analytical vs. numerical gradients of the instantaneous economic rate w.r.t. outlet species chemical potentials and the last-node temperature T .

Literature

- [1] Cost of hydrogen production | european hydrogen observatory. Retrieved from https://observatory.clean-hydrogen.europa.eu/hydrogen-landscape/production-trade-and-cost/cost-hydrogen-production?utm_source=chatgpt.com
- [2] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2025. Lifetime and performance of solid oxide electrolysis stacks and systems under different operation modes and conditions. *International Journal of Hydrogen Energy* 102, (February 2025), 980–995. <https://doi.org/10.1016/J.IJHYDENE.2025.01.028>
- [3] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2026. Economic optimization of modular solid oxide electrolysis system considering degradation and lifetime. *Energy Conversion and Management* 348, (January 2026), 120782. <https://doi.org/10.1016/J.ENCONMAN.2025.120782>
- [4] Javid Beyrami, Rafael Nogueira Nakashima, Arash Nemati, and Henrik Lund Frandsen. 2024. Degradation modeling in solid oxide electrolysis systems: A comparative analysis of operation modes. *Energy Conversion and Management: X* 23, (2024), 100653. <https://doi.org/10.1016/j.ecmx.2024.100653>
- [5] Tomasz Brylewski, Sebastian Molin, Mirosław Stygar, Maciej Bik, Piotr Jeleń, Maciej Sitarz, Aleksander Gil, Ming Chen, and Peter Vang Hendriksen. 2024. Oxidation kinetics and electrical properties of oxide scales formed under exposure to air and ar–H₂-H₂O atmospheres on the crofer 22 h ferritic steel for high-temperature applications such as interconnects in solid oxide cell stacks. *International Journal of Hydrogen Energy* 94, (December 2024), 209–222. <https://doi.org/10.1016/J.IJHYDENE.2024.11.091>
- [6] Qiong Cai, Claire S. Adjiman, and Nigel P. Brandon. 2014. Optimal control strategies for hydrogen production when coupling solid oxide electrolyzers with intermittent renewable energies. *Journal of Power Sources* 268, (December 2014), 212–224. <https://doi.org/10.1016/J.JPOWSOUR.2014.06.028>
- [7] Andrea Capolei. 2013. Numerical methods for oil reservoirs management. PhD thesis. Technical University of Denmark. Retrieved from https://people.compute.dtu.dk/jbjo/PhD_Thesis_2013_AndreaCapolei.pdf
- [8] Robert Eymard, Thierry Gallouët, and Raphaële Herbin. 2000. Finite volume methods. *Handbook of Numerical Analysis* 7, (January 2000), 713–1018. [https://doi.org/10.1016/S1570-8659\(00\)07005-8](https://doi.org/10.1016/S1570-8659(00)07005-8)

-
- [9] Nishant V. Giridhar, Douglas A. Allan, Mingrui Li, Stephen E. Zitney, Lorenz T. Biegler, and Debangsu Bhattacharyya. 2024. Optimal operation of solid-oxide electrolysis cells considering long-term chemical degradation. *Energy Conversion and Management* 319, (November 2024), 118950. <https://doi.org/10.1016/J.ENCONMAN.2024.118950>
- [10] Ernst Hairer and Gerhard Wanner. 1996. *Solving ordinary differential equations II: Stiff and differential-algebraic problems* (2nd ed.). Springer, Berlin, Heidelberg. <https://doi.org/10.1007/978-3-642-05221-7>
- [11] R. J.. Kee, Michael Elliott. Coltrin, Peter. Glarborg, and Huayang. Zhu. 2018. Chemically reacting flow : Theory, modeling, and simulation. (2018), 747.
- [12] D. Larrain, J. Van herle, and D. Favrat. 2006. Simulation of SOFC stack and repeat elements including interconnect degradation and anode reoxidation risk. *Journal of Power Sources* 161, (October 2006), 392–403. <https://doi.org/10.1016/J.JPOWSOUR.2006.04.151>
- [13] Andre Leonide, Yannick Apel, and Ellen Ivers-Tiffée. 2009. SOFC modeling and parameter identification by means of impedance spectroscopy. *ECS Transactions* 19, (October 2009), 81–109. <https://doi.org/10.1149/1.3247567>
- [14] S. Primdahl and M. Mogensen. 1998. Gas conversion impedance: A test geometry effect in characterization of solid oxide fuel cell anodes. *Journal of The Electrochemical Society* 145, 7 (July 1998), 2431. <https://doi.org/10.1149/1.1838654>
- [15] Tobias K. S. Ritschel, Andrea Capolei, Jozsef Gaspar, and John Bagterp Jørgensen. 2018. An algorithm for gradient-based dynamic optimization of UV flash processes. *Computers & Chemical Engineering* 114, (June 2018), 281–295. <https://doi.org/10.1016/J.COMPCHEMENG.2017.10.007>
- [16] Omid Babaie Rizvandi, Matti Nojonen, Henrik Lund Frandsen, and Xiufu Sun. 2025. Numerical investigation of electrochemical performance of commercial solid oxide cell stacks. *International Journal of Hydrogen Energy* 102, (February 2025), 830–844. <https://doi.org/10.1016/J.IJHYDENE.2025.01.101>
- [17] Theis Løye Skafte, Omid Babaie Rizvandi, Anne Lyck Smitshuysen, Henrik Lund Frandsen, Jens Valdemar Thorvald Høgh, Anne Hauch, Søren Knudsen Kær, Samuel Simon Araya, Christopher Graves, Mogens Bjerg Mogensen, and Søren Højgaard Jensen. 2022. Electrothermally balanced operation of solid oxide electrolysis cells. *Journal of Power Sources* 523, (2022), 231040. <https://doi.org/10.1016/j.jpowsour.2022.231040>
- [18] Bengt Sundén. 2019. Electrochemistry and thermodynamics. *Hydrogen, Batteries and Fuel Cells* (2019), 15–36. <https://doi.org/10.1016/B978-0-12-816950-6.00002-6>
- [19] Pauli Virtanen, Ralf Gommers, Travis E. Oliphant, Matt Haberland, Tyler Reddy, David Cournapeau, Evgeni Burovski, Pearu Peterson, Warren Weckesser, Jonathan Bright, Stéfan J. van der Walt, Matthew Brett, Joshua Wilson, K. Jarrod Millman, Nikolay Mayorov, Andrew R. J. Nelson, Eric Jones, Robert Kern, Eric Larson, C J Carey, İlhan Polat, Yu Feng, Eric W. Moore, Jake VanderPlas, Denis Laxalde, Josef Perktold, Robert Cimrman, Ian Henriksen, E. A. Quintero, Charles R. Harris, Anne M. Archibald, Antônio H. Ribeiro, Fabian Pedregosa, Paul van Mulbregt, and SciPy 1.0 Contributors. 2020. SciPy 1.0: Fundamental Algorithms for Scientific Computing in Python. *Nature Methods* 17, (2020), 261–272. <https://doi.org/10.1038/s41592-019-0686-2>
- [20] Wikipedia contributors. 2025. Projectile motion — Wikipedia, the free encyclopedia.