

RJCB / OBIHIRO SID


# NODUK TWO DEPARTURE

RWY 17: Climb RWY HDG to 1000FT, turn left HDG 301° to intercept and proceed...

RWY 35: Climb RWY HDG to 900FT, ...

...via OBE R346 to NODUK.

Cross NODUK at or above 6000FT.

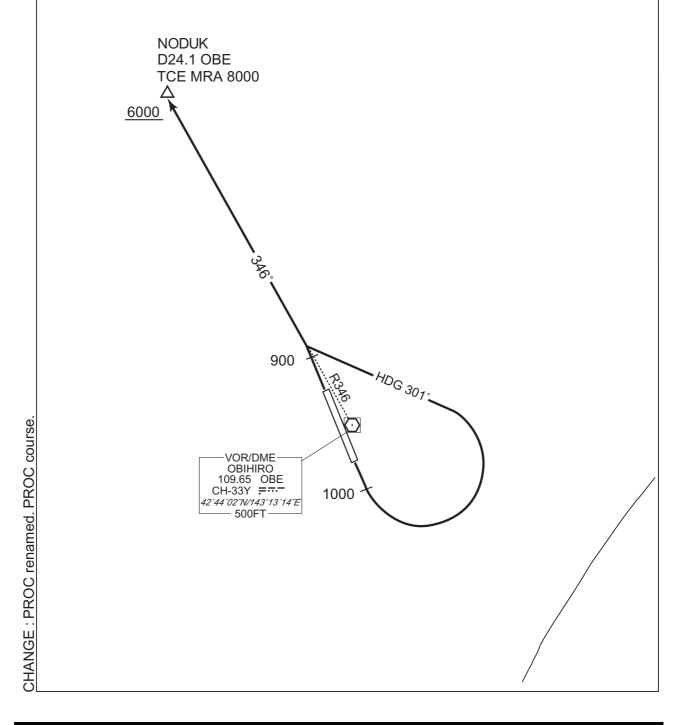


RJCB / OBIHIRO SID

# KUSHIRO SIX DEPARTURE

RWY 17 : Climb RWY HDG to 1000FT, turn left HDG 031° to intercept and proceed... RWY 35 : Climb RWY HDG to 900FT, turn right HDG 121° to intercept and proceed...

...via OBE R076 to TCE VOR/DME.

Cross OBE R076/20.0DME at or above 5000FT.

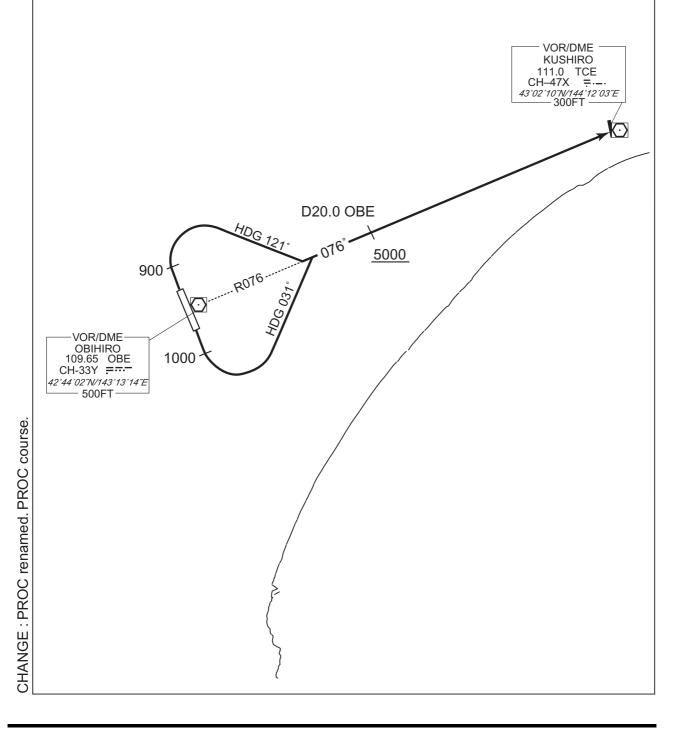

RJCB / OBIHIRO SID


# RUGMO TWO DEPARTURE

RWY 17: Climb RWY HDG to 1000FT, turn left HDG 355° to intercept and proceed...

RWY 35: Climb RWY HDG to 900FT, turn right,...

...via OBE R040 to RUGMO.

Cross RUGMO at or above 6000FT.

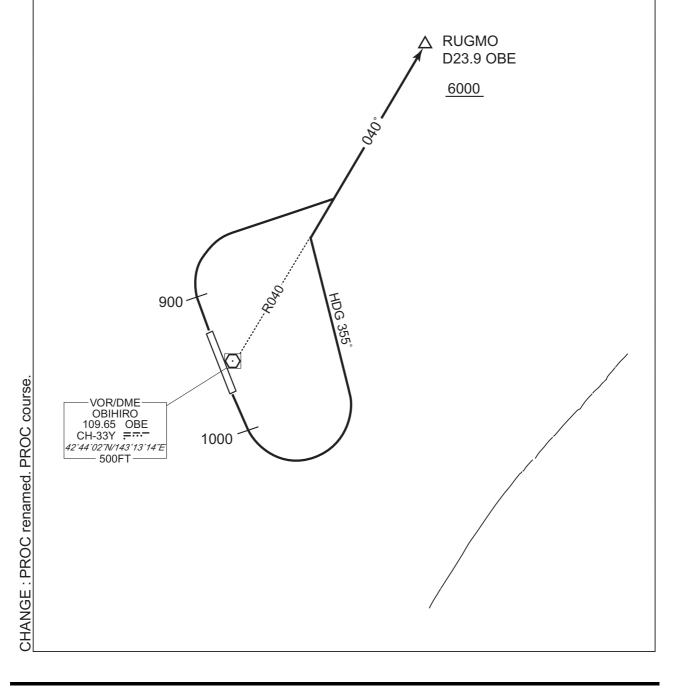

RJCB / OBIHIRO SID


# OBIHIRO REVERSAL EIGHT DEPARTURE

RWY 17 : Climb RWY HDG to 1000FT, turn left, via OBE R131 to 3000FT, turn left,...

RWY 35 : Climb RWY HDG to 900FT, turn right, via OBE R040 to 3000FT, turn right,...

...direct to OBE VOR/DME.

Cross OBE VOR/DME at or above 6000FT.

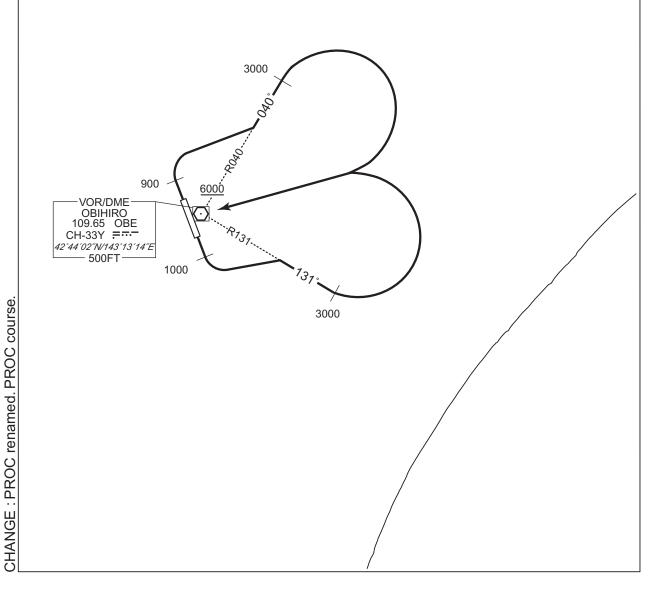

RJCB / OBIHIRO SID


# RACKO THREE DEPARTURE


RWY 17: Climb...

RWY 35 : Climb RWY HDG to 900FT, turn right HDG 215° to intercept and proceed...

...via OBE R170 to RACKO.

Cross RACKO at or above 10000FT.

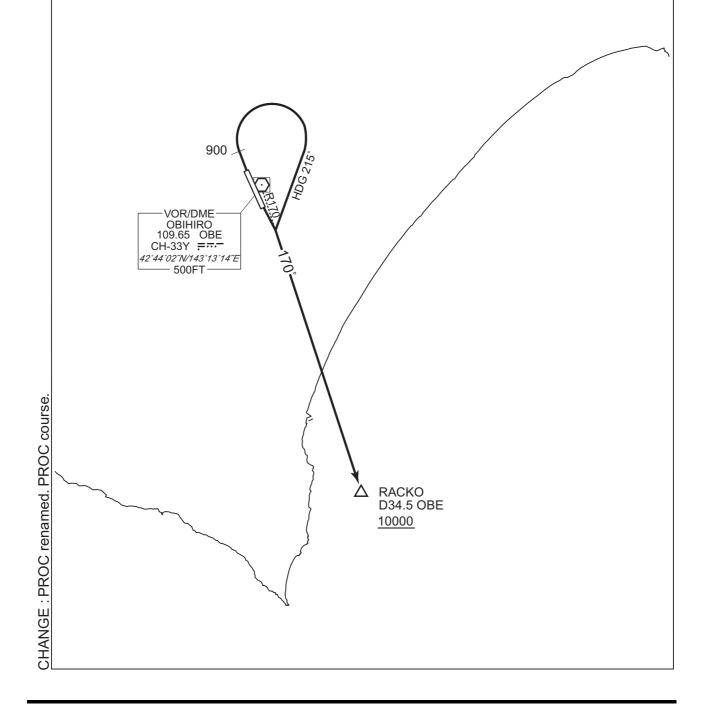

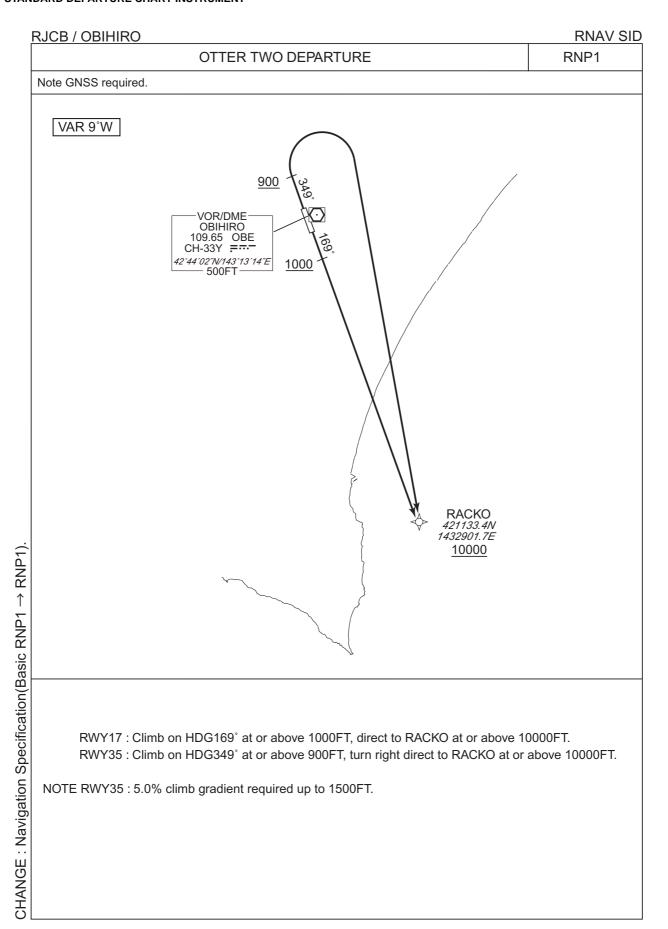

RJCB / OBIHIRO RNAV SID

# OTTER TWO DEPARTURE


# RWY17


Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	Distance (NM)	Turn Direction	Altitude (FT)	Speed (KIAS)	Vertical Angle	Navigation Specification
001	VA	-	1	169 (159.4)	-9.4	1	-	+1000	-	1	RNP1
002	DF	RACKO	1	-	-9.4	-	-	+10000	-	-	RNP1


# RWY35


Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	Distance (NM)	Turn Direction	Altitude (FT)	Speed (KIAS)	Vertical Angle	Navigation Specification
001	VA	ı	ı	349 (339.4)	-9.4	ı	ı	+900	ı	1	RNP1
002	DF	RACKO	-	-	-9.4	-	R	+10000	1	-	RNP1


# CHANGE: Navigation Specification(Basic RNP1 → RNP1).

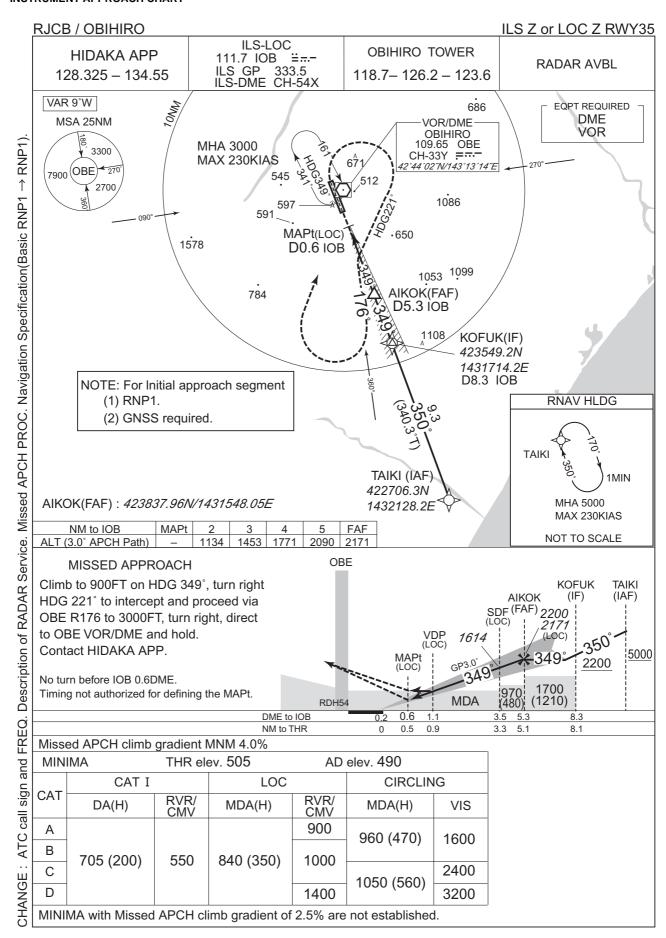

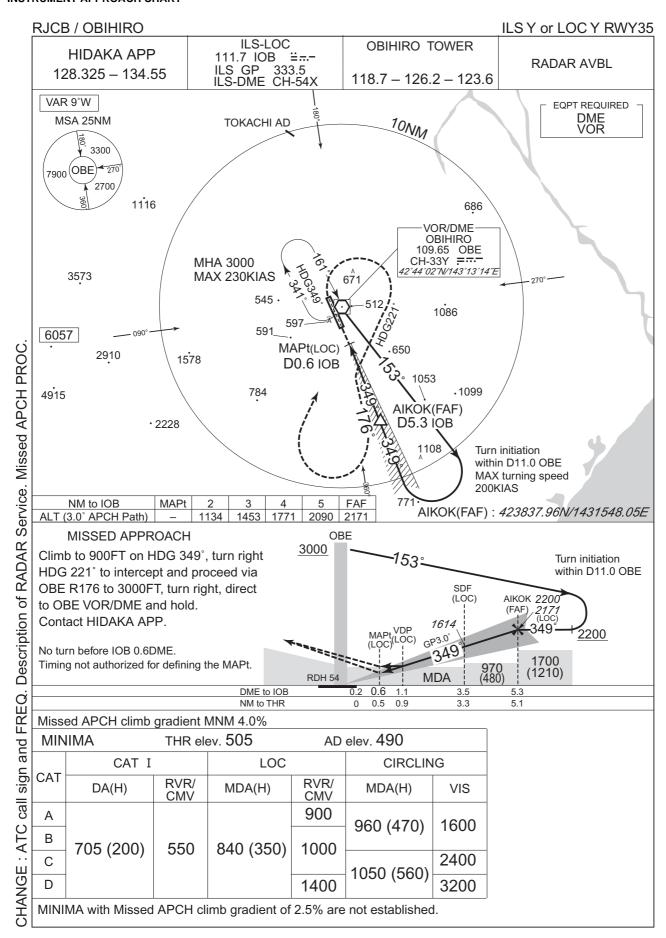

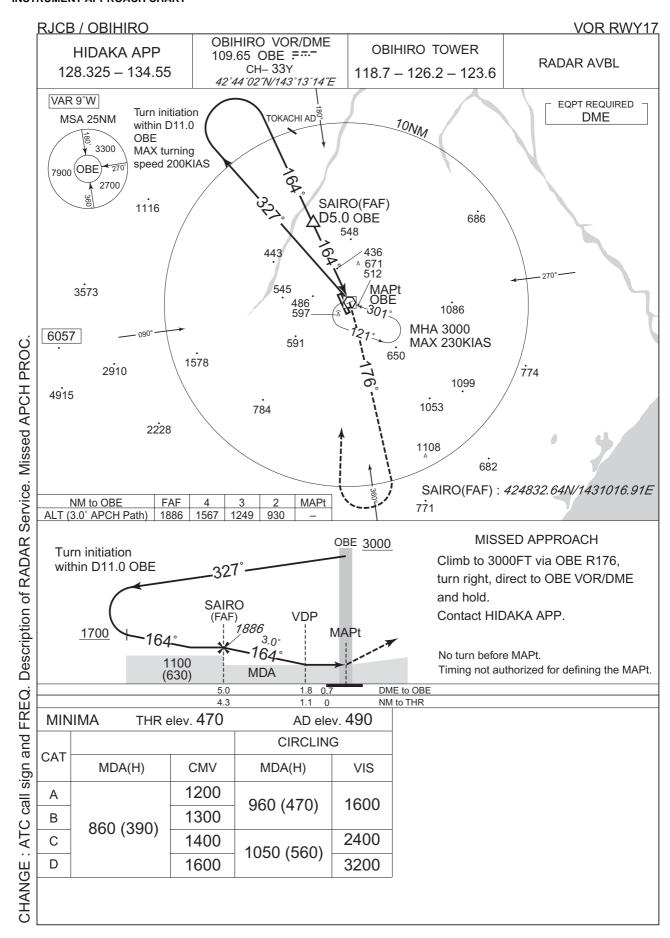

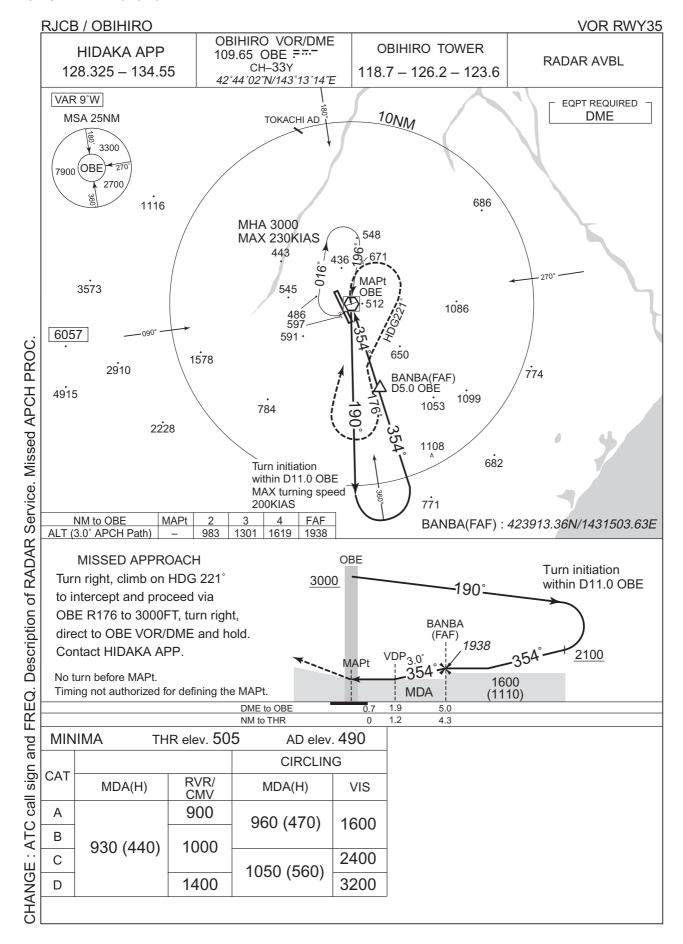

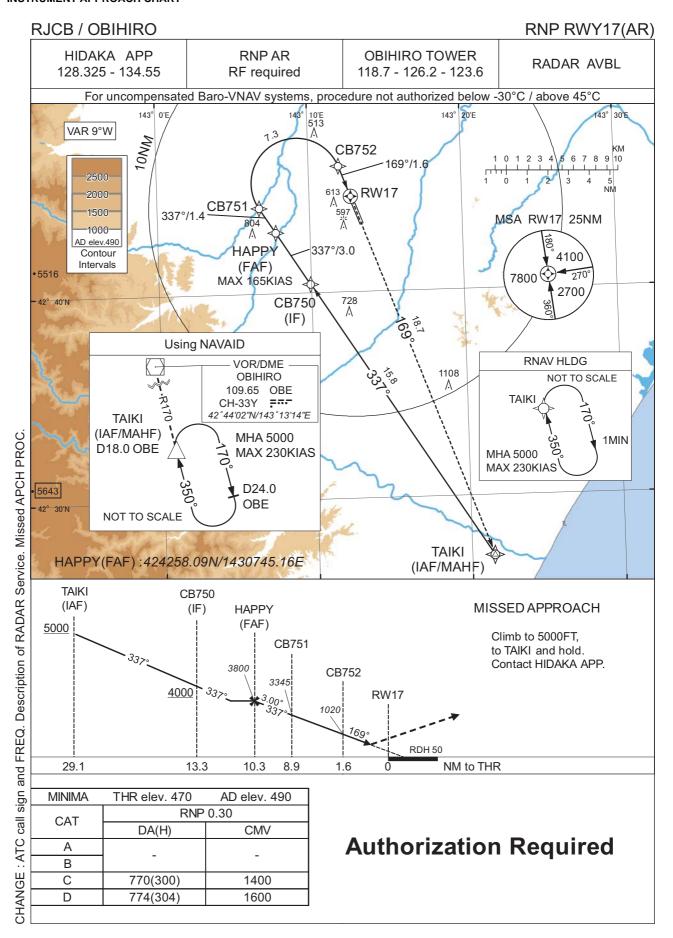

# RJCB / OBIHIRO

RNP RWY17(AR)

# **Coding Table**

Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	Distance (NM)	Turn Direction	Altitude (FT)	Speed (KIAS)	VPA/ RDH (°/FT)	RNP Value
001	IF	TAIKI	-	-	-9.4	-	-	+5000	-	-	-
002	TF	CB750	-	337 (327.6)	-9.4	15.8	-	+4000	-	-	1.0
003	TF	HAPPY	1	337 (327.5)	-9.4	3.0	-	3800	-165	-	1.0
004	TF	CB751	1	337 (327.4)	-9.4	1.4	-	3345	-	-3.00	0.3
005	RF Center: CBRF1 r=2.18NM	CB752	,	ı	-9.4	7.3	R	1020	1	-3.00	0.3
006	TF	RW17	Υ	169 (159.4)	-9.4	1.6	-	520	-	-3.00/50	0.3
007	TF	TAIKI	-	169 (159.8)	-9.4	18.7	-	5000	-	-	1.0

Path	Waypoint Identifier	Inbound Course °M(°T)	Magnetic Variation	Outbound Time (MIN)	Turn Direction	Minimum Altitude (FT)	Maximum Altitude (FT)	Speed (KIAS)	RNP Value
Hold	TAIKI	350 (340.3)	-9.4	1.0 (-14000)	R	5000	FL140	-230 (-14000)	1.0

# Waypoint Coordinates

	Waypoint Identifier	Coordinates	RF Arc Center Identifier	Coordinates
	TAIKI	422706.29N / 1432128.22E	CBRF1	424520.85N / 1430911.91E
	CB750	424026.47N / 1430956.82E		
	HAPPY	424258.09N / 1430745.16E		
	CB751	424410.25N / 1430642.42E		
	CB752	424607.16N / 1431158.01E		
	RW17	424438.86N / 1431243.31E		
1 -	<u> </u>	<u> </u>	<del>-</del>	



※図中に標高を示す数字がある場合、単位はメートル(m)である。The unit of measurement used to express elevation is meter(m).

ARP.	Call sign	BRG / DIST from ARP	Remarks		
from,	幕別 Makubetsu	031°T / 12.2NM	JR駅 JR Station		
BRG/DIST	芽室 Memuro	320°T / 13.6NM	JRの鉄橋(芽室駅から西1.5NM) Bridge		
	茂岩橋 Moiwabashi	071°T / 13.7NM	十勝川の茂岩橋   Bridge		
odated	糠内 Nukanai	056°T / 5.9NM	猿別川と糠内川の合流点 The confluence of the Sarubetsu and Nukanai rivers		
Map updated.	中札内 Nakasatsunai	245°T / 4.9NM	札内川の中札内橋 Bridge		
	駒畠 Komahata	130°T / 5.4NM	五差路 Intersection		
CHANGE	更別 Sarabetsu	195°T / 5.1NM	更別村役場 Sarabetsu Village office		

