



US 20250276876A1

(19) **United States**

(12) **Patent Application Publication**
HUFNAGL et al.

(10) **Pub. No.: US 2025/0276876 A1**

(43) **Pub. Date: Sep. 4, 2025**

(54) **CONTROL CIRCUITRY FOR A CRANE,
CRANE, REMOTE CONTROL UNIT FOR A
CRANE AND METHOD TO OPERATE A
CRANE**

Publication Classification

(51) **Int. Cl.**

B66C 13/40 (2006.01)

B66C 13/46 (2006.01)

B66C 23/16 (2006.01)

B66C 23/70 (2006.01)

(52) **U.S. Cl.**

CPC *B66C 13/40* (2013.01); *B66C 13/46*

(2013.01); *B66C 23/166* (2013.01); *B66C*

23/701 (2013.01)

(71) Applicant: **Palfinger AG**, Bergheim bei Salzburg
(AT)

(72) Inventors: **Mario HUFNAGL**, Göming (AT);
Christian HORA, Eugendorf (AT);
Andreas TIEFENTHALER, St.
Lorenz (AT); **Thomas EDER**,
Seekirchen (AT)


(57)

ABSTRACT

Control circuitry for a crane, comprises an input interface configured to receive readings of sensors sensing operating parameters of the crane and an output interface to output control data to cause actuators of the crane to perform a motion. A compute circuit is configured to control the operation of the crane such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.

(21) Appl. No.: **18/592,815**

(22) Filed: **Mar. 1, 2024**

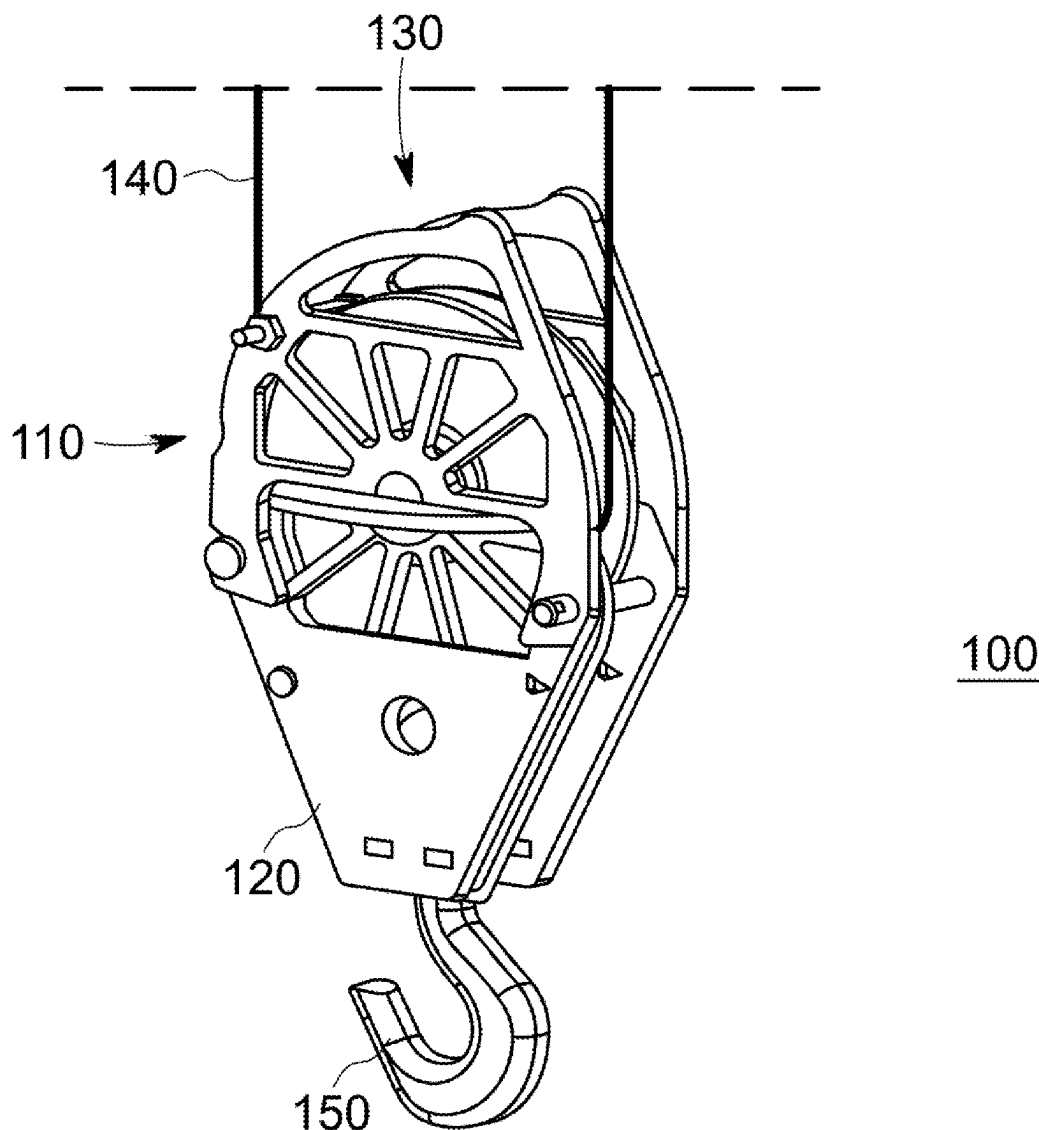

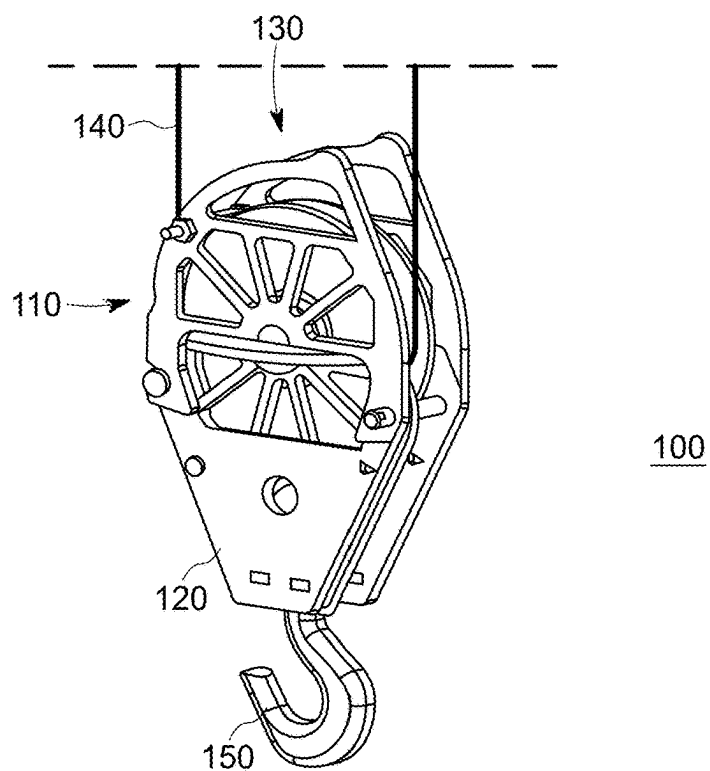


FIG. 1

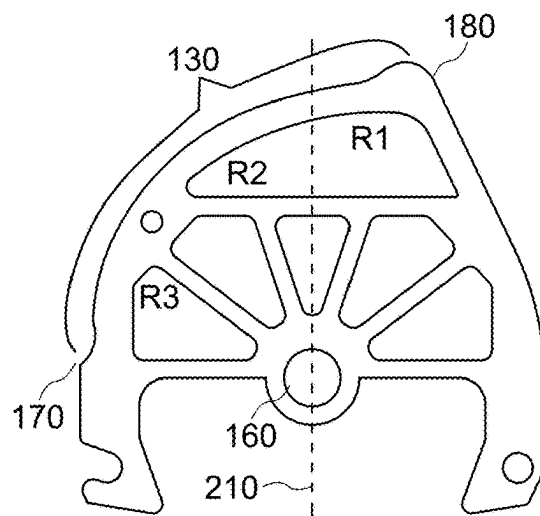


FIG. 2

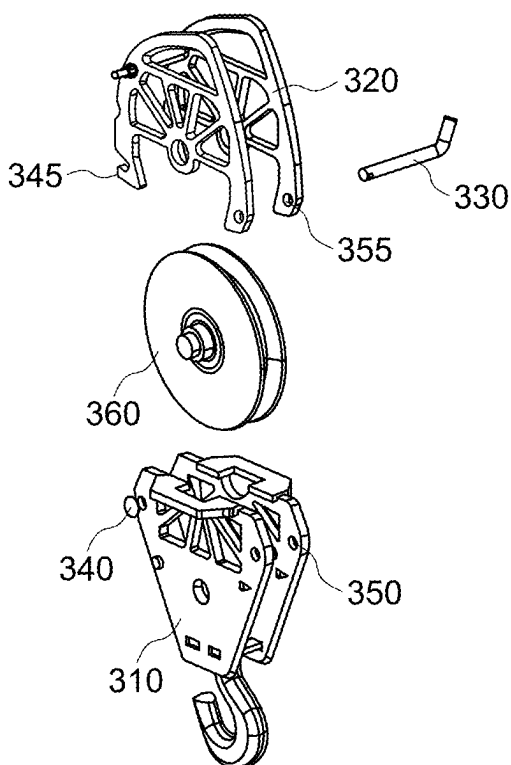


FIG. 3

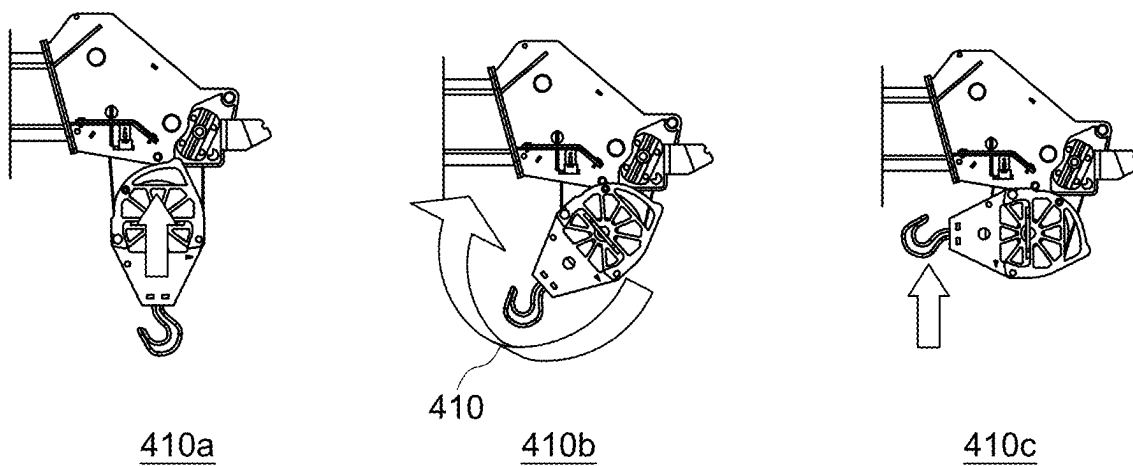


FIG. 4

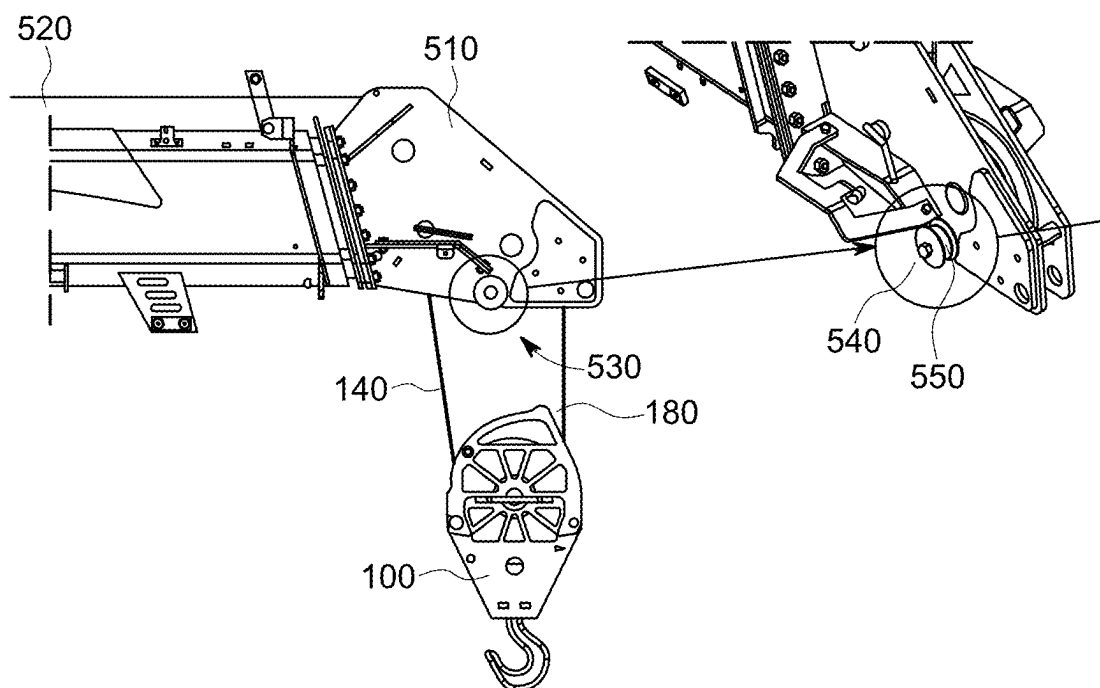


FIG. 5

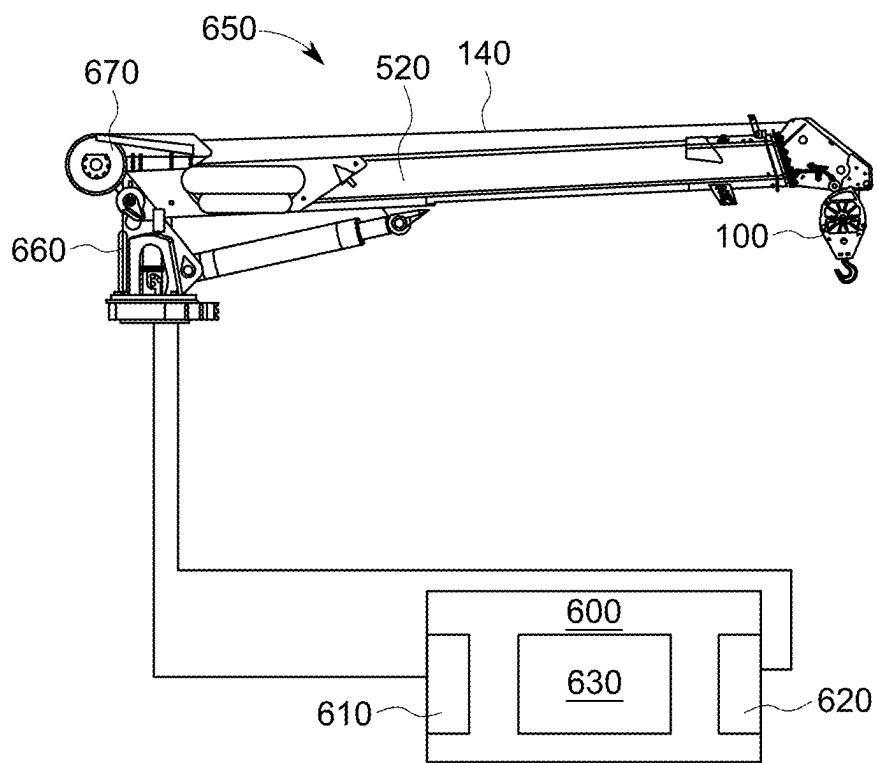


FIG. 6

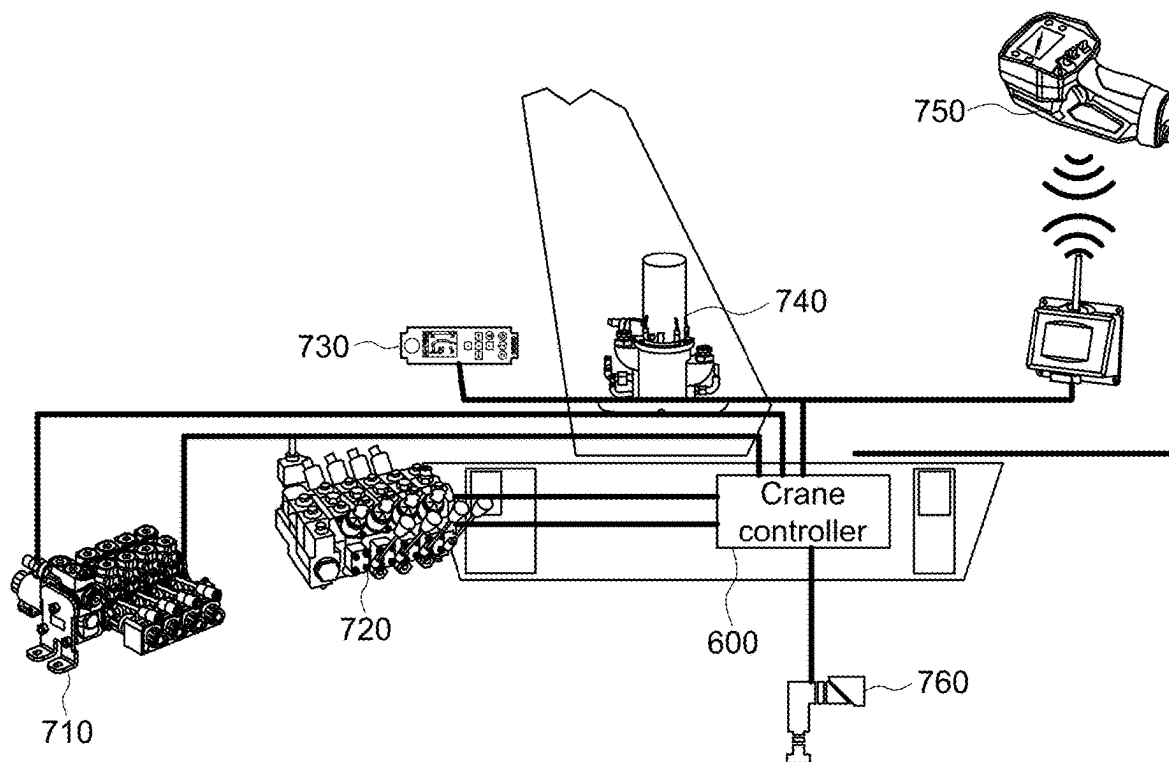


FIG. 7

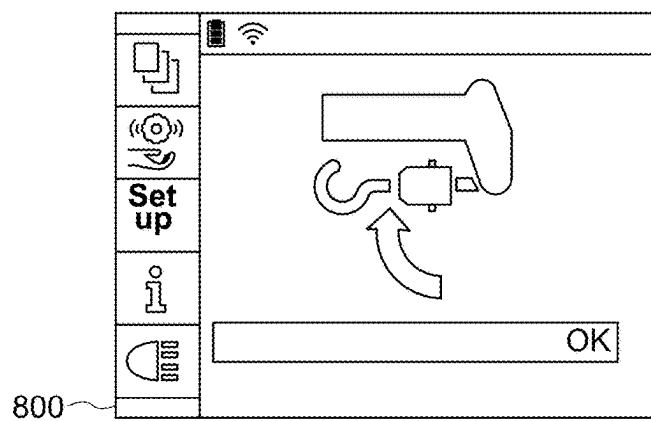


FIG. 8

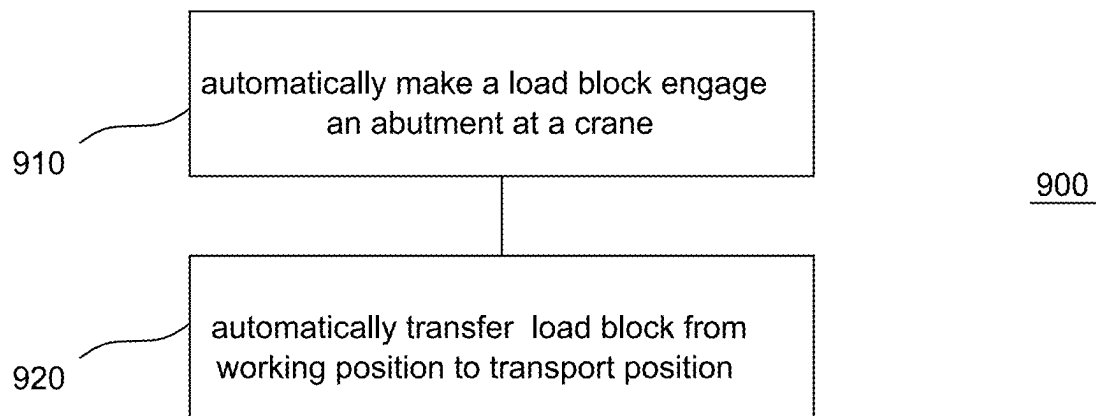


FIG. 9

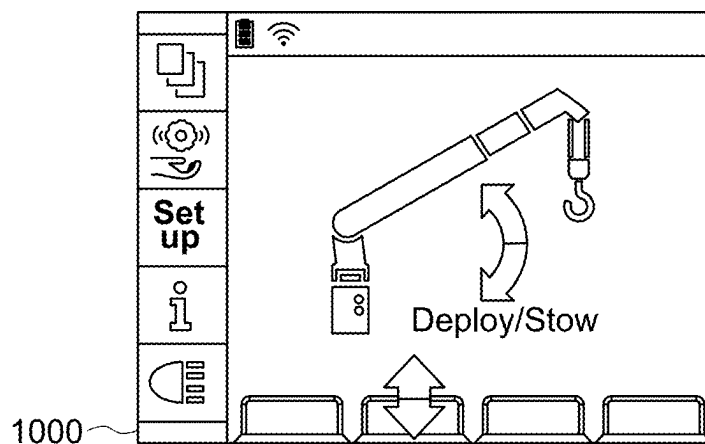


FIG. 10

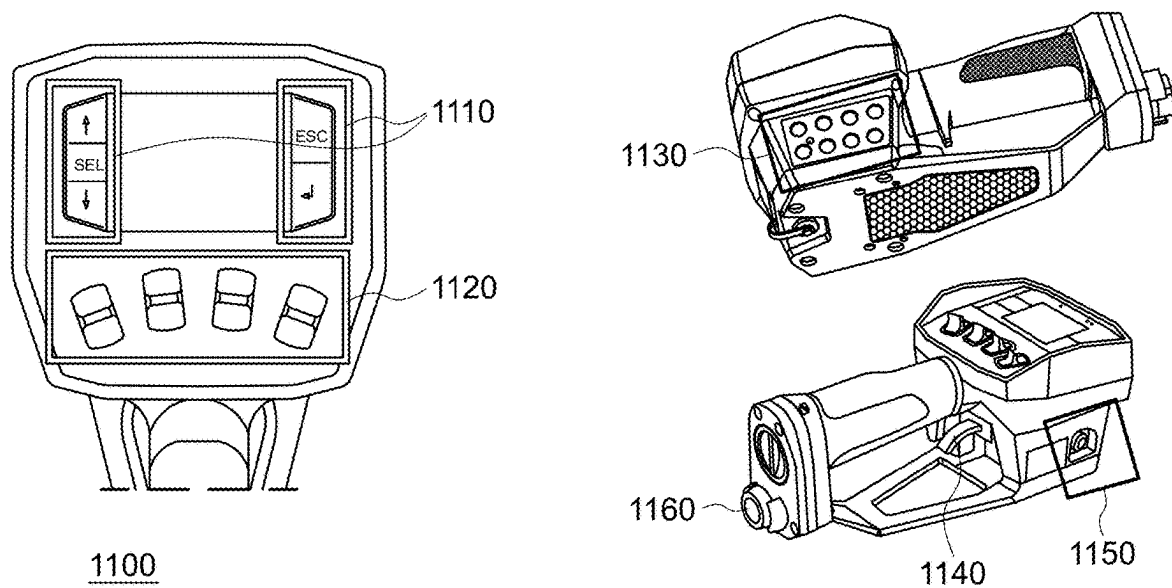


FIG. 11

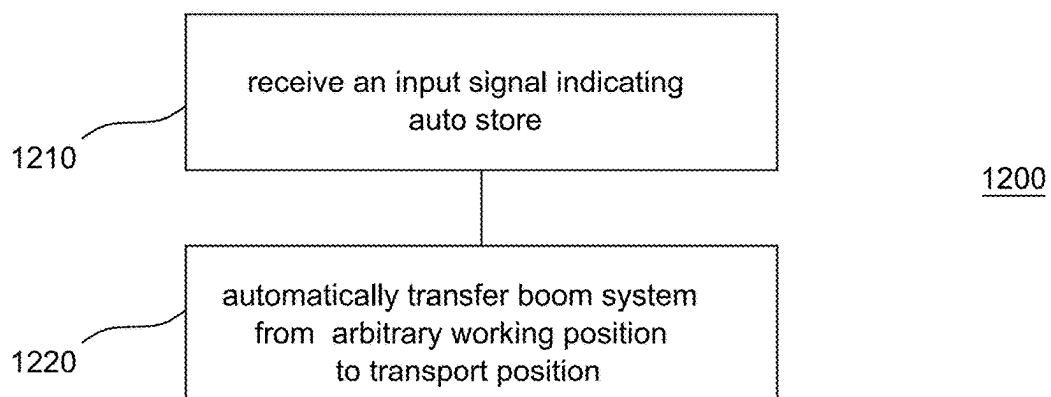


FIG. 12

CONTROL CIRCUITRY FOR A CRANE, CRANE, REMOTE CONTROL UNIT FOR A CRANE AND METHOD TO OPERATE A CRANE

FIELD

[0001] The present disclosure relates to cranes and to methods to move a boom system of a crane in a transport position.

BACKGROUND

[0002] If cranes are moved, for example by driving a truck the crane is mounted to, it is mostly required that a boom system of a crane is transferred from an arbitrary working position to a transport position to avoid causing damage with the boom system during transport. This is a time consuming process for an operator of a crane since the boom system needs to be steered such that the defined transport position is used, eventually requiring to use all actuators of the crane, such as for example actuators to pull in all boom extensions, actuators to change the elevation angle of booms and actuators to change a slew angle of a rotatable column of the crane.

[0003] There may hence be a desire to more efficiently transfer a boom system from an arbitrary working position to a transport position.

BRIEF DESCRIPTION OF THE FIGURES

[0004] Some examples of apparatuses and/or methods will be described in the following by way of example only, and with reference to the accompanying figures, in which

[0005] FIG. 1 illustrates an isometric view of an example of a load block;

[0006] FIG. 2 illustrates a two dimensional view of a portion of the load block of FIG. 1;

[0007] FIG. 3 illustrates an exploded view of the load block of FIG. 1;

[0008] FIG. 4 illustrates the transfer of the load block from a working position to a transport position;

[0009] FIG. 5 illustrates an example of an abutment for a load block;

[0010] FIG. 6 schematically illustrates an example of control circuitry for a crane and a crane;

[0011] FIG. 7 illustrates an overview of components used to operate a crane;

[0012] FIG. 8 illustrates an example of a user interface; and

[0013] FIG. 9 illustrates a flowchart of an example of a method to operate a crane;

[0014] FIG. 10 illustrates an example for a user interface configured to enable an stow function;

[0015] FIG. 11 illustrates an example of a remote control unit; and

[0016] FIG. 12 illustrates a flowchart of an example of a method to operate a crane.

DETAILED DESCRIPTION

[0017] Some examples are now described in more detail with reference to the enclosed figures. However, other possible examples are not limited to the features of these embodiments described in detail. Other examples may include modifications of the features as well as equivalents and alternatives to the features. Furthermore, the terminol-

ogy used herein to describe certain examples should not be restrictive of further possible examples.

[0018] Throughout the description of the figures same or similar reference numerals refer to same or similar elements and/or features, which may be identical or implemented in a modified form while providing the same or a similar function. The thickness of lines, layers and/or areas in the figures may also be exaggerated for clarification.

[0019] When two elements A and B are combined using an “or”, this is to be understood as disclosing all possible combinations, i.e. only A, only B as well as A and B, unless expressly defined otherwise in the individual case. As an alternative wording for the same combinations, “at least one of A and B” or “A and/or B” may be used. This applies equivalently to combinations of more than two elements.

[0020] If a singular form, such as “a”, “an” and “the” is used and the use of only a single element is not defined as mandatory either explicitly or implicitly, further examples may also use several elements to implement the same function. If a function is described below as implemented using multiple elements, further examples may implement the same function using a single element or a single processing entity. It is further understood that the terms “include”, “including”, “comprise” and/or “comprising”, when used, describe the presence of the specified features, integers, steps, operations, processes, elements, components and/or a group thereof, but do not exclude the presence or addition of one or more other features, integers, steps, operations, processes, elements, components and/or a group thereof.

[0021] Subsequently, examples of load blocks for cranes and of methods to operate a crane will be discussed.

[0022] A crane comprises a boom system mounted to a column of the crane. The column is rotatable with respect to a base of the crane. In some examples, the axis of rotation of the column may be a substantially vertical axis. The angle of rotation about the axis of rotation may be referred to as the slew angle or slewing angle.

[0023] The base can be configured to mount the crane onto a platform. The platform may be a fixed platform or a mobile platform. Examples of mobile platforms are vehicles such as trucks, lorries or ships. The boom system can be rotated or moved relative to the column about an axis (e.g. a boom axis) that is essentially perpendicular to the axis of the rotation of the column. The angle of the rotation of the boom system about the boom axis may be referred to as an elevation angle.

[0024] Hydraulic cylinders may be used as actuators to create the force to cause the rotation or motion of the boom system with respect to the elevation angle. A boom system comprises at least one (or e.g. one or more booms). In the event of a plurality of booms (e.g. more than one boom), the boom attached to the column may be referred to as the main boom or first boom. Additionally, a second boom attached to the main boom may be referred to as a knuckle boom. Any (or each) of the booms of a boom system can optionally comprise one or more extension booms to be driven in or out of the boom using, for example, hydraulic means. A boom and its extension booms may also be called a boom subsystem.

[0025] Cranes having only one boom may also be called stiff boom cranes since they do not exhibit multiple booms that can change their orientation with respect to each other. In the event of cranes having multiple booms, a knuckle can

be used to connect the different booms to one another so as to enable them to change their relative orientation, by bending or buckling about an axis defined by the knuckle.

[0026] In some examples, a crane may comprise a bendable boom system connected to the crane column. A bendable boom system may comprise a first boom, wherein a first end of the first boom is connected to the crane column. The bendable boom system may further comprise a second boom, wherein the second boom is connected to a second end of the first boom. Cranes having at least two booms connected by a knuckle or hinge offer an additional degree of freedom as compared to stiff boom cranes and may be called knuckle-boom cranes. The booms can be connected by hydraulic cylinders across the knuckle to cause the rotation.

[0027] The free end of the boom system not attached to the column may be referred to as the tip of the boom system. Loads may be directly attached to the tip of the boom system. However, cranes may additionally comprise at least one winch mounted to the boom system or elsewhere to the crane, the winch being used to wind and unwind a cable carrying the load. The tip of the boom system may exhibit a wheel for the cable. The cable extends to a load block used to attach the load thereto. In a single wire operation (also called STRAN1) the cable ends in the load block. The cable of the winch may also be used according to the principles of a pulley. If this is the case, the load block exhibits at least one pulley to change the direction of the cable and the cable ends at the boom system, typically close to the tip of the boom system. In the event of a single pulley, operation is also called two wire operation (STRAN2). Of course, multiple pulleys may be used likewise for multi wire operation.

[0028] Movement of the crane is caused by using multiple types of actuators such as hydraulic engines, valves and cylinders to cause motion of the booms and electric engines used to cause motion of the column or to operate the winch. Components used to cause movement of the crane or of parts of the crane are called actuators. The movement of the crane is monitored by means of multiple sensors, providing sensors readings indicative of multiple parameters or physical quantities. For example, pressure sensors may be used to monitor the pressure within hydraulic cylinders to determine the forces acting on them. Angle sensors may be used to monitor relative rotation or angle between different parts of the crane (e.g. between the column and the base or between different boom of a knuckle boom crane). Angle sensors may, for example use an encoder wheel together with a sensor sensitive to magnetic fields. Length sensors may be used to monitor the overall length of a boom and its associated extensions. Force sensors may be used to measure force directly or indirectly, for example to measure the force acting on the cable of a winch and/or on the winch itself. Force sensors may, for example, be based on the piezo electric effect or using strain gauges attached to the object being monitored.

[0029] The movement of the crane may be controlled by a crane controller that outputs control signals to cause the actuators of the crane to perform an operation. Likewise, the crane controller receives sensor readings to monitor the result of the actuators operation. In some examples, the crane controller may be an integral part of the crane. The desired movement of the crane is typically performed or controlled based on or following a user input. The user input may be manually given by a human operator or supervisor

of the crane or it may likewise be generated automatically based on an algorithm or on input parameters generated by other means, such as for example by a trained neural network. For manual input, the crane may exhibit a crane mounted input device (operating panel) having, for example, one or more levers or joysticks to control motion as well as a user interface to input or change user settings and/or crane parameters such as for example different modes of operation of the crane. The input device communicates with the crane controller that transforms the user input into the actuator operations required to result with the desired movement as per the input via the input device. Additionally or alternatively, parts of or all inputs that can be performed using the input device may also be performed using a remote control unit wirelessly communicating with the crane controller.

[0030] A crane may be used for multiple purposes by providing the possibility to exchange equipment mounted at the booms of the crane. For example, multiple different attachments can be mounted to the booms close to the tip of the boom system. To support this, the crane may provide a mounting interface close to the tip of the crane. A mounting interface may be composed of multiple elements, mounted to or welded at a boom. Eventually, equipment such as a workmen basket may be mounted to the mounting interface via an adaptor used to adapt the (standard) mounting interface of the crane to a custom mounting interface of the equipment to be used.

[0031] FIG. 1 illustrates an isometric view of an example of a load block **100** for a crane.

[0032] The load block **100** comprises a mounting interface **120** to attach a load to the load block. The mounting interface **120** can be an arbitrary element or a structure comprising multiple elements allowing to transfer force from the load block **100** to a load, either directly or by further intermediary elements. In the example illustrated in FIG. 1, the mounting interface comprises a bore **120** that is designed to receive a bolt that holds a hook **150**. The hook **150** is an example for an intermediary element to which a load can be attached.

[0033] The load block **100** further comprises means to transfer force to a cable **140** of a winch arrangement. The means to transfer force can be an arbitrary element or a structure comprising multiple elements allowing to transfer force from the load block **100** to the cable **140**, either directly or by further intermediary elements. In the example of FIG. 1, the means to transfer force to the cable **140** comprises a pulley **110** attached to the load block **100** with a bolt. The cable **140** is routed around the pulley, resulting in STRAN 2 operation of the load block **100** illustrated in FIG. 1.

[0034] A surface of the load block comprises a functional portion **130** having a shape that causes a turning moment on the load block **100** if the functional portion **130** of the surface engages with or is pushed towards an abutment. FIG. 2 illustrates a two-dimensional projection of an upper portion of the load block **100**.

[0035] FIG. 2 also illustrates a central axis **210** of the load block **100**. The central axis **210** is defined by the center of the means to transfer load to the cable (the center of bore **160**) and by the center of the mounting interface (center of bore **120**). The central axis is the axis that may become vertical if a load is attached to the load block **100**.

[0036] The functional portion **130** has a contour with increasing curvature, the curvature increasing the further the

contour deviates from the central axis **210** of the load block element **100**. The increasing curvature is schematically illustrated by 3 different radii **R1**, **R2**, and **R3** in FIG. 2, wherein $R1 > R2 > R3$. The increasing curvature results in a turning moment on the load block **100** if the functional portion **130** of the surface engages with or is pushed towards an abutment as illustrated in FIG. 4. The curvature may, for example, be increasing monotonously. According to further examples, the curvature may also be increasing in different finite steps, i.e. segments having identical radii are neighboring each other.

[0037] If the curvature increases as illustrated in FIG. 2, the turning moment **410** as illustrated in FIG. 4 is generated if the load block **100** is pulled against an abutment at a tip of the a crane by means of the a winch arrangement winding up cable **140**. As a result, the load block **100** illustrated in FIGS. 1 to 3 is brought from a working position **410a** to a transport position **410c** if the load block **100** is pulled towards the abutment at the tip of the crane. In other words, the functional portion **130** of the load block **100** has a shape that causes a turning moment on the load block **100** if the functional portion **130** of the support block **100** is pushed towards an abutment. The abutment may be plain or tailored in shape to fit the functional portion **130**.

[0038] As illustrated in FIG. 2, the contour of the functional portion **130** of the surface of the load block **100** may optionally end at a protrusion **170** that may provide a stop for a rotational movement of the load block **100**. Similarly, a further protrusion **180** at the opposite end of the functional surface **130** may serve to create an initial moment on the load block **100** once it first engages the abutment at the tip of the crane.

[0039] As illustrated, the functional portion **130** of the surface covers at least the surface of the load block **100** opposite the mounting interface, that is, the surface intersects the central axis **210**. In other words, the functional portion **130** extends until the central axis **210** at the surface of the support block opposing the mounting interface **120**.

[0040] If a hook **150** is mounted at load block **100**, the curvature may increase in a direction of the open side of the hook **150** in order to enable a safe transport position with the open side of the hook being oriented towards the abutment and the crane.

[0041] As illustrated in FIG. 1, the load block **100** can exhibit a pulley for using the load block **100** in a two-wire mode of operation (STRAN2). Further examples may likewise comprise more than a single pulley to support multi-wire operation.

[0042] Similarly, further examples of load blocks may be used in a single wire configuration (STRAN1). Those examples may, for example, comprise a bore for a bolt to attach the wire as means to transfer load to the cable. For example, the bolt can be pushed through a soft eye of the cable **140** and to the bore in the load block to transfer the load from the load block to the wire **140**.

[0043] The load block may be composed of multiple elements or it may be monolithic. According to some examples, the load block comprises at least two separable parts as illustrated in the exploded view of a load block **100** in FIG. 3. The two parts may be partly-detachable or fully detachable. Separating the load block **100** in this way may allow to quickly change between single wire operation and dual or multi wire operation.

[0044] As illustrated in FIG. 3, a first part **310** of load block **100** comprises the mounting interface and a second part **320** comprises the surface with the functional portion. While the pulley **360** is illustrated as a separate part in FIG. 3, the pulley may also be part of the second part **320** of the load block.

[0045] Optionally, the second part **320** may also comprise the means to transfer force to the cable as illustrated in FIG. 3, where the force is transferred via bore **160** in the second part (see, for example, FIG. 2).

[0046] Arbitrary mechanical implementations can be used to separably connect the first part **310** and the second part **320** of the load block. For example and as illustrated in FIG. 3, the first part may exhibit a fixed bolt **340** to engage with a recess **345** formed by the second part to connect the parts on one side. Additionally, the first part **310** may comprise a first bore **350** and the second part **320** may comprise a second bore **355** at the opposite side that serve as a bearing for a removable bolt **330** to connect the two parts at the second side and to prevent them from coming loose.

[0047] FIG. 5. Illustrates an example of a load block at a tip region **510** of a boom system **520** having a single boom of a crane, the tip **510** having an abutment **530** for the functional portion **130** of the surface of the load block **100**.

[0048] FIG. 5 also illustrates as to how protrusion **180** at the end of the functional portion **130** serves to cause a turning moment of the load block **100** relative to the boom **520** of the crane when the load block **100** initially engages with the abutment.

[0049] According to the example illustrated in FIG. 5, the abutment further comprises a bearing **540** rotatable about an axis and positioned such that an outer race **550** of the bearing engages with the functional surface **130** of the load block **100** if the load block **100** engages with the abutment **530**.

[0050] The outer race **550** serving as a bearing to rotate the load block **100** about may serve to reduce friction and reduce the force required to rotate the load block **100**.

[0051] In some examples, the axial end faces of the bearing **540** protrude radially further than the outer diameter of the outer race **550**. This may increase reliability of system during transfer from the working position to the transport position and during transport since the protrusions prevent the functional surface from disengaging from the outer race **550** in the axial direction. In other words, the protrusions form a guide for the functional surface.

[0052] FIG. 6 schematically illustrates an example of control circuitry **600** for a crane and a crane **650**.

[0053] The crane **650** comprises a boom system **520** mounted on a rotatable column **660** and a winch arrangement **670** attached to the boom system **520** to perform winding or unwinding of cable **140**.

[0054] The crane **650** further comprises a load block **100** according to any one of the previously described examples. The load block is liftable using the cable **140** and winch arrangement **670**.

[0055] As illustrated in FIG. 5, an abutment for the load block **500** is formed at a tip of the boom system **520**.

[0056] Operation of the crane **650** is performed using a crane controller or control circuit **600**.

[0057] Control circuit **600** comprises an input interface **610** configured to receive readings of sensors sensing operating parameters of the crane **650**.

[0058] An output interface **620** outputs control data to cause actuators of the crane to perform a motion. A compute

circuit 630 is configured to control the operation of the winch arrangement 670 such that the load block 100 attached to a cable 140 of the winch arrangement 670 is transferred from a working position to a transport position as illustrated in FIG. 4.

[0059] According to some examples, compute circuit 630 is configured to control the operation of the winch arrangement 670 such that the load block 100 is brought into contact with the abutment 530. The compute circuit 630 is further configured to operate the winch arrangement 670 such that the load block 100 is rotated until the load block 100 reaches transport position 410c illustrated in FIG. 4.

[0060] According to some examples, the compute circuit 630 is configured to control the operation of the winch arrangement 670 such that the load block 110 is rotated between 70° and 110°.

[0061] According to some examples, compute circuit 630 is configured to control the operation of the winch arrangement 670 such that the winch arrangement 670 automatically winds up the cable 140 until a sensor reading of a force sensor indicating a force acting on the cable 140 indicates a reference force.

[0062] To this end, the input interface 610 may be configured to receive a sensor reading of a force sensor indicating a force acting on the cable 140. The compute circuit 630 is configured to control the operation of the winch arrangement 670 based on at least one of the force acting on the cable 140 or the length of the boom 520s.

[0063] According to some examples, the winch arrangement 140 is controlled to wind up the cable 140 until a single reference force is reached. According to further examples, the winch arrangement 140 is controlled to wind up the cable 140 until a first reference force is reached when the load hook 100 engages the abutment 530. Afterwards, the winch arrangement 140 is controlled to further wind up the cable 140 until a second reference force is reached. The second reference force corresponds to position 410c when further increasing the force doesn't result in a further rotation of the load block 100. Optionally, the speed at which the winch arrangement 140 winds up the cable 140 after reaching the first reference force is smaller than before.

[0064] According to some examples, the compute circuit 630 is optionally furthermore configured to control the operation of the boom system 520 such that extensions of booms of the boom system are entirely pulled back automatically before the winch arrangement 670 is made to bring the load block 100 in the transport position.

[0065] FIG. 7 schematically illustrates an overview of some components involved and interacting to operate a crane as illustrated in FIG. 6.

[0066] Control circuitry 600 (also referred to as a crane controller) comprises one or more input interfaces configured to receive readings of sensors that sense operating parameters of the crane. While the previous paragraphs give some examples of sensed parameters, it is to be noted that these examples are not exhaustive and that multiple further parameters or sensor readings may be processed by control circuitry 600.

[0067] Control circuitry 600 further comprises one or more output interfaces to output control data to cause actuators of the crane to perform a movement. Transmission and reception of the sensor readings and of the input signals and of the control data may be performed using arbitrary wired or wireless systems and data protocols. Examples of

wired protocols may be ControllerAreaNetwork (CAN), FlexRay, Local Interconnect Network (LIN), MOST or Ethernet. The control circuit 100 may submit digital commands as control data that need to be interpreted by the actuators before these autonomously control their movement or action or the control data may be such that the actuators are directly controlled by the control circuit 110. For example, Pulse Width Modulated signals (PWM) may be used to directly steer actuators.

[0068] Amongst the actuators controlled may be hydraulic engines 710 and 720 to control the movement of the booms of the boom system and of legs or outriggers 760 extending from the base of the crane to increase its stability. Likewise, an engine 740 used to rotate the column of the crane may be controlled by control circuitry 600.

[0069] A control panel 730 mounted at the crane and an optional remote control unit 750 communicate with the control circuitry 600. Both comprise a user interface to provide a user input for tasks and movements to be performed by the crane. For the examples described herein, at least one of the control panel 730 and the remote control unit 750 are configured to receive user input and to cause the control circuitry 600 to transfer the load block attached to the cable of the winch arrangement from a working position to a transport position.

[0070] FIG. 8 illustrates an example of a graphical user interface that may be used at one or both of the control panel 730 and the remote control unit 750 to enable a user to start an example of a method to automatically transfer a load block of a crane from a working position to a transport position.

[0071] Automatically transferring the load block to the transport position means that none of the actuators of a crane is steered by means of a user input to the control panel 730 or the remote control unit 750 during the transfer.

[0072] According to some examples, the method is performed fully automatically requiring no further operator interaction or supervision after starting it by, for example, hitting the OK button in the user interface 800.

[0073] According to some examples, the method is performed automatically but under supervision of an operator. The operator may, therefore, be required to keep an input element activated or pressed while the actuators of the crane perform the movements required to transfer the load block from the working position to the transport position. This operating principle is also called a dead-man switch. Whenever the operator releases the input element, the actuators are caused to stop. Input elements used to implement this functionality at the control panel 730 or the remote control unit 750 are arbitrary. For example, a switch used to select one of the multiple actuators may be used or a lever used otherwise to adjust the speed of a selected actuator may be used for the same purpose.

[0074] Both examples may additionally provide the possibility to temporarily or permanently overrule the automatic control of the actuators of the crane by activating a dedicated input element at control panel 730 or at remote control unit 750. Similarly to the dead-man switch functionality, arbitrary input elements present at the control panel 730 or the remote control unit 750 may be used for said purpose.

[0075] FIG. 9 illustrates a flowchart of an example of a method 900 to operate a crane.

[0076] The method comprises controlling 910 the operation of a winch arrangement mounted at a boom system of

the crane such that a load block attached to a cable of the winch arrangement automatically engages with an abutment.

[0077] The method further comprises controlling 900 the operation of the winch arrangement such that the load block is automatically transferred from a working position to a transport position.

[0078] The following paragraphs relating to FIGS. 10 to 12 will describe a further example as to how a boom system can be efficiently transferred from an arbitrary working position to a transport position using control circuitry 600 as illustrated in FIG. 6.

[0079] FIG. 10 illustrates an example for a user interface configured to enable an stow function to cause control circuitry 600 to transfer the boom system 520 of crane 650 from an arbitrary working position to a transport position.

[0080] An arbitrary working position is any position or configuration the crane can result with due to input of an operator performing a task with the crane 650. Once an operator has finished work, his intent may be to leave the work site, requiring him to bring the boom system in transport position. In principle, the transport position may be arbitrarily defined. A common example is, that all boom extensions are entirely pulled back and that the elevation angle is as minimal as possible, while the slew angle is such that the boom 520 systems aligns with a longitudinal axis of a vehicle the crane is mounted to.

[0081] Irrespective of the starting position of the boom system 520, the compute circuit 630 is configured to control the operation of the crane 650 such that boom system 520 of the crane is automatically transferred from an arbitrary working position to a transport position.

[0082] The compute circuit 630 may be configured to control the operation of the crane 650 by generating output control data causing the actuators to perform the required actions. Automatically transferring the boom system 520 to the transport position means that none of the actuators of a crane is steered by means of a user input to the control panel 730 or the remote control unit 750, 1100 during the transfer.

[0083] According to some examples, the method is performed fully automatically requiring no further operator interaction or supervision after starting it by, for example, selecting an automated store or deploy function in a user interface 1000 that may be presented at an example of a remote control unit 1100. Selecting the stow function (e.g. auto-stow) causes the control circuitry 600 to transfer the boom system from the arbitrary working position to the transport position. Selecting a deploy function (e.g. auto-deploy) causes the control circuitry 600 to transfer the boom system from the transport position to a determined working position. The determines working position to start manual operator control from may be arbitrarily defined, for example by defining a target elevation angle, a target slew angle or a target boom extension as well as an arbitrary combination of those values. The example of the remote control unit 1100 comprises push buttons 1110 to use as input elements while using a graphical user interface to, for example select the stow and deploy function.

[0084] A set of selectors (e.g. switches, toggles, levers or joysticks) 1120 serves to select actuators of the crane to control. The switches can be operated in different states, for example in two or more states. In some examples, the switches can be pushed in two different (e.g. opposite) directions to select the direction of movement of the actuator. For example, if a switch is in a first state (e.g. pushed

in a first direction), an extension of a boom may be pushed out, whereas it is pulled in if the switch is in a second state (e.g. pushed in a second and opposite direction). If the stow and deploy function is enabled, one, some or all of those switches 1120 may be operated in a first direction to select the deploy function. If the switch is operated in a second direction being opposite to the first direction, stow may be executed.

[0085] Examples of the remote control unit 1100 may furthermore optionally comprise an input device 1140 configured to generate a signal in response to a user input. In some examples, the input device 1140 may include or be a proportional input device configured to generate a proportional signal in response to a user input. The proportional signal generates a reading that varies with the extent the proportional input device 1140 is operated, pushed or pulled. Optionally, the input device 1140 may include or may be a trigger. Additionally, or optionally, input device 1140 may include a single trigger. This allows the remote control unit 1100 to function as a single-handed device, wherein the control of actuators of the crane are controlled by manipulating the trigger using a single finger, or a single group of fingers. The remote control unit in FIG. 11 exhibits an input device 1140 in the shape of a pistol grip. However, alternative designs can be implemented likewise.

[0086] The proportional input device in 1140 can be used to vary the speed of an actuator selected by means of the switches 1120. In the stow and deploy function, the proportional input device in 1140 may be used to vary the speed of the automatic movement of the boom system. In other words, the remote control unit being configured to cause the control circuitry to cause the actuators of the crane to perform motion at a speed associated to the proportional signal while transferring the boom system from the arbitrary working position to the transport position.

[0087] If the input device in 1140 is not pulled or operated, the automatic movement may end. In this way, the input device in 1140 may serve to also implement the functionality of a dead-man switch.

[0088] To implement the same functionality, a further example may optionally or additionally comprise a further control switch, wherein the stow and deploy function is interrupted when the control switch is released or pressed. Generally, the stow and deploy function may be performed automatically but under supervision of an operator. The operator may, therefore, be required to keep an input element activated or pressed while the actuators of the crane perform the movements required to transfer the boom system from the working position to the transport position.

[0089] Remote control unit 1100 of FIG. 11 further comprises an emergency stop button 1160 that stops all movements of the crane when pushed. A further button 1150 may serve to generate an override signal. At the presence of the override signal, an operator of the crane may manually oversteer the movement a crane controller performs automatically to be able to avoid collisions eventually caused by the automatic movement or to perform other corrections manually.

[0090] While transferring the boom system to the transport position, some action may be required any some sensor readings may need to be evaluated.

[0091] According to some examples, the compute circuit 600 is configured to control the operation of the boom

system **520** such that extensions of booms of the boom system **520** are retracted or entirely pulled back.

[0092] The column **660** of the crane **650** may be rotated such that a boom of the boom system is positioned at a determined slew angle.

[0093] Based on the selection of the stow function, the compute circuit **600** may be configured to control the operation of the boom system to perform a stow sequence. If a hook or a load block **100** has to be secured manually before transportation, the compute circuit **630** may be configured to control the operation of the boom system **520** to perform the stow sequence, such that the boom system **520** is initially transferred to an intermediate position to enable an operator to secure the load block **100**. Afterwards, and eventually after further confirmation or input by the operator, the boom system is transferred from the intermediate position to the transport position.

[0094] The intermediate position may be defined by a determined slew angle or by a determined elevation angle between the column and a boom of the boom system or by a combination of both.

[0095] In some examples, moving a load block to a load block transport position (e.g. stowed state) may be part of a stow sequence controlled by the control circuitry. For example, the compute circuit may be configured to control the operation of the boom system to perform a stow sequence, wherein the stow sequence includes the boom system of the crane being automatically transferred from the arbitrary working position to the transport position. The stow sequence may further include controllably moving a load block of the crane into a load block transport position.

[0096] In some examples, moving a load block to a load block working position (e.g. deployed state) may be part of a deploy sequence controlled by the control circuitry. For example, the compute circuit may be configured to control the operation of the boom system to perform a deploy sequence, wherein the deploy sequence comprises the boom system being automatically transferred from a transport position to a determined working position. The stow sequence may further include controllably moving a load block of the crane into a load block working position.

[0097] Controllably moving the load block may avoid uncontrollable movements of the load block, such as swinging into work position, or free-falling into a working position. According to some examples, the input interface may be configured to receive a reading of a boom angle sensor indicating at least one boom angle parameter of the crane. Additionally or alternatively, a reading of a boom extension sensor indicating a length extension parameter of the boom may be received. Additionally or alternatively, a sensor reading of a slew angle sensor indicating an angle of rotation of the column of the crane may be received.

[0098] In some examples, the crane operator may be able to select a stow (or deploy) sequence from a plurality of stow (or deploy) sequences. The compute circuit of the control circuitry may execute a stow (or deploy) sequence based on a selection from a plurality of stow (or deploy) sequences. For example, in the case of a hook or a load block needing to be secured manually, the crane operator may select a first stow sequence, wherein the boom system is transferred to an intermediate position, and subsequently transferred from the intermediate position to the transport position upon receipt of a user input. Alternatively or optionally, the crane operator may select a second stow sequence, wherein the deploy

sequence comprises the boom system being automatically transferred from the arbitrary working position to the transport position. The second stow sequence may further include controllably moving a load block of the crane into a load block transport position.

[0099] FIG. **12** illustrates a flowchart of an example of a method **1200** to operate a crane.

[0100] The method comprises receiving an input signal **1210** indicating an stow function of the crane; and controlling the operation of the crane **1220** such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.

[0101] In the following, some examples of the proposed concept are presented:

[0102] An example (e.g., example 1) relates to a load block for a crane, the load block comprising, a mounting interface to attach a load to the load block, means to transfer force to a cable, wherein a surface of the load block comprises a functional portion having a shape that causes a turning moment on the load block if the functional portion of the surface engages an abutment.

[0103] Another example (e.g., example 2) relates to a previous example (e.g., example 1) or to any other example, further comprising that the functional portion has a contour with increasing curvature, the curvature increasing the further the contour deviates from a central axis of the support element, the central axis being defined by the center of the means to transfer load to the cable and by the center of the mounting interface.

[0104] Another example (e.g., example 3) relates to a previous example (e.g., example 2) or to any other example, further comprising that the functional portion of the surface extends until the central axis at the surface of the support block opposing the mounting interface.

[0105] Another example (e.g., example 4) relates to a previous example (e.g., one of the examples 1 to 3) or to any other example, further comprising that the mounting interface comprises a bore configured to serve as a bearing for a bolt supporting a hook.

[0106] Another example (e.g., example 5) relates to a previous example (e.g., one of the examples 1 to 4) or to any other example, further comprising a hook attached to the mounting interface.

[0107] Another example (e.g., example 6) relates to a previous example (e.g., one of the examples 4 or 5) or to any other example, further comprising that the curvature increases in a direction of the open side of the hook.

[0108] Another example (e.g., example 7) relates to a previous example (e.g., one of the examples 1 to 6) or to any other example, further comprising that the load block exhibits one or more pulleys for using the load block in a two-wire mode of operation or in a multi-wire mode of operation.

[0109] Another example (e.g., example 8) relates to a previous example (e.g., one of the examples 1 to 7) or to any other example, further comprising a bore for a bolt to attach the wire.

[0110] Another example (e.g., example 9) relates to the load block comprising a first part and a separable second part, the first part comprising the mounting interface, and the second part comprising the surface with the functional portion and the means to transfer force to the cable.

[0111] Another example (e.g., example 10) relates to wherein the first part comprises a fixed bolt to engage with a recess formed by the second part and a first bore serving

as a bearing for a removable bolt, and wherein the second part comprises the recess to engage with the re-movable bolt of the first part and a second bore serving as a bearing for the removable bolt.

[0112] Another example (e.g., example 11) relates to a previous example (e.g., one of the examples 1 to 10) or to any other example, further comprising that the functional portion has a shape that causes a turning moment on the load block if the functional portion of the support block is pushed towards a planar abutment.

[0113] Another example (e.g., example 12) relates to a previous example (e.g., one of the examples 1 to 11) or to any other example, further comprising that the functional portion comprises a protrusion for interacting with an abutment of a boom of the crane, wherein the protrusion causes a turn-ing moment of the load block with respect to the boom of the crane.

[0114] An example (e.g., example 13) relates to a crane comprising a boom system mounted on a rotatable column, a winch arrangement attached to the crane to perform winding or unwinding of a cable of the winch arrangement, and a load block according to any one of examples 1 to 12 attached to the cable.

[0115] Another example (e.g., example 14) relates to a previous example (e.g., example 13) or to any other example, further comprising an abutment for the load block at a tip of the boom system.

[0116] Another example (e.g., example 15) relates to a previous example (e.g., example 14) or to any other example, wherein the abutment comprises a bearing rotatable about an axis and positioned such that an outer race of the bearing engages with the functional surface of the load block if the load block engages with the abutment.

[0117] Another example (e.g., example 16) relates to a previous example (e.g., example 15) or to any other example, further comprising that both end faces of the bearing in a direction defined by the axis protrude further than an outer diameter of the outer race of the bearing to prevent the functional surface from dis-engaging the outer race in the axial direction.

[0118] Another example (e.g., example 17) relates to a previous example (e.g., one of the examples 13 to 16) or to any other example, further comprising that the boom system comprises a main boom connected to the rotatable column, the main boom comprising at least one extension, wherein the abutment for the load block is present at the tip region of the main boom.

[0119] An example (e.g., example 18) relates to control circuitry for a crane, comprising an input interface configured to receive readings of sensors sensing operating parameters of the crane, an output interface to output control data to cause actuators of the crane to perform a motion, and a compute circuit configured to control the operation of a winch arrangement mounted at a boom system of the crane such that a load block attached to a cable of the winch arrangement is transferred from a working position to a transport position.

[0120] Another example (e.g., example 19) relates to a previous example (e.g., example 17) or to any other example, further comprising that the compute circuit is configured to control the operation of the winch arrangement such that the load block is brought into contact with an abutment at the boom system, and the load block is rotated until the load block reaches a transport position.

[0121] Another example (e.g., example 20) relates to a previous example (e.g., one of the examples 17 or 18) or to any other example, further comprising that the compute circuit is configured to control the operation of the winch arrangement such that the load block is rotated between 70° to 110°.

[0122] Another example (e.g., example 21) relates to a previous example (e.g., one of the examples 17 to 19) or to any other example, further comprising that the compute circuit is configured to control the operation of the winch arrangement such that the winch arrangement automatically winds up the cable until a sensor reading of a force sensor indicating a force acting on the cable indicates a reference force.

[0123] Another example (e.g., example 22) relates to a previous example (e.g., one of the examples 17 to 20) or to any other example, further comprising that the compute circuit is configured to control the operation of the boom system such that extensions of booms of the boom system are entirely pulled back automatically.

[0124] Another example (e.g., example 23) relates to a previous example (e.g., one of the examples 17 to 21) or to any other example, further comprising that the input interface is configured to receive a sensor reading of a force sensor indicating a force acting on the cable and a sensor reading of a boom extension sensor indicating a length of a boom, wherein the compute circuit is configured to control the operation of the winch arrangement based on at least one of the force acting on the cable or the length of the boom.

[0125] Another example (e.g., example 24) is a remote control unit to wirelessly interact with control circuitry according to any one of examples 17 to 22 to cause the control circuitry to transfer the load block attached to the cable of the winch arrangement from a working position to a transport position.

[0126] Another example (e.g., example 25) relates to a previous example (e.g., example 23) or to any other example, further comprising that the remote control unit comprises a user interface configured to enable an stow function causing the control circuitry to transfer the load block attached to the cable of the winch arrangement from a working position to a transport position.

[0127] Another example (e.g., example 26) relates to a previous example (e.g., one of the examples 23 or 24) or to any other example, further comprising that the remote control unit further comprises a control switch, wherein the stow function is interrupted when the control switch is released.

[0128] An example (e.g., example 27) relates to method to control a crane, comprising control the operation of a winch arrangement mounted at a boom system of the crane such that a load block attached to a cable of the winch arrangement automatically engages with an abutment, and control the operation of the winch arrangement such that the load block is automatically transferred from a working position to a transport position.

[0129] Another example (e.g., example 28) relates to a previous example (e.g., example 26) or to any other example, further comprising automatically winding up the cable until a sensor reading of a force sensor indicates that a force acting on the cable reaches a reference force.

[0130] Another example (e.g., example 29) relates to The aspects and features described in relation to a particular one of the previous examples may also be combined with one or

more of the further examples to replace an identical or similar feature of that further example or to additionally introduce the features into the further example.

[0131] In the following, some examples of the proposed concept are presented:

[0132] An example (e.g., example 30) relates to control circuitry for a crane, comprising an input interface configured to receive readings of sensors sensing operating parameters of the crane, an output interface to output control data to cause actuators of the crane to perform a motion, and a compute circuit configured to control the operation of the crane such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.

[0133] Another example (e.g., example 31) relates to a previous example (e.g., example 30) or to any other example, further comprising that the compute circuit is configured to control the operation of the boom system such that extensions of booms of the boom system are entirely pulled back.

[0134] Another example (e.g., example 32) relates to a previous example (e.g., one of the examples or 31) or to any other example, further comprising that the compute circuit is configured to control the operation of the boom system such that a column of the crane is rotated such 30 that a boom of the boom system is positioned at a determined slew angle.

[0135] Another example (e.g., example 33) relates to a previous example (e.g., one of the examples 30 or 31) or to any other example, further comprising that the compute circuit is configured to control the operation of the boom system such that the boom system is transferred to an intermediate position, and to transfer the boom system from the intermediate position to the transport position upon receipt of a user input.

[0136] Another example (e.g., example 34) relates to a previous example (e.g., example 33) or to any other example, further comprising that the intermediate position is given by a determined slew angle and by a determined elevation angle between the column and a boom of the boom system.

[0137] Another example (e.g., example 35) relates to a previous example (e.g., one of the examples 30 to 33) or to any other example, further comprising that the compute circuit is further configured to automatically transfer the boom system from a transport position to a determined working position.

[0138] Another example (e.g., example 36) relates to a previous example (e.g., one of the examples 30 to 35) or to any other example, further comprising that the input interface is configured to receive a reading of a boom angle sensor indicating at least one boom angle parameter of the crane, receive a reading of a boom extension sensor indicating a length extension parameter of the boom, receive at least one of a sensor reading of a slew angle sensor indicating an angle of rotation of the column of the crane.

[0139] Another example (e.g., example 37) relates to a previous example (e.g., example 36) or to any other example, further comprising that the input interface is further configured to receive a proportional signal from a remote control, the proportional signal indicating a speed of movement of the actuators.

[0140] An example (e.g., example 38) related to a remote control unit to wirelessly interact with control circuitry according to any one of examples 30 to 37, the remote

control unit comprising a user interface configured to enable an stow function causing the control circuitry to transfer the boom system from the arbitrary working position to the transport position.

[0141] Another example (e.g., example 39) relates to a previous example (e.g., example 38) or to any other example, further comprising that the user interface is further configured to enable a deploy function causing the control circuitry to transfer the boom system from the transport position to the determined working position.

[0142] Another example (e.g., example 40) relates to the remote control unit further comprising a control switch, wherein the stow function is interrupted when the control switch is released.

[0143] Another example (e.g., example 41) relates to a previous example (e.g., one of the examples 39 or 40) or to any other example, further comprising a switch, wherein the stow function is caused if the switch is operated in a first direction and the deploy function is caused if the switch is operated in a second direction being opposite to the first direction.

[0144] Another example (e.g., example 42) relates to the remote control unit further comprising an input device configured to generate a proportional signal in response to a user input, the remote control unit being configured to cause the control circuitry to cause the actuators of the crane to perform motion at a speed associated to the proportional signal while transferring the boom system from the arbitrary working position to the transport position.

[0145] An example (e.g., example 43) relates to method to control a crane, comprising receive an input signal indicating an stow function of the crane, and control the operation of the crane such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.

[0146] Another example (e.g., example 44) relates to a previous example (e.g., example 43) or to any other example, further comprising receive an input signal indicating a deploy function of the crane, and control the operation of the crane such that the boom system of the crane is automatically transferred from the transport position to an determined working position.

[0147] Another example (e.g., example 45) is a computer program having a program code causing the performance of a another example (e.g., example 43 or 44) if the program code is executed by a processor.

[0148] An example (e.g., example 46) relates to a crane comprising a boom system mounted on a rotatable column, and control circuitry according to any one of examples 30 to 37.

[0149] Another example (e.g., example 47) relates to a previous example (e.g., example 46) or to any other example, further comprising that the boom system comprises a single boom.

[0150] Examples may further be or relate to a (computer) program including a program code to execute one or more of the above methods when the program is executed on a computer, processor or other programmable hardware component. Thus, steps, operations or processes of different ones of the methods described above may also be executed by programmed computers, processors or other programmable hardware components. Examples may also cover program storage devices, such as digital data storage media, which are machine-, processor-or computer-readable and encode

and/or contain machine-executable, processor-executable or computer-executable programs and instructions. Program storage devices may include or be digital storage devices, magnetic storage media such as magnetic disks and magnetic tapes, hard disk drives, or optically readable digital data storage media, for example. Other examples may also include computers, processors, control units, (field) programmable logic arrays ((F)PLAs), (field) programmable gate arrays ((F)PGAs), graphics processor units (GPU), application-specific integrated circuits (ASICs), integrated circuits (ICs) or system-on-a-chip (SoCs) systems programmed to execute the steps of the methods described above.

[0151] It is further understood that the disclosure of several steps, processes, operations or functions disclosed in the description or claims shall not be construed to imply that these operations are necessarily dependent on the order described, unless explicitly stated in the individual case or necessary for technical reasons. Therefore, the previous description does not limit the execution of several steps or functions to a certain order. Furthermore, in further examples, a single step, function, process or operation may include and/or be broken up into several sub-steps, -functions, -processes or -operations.

[0152] If some aspects have been described in relation to a device or system, these aspects should also be understood as a description of the corresponding method. For example, a block, device or functional aspect of the device or system may correspond to a feature, such as a method step, of the corresponding method. Accordingly, aspects described in relation to a method shall also be understood as a description of a corresponding block, a corresponding element, a property or a functional feature of a corresponding device or a corresponding system.

[0153] The following claims are hereby incorporated in the detailed description, wherein each claim may stand on its own as a separate example. It should also be noted that although in the claims a dependent claim refers to a particular combination with one or more other claims, other examples may also include a combination of the dependent claim with the subject matter of any other dependent or independent claim. Such combinations are hereby explicitly proposed, unless it is stated in the individual case that a particular combination is not intended. Furthermore, features of a claim should also be included for any other independent claim, even if that claim is not directly defined as dependent on that other independent claim.

What is claimed is:

1. Control circuitry for a crane, comprising:
 - an input interface configured to receive readings of sensors sensing operating parameters of the crane;
 - an output interface to output control data to cause actuators of the crane to perform a motion; and
 - a compute circuit configured to control the operation of the crane such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.
2. Control circuitry according to claim 1, wherein the compute circuit is configured to control the operation of the boom system such that extensions of booms of the boom system are retracted.
3. Control circuitry according to claim 1, wherein the compute circuit is configured to control the operation of the boom system such that

a column of the crane is rotated such that a boom of the boom system is positioned at a determined slew angle.

4. The control circuitry according to claim 1, wherein the compute circuit is configured to control the operation of the boom system to perform a stow sequence, wherein the stow sequence comprises

the boom system being transferred to an intermediate position; and

the boom system being transferred from the intermediate position to the transport position upon receipt of a user input.

5. The control circuitry according to claim 4, wherein the intermediate position is given by a determined slew angle and by a determined elevation angle between the column and a boom of the boom system.

6. The control circuitry according to claim 1, wherein the compute circuit is further configured to automatically transfer the boom system from a transport position to a determined working position.

7. The control circuitry according to claim 1, wherein the input interface is configured to

receive a reading of a boom angle sensor indicating at least one boom angle parameter of the crane;

receive a reading of a boom extension sensor indicating a length extension parameter of the boom;

receive at least one of a sensor reading of a slew angle sensor indicating an angle of rotation of the column of the crane.

8. The control circuitry according to claim 7, wherein the input interface is further configured to

receive a signal from a remote control, the signal indicating a speed of movement of the actuators.

9. The control circuitry according to claim 1, wherein the compute circuit is configured to control the operation of the boom system to perform a stow sequence, wherein the stow sequence comprises

the boom system of the crane being automatically transferred from the arbitrary working position to the transport position; and

controllably moving a load block of the crane into a load block transport position.

10. The control circuitry according to claim 1, wherein the compute circuit is configured to control the operation of the boom system to perform a deploy sequence, wherein the deploy sequence comprises

the boom system being automatically transferred from a transport position to a determined working position; and

controllably moving a load block of the crane into a load block working position.

11. A remote control unit to wirelessly interact with control circuitry according to claim 1, the remote control unit comprising a user interface configured to enable a stow function causing the control circuitry to transfer the boom system from the arbitrary working position to the transport position.

12. The remote control unit of claim 11, wherein the user interface is further configured to enable a deploy function causing the control circuitry to transfer the boom system from the transport position to the determined working position.

13. The remote control unit according to claim **11**, the remote control unit further comprising a control switch, wherein the stow function is interrupted based on a status of the control switch.

14. The remote control unit of claim **12**, further comprising a selector, wherein the stow function is enabled if the selector is operated in a first state, and the deploy function is enabled if the selector is operated in a second state being different to the first state.

15. The remote control unit according to claim **11**, the remote control unit further comprising a input device configured to generate a signal in response to a user input, the remote control unit being configured to cause the control circuitry to cause the actuators of the crane to perform motion at a speed associated to the signal while transferring the boom system from the arbitrary working position to the transport position.

16. The remote control unit according to claim **11**, wherein the input device comprises a proportional input device configured to generate a proportional signal in response to a user input.

17. Method to control a crane, comprising:

receive an input signal indicating a stow function of the crane; and

control the operation of the crane such that a boom system of the crane is automatically transferred from an arbitrary working position to a transport position.

18. The method of claim **17**, further comprising:

receive an input signal indicating a deploy function of the crane; and

control the operation of the crane such that the boom system of the crane is automatically transferred from the transport position to a determined working position.

19. Computer program having a program code causing the performance of a method according to claim **17** if the program code is executed by a processor.

20. A crane comprising:

a boom system mounted on a rotatable column; and
control circuitry according to claim **1**.

* * * * *