

Kinematic Models for Seakeeping and Manoeuvring of Marine Vessels

Tristan Perez, ¹ Thor I. Fossen ²

Abstract

The motion of marine vessels has traditionally been studied using two different approaches: manoeuvering and seakeeping. These two approaches use different reference frames and coordinate systems to describe the motion. This paper derives the kinematic models that characterize the transformation of motion variables (position, velocity, accelerations, and forces) between the different coordinate systems used in these theories. The derivations hereby presented are done in terms of the formalism adopted in robotics. The advantage of this formulation is the use matrix notation and operations. As an application, the transformation of linear equations of motion used in seakeeping into body-fixed coordinates is considered for both zero and forward speed.

Keywords: Kinematics, ship motion, seakeeping, manoeuvring.

1 Introduction

The study of ship dynamics has traditionally been covered by two main theories: Manoeuvring and Seakeeping. Manoeuvring refers to the study of ship motion in the absence of wave-excitation (calm water). Seakeeping, on the other hand, refers to the study of motion when there is wave excitation and while the vessel keeps its course and its speed constant (which includes the case of zero speed). Although both areas are concerned with the same issues: study of motion, stability and control, the separation allows making different assumptions that simplify the study in each case. A chief distinguishing characteristic of these theories is the use of different coordinates and reference systems to express the equations of motion.

In manoeuvring, the equations of motion are described relative to a coordinate system fixed to the vessel (a body-fixed coordinate system), whereas in seakeeping the motion is described relative to an *equilib*-

rium coordinate system fixed to the average speed and heading of the vessel. Most hydrodynamic programs compute radiation and wave excitation forces in this equilibrium frame.

When time-domain simulations and motion control system designs are considered, it is necessary to use a unified framework, and body-fixed coordinate system is a natural choice. This calls for kinematic models that characterize the transformation of motion variables (position, velocity and accelerations) and forces between different coordinate systems. For the case of a vessel operating at zero forward speed, the equilibrium coordinate system can be considered fixed to the earth. The kinematic models then describe the traditional transformation between body- and earth-fixed coordinates used in robotics and aeronautics. For the case of forward speed, transformations between earthfixed, body-fixed and equilibrium or seakeeping coordinates are different. Details of the latter transformations are often only outlined or considered for small

¹Centre for Ships and Ocean Structures, Norwegian University of Science and Technology, NO-7941 Trondheim, Norway. E-mail: tristan.perez@ntnu.no

² Department of Engineering Cybernetics, Norwegian University of Science and Technology, N-7491 Trondheim, Norway.

angles in the literature—see, for example, Bishop and Price (1981); Lloyd (1989); Graham (1990); Faltinsen (2005).

Therefore, this paper reviews the kinematic models commonly used in both theories and provides a complete derivation the transformations that link these descriptions. In recent years, there has been a significant interest of these models in relation to the time-domain models for simulation and control system design based on data obtained from seakeeping programs, and unified models for manoeuvring and seakeeping—see Bailey et al. (1997); Fossen and Smogeli (2004); Fossen (2005); Smogeli et al. (2005); Perez (2005); Perez and Fossen (2006).

2 Coordinate Systems

To describe the position and orientation of a ship, the following dextral orthogonal coordinate systems are commonly used —see Figure 1:

- Noth-East-down, $\{n\}$;
- Body-fixed, $\{b\}$;
- Seakeeping, $\{s\}$.

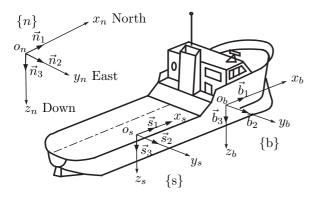


Figure 1: Coordinate systems used for ship motion description

The Noth-East-Down coordinate system $\{n\} \equiv (o_n, \vec{n}_1, \vec{n}_2, \vec{n}_3)$ is the local geodetic coordinate system fixed to the Earth. This is determined by a tangent plane attached to the geodetic reference ellipsoid (WGS84) at a point of interest, which determines the origin of the system o_n . The positive unit vector \vec{n}_1 points towards the true North, \vec{n}_2 points towards the East, and \vec{n}_3 points towards the interior of the earth perpendicular to the reference ellipsoid completing the dextral orthogonal system.

The **Body-fixed coordinate system** $\{b\} \equiv (o_b, \vec{b}_1, \vec{b}_2, \vec{b}_3)$ is fixed to the hull. The positive unit vector \vec{b}_1 points towards the bow, \vec{b}_2 points towards starboard and \vec{b}_3 points downwards completing the dextral orthogonal system. For marine vehicles, the axes of this frame are often chosen to coincide with the principal axes of inertia, which automatically sets the origin o_b . Different applications, however, may require other locations for o_b .

The **Seakeeping coordinate systems** $\{s\} \equiv (o_s, \vec{s}_1, \vec{s}_2, \vec{s}_3)$ moves at the average speed of the vessel following its path. That is, this system is not fixed to the vessel but to its equilibrium state, which is defined by the average speed and heading. The positive unit vector \vec{s}_1 points forward and is aligned with the average forward velocity vector. The positive unit vector \vec{s}_2 points towards starboard, and \vec{s}_3 points downwards completing the dextral orthogonal system. The origin o_s is usually determined such that the z_s -axis passes through the average position of the centre of gravity of the vessel, and the horizontal plane that contains \vec{s}_1 and \vec{s}_2 coincides with the mean free surface of the water.

The coordinate system $\{n\}$ is used to define the position of the vessel on the earth, and the direction of wind, waves and current. This frame is considered inertial, which is a reasonable assumption because the velocity of marine vehicles is relatively small, and thus the forces due to the rotation of the Earth are negligible relative to the hydrodynamic forces acting on the vehicle. The coordinate system $\{b\}$ is used to express velocity and acceleration measurements taken on board. The equations of motion of the vessel are normally formulated about the point o_b . This coordinate system is also used to define some ship motion performance indices—see Lloyd (1989). The coordinate system $\{s\}$ is used to define the wave elevation at the vessel's average location and to compute the hydrodynamic forces and using standard software based on hydrodynamic theories—see, for example, Fathi (2004), Jouernee and Adegeest (2003), WAMIT (2004). The positive convention described above for the coordinate systems $\{n\}$, $\{b\}$ and $\{s\}$ will be the one adopted in the rest of the paper. In the literature and in different hydrodynamic programs, however, other conventions may be used.

3 Mathematical Background

This section defines the mathematical notation and summarizes some key results that will be used in the subsequent sections. The material has been adapted from Egeland and Gravdahl (2002) and Kane and Levinson (1985).

3.1 Coordinate Systems and Vector Notation

When a vector \vec{u} is described relative to a coordinate system $\{a\}$, we will use the following representation:

$$\vec{u} = u_1^a \vec{a}_1 + u_2^a \vec{a}_2 + u_3^a \vec{a}_3, \tag{1}$$

where \vec{a}_i are the unit vectors that define $\{a\}$, and $u_i^a \vec{a}_i$ are the components of \vec{u} in $\{a\}$. We will also use the coordinate form of \vec{u} in $\{a\}$:

$$\mathbf{u}^a \triangleq [u_1^a, u_2^a, u_3^a]^T, \tag{2}$$

which enables using use matrix notation and operations to discuss different properties of vector quantities. When discussing properties that hold regardless of the chosen coordinate system, we will simply use \mathbf{u} , e.g., $\vec{u} \cdot \vec{v} = \mathbf{u}^T \mathbf{v}$.

The cross-product of two vectors $\vec{c} = \vec{a} \times \vec{b}$ can be represented in coordinate form as

$$\mathbf{c} = \mathbf{S}(\mathbf{a})\mathbf{b},\tag{3}$$

where the matrix S(a) gives the skew-symmetric form of a vector a:

$$\mathbf{S}(\mathbf{a}) \triangleq \begin{bmatrix} 0 & -a_3 & a_2 \\ a_3 & 0 & -a_1 \\ -a_2 & a_1 & 0 \end{bmatrix}. \tag{4}$$

Note that $\mathbf{S}(\mathbf{a}) = -\mathbf{S}^T(\mathbf{a})$.

3.2 Rotation Matrix

The transformation of coordinate vectors between different frames is performed via appropriate transformation matrices. The generic unbound vector \vec{r} , can be expressed in either $\{a\}$ or $\{b\}$ as

$$\vec{r} = \sum_{i=1}^{3} r_i^a \vec{a}_i = \sum_{i=1}^{3} r_i^b \vec{b}_i.$$
 (5)

Then, the rotation matrix that takes $\{a\}$ into the orientation of $\{b\}$ is defined as

$$\mathbf{R}_b^a \triangleq [R_{ij} = \vec{a}_i \cdot \vec{b}_j]. \tag{6}$$

Note that \mathbf{R}_b^a thus defined transforms coordinate vectors in $\{b\}$ to coordinate vectors in $\{a\}$:

$$\mathbf{r}^a = \mathbf{R}_b^a \mathbf{b}^b. \tag{7}$$

Rotation matrices are elements of the special orthogonal group of order 3, SO(3): $\mathbf{R}\mathbf{R}^T = \mathbf{I}_{3\times 3}$, and $\det(\mathbf{R})=1$. Thus, $(\mathbf{R})^{-1}=(\mathbf{R})^T=\mathbf{R}$.

A rotation is called *simple*, if it is a rotation about a single axis (not necessary a coordinate axis). If we consider rotations about the coordinates axes, however, we obtain:

• A rotation of an angle ψ about the z-axis:

$$\mathbf{R}_{z,\psi} = \begin{bmatrix} \cos \psi & -\sin \psi & 0\\ \sin \psi & \cos \psi & 0\\ 0 & 0 & 1 \end{bmatrix}$$
(8)

• A rotation of an angle θ about the y-axis:

$$\mathbf{R}_{y,\theta} = \begin{bmatrix} \cos \theta & 0 & \sin \theta \\ 0 & 1 & 0 \\ -\sin \theta & 0 & \cos \theta \end{bmatrix}$$
(9)

• A rotation of an angle ϕ about the x-axis:

$$\mathbf{R}_{x,\phi} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos\phi & -\sin\phi \\ 0 & \sin\phi & \cos\phi \end{bmatrix} \tag{10}$$

The above results follow from (6).

3.3 Euler Angles: Roll, Pitch and Yaw

The attitude (or orientation) of a coordinate system $\{b\}$ relative to $\{a\}$ can be expressed by the three consecutive rotations about the main axes that take $\{a\}$ into $\{b\}$. These rotations can be performed in a different order (there are 12 different ways of doing this), and each triplet of rotated angles is called a set of Euler angles. The set most commonly used in navigation is that of roll, pitch and yaw, which correspond the rotations performed in the following order:

- 1. Rotation about the z axis of $\{a\}$ an angle ψ (yaw angle) resulting in the frame $\{a'\}$;
- 2. Rotation about the y axis of $\{a'\}$ an angle θ (pitch angle) resulting in the frame $\{a''\}$;
- 3. Rotation about the x axis of $\{a''\}$ an angle ϕ (roll angle) resulting in $\{b\}$.

The positive angle convention corresponds to a right-handed screw about advancing in the positive direction of the axis of rotation.

Using these consecutive single rotations, a rotation matrix can be expressed as

$$\mathbf{R}_b^a = \mathbf{R}_{z,\psi} \mathbf{R}_{y',\theta} \mathbf{R}_{x'',\phi}. \tag{11}$$

After multiplication

$$\mathbf{R}_{b}^{a} = \begin{bmatrix}
c_{\psi}c_{\theta} & -s_{\psi}c_{\phi} + c_{\psi}s_{\theta}s_{\phi} & s_{\psi}s_{\phi} + c_{\psi}c_{\phi}s_{\theta} \\
s_{\psi}c_{\theta} & c_{\psi}c_{\phi} + s_{\phi}s_{\theta}s_{\psi} & -c_{\psi}s_{\phi} + s_{\psi}c_{\phi}s_{\theta} \\
-s_{\theta} & c_{\theta}s_{\phi} & c_{\theta}c_{\phi}
\end{bmatrix}, (12)$$

where $s_x \equiv \sin(x)$ and $c_x \equiv \cos(x)$. Note that the matrix multiplication order in (11) is consistent with (7).

3.4 Angular Velocity

Since the rotation matrix \mathbf{R}_{h}^{a} is orthogonal, then

$$\frac{d}{dt}[\mathbf{R}_b^a(\mathbf{R}_b^a)^T] = \dot{\mathbf{R}}_b^a(\mathbf{R}_b^a)^T + \mathbf{R}_b^a(\dot{\mathbf{R}}_b^a)^T = \mathbf{0}.$$
 (13)

This implies that $\dot{\mathbf{R}}_b^a(\mathbf{R}_b^a)^T$ is a skew-symmetric matrix, and thus it can be described by a column vector as in (4). The vector $\boldsymbol{\omega}_{ab}^a$ of angular velocity of the frame $\{b\}$ with respect to the frame $\{a\}$, with coordinates in the frame $\{a\}$ is defined such that

$$\boldsymbol{\omega}_{ab}^{a}: \quad \mathbf{S}(\boldsymbol{\omega}_{ab}^{a}) = \dot{\mathbf{R}}_{b}^{a}(\mathbf{R}_{b}^{a})^{T}.$$
 (14)

It also follows that

$$\dot{\mathbf{R}}_b^a = \mathbf{S}(\boldsymbol{\omega}_{ab}^a) \, \mathbf{R}_b^a = \mathbf{R}_b^a \, \mathbf{S}(\boldsymbol{\omega}_{ab}^b). \tag{15}$$

If we further consider three composite rotations $\mathbf{R}_d^a = \mathbf{R}_b^a \mathbf{R}_c^b \mathbf{R}_d^c$, then

$$\dot{\mathbf{R}}_d^a = \dot{\mathbf{R}}_b^a \mathbf{R}_c^b \mathbf{R}_d^c + \mathbf{R}_b^a \dot{\mathbf{R}}_c^b \mathbf{R}_d^c + \mathbf{R}_b^a \mathbf{R}_c^b \dot{\mathbf{R}}_d^c. \tag{16}$$

Using (14), we find that

$$\begin{split} \mathbf{S}(\boldsymbol{\omega}_{ad}^{a}) &= \dot{\mathbf{R}}_{d}^{a}(\mathbf{R}_{d}^{a})^{T} \\ &= (\dot{\mathbf{R}}_{b}^{a}\mathbf{R}_{c}^{b}\mathbf{R}_{c}^{c} + \mathbf{R}_{b}^{a}\dot{\mathbf{R}}_{c}^{b}\mathbf{R}_{c}^{c} + \mathbf{R}_{b}^{a}\mathbf{R}_{c}^{b}\mathbf{R}_{d}^{c})(\mathbf{R}_{d}^{c})^{T}(\mathbf{R}_{c}^{b})^{T}(\mathbf{R}_{b}^{a})^{T} \\ &= \dot{\mathbf{R}}_{b}^{a}(\mathbf{R}_{b}^{a})^{T} + \mathbf{R}_{b}^{a}\dot{\mathbf{R}}_{c}^{b}(\mathbf{R}_{c}^{b})^{T}(\mathbf{R}_{b}^{a})^{T} + \mathbf{R}_{c}^{a}\dot{\mathbf{R}}_{d}^{c}(\mathbf{R}_{c}^{c})^{T}(\mathbf{R}_{c}^{a})^{T} \\ &= \mathbf{S}(\boldsymbol{\omega}_{ab}^{a}) + \mathbf{R}_{b}^{a}\mathbf{S}(\boldsymbol{\omega}_{bc}^{b})(\mathbf{R}_{b}^{a})^{T} + \mathbf{R}_{c}^{a}\mathbf{S}(\boldsymbol{\omega}_{cd}^{c})(\mathbf{R}_{c}^{a})^{T} \\ &= \mathbf{S}(\boldsymbol{\omega}_{ab}^{a}) + \mathbf{S}(\boldsymbol{\omega}_{bc}^{a}) + \mathbf{S}(\boldsymbol{\omega}_{cd}^{a}), \end{split}$$

which from the linearity of $S(\cdot)$ implies that

$$\omega_{ad}^a = \omega_{ab}^a + \omega_{bc}^a + \omega_{cd}^a. \tag{18}$$

This holds in any coordinate system and for any number of consecutive rotations (Kane and Levinson, 1985):

$$\vec{\omega}_{ad} = \vec{\omega}_{ab} + \vec{\omega}_{bc} + \vec{\omega}_{cd}. \tag{19}$$

3.5 Relationship Between Angular Velocity and Euler-angle Derivatives

Let us consider the rotation from $\{a\}$ to $\{d\}$ via simple roll, pitch and yaw rotations:

$$\mathbf{R}_b^a = \mathbf{R}_{z,\psi}, \qquad \mathbf{R}_c^b = \mathbf{R}_{y,\theta}, \qquad \mathbf{R}_d^c = \mathbf{R}_{x,\phi}.$$
 (20)

The angular velocities corresponding these rotations are

$$\omega_{ab}^{a} = [0, 0, \dot{\psi}]^{T},$$

$$\omega_{bc}^{b} = [0, \dot{\theta}, 0]^{T},$$

$$\omega_{cd}^{c} = [\dot{\phi}, 0, 0]^{T}.$$
(21)

Using (19), we can write

$$\boldsymbol{\omega}_{ad}^{a} = \boldsymbol{\omega}_{ab}^{a} + \mathbf{R}_{b}^{a} \boldsymbol{\omega}_{bc}^{b} + \mathbf{R}_{b}^{a} \mathbf{R}_{c}^{b} \boldsymbol{\omega}_{cd}^{c}, \tag{22}$$

and

$$\boldsymbol{\omega}_{ad}^{d} = \mathbf{R}_{a}^{d} \boldsymbol{\omega}_{ab}^{a} + \mathbf{R}_{c}^{d} \mathbf{R}_{b}^{c} \boldsymbol{\omega}_{bc}^{b} + \mathbf{R}_{c}^{c} \boldsymbol{\omega}_{cd}^{c}. \tag{23}$$

Define the vector of roll pitch and yaw associated with the rotation from $\{a\}$ to $\{d\}$ as

$$\mathbf{\Theta}_{ad} \triangleq [\phi, \theta, \psi]^T. \tag{24}$$

Then (22) and (23) can be expressed as

$$\boldsymbol{\omega}_{ad}^{a} = \mathbf{T}_{a}^{-1}(\boldsymbol{\Theta}_{ad})\dot{\boldsymbol{\Theta}}_{ad} = \begin{bmatrix} c_{\psi}c_{\theta} & -s_{\psi} & 0\\ s_{\psi}c_{\theta} & c_{\psi} & 0\\ -s_{\theta} & 0 & 1 \end{bmatrix} \dot{\boldsymbol{\Theta}}_{ad} \quad (25)$$

$$\boldsymbol{\omega}_{ad}^{d} = \mathbf{T}_{d}^{-1}(\boldsymbol{\Theta}_{ad})\dot{\boldsymbol{\Theta}}_{ad} = \begin{bmatrix} 1 & 0 & -s_{\theta} \\ 0 & c_{\phi} & s_{\phi}c_{\theta} \\ 0 & -s_{\phi} & c_{\phi}c_{\theta} \end{bmatrix} \dot{\boldsymbol{\Theta}}_{ad} \quad (26)$$

The inverse relationships are

$$\dot{\mathbf{\Theta}}_{ad} = \mathbf{T}_{a}(\mathbf{\Theta}_{ad})\boldsymbol{\omega}_{ad}^{a} = \begin{bmatrix} \frac{c_{\psi}}{c_{\theta}} & \frac{s_{\psi}}{c_{\theta}} & 0\\ -s_{\psi} & c_{\psi} & 0\\ c_{\psi}t_{\theta} & s_{\psi}t_{\theta} & 1 \end{bmatrix} \boldsymbol{\omega}_{ad}^{a} \quad (27)$$

$$\dot{\mathbf{\Theta}}_{ad} = \mathbf{T}_d(\mathbf{\Theta}_{ad})\boldsymbol{\omega}_{ad}^d = \begin{bmatrix} 1 & s_{\phi}t_{\theta} & c_{\phi}t_{\theta} \\ 0 & c_{\phi} & -s_{\phi} \\ 0 & \frac{s_{\phi}}{c_{\theta}} & \frac{c_{\phi}}{c_{\theta}} \end{bmatrix} \boldsymbol{\omega}_{ad}^d \quad (28)$$

Note that $\det(\mathbf{T}_a) = \det(\mathbf{T}_d) = 1/\cos\theta$, and that $\mathbf{T}_a^{-1} \neq \mathbf{T}_a^T$ and $\mathbf{T}_d^{-1} \neq \mathbf{T}_d^T$. Therefore, neither \mathbf{T}_a nor \mathbf{T}_d are orthogonal. Also, \mathbf{T}_a^{-1} and \mathbf{T}_d^{-1} are singular for $\theta = \pm \pi/2$ —known as the Euler-angle singularity.

3.6 Position and Velocity Coordinate Vectors

For position and velocity coordinate vectors we will use a three-scrip notation. For example, if \vec{r}_{ab} is the vector from $\{a\}$ to $\{b\}$, which indicates the position of of $\{b\}$ relative to $\{a\}$. Then, in coordinate form, the notation \mathbf{r}_{ab}^a indicates the position of $\{b\}$ relative to $\{a\}$ expressed in $\{a\}$. That is the upper scrip indicates in which coordinate system the vector is expressed, while the lower scripts indicate the point of interest and the coordinate system with respect of which the position is considered. This vector is expressed in $\{b\}$, for example, can be obtained from

$$\mathbf{r}_{ab}^b = \mathbf{R}_a^b \mathbf{r}_{ab}^a$$

Then, the notation \mathbf{v}_{ab}^{a} indicates the velocity of $\{b\}$ relative to $\{a\}$ expressed in $\{a\}$. We will use this notation only when the frame with respect to which the derivative is take is inertial, i.e., if a is inertial then,

$$\mathbf{v}_{ab}^a \triangleq \dot{\mathbf{r}}_{ab}^a \equiv \frac{^a d}{dt} \vec{r}_{ab}.$$

The derivative of a vector *must* be specified with respect to a particular coordinate system. We should then be careful when taking derivatives in coordinate form because the information about the reference frames in which the derivative is taken can be lost. For example, the following is a well known relationship between the derivatives of a vector in two coordinate systems (Kane and Levinson, 1985):

$$\frac{{}^{a}d\vec{r}}{dt} = \frac{{}^{b}d\vec{r}}{dt} + \vec{\omega}_{ab} \times \vec{r},\tag{29}$$

in which

$$\frac{{}^{a}d\vec{r}}{dt} = \dot{r}_{1}^{a} \vec{a}_{1} + \dot{r}_{2}^{a} \vec{a}_{2} + \dot{r}_{3}^{a} \vec{a}_{3},
\frac{{}^{b}d\vec{r}}{dt} = \dot{r}_{1}^{b} \vec{b}_{1} + \dot{r}_{2}^{b} \vec{b}_{2} + \dot{r}_{3}^{b} \vec{b}_{3}.$$
(30)

This relationship can be derived in coordinate form by considering

$$\mathbf{r}^a = \mathbf{R}_b^a \mathbf{r}^b. \tag{31}$$

Taking the time derivative of (31), gives

$$\dot{\mathbf{r}}^a = \mathbf{R}_b^a [\dot{\mathbf{r}}^b + \mathbf{S}(\boldsymbol{\omega}_{ab}^b) \mathbf{r}^b]. \tag{32}$$

However it should be noted here that the derivative on the left-hand side is taken with respect to the coordinate system a while the derivative on the right-hand side is taken with respect to the coordinate system b. To express the above in the b we would have to multiply both sides by \mathbf{R}_a^b , which would lead to

$$\dot{\mathbf{r}}^b = \dot{\mathbf{r}}^b + \mathbf{S}(\boldsymbol{\omega}_{ab}^b)\mathbf{r}^b. \tag{33}$$

This should be interpreted as

$${}^{a}\dot{\mathbf{r}}^{b} = {}^{b}\dot{\mathbf{r}}^{b} + \mathbf{S}(\boldsymbol{\omega}_{ab}^{b})\mathbf{r}^{b}, \tag{34}$$

which is the coordinate form of (29).

4 Manoeuvring Theory and Kinematic Models

4.1 Coordinate Systems and Motion Variables

In manoeuvering theory, the position of the ship is given by the position of the origin of $\{b\}$ relative to $\{n\}$: \vec{r}_{nb} —Figure 2 illustrates this. When expressed in coordinate form in $\{n\}$, this vector gives the North, East and Down positions:

$$\mathbf{r}_{nb}^n \triangleq [N, E, D]^T. \tag{35}$$

The attitude of the vessel will be given by the angles or roll, pitch and yaw that take $\{n\}$ into $\{b\}$:

$$\mathbf{\Theta}_{nb} \triangleq [\phi, \theta, \psi]^T. \tag{36}$$

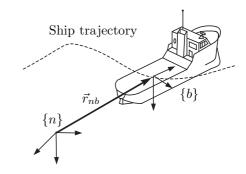


Figure 2: Ship position used in manoeuvrering.

The linear and angular velocities are more conveniently expressed in the body-fixed coordinate system. The vessel linear velocity in $\{b\}$ is given by

$$\mathbf{v}_{nb}^{b} \triangleq \mathbf{R}_{n}^{b} \dot{\mathbf{r}}_{nb}^{n}, = \mathbf{R}_{n}^{b} [\dot{N}, \dot{E}, \dot{D}]^{T}, \tag{37}$$

The components of \mathbf{v}_{nb}^b will be denoted by

$$\mathbf{v}_{nb}^b = [u, v, w]^T, \tag{38}$$

which are called *surge*, *sway* and *heave velocities* respectively (SNAME, 1950). Note that

$$\int_0^t \mathbf{v}_{nb}^b(t') \, dt'$$

has no physical meaning; the vessel trajectory is given by

$$\mathbf{r}_{nb}^n(t) = \int_0^t \mathbf{R}_b^n \mathbf{v}_{nb}^b dt' + \mathbf{r}_{nb}^n(0).$$

The angular velocity in $\{b\}$ is given by

$$\boldsymbol{\omega}_{nb}^{b} = [p, q, r]^{T} : \qquad \dot{\mathbf{R}}_{b}^{n} = \mathbf{R}_{b}^{n} \mathbf{S}(\boldsymbol{\omega}_{nb}^{b}),$$
 (39)

which follows from (15). The components are called roll, pitch and yaw rate respectively (SNAME, 1950). Note that the relationship between ω_{nb}^b and the time derivative of the Euler angles follows from (28) modulo substitution a, d by n, b:

$$\dot{\mathbf{\Theta}}_{nb} = \mathbf{T}_b(\mathbf{\Theta}_{nb})\boldsymbol{\omega}_{nb}^b. \tag{40}$$

As in the case of the linear velocities,

$$\int_0^t \boldsymbol{\omega}_{nb}^b \, dt'$$

has no physical meaning. The orientation of the vessel is obtained by integrating (40).

4.2 Kinematic Model $\{n\} - \{b\}$

Following the notation introduced by Fossen (2002) we can define the *generalised coordinate position vector* (position-orientation vector):

$$\boldsymbol{\eta} \triangleq \begin{bmatrix} \mathbf{r}_{nb}^n \\ \boldsymbol{\Theta}_{nb} \end{bmatrix} = [N, E, D, \phi, \theta, \psi]^T.$$
(41)

and the generalised velocity vector (linear-angular velocity vector) in $\{b\}$ is defined as:

$$\boldsymbol{\nu} \triangleq \begin{bmatrix} \mathbf{v}_{nb}^b \\ \boldsymbol{\omega}_{nb}^b \end{bmatrix} = [u, v, w, p, q, r]^T. \tag{42}$$

From the definition of these two vectors and (37) and (40), the *manoeuvering kinematic model* follows:

$$\dot{\boldsymbol{\eta}} = \mathbf{J}_b^n(\boldsymbol{\eta})\,\boldsymbol{\nu},\tag{43}$$

with

$$\mathbf{J}_{b}^{n}(\boldsymbol{\eta}) \triangleq \begin{bmatrix} \mathbf{R}_{b}^{n}(\boldsymbol{\Theta}_{nb}) & \mathbf{0}_{3\times3} \\ \mathbf{0}_{3\times3} & \mathbf{T}_{b}(\boldsymbol{\Theta}_{nb}) \end{bmatrix}. \tag{44}$$

Note that

$$\mathbf{J}_{b}^{n}(\boldsymbol{\eta})^{-1} \triangleq \mathbf{J}_{n}^{b}(\boldsymbol{\eta}) = \begin{bmatrix} \mathbf{R}_{n}^{b}(\boldsymbol{\Theta}_{nb}) & \mathbf{0}_{3\times3} \\ \mathbf{0}_{3\times3} & \mathbf{T}_{b}^{-1}(\boldsymbol{\Theta}_{nb}) \end{bmatrix}, \quad (45)$$

and $\mathbf{J}_b^n(\boldsymbol{\eta})^{-1} \neq \mathbf{J}_b^n(\boldsymbol{\eta})^T$ because \mathbf{T}_b is not orthogonal.

5 Seakeeping Kinematics

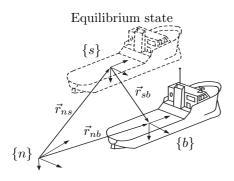


Figure 3: Coordinate systems and relative positions.

5.1 Coordinate Systems and Motion Variables

In seakeeping, the motion of the vessel is described relative to the seakeeping coordinate system $\{s\}$, which is an inertial coordinate system fixed to an equilibrium.

In the absence of wave excitation forces, the vessel remains in this equilibrium. When there is wave excitation, however, the vessel oscillates with respect to this equilibrium. Figure 3 illustrates this. The equilibrium vessel state is defined by a constant heading and speed:

$$\mathbf{v}_{ns}^{n} = \dot{\mathbf{r}}_{ns}^{n} = [U\cos\bar{\psi}, U\sin\bar{\psi}, 0]^{T}$$

$$\boldsymbol{\omega}_{ns}^{n} = [0, 0, 0]^{T},$$

$$\boldsymbol{\Theta}_{ns} = [0, 0, \bar{\psi}]^{T},$$
(46)

where the velocity $U = \|\mathbf{v}_{ns}^n\| = \|^n d\vec{r}_{ns}/dt\|$ and the heading $\bar{\psi}$ are constant. Hence, the velocity of $\{s\}$ in $\{n\}$ expressed in $\{s\}$ is

$$\mathbf{v}_{ns}^s = \mathbf{R}_n^s \mathbf{v}_{ns}^n = [U, 0, 0]^T. \tag{47}$$

In a similar fashion as we did for manoeuvring kinematics, we can consider the linear and angular velocity of the vessel ($\{b\}$) relative to $\{s\}$ expressed in $\{b\}$:

$$\mathbf{v}_{sb}^{b} = \mathbf{R}_{s}^{b} \dot{\mathbf{r}}_{sb}^{s} \triangleq [\delta u, \delta v, \delta w]^{T},$$

$$\boldsymbol{\omega}_{sb}^{b} \triangleq [\delta p, \delta q, \delta r]^{T},$$
(48)

where these are the perturbation body-fixed linear and velocities. The Euler angles that take $\{s\}$ into $\{b\}$ will be denoted by

$$\mathbf{\Theta}_{sb} \triangleq [\delta\phi, \delta\theta, \delta\psi]^T, \tag{49}$$

and then from (28) the following relation holds

$$\dot{\mathbf{\Theta}}_{sb} = \mathbf{T}_b(\mathbf{\Theta}_{sb}) \,\boldsymbol{\omega}_{sb}^b,\tag{50}$$

with

$$\mathbf{T}_{b}(\mathbf{\Theta}_{sb}) = \begin{bmatrix} 1 & s_{\delta\phi}t_{\delta\theta} & c_{\delta\phi}t_{\delta\theta} \\ 0 & c_{\delta\phi} & -s\delta\phi \\ 0 & s_{\delta\phi}/c_{\delta\theta} & c_{\delta\phi}/c_{\delta\theta} \end{bmatrix}.$$
 (51)

Further, we can define the *perturbation generalised position and velocity* vectors:

$$\delta \boldsymbol{\eta} \triangleq \begin{bmatrix} \mathbf{r}_{sb}^s \\ \mathbf{\Theta}_{sb} \end{bmatrix}, \qquad \delta \boldsymbol{\nu} \triangleq \begin{bmatrix} \mathbf{v}_{sb}^b \\ \boldsymbol{\omega}_{sb}^b \end{bmatrix}.$$
 (52)

In the hydrodynamic literature, the following variables are commonly used:

$$\boldsymbol{\xi} \triangleq \delta \boldsymbol{\eta},\tag{53}$$

where ξ_1, ξ_2, ξ_2 are the surge, sway and heave *perturbation displacements*, and ξ_4, ξ_5, ξ_6 are the roll, pitch and yaw *perturbation angles*.

5.2 Kinematic Models $\{s\} - \{b\}$

From the definition of $\delta \eta$ and $\delta \nu$ in (52), it follows that

$$\delta \dot{\boldsymbol{\eta}} = \mathbf{J}_b^s(\delta \boldsymbol{\eta}) \, \delta \boldsymbol{\nu},\tag{54}$$

where

$$\mathbf{J}_{b}^{s}(\delta\boldsymbol{\eta}) = \begin{bmatrix} \mathbf{R}_{b}^{s}(\boldsymbol{\Theta}_{sb}) & \mathbf{0}_{3\times3} \\ \mathbf{0}_{3\times3} & \mathbf{T}_{b}(\boldsymbol{\Theta}_{sb}) \end{bmatrix}. \tag{55}$$

This kinematic model is similar to that for the generalised variables used in manoeuvring, i.e., (43). This is an expected result because both $\{n\}$ and $\{s\}$ are assumed inertial.

The other kinematic models of interest are those that describe the relation between ν and $\delta\nu$ and between $\dot{\nu}$ and $\delta\dot{\nu}$. To obtain these models let us consider Figure 3. From this figure, it follows that

$$\vec{r}_{nb} = \vec{r}_{ns} + \vec{r}_{sb}.\tag{56}$$

By expressing this in coordinate form in $\{n\}$, we obtain

$$\mathbf{r}_{nb}^{n} = \mathbf{r}_{ns}^{n} + \mathbf{R}_{s}^{n} \mathbf{r}_{sb}^{s}. \tag{57}$$

Taking the time derivative

$$\dot{\mathbf{r}}_{nb}^{n} = \dot{\mathbf{r}}_{ns}^{n} + \mathbf{R}_{s}^{n} \dot{\mathbf{r}}_{sb}^{s}. \tag{58}$$

Note that the time-derivative of \mathbf{R}_s^n is zero because $\{s\}$ does not rotate with respect to $\{n\}$. Further, the last expression can be written as

$$\dot{\mathbf{r}}_{nb}^{n} = \dot{\mathbf{r}}_{ns}^{n} + \mathbf{R}_{s}^{n} \mathbf{R}_{b}^{s} \dot{\mathbf{r}}_{sb}^{b},
= \dot{\mathbf{r}}_{ns}^{n} + \mathbf{R}_{b}^{n} \dot{\mathbf{r}}_{sb}^{b}.$$
(59)

If we express the latter in $\{b\}$, we obtain the sought relationship for the linear velocities:

$$\mathbf{R}_{n}^{b}\dot{\mathbf{r}}_{nb}^{n} = \mathbf{R}_{n}^{b}\dot{\mathbf{r}}_{ns}^{n} + \mathbf{R}_{n}^{b}\mathbf{R}_{b}^{n}\dot{\mathbf{r}}_{sb}^{b},$$

$$\mathbf{v}_{nb}^{b} = \mathbf{R}_{n}^{b}\mathbf{v}_{ns}^{n} + \mathbf{v}_{sb}^{b}.$$
(60)

Let us split the linear and angular part of the velocity vectors:

$$\boldsymbol{\nu} = \begin{bmatrix} \boldsymbol{\nu}_1 \\ \boldsymbol{\nu}_2 \end{bmatrix}, \quad \delta \boldsymbol{\nu} = \begin{bmatrix} \delta \boldsymbol{\nu}_1 \\ \delta \boldsymbol{\nu}_2 \end{bmatrix}, \tag{61}$$

where $\boldsymbol{\nu}_1 = [u, v, w]^T$, $\boldsymbol{\nu}_2 = [p, q, r]^T$, $\delta \boldsymbol{\nu}_1 = [\delta u, \delta v, \delta w]^T$, and $\delta \boldsymbol{\nu}_2 = [\delta p, \delta q, \delta r]^T$. Then from (60) it follows that

$$\boldsymbol{\nu}_1 = \bar{\boldsymbol{\nu}}_1 + \delta \boldsymbol{\nu}_1, \tag{62}$$

where

$$\bar{\boldsymbol{\nu}}_1 \triangleq \mathbf{R}_n^b \begin{bmatrix} U \cos \bar{\psi} \\ U \sin \bar{\psi} \\ 0 \end{bmatrix} = \mathbf{R}_s^b \begin{bmatrix} U \\ 0 \\ 0 \end{bmatrix}. \tag{63}$$

To obtain the angular velocity transformation, we can turn again to Figure 3 and from (19), it follows that

$$\vec{\omega}_{nb} = \vec{\omega}_{ns} + \vec{\omega}_{sb}.\tag{64}$$

But since $\{s\}$ does not rotate with respect to $\{n\}$,

$$\vec{\omega}_{nb} = \vec{\omega}_{sb}.\tag{65}$$

This leads to the sought relationship for the angular velocities

$$\boldsymbol{\omega}_{nb}^{b} = \boldsymbol{\omega}_{sb}^{b} \Rightarrow \boldsymbol{\nu}_{2} = \delta \boldsymbol{\nu}_{2}. \tag{66}$$

Combining (62) and (66), we finally obtain

$$\boldsymbol{\nu} = \bar{\boldsymbol{\nu}} + \delta \boldsymbol{\nu},\tag{67}$$

where $\bar{\boldsymbol{\nu}} = [\bar{\boldsymbol{\nu}}_1^T, \mathbf{0}_{3\times 3}]^T$ and $\bar{\boldsymbol{\nu}}_1$ is given in (63). Further, from (63) it follows that

$$\bar{\nu}_{1} = U \operatorname{col}_{1}(\mathbf{R}_{s}^{b})$$

$$= U \begin{bmatrix} c_{\delta\psi}c_{\delta\theta} \\ -s_{\delta\psi}c_{\delta\theta} + c_{\delta\psi}s_{\delta\theta}s_{\delta\phi} \\ s_{\delta\psi}s_{\delta\phi} + c_{\delta\psi}c_{\delta\phi}s_{\delta\theta} \end{bmatrix}, \tag{68}$$

where $\operatorname{col}_{j}(\mathbf{R})$ denotes the *j*-column of the matrix \mathbf{R} . Taking small angle approximations and considering only linear terms, we obtain

$$\bar{\nu}_1 \approx U \begin{bmatrix} 1 \\ -\delta \psi \\ \delta \theta \end{bmatrix}$$
 (69)

Hence, (67) can be approximated by

$$\nu \approx U(-\mathbf{L}\delta\boldsymbol{\eta} + \mathbf{e}_1) + \delta\boldsymbol{\nu},$$
 (70)

with

$$\mathbf{e}_{1} \triangleq [1, 0, \dots, 0]^{T}, \quad \mathbf{L} \triangleq \begin{bmatrix} 0 & \cdots & 0 & 0 \\ 0 & \cdots & 0 & 1 \\ 0 & \cdots & -1 & 0 \\ \vdots & \ddots & \vdots & \vdots \\ 0 & \cdots & 0 & 0 \end{bmatrix}. \quad (71)$$

To obtain the relation between accelerations we take the time derivative of (67):

$$\dot{\boldsymbol{\nu}} = \dot{\bar{\boldsymbol{\nu}}} + \delta \dot{\boldsymbol{\nu}}.\tag{72}$$

The key issue here is to find $\dot{\nu}$. From (63) it follows that

$$\dot{\bar{\nu}}_{1} = \mathbf{R}_{s}^{b} \mathbf{S}^{T} (\boldsymbol{\omega}_{sb}^{b}) \begin{bmatrix} U \\ 0 \\ 0 \end{bmatrix} = \mathbf{R}_{s}^{b} U \begin{bmatrix} 0 \\ -\delta r \\ \delta q \end{bmatrix}$$

$$= -U \delta r \operatorname{col}_{2}(\mathbf{R}_{s}^{b}) + U \delta q \operatorname{col}_{3}(\mathbf{R}_{s}^{b}).$$
(73)

Taking small angle approximations

$$\dot{\tilde{\nu}}_{1} \approx -U\delta r \begin{bmatrix} \delta \psi \\ 1 \\ -\delta \phi \end{bmatrix} + U\delta q \begin{bmatrix} -\delta \theta \\ \delta \phi \\ 1 \end{bmatrix}. \tag{74}$$

If we consider only the linear terms

$$\dot{\bar{\boldsymbol{\nu}}}_1 \approx U \begin{bmatrix} 0 \\ -\delta r \\ \delta q \end{bmatrix} = -U\mathbf{L}\delta\boldsymbol{\nu},\tag{75}$$

which is consistent with the approximation (69) taking $\delta \dot{\eta} \approx \delta \nu$. Hence, using (75), it follows that (72) can be approximated as

$$\dot{\boldsymbol{\nu}} \approx -U\mathbf{L}\delta\boldsymbol{\nu} + \dot{\delta\boldsymbol{\nu}},\tag{76}$$

Finally, we can also relate $\delta \nu$ to the vessel trajectory. Indeed, from (59) it follow that

$$\dot{\boldsymbol{\eta}}_1 = \begin{bmatrix} U \cos \bar{\psi} \\ U \sin \bar{\psi} \\ 0 \end{bmatrix} + \mathbf{R}_b^n \delta \boldsymbol{\nu}_1. \tag{77}$$

Also, from (40) and (65) it follows that

$$\dot{\boldsymbol{\eta}}_{2} = \dot{\boldsymbol{\Theta}}_{nb} = \mathbf{T}_{d}(\boldsymbol{\Theta}_{nb})\boldsymbol{\omega}_{nb}^{b}$$

$$= \mathbf{T}_{d}(\boldsymbol{\Theta}_{nb})\boldsymbol{\omega}_{sb}^{b}$$

$$= \mathbf{T}_{d}(\boldsymbol{\Theta}_{nb})\delta\boldsymbol{\nu}_{2}.$$
(78)

Therefore,

$$\dot{\boldsymbol{\eta}} = \begin{bmatrix} U \cos \bar{\psi} \\ U \sin \bar{\psi} \\ \mathbf{0}_{4 \times 1} \end{bmatrix} + \mathbf{J}_b^n(\boldsymbol{\eta}) \delta \boldsymbol{\nu}$$
 (79)

5.3 Relationship between Euler Angles

The relationship between the Euler angles that take $\{n\}$ into $\{b\}$ and those that take $\{s\}$ into $\{b\}$ is as follows. From the seakeeping assumption we have that

$$\vec{\omega}_{nb} = \vec{\omega}_{sb} \quad \Rightarrow \quad \omega_{nb}^b = \omega_{sb}^b, \tag{80}$$

which results in

$$\dot{\mathbf{\Theta}}_{nb} = \dot{\mathbf{\Theta}}_{sb}.\tag{81}$$

Integrating, we obtain

$$\mathbf{\Theta}_{nb} = \mathbf{\Theta}_{sb} + \mathbf{\Theta}_{ns}, \tag{82}$$

that is,

$$\begin{bmatrix} \phi \\ \theta \\ \psi \end{bmatrix} = \begin{bmatrix} \delta \phi \\ \delta \theta \\ \delta \psi \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ \bar{\psi} \end{bmatrix}. \tag{83}$$

Tables 1, 2 and 3 in the Appendix summarize the notation.

6 Application to Equations of Motion Transformation

In recent years, there has been a significant interest in time-domain models for simulation and control system design based on data obtained from seakeeping programs—see Bailey et al. (1997); Fossen and Smogeli (2004); Perez (2005); Fossen (2005); Smogeli et al. (2005). This requires transforming the equations of

motion used in seakeeping theory, (or at least the forces) to body-fixed coordinates. These transformations can be done in different ways using different approximations. This is topic of this section, which makes use of the kinematic models developed in the previous sections of the paper

6.1 Rigid Body Mass and Inertia Tensor

The vessel rigid-body generalized mass matrix about the origin of $\{b\}$ is of the form

$$\mathbf{M}_{RB}^{b} = \begin{bmatrix} m\mathbf{I}_{3\times3} & -m\mathbf{S}(\mathbf{r}_{bg}^{b}) \\ m\mathbf{S}(\mathbf{r}_{bg}^{b}) & \mathbf{I}_{b/b}^{b} \end{bmatrix}, \tag{84}$$

where m is the mass of the vessel and $\mathbf{I}_{b/b}^{b}$ is the inertia tensor about (b/) o_{b} . Using the parallel axis theorem (see for example Egeland and Gravdahl (2002)), this tensor can be expressed as

$$\mathbf{I}_{b/b}^b = \mathbf{I}_{b/a}^b - m\mathbf{S}(\mathbf{r}_{ba}^b)\mathbf{S}(\mathbf{r}_{ba}^b), \tag{85}$$

where \mathbf{r}_{bg}^b gives the coordinates of the *centre of gravity* (CG) in $\{b\}$, and $\mathbf{I}_{b/q}^b$ is the tensor about GG in $\{b\}$:

$$\mathbf{I}_{b/g}^{b} = \int_{b} \begin{bmatrix} y^{2} + z^{2} & -xy & -xz \\ -xy & x^{2} + z^{2} & -yz \\ -xz & -yz & x^{2} + y^{2} \end{bmatrix} dm. \quad (86)$$

The angular momentum of the vessel about CG in $\{b\}$ is given by

$$\mathbf{h}_{a}^{b} = \mathbf{I}_{b/a}^{b} \boldsymbol{\omega}_{ib}^{b}, \tag{87}$$

where $\{i\}$ represents any inertial frame $(e.g., \{n\})$ or $\{s\}$. If this is transformed to an inertial coordinate system, then

$$\mathbf{h}_{q}^{i} = \mathbf{R}_{b}^{i} \mathbf{I}_{b/q}^{b} \mathbf{R}_{i}^{b} \boldsymbol{\omega}_{ib}^{i}. \tag{88}$$

From which it follows that

$$\mathbf{I}_{b/a}^{i} = \mathbf{R}_{b}^{i} \mathbf{I}_{b/a}^{b} \mathbf{R}_{i}^{b}. \tag{89}$$

This shows that the inertia tensor will not be constant in an inertial frame if $\{b\}$ rotates with respect to $\{i\}$. Therefore, it is always convenient to formulate the equations of motion in a body-fixed rather than inertial coordinate systems.

6.2 Rigid-body Equations of Motion

Following Fossen (2002), the rigid-body equations of motion in $\{b\}$ can be written as

$$\mathbf{M}_{RB}^b \dot{\boldsymbol{\nu}} + \mathbf{C}_{RB}(\boldsymbol{\nu})\boldsymbol{\nu} = \boldsymbol{\tau}^b, \tag{90}$$

where \mathbf{M}_{RB}^b is given in (84), $\boldsymbol{\nu}$ is given in (42), and and the Coriolis-Centripetal matrix $\mathbf{C}_{RB}(\boldsymbol{\nu})$ can be expressed as:

$$\mathbf{C}_{RB}(\boldsymbol{\nu}) \triangleq \begin{bmatrix} \mathbf{C}_{RB,11} & \mathbf{C}_{RB,12} \\ \mathbf{C}_{RB,21} & \mathbf{C}_{RB,22} \end{bmatrix}, \tag{91}$$

where

$$\mathbf{C}_{RB,11} = \mathbf{0}_{3\times3},$$

$$\mathbf{C}_{RB,12} = -m\mathbf{S}(\boldsymbol{\nu}_1) - m\mathbf{S}(\mathbf{S}(\boldsymbol{\nu}_2)\mathbf{r}_{bg}^b),$$

$$\mathbf{C}_{RB,21} = -m\mathbf{S}(\boldsymbol{\nu}_1) - m\mathbf{S}(\mathbf{S}(\boldsymbol{\nu}_2)\mathbf{r}_{bg}^b),$$

$$\mathbf{C}_{RB,22} = m\mathbf{S}(\mathbf{S}(\boldsymbol{\nu}_1)\mathbf{r}_{bg}^b) - \mathbf{S}(\mathbf{I}_{b/b}^b\boldsymbol{\nu}_2),$$
(92)

with $\boldsymbol{\nu} = [\boldsymbol{\nu}_1^T, \boldsymbol{\nu}_2^T]^T$. See Fossen (2002) for further details and alternative parameterizations of $\mathbf{C}_{RB}(\boldsymbol{\nu})$.

6.3 Equation of Motion in $\{p\}$

The equation of motion (90) is formulated at the origin o_b of $\{b\}$. In order to exploit different locations of the body-fixed coordinate system, we can transform (90) to another body-fixed coordinate system.

Let $\{p\}$ be a body-fixed coordinate system which has the same orientation as $\{b\}$. Then,

$$\vec{r}_{np} = \vec{r}_{nb} + \vec{r}_{bp}.\tag{93}$$

The time-derivative in $\{n\}$ give

$$\dot{\mathbf{r}}_{nn}^n = \dot{\mathbf{r}}_{nb}^n + \dot{\mathbf{R}}_b^n \mathbf{r}_{bn}^b, \tag{94}$$

which can be written as

$$\mathbf{v}_{np}^{n} = \mathbf{v}_{nb}^{n} + \mathbf{R}_{b}^{n} \mathbf{S}(\boldsymbol{\omega}_{nb}^{b}) \mathbf{r}_{bp}^{b}. \tag{95}$$

Using the fact that $\{p\}$ has the same orientation as $\{b\}$, *i.e.*, $\mathbf{R}_b^n = \mathbf{R}_p^n$, we can further write

$$\mathbf{v}_{np}^{p} = \mathbf{v}_{nb}^{b} + \mathbf{S}(\boldsymbol{\omega}_{nb}^{b})\mathbf{r}_{bp}^{b},$$

$$= \mathbf{v}_{nb}^{b} + \mathbf{S}^{T}(\mathbf{r}_{bn}^{b})\boldsymbol{\omega}_{nb}^{b}.$$
 (96)

Hence,

$$\begin{bmatrix} \mathbf{v}_{np}^p \\ \boldsymbol{\omega}_{np}^p \end{bmatrix} = \begin{bmatrix} \mathbf{0} & \mathbf{S}^T (\mathbf{r}_{bp}^b) \\ \mathbf{0} & \mathbf{I} \end{bmatrix} \begin{bmatrix} \mathbf{v}_{nb}^b \\ \boldsymbol{\omega}_{nb}^b \end{bmatrix}, \tag{97}$$

or equivalently

$$\boldsymbol{\nu}^p = \mathbf{H}(\mathbf{r}_{bp}^b)\boldsymbol{\nu},\tag{98}$$

with

$$\mathbf{H}(\mathbf{r}_{bp}^{b}) \triangleq \begin{bmatrix} \mathbf{0}_{3\times3} & \mathbf{S}^{T}(\mathbf{r}_{bp}^{b}) \\ \mathbf{0}_{3\times3} & \mathbf{I}_{3\times3} \end{bmatrix}, \\ \mathbf{H}^{-1}(\mathbf{r}_{bp}^{b}) \triangleq \begin{bmatrix} \mathbf{0}_{3\times3} & \mathbf{S}(\mathbf{r}_{bp}^{b}) \\ \mathbf{0}_{3\times3} & \mathbf{I}_{3\times3} \end{bmatrix}.$$

$$(99)$$

If \vec{f} is a force, then the moments about o_b and o_p are relates as follows:

$$\vec{m}_p = \vec{m}_b + \vec{r}_{pb} \times \vec{f} = \vec{m}_b - \vec{r}_{bp} \times \vec{f}. \tag{100}$$

Then, in coordinate form

$$\begin{bmatrix} \mathbf{f}^p \\ \mathbf{m}_p^p \end{bmatrix} = \begin{bmatrix} \mathbf{I}_{3\times3} & \mathbf{0}_{3\times3} \\ \mathbf{S}^T(\mathbf{r}_{bp}^b) & \mathbf{0}_{3\times3} \end{bmatrix} \begin{bmatrix} \mathbf{f}^b \\ \mathbf{m}_b^b \end{bmatrix}. \tag{101}$$

Therefore,

$$\boldsymbol{\tau}^p = \mathbf{H}^{-T}(\mathbf{r}_{bn}^b)\boldsymbol{\tau}.\tag{102}$$

Using (102) and (98), the transformation of (90) to $\{p\}$ becomes

$$\mathbf{M}_{RB}^{p}\dot{\boldsymbol{\nu}}^{p} + \mathbf{C}_{RB}^{p}(\boldsymbol{\nu}^{p})\boldsymbol{\nu}^{p} = \boldsymbol{\tau}^{p}, \tag{103}$$

with

$$\boldsymbol{\nu}^{p} = \mathbf{H}^{-1}(\mathbf{r}_{bp}^{b})\boldsymbol{\nu}$$

$$\boldsymbol{\tau}^{p} = \mathbf{H}^{-T}(\mathbf{r}_{bp}^{b})\boldsymbol{\tau}$$

$$\mathbf{M}_{RB}^{p} = \mathbf{H}^{-T}(\mathbf{r}_{bp}^{b})\mathbf{M}_{RB}^{b}\mathbf{H}^{-1}(\mathbf{r}_{bp}^{b})$$

$$\mathbf{C}_{RB}^{p} = \mathbf{H}^{-T}(\mathbf{r}_{bp}^{b})\mathbf{C}_{RB}\mathbf{H}^{-1}(\mathbf{r}_{bp}^{b})$$
(104)

6.4 Seakeeping Equations of Motion in $\{s\}$

Using the perturbation body-fixed coordinates $\delta \nu$ and $\delta \eta$, the seakeeping equations of motion can be formulated as

$$\delta \dot{\boldsymbol{\eta}} = \mathbf{J}_b^s(\delta \boldsymbol{\eta}) \delta \boldsymbol{\nu}, \mathbf{M}_{RB} \delta \dot{\boldsymbol{\nu}} + \mathbf{C}_{RB}(\delta \boldsymbol{\nu}) \delta \boldsymbol{\nu} = \delta \boldsymbol{\tau},$$
(105)

where

$$\mathbf{M}_{RB} \triangleq \mathbf{M}_{RB}^b$$
.

The generalised force vector is separated into two components:

$$\delta \tau = \delta \tau_{\rm rad}^b + \delta \tau_{\rm exc}^b, \tag{106}$$

where $\delta \boldsymbol{\tau}_{\mathrm{rad}}^{s}$ is the vector of radiation forces, and $\delta \boldsymbol{\tau}_{\mathrm{exc}}^{s}$ is the vector of excitation forces which include the environmental and control forces.

If we consider the motion within a linear framework, then (105) becomes

$$\delta \dot{\boldsymbol{\eta}} \approx \delta \boldsymbol{\nu},$$

$$\mathbf{M}_{RB} \delta \dot{\boldsymbol{\nu}} \approx \delta \boldsymbol{\tau},$$

$$(107)$$

which results in

$$\mathbf{M}_{RB}\delta\ddot{\boldsymbol{\eta}} \approx \delta\boldsymbol{\tau} \tag{108}$$

In seakeeping theory this equation is normally written as

$$\mathbf{M}_{RB}\ddot{\boldsymbol{\xi}} = \boldsymbol{\tau}_{\mathrm{rad}}^s + \boldsymbol{\tau}_{\mathrm{exc}}^s, \tag{109}$$

where $\boldsymbol{\xi} = \delta \boldsymbol{\eta}$. Equation (109) is a convenient and consistent way to write (108) with all the variables in $\{s\}$ —however, it should be noted that it arises from the following approximations:

$$\dot{\boldsymbol{\xi}} = \delta \dot{\boldsymbol{\eta}} \approx \delta \boldsymbol{\nu}
\boldsymbol{\tau}_{\mathrm{rad}}^{s} \approx \delta \boldsymbol{\tau}_{\mathrm{rad}}^{b}
\boldsymbol{\tau}_{\mathrm{exc}}^{s} \approx \delta \boldsymbol{\tau}_{\mathrm{exc}}^{b}.$$
(110)

Following Cummins (1962), the radiation forces in $\{s\}$ can be expressed as

$$\boldsymbol{\tau}_{\mathrm{rad}}^{s} = -\bar{\mathbf{A}}\ddot{\boldsymbol{\xi}} - \bar{\mathbf{B}}\dot{\boldsymbol{\xi}}$$
$$-\int_{0}^{t} \mathbf{K}(t - t')\dot{\boldsymbol{\xi}}(t')dt' - \mathbf{G}\boldsymbol{\xi}, \quad (111)$$

where $\tilde{\mathbf{A}} = \lim_{\omega \to \infty} \mathbf{A}(\omega)$ and $\tilde{\mathbf{B}} = \lim_{\omega \to \infty} \mathbf{B}(\omega)$ are the constant infinite frequency added mass and potential damping matrices, \mathbf{G} is the restoring matrix, and $\mathbf{K}(t)$ are retardation functions (Ogilvie, 1964):

$$\mathbf{K}(t) = \int_0^\infty (\mathbf{B}(\omega) - \bar{\mathbf{B}}) \, \cos(\omega t) \, d\omega.$$

The matrix $\bar{\mathbf{B}}$ vanishes for the case of zero forward speed. Substituting (111) into (109) leads to the linear seakeeping vector equation of motion (Cummins Equation):

$$(\mathbf{M}_{RB} + \bar{\mathbf{A}})\ddot{\boldsymbol{\xi}} + \bar{\mathbf{B}}\dot{\boldsymbol{\xi}} + \int_{0}^{t} \mathbf{K}(t - t')\dot{\boldsymbol{\xi}}(t')dt' + \mathbf{G}\boldsymbol{\xi} = \boldsymbol{\tau}_{\text{exc}}^{s}. \quad (112)$$

The convolution term represents the fluid memory effect; that is, the change in fluid momentum due to the motion of the hull at a particular time instant affects the motion of the vessel at all subsequent times.

6.5 Seakeeping Equations of Motion in $\{b\}$

In order to design control systems, it is convenient to express (112) in $\{b\}$ rather than in $\{s\}$. Hydrodynamic programs compute $\boldsymbol{\tau}_{\mathrm{rad}}^s$ and $\boldsymbol{\tau}_{\mathrm{exc}}^s$ based on potential theory. These forces are calculated by integrating the pressure of the fluid over the wetted surface of the hull. The reason for using the $\{s\}$ coordinate system is because these forces are computed for the vessel in its equilibrium position. To express these forces in $\{b\}$, we would have to rotate them. However, this would result in a time varying added mass matrix. Therefore, from (110), it is common to approximate the radiation forces in $\{b\}$ as

$$\delta \boldsymbol{\tau}_{rad}^{b} \approx -\bar{\mathbf{A}}\delta \dot{\boldsymbol{\nu}} - \bar{\mathbf{B}}\delta \boldsymbol{\nu}$$
$$-\int_{0}^{t} \mathbf{K}(t-t')\delta \boldsymbol{\nu}(t')dt' - \mathbf{G}\delta \boldsymbol{\eta}. \quad (113)$$

Substituting (113) into (107) we obtain the linear perturbation model in $\{b\}$:

$$\mathbf{M}\delta\dot{\boldsymbol{\nu}} + \bar{\mathbf{B}}\delta\boldsymbol{\nu} + \int_0^t \mathbf{K}(t - t')\delta\boldsymbol{\nu}(t')dt' + \mathbf{G}\delta\boldsymbol{\eta} = \delta\boldsymbol{\tau}_{\mathrm{exc}}^b,$$
(114)

where $\mathbf{M} \triangleq \mathbf{M}_{RB} + \bar{\mathbf{A}}$. This model describes deviations from the equilibrium state. Using the small angle transformations (70) and (76), we can express (114) as

$$\dot{\boldsymbol{\eta}} = \mathbf{J}_{b}^{n}(\boldsymbol{\eta})\boldsymbol{\nu},
\mathbf{M}\dot{\boldsymbol{\nu}} + \mathbf{C}_{RB}\boldsymbol{\nu} + \mathbf{C}_{A}\boldsymbol{\nu} + \bar{\mathbf{B}}\boldsymbol{\nu}
+ \int_{0}^{t} \mathbf{K}(t - t')[\boldsymbol{\nu}(t') + U\mathbf{L}\boldsymbol{\eta}(t')]dt'
+ \mathbf{G}\boldsymbol{\eta} = \boldsymbol{\tau}_{\text{exc}}^{b} + \bar{\boldsymbol{\tau}}^{b},$$
(115)

where

$$\mathbf{C}_{RB} \triangleq \mathbf{M}_{RB}U\mathbf{L},$$

$$\mathbf{C}_{A} \triangleq \bar{\mathbf{A}}U\mathbf{L},$$

$$\bar{\boldsymbol{\tau}}^{b} \triangleq \bar{\mathbf{B}}\bar{\boldsymbol{\nu}}.$$
(116)

Expressions (115) give the linear equations of motion with fluid memory effects for constant average forward speed and heading. These equations are valid for small deviations from the equilibrium heading. Note that most strip-theory codes usually incorporate \mathbf{C}_A in $\bar{\mathbf{B}}$; therefore in these cases, \mathbf{C}_A should be set to zero so as not incorporate the terms twice in (115). If a motion control system is designed then the control forces will have two components, e.g., $\boldsymbol{\tau}_c^b = \bar{\boldsymbol{\tau}}^b + \boldsymbol{\tau}_{PID}^b$, where the first term is the force that sets the equilibrium, and the second one corrects the deviations from it.

For the case of station keeping or manoeuvring at low speed, these reduce to

$$\mathbf{M}\dot{\boldsymbol{\nu}} + \int_0^t \mathbf{K}(t - t')\boldsymbol{\nu}(t')dt'\boldsymbol{\nu} + \mathbf{G}\boldsymbol{\eta} = \boldsymbol{\tau}_{\text{exc}}^b,$$

$$\dot{\boldsymbol{\eta}} = \mathbf{J}_b^n(\boldsymbol{\eta})\boldsymbol{\nu}.$$
(117)

Note that (115) and (117) are based on potential theory. Therefore, a viscous damping term $\mathbf{B}_{v}\boldsymbol{\nu}$ can be added to the left-hand side of (115) and (117)—see Bailey et al. (1997); Fossen and Smogeli (2004); Fossen (2005); Smogeli et al. (2005); Perez (2005); Perez and Fossen (2006).

7 Conclusions

In this paper, the kinematic models most commonly used for the description of ship motion were derived using a formalism of robotics. The classical transformation used in ship manoeuvring, which relates the body-fixed linear and angular velocity to the position and orientation in local geographical coordinates was revisited. The kinematic models used in seakeeping, together with the simplifying assumptions that lead to them, were considered with a notation consistent with that used in manoeuvring. Transformation between

variables were derived, and the results were applied to expressing the seakeeping equations of motion in terms of manoeuvring variables. The latter provides the basis for models that can be used in guidance and motion control systems.

Acknowledgments

The Authors would like to thank Prof. Olav Egeland for his constructive discussions about the presented material. This work was supported by Centre for Ships and Ocean Structures (CeSOS) and its sponsor the Norwegian Research Council.

References

- Bailey, P., Price, W., and Temarel, P. A unified mathematical model describing the manoeuvring of a ship in s seaway. *Transactions The Royal Institution of Naval Architects-RINA*, 1997. 140:131–149.
- Bishop, R. and Price, W. On the use of equilibruim axes and body axes in the dynamics of a rigid ship. *Journal of Mechanical Engineering Scinece*, 1981. 23(5):243–256.
- Cummins, W. The impulse response function and ship motion. Technical Report 1661, David Taylor Model Basin–DTNSRDC, 1962.
- Egeland, O. and Gravdahl, J. *Modeling and Simulation* for Automatic Control. Marine Cybernetics, Trondheim, 2002.
- Faltinsen, O. Hydrodynamic of High-speed Marine Vehicles. Cambridge University Press, 2005.
- Fathi, D. ShipX Vessel Responses (VERES). Marintek AS Trondheim, http://www.marintek.sintef.no/, 2004.
- Fossen, T. Marine Control Systems: Guidance, Navigation and Control of Ships, Rigs and Underwater Vehicles. Marine Cybernetics, Trondheim, 2002.
- Fossen, T. A nonlinear unified state-space model for ship maneuvreing and control in a seaway. In *International Journal of Bifurcation and Chaos*, volume 15. 2005 pages 2717–2746.
- Fossen, T. and Smogeli, Ø. Nonlinear time-domain strip theory formulation for low speed manoeuvring and station-keeping. *Modelling Identification and Control–MIC*, 2004. 25(4).

- Graham, R. Motion-induced interruptions as ship operability criteria. *Naval Engineers Journal*, 1990. 103(3).
- Jouernee, J. and Adegeest, L. Theoretical Manual of Strip Theory Program SEAWAY for Windows. TU Delft, Delft University of Technology, www.ocp.tudelft.nl/mt/journee, 2003.
- Kane, T. and Levinson, D. Dynamics: Theory and Applications. McGraw-Hill series in Mechanical Engineering. McGraw-Hill, 1985.
- Lloyd, A. Seakeeping: Ship Behaviour in Rough Weather. Ellis Horwood Series in Marine Technology. Ellis Horwood, 1989.
- Ogilvie, T. Recent progress towards the understanding and prediction of ship motions. In 6th Symposium on Naval Hydrodynamics. 1964.
- Perez, T. Ship Motion Cotnrol: Course Keeping and Roll Reduction using rudder and fins. Advances in Industrial Control. Springer-Verlag, London, 2005.
- Perez, T. and Fossen, T. Time-domain models of marine surface vessels for simulation and control design based on seakeeping computations. In *Proc.* 7th IFAC Conference on Manoeuvring and Control of Marine Craft MCMC. Lisbon, Portugal, 2006.
- Smogeli, Ø., Perez, T., Fossen, T., and Sørensen, A. The marine systems simulator state-space model representation for dynamically positioned surface vessels. In *International Maritime Association of the Mediterranean IMAM Conference*, Lisbon, Portugal. 2005.
- SNAME. Nomenclature for treating the motion of a submerged body through a fluid. Technical Report Bulletin 1-5, Society of Naval Architects and Marine Engineers, New York, USA, 1950.
- WAMIT. WAMIT *User Manual*. www.wamit.com, 2004.

A Summary of variables

Table 1: Scalar variables used the manoeuvring and seakeeping.

seakeeping.		
Variable	Name	Frame
N	North position	$\{n\}$
E	East position	$\{n\}$
D	Down position	$\{n\}$
φ	Roll angle	-
θ	Pitch angle	-
ψ	Heading or yaw angle	-
$u, \delta u$	Surge velocity, Surge pert. velocity	{b}
$v, \delta v$	Sway velocity, Sway pert. velocity	$\{b\}$
$w, \delta w$	Heave velocity, Heave pert. velocity	$\{b\}$
$p, \delta p$	Roll rate, Roll perturbation rate	{b}
$q, \delta q$	Pitch rate, Pitch perturbation rate	$\{b\}$
$r, \delta r$	Yaw rate, Yaw perturbation rate	$\{b\}$
ξ_1	Surge perturbation displacement	$\{s\}$
ξ_2	Sway perturbation displacement	$\{s\}$
ξ3	Heave perturbation displacement	$\{s\}$
$\xi_4 = \delta \phi$	Roll perturbation angle	-
$\xi_5 = \delta \theta$	Pitch perturbation angle	-
$\xi_6 = \delta \psi$	Yaw perturbation angle	-

Table 2: Summary manoeuvring vector variables.

Variable	Description
$\mathbf{r}_{nb}^{n} = [N, E, D]^{T}$ $\mathbf{v}_{nb}^{b} = [u, v, w]^{T}$ $\boldsymbol{\omega}_{nb}^{b} = [p, q, r]^{T}$	Vessel position in $\{n\}$
$\mathbf{v}_{nh}^{B} = [u, v, w]^{T}$	Vessel linear velocity in $\{b\}$
$\boldsymbol{\omega}_{nb}^{b^{\circ}} = [p,q,r]^T$	Vessel angular velocity in $\{b\}$
$\Theta_{nb} = \phi, \theta, \psi ^T$	Euler angles that take $\{n\}$ into $\{b\}$
$\boldsymbol{\eta} = [(\mathbf{r}_{nb}^n)^T, (\boldsymbol{\Theta}_{nb})^T]^T$	Generalised position vector
$\boldsymbol{\eta} = [(\mathbf{r}_{nb}^n)^T, (\boldsymbol{\Theta}_{nb})^T]^T$ $\boldsymbol{\nu} = [(\mathbf{v}_{nb}^b)^T, (\boldsymbol{\omega}_{nb}^b)^T]^T$	Generalised velocity vector
$\dot{oldsymbol{\eta}} = \mathbf{J}_b^n(oldsymbol{\eta})oldsymbol{ u}$	Vessel trajectory

Table 3: Summary seakeeping vector variables.

rable of Sammary Seamesping Vester Variables.		
Variable	Description	
$\mathbf{r}_{sb}^{s} = [\delta u, \delta v, \delta w]^{T}$ $\mathbf{v}_{sb}^{b} = [\delta p, \delta q, \delta r]^{T}$ $\mathbf{\omega}_{sb}^{b} = [\delta p, \delta q, \delta r]^{T}$	Vessel perturbation displ. in $\{s\}$	
$\mathbf{v}_{sb}^{b} = [\delta u, \delta v, \delta w]^{T}$	Vessel linear pert. velocity in $\{b\}$	
$\boldsymbol{\omega}_{sb}^{b} = [\delta p, \delta q, \delta r]^{T}$	Vessel pert. angular vel. in $\{b\}$	
$\mathbf{\Theta}_{sb} = [\delta\phi, \delta\theta, \delta\psi]^T$	Euler ang. that take $\{s\}$ into $\{b\}$	
$\delta \boldsymbol{\eta} = [(\mathbf{r}_{sb}^s)^T, (\boldsymbol{\Theta}_{sb})^T]^T$	Generalised pert. position vector	
$oldsymbol{\xi} = \delta oldsymbol{\eta}$	Seakeeping variables	
$\delta \boldsymbol{\nu} = [(\mathbf{v}_{sb}^b)^T, (\boldsymbol{\omega}_{sb}^b)^T]^T$	Generalised pert. velocity vector	